


Operating Instructions – Dishwasher Indesit DPG15WH

Control Panel

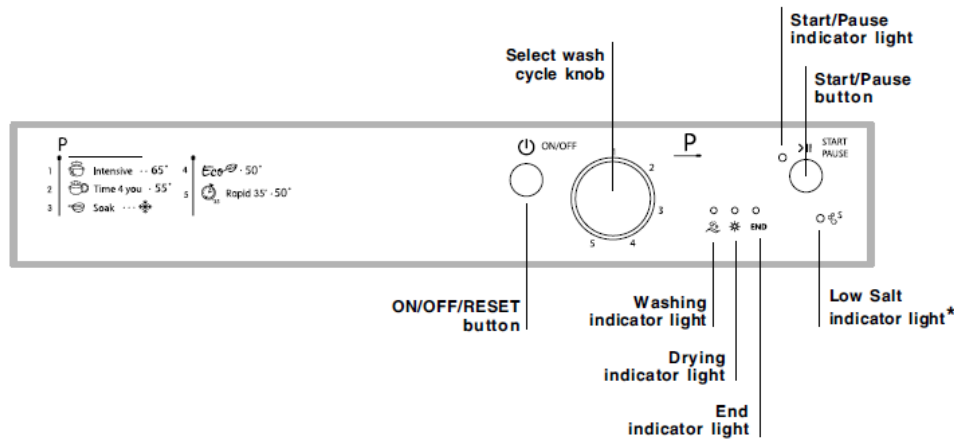


Starting the dishwasher

1. Discard scraps off the crockery
2. Press the On/Off button all the indicator lights on the control panel will light up for a few seconds.
3. Open the door and put in the detergent.
4. Load the racks, ensuring the sprayer arms can move freely.
5. Select the wash cycle by turning the Wash Cycle Select dial in a clockwise direction: align the notch on the knob with the number or symbol representing the desired wash cycle. The Start/Pause indicator light will flash.
6. Select the wash options
7. Start the cycle by pressing the Start button; the indicator light will light up and remain lit in a fixed manner. The indicator light corresponding to the wash phase will switch on, signalling that the wash cycle has begun.
8. At the end of the wash cycle the End indicator light will switch on (fixed light). Switch off the appliance by pressing the On/Off button.
9. Wait for a few minutes before removing the crockery, in order to avoid burns. Unload the racks beginning with the lower level.

Detergent dispenser

- A) Washing detergent
 - B) Pre- wash detergent
1. Open cover C by pressing button D.
 2. Pour in the detergent, for powder detergent use compartments A & B. For detergent in tablet form, place it in compartment A and close the cover.
 3. Remove detergent residues from the edges of the compartment and close the cover until it clicks.

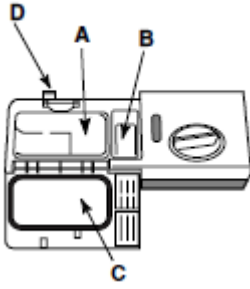

Modifying a wash cycle in progress

If a mistake was made during the wash cycle selection process it is possible to change the cycle, provided that it has only just begun: once the wash cycle has started, switch off the machine by pressing and holding the On/Off/Reset button. Switch it back on using the same button and select the desired wash cycle and options.

Adding extra crockery

Press the Start/Pause button (the corresponding indicator light will flash). Open the door, taking care to avoid the escaping steam and place the crockery inside the appliance. Press the Start/Pause button (fixed light); the cycle starts from the point at which it was interrupted. If the Start/Pause button is pressed so as to pause the machine, the wash cycle or the delayed start function (if selected) is interrupted. At this stage it is not possible to change the wash cycle.

Wash cycles

Wash cycle selection instructions	Wash cycle	Detergent (A) = compartment A (B) = compartment B			Wash cycles which include drying	Wash cycle duration (tolerance $\pm 10\%$) Hrs. Min.
		Powder	Liquid	Tablets		
Heavily soiled dishes and pans (not to be used for delicate items).	1. Intensive	30 g (A)	30 ml (A)	1 (A)	Yes	2:15'
Normally soiled pans and dishes. Standard daily wash cycle.	2. Time4you	25 g (A) 5 g (B)	25 ml (A) 5 ml (B)	1 (A)	Yes	1:45'
Pre-wash for dishes while awaiting completion of the load with the dishes from the next meal.	3. Soak	No	No	No	No	0:08'
Environmentally-friendly wash cycle with low energy consumption levels, suitable for pans and dishes.	4. Eco*	25 g (A) 5 g (B)	25 ml (A) 5 ml (B)	1 (A)	Yes	2:20'
Economic and fast wash to be used for lightly soiled dishes. (Run cycle immediately after use) (2 plates + 2 glasses + 4 pieces of cutlery + 1 saucepan + 1 small frying pan).	5. Rapid	25 g (A)	25 ml (A)	1 (A)	No	0:35'