

OWNER'S MANUAL

Wireless Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.

MODEL

SNH5 (SNH5, S67T2-W)



Safety Information



CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO OUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's

enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions

in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK

WARNING: 10 PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

CAUTION: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

CAUTION: No naked flame sources, such as lighted candles, should be placed on the apparatus.

NOTICE: For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

CAUTION concerning the Power Cord

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

Check the specification page of this owner's manual to be certain of the current requirements.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your device, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the device, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.

CAUTION: Be careful to make sure children do not put their hands or any objects into the *speaker duct.

* speaker duct: A hole for plentiful bass sound on speaker cabinet. (enclosure)

Symbols

2	Refers to alternating current (AC).	
==	Refers to direct current (DC).	
	Refers to class II equipment.	
Ф	Refers to stand-by.	
I	Refers to "ON" (power).	
4	Refers to dangerous voltage.	

OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit http://opensource.lge.com.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lqe.com.

This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

Table of Contents

1 Getting Started

- 2 Safety Information
- 6 Introduction
- 7 Front panel
- 8 Rear panel
- 9 Remote control
- 12 Speakers position
- 13 Installing the sound bar

2 Connecting

- 14 Organizing cables (Optional)
- 14 Connecting the subwoofer
- 15 Connecting to your TV
- 15 Using an OPTICAL cable
- 15 LG Sound Sync
- 17 Using an HDMI cable
- 17 ARC (Audio Return Channel) function
- 17 What is SIMPLINK?
- 18 Additional information for HDMI
- 19 Optional equipment connection
- 19 HDMI connection
- 20 OPTICAL IN connection

3 Operating

- 21 Operations
- 21 Using your TV remote control
- 22 AUTO POWER On/Off
- 23 Auto function change
- 23 Quick Start
- 24 Using a BLUETOOTH Wireless Technology
- 24 About Bluetooth
- 24 Bluetooth profiles
- 24 Listening to Music of a Bluetooth Device
- 26 Controls connected Bluetooth device
- 26 Bluetooth connection lock (BT LOCK)
- 26 Using BLUETOOTH App
- 26 Install "LG Sound Bar" App onto Your BLUETOOTH Device
- 27 Activate BLUETOOTH with "LG Sound Bar" App

4 Troubleshooting

- 28 Troubleshooting
- 28 General
- 29 NOTES to use wireless
- 30 NOTES to release Demo mode

5 Appendix

- 31 Trademarks and licenses
- 32 Specifications
- 34 Handling the unit

Introduction

Symbol used in this manual




Indicates special notes and operating features.



Indicates cautions for preventing possible damages

Front panel

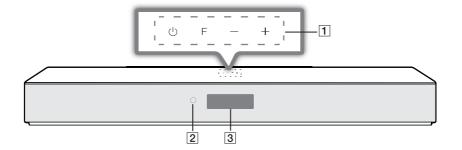

- (Standby)
- Switches the unit ON or OFF.

F (Function)

1

- Select the function and input source by pressing **F** repeatedly.


Input source / Function	Display
Optical	
ARC	OPT/HDMI ARC
LG Sound Sync (Wired)	
Bluetooth	BT
LG Sound Sync (Wireless)	LG TV
HDMI IN	HDMI

- **+/-** (Volume)
- Adjusts volume level.
- 2 : Remote sensor

: Display Window

- Display window will be darkened automatically if there is no key input for 15 seconds.
 When you press any button, the display window will brighten.
- This unit will turn itself off to save electric consumption when the main unit is not connected to an external device and is not used for 15 minutes.

Rear panel

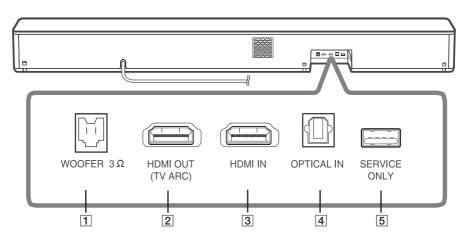


- MOOFER 3 Ω
 - Connect a Subwoofer cord to the unit.
- 2 HDMI OUT (TV ARC)
- Connect the HDMI OUT (TV ARC) jack on the back of the unit to ARC jack on the TV.

: HDMI IN

- Connect HDMI IN jack on the back of the unit to HDMI OUT jack on the external device.
 You can enjoy the sound and picture from HDMI connection on an external device.
- 4 OPTICAL IN
 - Connect the OPTICAL IN jack on the back of the unit to OPTICAL OUT jack on the TV.
- USB (Service only)
- 5 : S/W download connector


Remote control

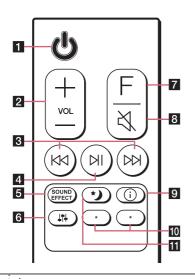

Replacement of Battery

Remove the battery cover on the rear of the remote control, and insert the battery with \bigoplus and \bigoplus matched correctly.

Risk of fire or explosion if the battery is replaced by an incorrect type.

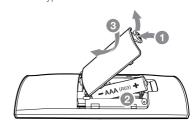

- (Standby)
 - Switches the unit ON or OFF.
- VOL (Volume) +/-
 - Adjusts speaker volume.
- 3 : K4/DX (Skip)
 - Press KX or DD to go to next or previous file.

MI (Play/Pause)

- Starts playback. / Pauses playback.
- BT (Bluetooth) connection Lock: It allows you to connect a Bluetooth device only on Bluetooth and LG TV functions. (Page 26)
 To turn on or off the Bluetooth connection lock, press and hold I for about 3 seconds and press it

To turn on or off the **Bluetooth** connection lock, press and hold **NI** for about 3 seconds and press it again in BT (**Bluetooth**) function.

5

SOUND EFFECT

- Selects a sound effect mode by using **SOUND EFFECT**.

On Display	Description	
AI SOUND PRO	Analyzes the property of the input sound and provides the sound optimized for the content in real time.	
BASS BLAST or BASS BLAST+	Reinforces the bass and powerful sound.	
STANDARD	You can enjoy optimized sound.	
DTS VIRTUAL : X	You can enjoy more immersive and cinematic surround sound.	

TV remote: It allows you to control the volume of this unit by your TV remote control even by other
company's product. (Page 21)
 To turn on or off the TV Remote function, press and hold SOUND EFFECT for about 3 seconds and
press it again.

Supported TV brands

		LG	Panasonic	Philips	Samsuna	Sharp	Sonv	Toshiba	Vizio
--	--	----	-----------	---------	---------	-------	------	---------	-------

- Adjusts the sound level of the adjustable speakers.
 Select the adjustable speaker by using \$\frac{1}{4}\$ and adjust the sound level by using \$\frac{VOL}{+/--.}\$
- See the page 12 for more information of speakers.

ı	ľ	2	۹	П
ı	ı	u	y	П
L		-	4	ı

Status Display	Adjustable speaker	Range
WF	Subwoofer	-15 ~ 6
TRE	Front speaker (treble)	-5 ~ 5
BAS	Front speaker (bass)	-5 ~ 5

- F (Function)
 - Select the function and input source by pressing F repeatedly.
- 8 : 🖔 (Mute)
 - Press ♂ to mute your unit. To cancel it, press ♂ again.

(Information)


- You can display various information of the input source by pressing ①.
 - OPT (Optical)/ARC/HDMI (HDMI IN): Audio format
- 9 BT (Bluetooth): Connected Bluetooth device name
 - Auto Power ON/OFF: It allows the unit to turn on and off automatically by input signals: Optical, LG TV or Bluetooth (Page 22)

To turn on or off AUTO POWER function, press and hold \odot for about 3 seconds and press it again.

10

- This button is not available.
- *) (Night time)
- 11 It is
 - It is useful when you want to watch movies at low volume late at night. It makes to reduce the sound intensity and improve fineness and softness.
 - Press *) to activate Night time mode. To cancel it, press *) again.

Speakers position

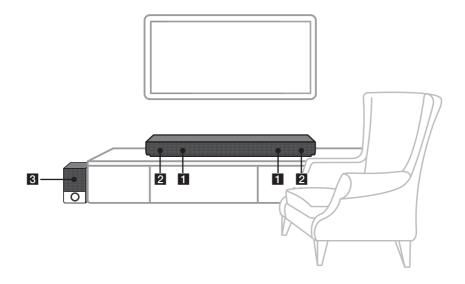


- 1 Front speakers
- 2 Surround speakers
- 3 Subwoofer

Installing the sound bar

You can hear the sound by connecting the unit to the other device: TV, Blu-ray disc player, DVD player, etc.

Place the unit in front of the TV and connect it to the device you want. (Pages 15 - 20)

When you install the unit, do not block the remote sensor of the TV.

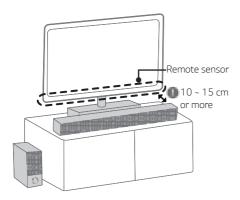



Note

- If the sound bar covers the remote sensor of the TV, please separate distance between the sound bar and TV by 10 ~ 15 cm or more.
- The illustration above may differ from actual units.




!\ Caution

- For best performance of wireless connection such as Bluetooth, do not install the unit on Metallic furniture because wireless connection communicates through a module positioned on the bottom of the unit.
- · Be careful not to make scratches on the surface of the Unit /Subwoofer when installing or moving them.

Organizing cables (Optional)

You can organize the cable with cable ties.

- 1. Hold the cables together with cable ties as shown
- 2. Tighten cable ties.

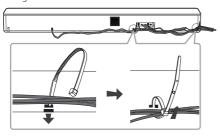




- After all connections are completed, you can arrange cables as needed.
- · Cable ties are not provided.

Connecting the subwoofer

Attaching the subwoofer to the unit

Connect a Subwoofer cord to the unit. When connecting a Subwoofer cord to the unit, insert the connector until it clicks.

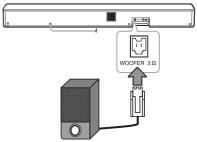



Note

Use the speaker supplied with this unit only. Using any other speaker may cause malfunction.


2

Connecting to your TV

Please connect with this unit and TV using the optical digital cable or HDMI cable considering the state of the TV.

Using an OPTICAL cable

 Connect the OPTICAL IN jack on the back of the unit to OPTICAL OUT jack on the TV using an OPTICAL cable.

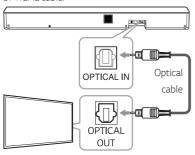

2. Select the input source to OPT/HDMI ARC by pressing **F** repeatedly.

You can see "OPT" on the display window if connecting normally between this unit and your TV



Note

- Before connecting the optical cable, be sure to remove the protection plug cover if your cable has the cover.
- You can enjoy the TV audio through the speakers of this unit. In the case of some TV models, you must select the external speaker option from the TV menu. (For details, reference your TV user manual.)
- If this unit is connected by OPTICAL and ARC at the same time, the ARC signal has a higher priority.

LG Sound Sync



You can control some functions of this unit by your TV's remote control with LG Sound Sync. It is compatible with the LG TV that is supported LG Sound Sync. Make sure of the LG Sound Sync logo on your TV.

Controllable function by LG TV's remote control : Volume up/down, mute


Make one of the following connections, depending on the capabilities of your equipment.



- You can also use the remote control of this unit while using LG Sound Sync. If you use TV's remote control again, the unit synchronizes with the TV.
 - According to TV Specifications, the volume and mute of this unit synchronize with TV.
- When the connection fails, make sure of the condition of the TV and power.
- Make sure of the condition of this unit and the connection in the cases below when using LG Sound Sync.
 - The unit is turned off.
 - Changing the function to the others.
 - Disconnecting the optical cable.
 - Disconnecting the wireless connection caused by interference or a distance.
- The amount of time to turn off this unit is different depending on your TV when you set AUTO POWER function to ON.

LG Sound Sync with wired connection

 Connect your LG TV to the unit by using an optical cable.

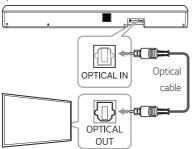

- Set up the sound output of TV to listen to the sound through this unit: (Refer to the TV's instruction manual for the details of LG Sound Sync.)
- 3. Turn on the unit by pressing \circlearrowleft .
- 4. Select the input source to OPT/HDMI ARC by pressing **F** repeatedly.

You can see "LGOPT" on the display window if connecting normally between this unit and your TV.

LG Sound Sync with wireless connection

- 1. Turn on the unit by pressing 🖒.
- Select the LG TV function by pressing F repeatedly.
- 3. Set up the sound output of TV to listen to the sound through this unit:

"PAIRED" appears on the display window for about 3 seconds and then you can see "LG TV" on the display window if connecting normally between this unit and your TV. (Refer to the TV's instruction manual for the details of LG Sound Sync.)



Note


If you turned off the unit directly by pressing (Power), LG Sound Sync (Wireless) will be disconnected.

2

Using an HDMI cable

If you connect this unit to a TV that supports HDMI CEC and ARC (Audio Return Channel), you can enjoy the TV audio through the speakers of this unit without connecting the optical cable.

 Connect the HDMI OUT (TV ARC) jack on the back of the unit to ARC jack on the TV using an HDMI cable.

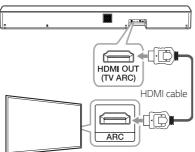

2. Select the input source to OPT/HDMI ARC by pressing **F** repeatedly.

You can see "ARC" on the display window if connecting normally between this unit and your TV



- You can enjoy the TV audio through the speakers of this unit. In the case of some TV models, you must select the external speaker option from the TV menu. (For details, reference your TV user manual.)
- Depending on your LG TV model, you may need to turn on the SIMPLINK function on your LG TV.
- When you return to ARC function from another function, you need to select the input source to OPT/HDMI ARC. Then this unit changes to ARC function automatically.

ARC (Audio Return Channel) function

The ARC function enables an HDMI capable TV to send the audio stream to HDMI OUT of the unit.

To use this function:

- Your TV must support the HDMI-CEC and ARC function and the HDMI-CEC and ARC must be set to On.
- The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about ARC function, refer to your TV manual.
- You must use the HDMI cable (Type A, High Speed HDMI™ cable with Ethernet).
- You must connect the HDMI OUT on the unit with HDMI IN of the TV that supports ARC function using an HDMI cable.
- You can connect only one Sound bar to TV compatible with ARC.

What is SIMPLINK?



Some functions of this unit are controlled by the TV's remote control when this unit and LG TV's with SIMPLINK are connected through HDMI connection.

Controllable functions by LG TV's remote control: Power on/off, volume up/down, etc.

Refer to the TV owner's manual for the details of SIMPLINK function.

LG TV's with SIMPLINK function has the logo as shown above.



- Depending on the state of the unit, some SIMPLINK operation may differ from your purpose or not work.
- Depending on a TV or a player which is connected with this unit, SIMPLINK operation may differ from your purpose.

Additional information for HDMI

- When you connect an HDMI or DVI compatible device make sure of the following:
 - Try switching off the HDMI/DVI device and this unit. Next, switch on the HDMI/DVI device and leave it for around 30 seconds, then switch on this unit.
 - The connected device's video input is set correctly for this unit.
 - The connected device is compatible with 720 x 576p (or 480p), 1280 x 720p, 1920 x1080i or 1920 x 1080p video input.
- Not all HDCP-compatible HDMI or DVI devices will work with this unit.
 - The picture will not be displayed properly with non-HDCP device.




- If a connected HDMI device does not accept the audio output of the unit, the HDMI device's audio sound may be distorted or may not output.
- Changing the resolution when the connection has already been established may result in malfunctions. To solve the problem, turn off the unit and then turn it on again.
- When the HDMI connection with HDCP is not verified, TV screen is changed to black screen. In this case, check the HDMI connection, or disconnect the HDMI cable.
- If there are noises or lines on the screen, please check the HDMI cable (length is generally limited to 4.5 m).
- You cannot change the video resolution in the HDMI mode. Change the video resolution of the connected component.
- If the video output signal is abnormal when your personal computer is connected to HDMI IN jack, change the resolution of your personal computer to 576p (or 480p), 720p, 1080i or 1080p.

HDMI cable Checklist

Some HDMI cables have poor signal transmission, which can cause problems with sound and video transmission.

Even after HDMI cable connections, if no sound, sound interrupted, noise occurring from the sound bar and/or no video, no smooth video on your TV, the HDMI cable may be the problem.

Use the cable marked with the premium HDMI certification logo. We recommend using "High Speed HDMI Cable with Ethernet" or later version.

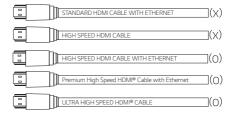

Connection through HDMI Cable*

Your television must support the newest HDMI features (HDMI CEC¹¹) / ARC (Audio Return Channel)) to fully enjoy the Live broadcasting channel with audio system through an HDMI cable. Unless your TV supports these HDMI features, the audio system should be connected through an OPTICAL cable.

1) HDMI CEC (High-Definition Multimedia Interface Consumer Electronics Control)

Consumer Electronics Control (CEC) is an HDMI feature designed to allow the user to command and control the CEC-enabled devices, that are connected through HDMI by using only one of their remote controls.

*Trade names for CEC are SimpLink (LG), Anynet+ (Samsung), BRAVIA Sync (Sony), EasyLink (Philips), etc.

2


Optional equipment connection

HDMI connection

You can enjoy the sound and picture from HDMI connection on external device.

For enjoying sound only

You can enjoy the sound from the external device you connect.

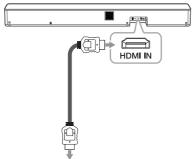


To the Blu-ray disc player, DVD player, etc.

- Connect HDMI IN jack on the back of the unit to HDMI OUT jack on the audio device such as Bluray disc player, DVD player, etc.
- 2. Select the input source to HDMI by pressing **F** repeatedly.

For enjoying both sound and picture

You can enjoy both sound and picture from the external device you connect.

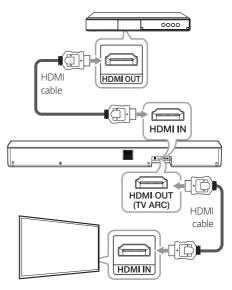


- Connect HDMI IN jack on the back of the unit to HDMI OUT jack on the external device such as Blu-ray disc player, DVD player, etc.
- Connect HDMI OUT (TV ARC) jack on the back of the unit to HDMI IN jack on the TV.
- Select the input source to HDMI by pressing F repeatedly.

1

- Audio and Video signal can't pass through when this unit is turned off.
- HDMI OUT (TV ARC) jack is for TV connection.
 Even though multi channel is inputted to the unit through an HDMI cable, the unit can only output PCM 2 channel to TV.
- If your TV does not support DTS sound source, connect the playback (source) device to the HDMI IN or OPTICAL IN jack on the soundbar to listen to DTS audio.

OPTICAL IN connection

Connect an optical output jack of external devices to the OPTICAL IN jack.

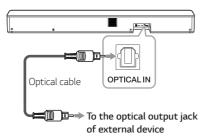

- 1. Connect the OPTICAL IN jack on the back of the unit to optical out jack of your external device.
- 2. Select the input source to OPT/HDMI ARC by pressing F repeatedly.

You can see "OPT" on the display window if connecting normally between this unit and your device.



Note

Before connecting the optical cable, be sure to remove the protection plug cover if your cable has the cover.



Caution

Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack









Optical jack Optical cable Optical jack Optical cable

<0>



Operations

Using your TV remote control

You can control some functions of this unit by your TV remote control even by other company's product. Controllable functions are volume up/down and

Press and hold SOUND EFFECT on the remote control for about 3 seconds. "ON - TV REMOTE" appears and you can control this unit by your TV remote control.

To check the status of this function, press and hold SOUND EFFECT on the remote control.

To turn off this function, press and hold **SOUND** EFFECT on the remote control and press it once again while "ON - TV REMOTE" is scrolled.



Note

- Make sure that the sound output of your TV is set to [External speaker].
- This function does not operate on LG TV's magic remote control.
- This function may not work well when some TV control functions such as HDMI CEC. SIMPLINK and LG Sound Sync set to ON.
- This function may not work well when the unit and the TV are connected with an HDMI cable.
- · Some remote control may not be supported.

How to disconnect the wireless network connection or the wireless device

Set up the AUTO POWER ON/OFF function to off and turn off the unit.

AUTO POWER On/Off

This unit automatically turns on by an input source : Optical, LG TV or **Bluetooth**.

When you turn on your TV or an external device connected to this unit, this unit recognizes the input signal and selects the suitable function. You can hear the sound from your device.

If you try to connect your **Bluetooth** device, this unit turns on and the unit will be connected to your **Bluetooth** device.

To turn on this function, press and hold ① on the remote control for about 3 seconds and press it once again while "OFF - AUTO POWER" is scrolled.

To check the status of this function, press and hold (i) on the remote control.

To turn off this function, press and hold ① on the remote control for about 3 seconds and press it once again while "ON - AUTO POWER" is scrolled.



- After the unit is turned on by AUTO POWER function, it will be automatically turned off if there is no signal for a certain period of time from the TV connected by LG Sound Sync (Optical/Wireless).
- After the unit is turned on by AUTO POWER function, it will be automatically turned off if there is no signal for a certain period of time from the external device.
- If you turned off the unit directly, it cannot be turned on automatically by AUTO POWER function. However the unit can be turned on by AUTO POWER function when optical signal comes in after 5 seconds of no signal.
- Depending on the connected device, this function may not operate.
- If you disconnect Bluetooth connection by this unit, some Bluetooth devices try to connect to the unit continually. Therefore it is recommended to disconnect the connection before turning off the unit.
- When you turn on this unit for the first time, status of Auto Power function is turned on.
- To use this function, the main unit must be registered in paired devices list of **Bluetooth** device.
- You can set the AUTO POWER function only when this unit is turned on.

Auto function change

This unit recognizes input signals such as Optical, HDMI ARC, **Bluetooth** and LG TV and then changes suitable function automatically.

When optical signal comes in

When you turn on the external device connected to this unit by an optical cable, this unit changes the function to optical. You can hear the sound from your device.

When you try to connect BLUETOOTH device

When you try to connect your **Bluetooth** device to this unit, **Bluetooth** function is selected. Play your music on the **Bluetooth** device.

When you turn on your TV or an external device

When you turn on your TV or an external device connected by the optical, LG sound sync (optical or wireless) or HDMI ARC this sound bar will change to a suitable function so you can listen to the sound through it.



Note

- This unit does not change the function to optical if SIMPLINK of the connected TV, Bluray disc player, set-top box or etc. device set to on or connected CEC supported device is turned on.
 - If you want to use the auto function change, turn off SIMPLINK function on your LG TV. It takes for about 30 seconds to turn off SIMPLINK
- If the Bluetooth connection lock function is set, Bluetooth connection will be only available on Bluetooth and LG TV function. (Page 26)

Quick Start

This unit can stay in standby mode with low power consumption, so that the unit can reduce boot time when you turn on this unit.

To turn on this function, press 1 on the unit for 3 seconds when the unit is turned on.

"ON - Q. START" appears in display.

To turn off this function, press 1 on the unit for 3 seconds again when the unit is turned on.

"OFF - Q. START" appears in display.



- If the Quick start function is set and an AC power is accidently re-connected to the unit by power failure etc., the Quick start function will activate when the unit is turned on and off once.
- When the Quick start function is set, power consumption will be higher than when the Quick start is off.
- This function may not work depending on the models.

Using a BLUETOOTH Wireless Technology

About Bluetooth

Bluetooth is wireless communication technology for short range connection.

The sound may be interrupted when the connection interfered by the other electronic wave or you connect the **Bluetooth** in the other rooms.

Connecting individual devices under **Bluetooth** wireless technology does not incur any charges. A mobile phone with **Bluetooth** wireless technology can be operated via the Cascade if the connection was made via **Bluetooth** wireless technology.

- Available Devices: Smart phone, MP3, Notebook, etc.
- Version: 4.0
- Codec: SBC. AAC

Bluetooth profiles

In order to use **Bluetooth** wireless technology, devices must be able to interpret certain profiles. This unit is compatible with following profile.

A2DP (Advanced Audio Distribution Profile)

Listening to Music of a Bluetooth Device

Before you start the pairing procedure, make sure that the **Bluetooth** feature on your smart device is turned on. Refer to your **Bluetooth** device's user guide. Once a pairing operation is performed, it does not need to be performed again.

- Select the **Bluetooth** function by pressing **F** repeatedly.
 Appears "BT" and then "READY" in display window.
- Operate the Bluetooth device and perform the pairing operation. When searching for this unit on your Bluetooth device, a list of the devices found may appear in the Bluetooth device display depending on the type of Bluetooth device. Your unit appears as "LG SNH5(XX)"
- 3. Select the "LG SNH5(XX)".



- XX means the last two digits of address.
 For example, if your unit has a MAC address such as 9C:02:98:4A:F7:08, you will see "LG SNH5(08)" on your Bluetooth device.
- Depending on the Bluetooth device type, some devices have a different pairing way.
 For details about Bluetooth pairing, refer to your Bluetooth device manual.

4. When this unit is successfully connected with your **Bluetooth** device,

"PAIRED" → your device's name → "BT" appears on the display window.



Note

- If it is unavailable to display device name on the unit, "-" will be displayed.
- To check the connected device's name, press ① on the remote control. The connected Bluetooth device's name is displayed.
- 5. Listen to music.

To play music in your **Bluetooth** device, refer to your **Bluetooth** device's user guide.



 When using Bluetooth technology, you have to make a connection between the unit and the Bluetooth device as close as possible and keep the distance.

However it may not work well in the case below:

- There is an obstacle between the unit and the **Bluetooth** device.
- There is a device using same frequency with **Bluetooth** technology such as a medical equipment, a microwave or a wireless I AN device.



- If Bluetooth connection does not work well, try pairing it again.
- The sound may be interrupted when the connection has interference by the other electronic waves.
- Pairing is limited to one **Bluetooth** device per unit and multi-pairing is not supported.
- Depending on the type of the device, you may not be able to use the **Bluetooth** function.
- You can enjoy **Bluetooth** function using smart phone, MP3, Notebook, etc..
- The more distance between the unit and the Bluetooth device, the lower the sound quality becomes.
- Bluetooth connection will be disconnected when the unit is turned off or the Bluetooth device gets too far from the unit.
- When Bluetooth connection is disconnected, connect the Bluetooth device to the unit again.
- When the unit is not connected, "READY" appears in the display window.
- When you connect Bluetooth device (iOS device etc.) to this unit or operate the device, the volume level can be synchronized with each other.
- If you change to another function after connecting Bluetooth, Bluetooth connection will be disconnected. And you return to Bluetooth function, Bluetooth connection will be connected automatically.

Controls connected Bluetooth device

You can control the connected **Bluetooth** device from the unit; play, pause, skip, volume.



Note

- Only Android OS and iOS is available to use this function.
- This function may not be supported depending on the **Bluetooth** device or some of TV operated differently.

Bluetooth connection lock (BT LOCK)

You can limit **Bluetooth** connection to only BT (**Bluetooth**) and LG TV function to prevent unintended **Bluetooth** connection.

To turn on this function, press and hold **NI** on the remote control for about 3 seconds in BT (**Bluetooth**) function and press it once again while "OFF - BT LOCK" is scrolled. Then you can limit **Bluetooth** connection.

To turn off this function, press and hold | II on the remote control for about 3 seconds in BT (Bluetooth) function and press it once again while "ON - BT LOCK" is scrolled.



Note

Even if you set up BT LOCK function to On, this sound bar turns on by Auto Power function. Turn off Auto Power function to prevent it. (Page 21)

Using BLUETOOTH App



Note

- Only Android OS is available to use "LG Sound Bar" app with this unit.
- Additional data charges may apply according to your internet environment or mobile plan.

About "LG Sound Bar" App

"LG Sound Bar" app brings a suite of new features to this unit.

To enjoy more features, you are recommended to download and install free "LG Sound Bar" app.

Install "LG Sound Bar" App onto Your BLUETOOTH Device

There are two ways to install "LG Sound Bar" apponto your **Bluetooth** device.

Install "LG Sound Bar" App through QR code

1. Install "LG Sound Bar" app through QR code. Use the scanning software to scan the QR code.



2. Tap an icon for installation.



- Make sure that your Bluetooth device is connected to the Internet.
- Make sure that your Bluetooth device has a scanning software application. If you don't have one, download one from "Google Android Market (Google Play Store)".
- Depending on area, QR code may not work.

Install "LG Sound Bar" App through "Google Android Market (Google Play Store)"

- Tap the "Google Android Market (Google Play Store)" icon.
- 2. In the search bar, type in the "LG Sound Bar" and search it.
- 3. In the search result list, find and tap "LG Sound Bar" to start downloading **Bluetooth** app.
 - Note
 - Make sure that your Bluetooth device is connected to the Internet.
 - Make sure that your Bluetooth device is equipped with "Google Android Market (Google Play Store)".

Activate BLUETOOTH with "LG Sound Bar" App

"LG Sound Bar" app helps to connect your **Bluetooth** device to this unit.

- Tap "LG Sound Bar" app icon on the home screen to open "LG Sound Bar" app, and go to the main menu.
- 2. If you want to get more information to operate, tap [Setting] and tap [Help] menu.



- "LG Sound Bar" app will be available in the software version as follow;
 - Android O/S: Ver 5.0 (or later)
- If you use "LG Sound Bar" app for operation, there would be some differences between "LG Sound Bar" app and the supplied remote control. Use the supplied remote control as necessary.
- Depending on the **Bluetooth** device, "LG Sound Bar" app may not work.
- After connection of "LG Sound Bar" app, music may be output from your device. In this case, try connecting procedure again.
- If you operate the other applications or change the settings on your Bluetooth device while using "LG Sound Bar" app, "LG Sound Bar" app may operate abnormally.
- When "LG Sound Bar" app operates abnormally, check your Bluetooth device and the connection of "LG Sound Bar" app and then try to connect again.
- Depending on the smart phone's operating system, you have some differences for "LG Sound Bar" operation.
- Even though Bluetooth connection will be disconnected, you can use "LG Sound Bar" app when you change the function.
- Additional features offered by "LG Sound Bar" app may not work depending on the distance between this unit and Bluetooth device and wireless conditions.

Troubleshooting

General

Symptoms	Cause & Solution
The unit does not work properly.	 Turn off the power of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and turn them on again. Disconnect the power cord of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and then try connecting again. Previous setting may not be saved when device power is shut off.
No Power	The power cord is unplugged. Plug in the power cord. Check whether electricity failed. Check the condition by operating other electronic devices.
No sound	Incorrect input source is selected. Check the input source and select the correct input source. The mute function is activated. Press ⟨⟨Mute⟩ or adjust the volume level to cancel the mute function. When you are using connection with a external device (set top box, Bluetooth device etc.), adjust volume level of the device.
No woofer sound	Connect the unit and the subwoofer (Page 14)
The remote control does not work properly.	 The remote control is too far from the unit. Operate the remote control within about 7 m. There is an obstacle in the path of the remote control and the unit. Remove the obstacle. The batteries in the remote control is exhausted. Replace the batteries with new one.
The AUTO POWER function does not work.	Check connection of the external device such as TV, DVD/Blu-Ray player or Bluetooth device. Check the state of SIMPLINK on your LG TV and turn off SIMPLINK. Depending on the connected device, this function may not operate.
LG Sound Sync does not work.	Check whether your LG TV supports LG Sound Sync. Check connection of LG Sound Sync (Optical or wireless). Check sound setting of your TV and this unit.
The unit does not connect with Bluetooth device	Turn off the Bluetooth connection lock function. (Page 26)

Symptoms	Cause & Solution
When you feel the output sound of the unit is low.	 Check the details below and adjust the unit according to them. With the sound bar connected with TV, change the AUDIO DIGITAL OUT setting on TV Setup Menu from [PCM] to [AUTO] or [BITSTREAM]. With the sound bar connected with Player, change the AUDIO DIGITAL OUT setting on Player Setup Menu from [PCM] to [PRIMARY PASS-THROUGH] or [BITSTREAM]. Change Audio DRC setting on connected device setup menu to [OFF] state. Make sure Night time mode is not On. Turn [OFF] Night time mode.

NOTES to use wireless

Symptoms	Cause & Solution
This device may have wireless interference.	Wireless may not operate normally in weak signal area. Do not install the device on metal furniture for optimum performance.
	When any part of your body contact the transceiver of the Bluetooth device or sound bar.
	When there is an obstacle or wall or the device is installed in a secluded spot.
Bluetooth device may malfunction or make noise in the following	When there is a device (a wireless LAN, a medical equipment or a microwave) using same frequency, make the distance between the products as far away as possible each other.
cases.	When connecting the device to the Bluetooth device, make the distance between the products as close as possible each other.
	When the device gets too far from the Bluetooth device, the connection is disconnected and also malfunction may occur.

NOTES to release Demo mode

Symptoms	Cause & Solution
Can not change input source with F such as BT (Bluetooth), HDMI etc. and only [DEMO] indication is showing in the front display.	Unplug the power cord and plug it in again. If that doesn't work, after setting the volume to 2, press and hold F (About 5 seconds) on the main unit until the
Remote Control does not work. (No response)	display indicates current selected function.

Trademarks and licenses

All other trademarks are trademarks of their respective owners.

DOLBY AUDIO

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.



For DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, DTS and the Symbol together, and Digital Surround are registered trademarks and/or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.



For DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, DTS and the Symbol together, Virtual:X, and the DTS Virtual:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.

Bluetooth°

The **Bluetooth®** word mark and logos are registered trademarks owned by the **Bluetooth** SIG, Inc. and any use of such marks by LG Electronics is under license.

Other trademarks and trade names are those of their respective owners.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Specifications

General			
Power requirements	Refer to the main label on the unit.		
	Refer to the main label on the unit.		
Power consumption	Networked standby : 1.5 W (If all network ports are activated.)		
Dimensions (W x H x D)	Approx. 990.0 mm X 97.0 mm X 125.0 mm With foot		
Operating temperature	5 °C to 35 °C		
Operating humidity	5 % to 90 %		
Available Digital Input Audio Sampling Frequency	32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz		
Available Digital Input Audio format	Dolby Audio, DTS Digital Surround, PCM		

Input/Output	
OPTICALIN	3 V (p-p), Optical jack x 1
HDMIIN	19 Pin (Type A, HDMI™ connector) x 1
HDMI OUT	19 Pin (Type A, HDMI™ connector) x 1

Amplifier (RMS Output)	
Total	600 W RMS
Front	100 W RMS x 2 (4 Ω at 1 kHz, THD 10 %)
Surround	100 W RMS x 2 (4 Ω at 1 kHz, THD 10 %)
Subwoofer	200 W RMS (3 Ω at 80 Hz, THD 10 %)

Subwoofer	
Туре	1 Way 1 Speaker
Impedance	3Ω
Rated Input Power	200 W RMS
Max. Input Power	400 W RMS
Dimensions (W x H x D)	Approx. 191.0 mm x 386.0 mm x 318.0 mm

• Designs and specifications are subject to change without prior notice.

Handling the unit

When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

Keeping the exterior surfaces clean

- Do not use volatile liquids such as insecticide spray near the unit.
- Wiping with strong pressure may damage the surface.
- Do not leave rubber or plastic products in contact with the unit for a long period of time.

Cleaning the unit

To clean the unit, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.

