



Original	Replacement
 Power Receiver	 Power
 Power Source	 +  Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10/Memory	 +  Shift + Guide
 ENT	 +  Shift + Ok
 Up	 Up
 Down	 Down
 Right	 Right

Original	Replacement
 Left	 Left
 Enter	 Ok
 Top Menu	 +  Shift + Menu
 Pop Up Menu	 Menu
 On Screen	 +  Shift + Options
 Option	 Options
 Return	 Back
 Display	 +  Shift + Info
 Mode	 Media
 Stop	 Stop
 Pause	 Pause
 Play/Band	 Play
 << Tuning	 <<
 Tuning >>	 >>
 I<< Preset	 I<<
 Preset >>I	 >>I
 Movie	 Smart





Original	Replacement	Original	Replacement
 Music	 +  Shift + Media	 HDMI Out	 AV
 Sur.Decode	 Dual	 HDMI 1	 +  Shift + 1
 Straight	 Subt	 HDMI 2	 +  Shift + 2
 Info	 Info	 HDMI 3	 +  Shift + 3
 Sleep	 Sleep	 HDMI 4	 +  Shift + 4
 Enhancer	 TV/R	 HDMI 5	 +  Shift + 5
 Pure Direct	 Text	 V-AUX	 +  Shift + 6
 Program+	 Ch +	 AV 1	 +  Shift + 7
 Program-	 Ch -	 AV 2	 +  Shift + 8
 Vol+	 Vol +	 AV 3	 +  Shift + 9
 Vol-	 Vol -	 AV 4	 Guide
 Mute	 Mute	 AV 5	 +  Shift + 0
 BD/DVD	 Red	 AV 6	 Pre Ch
 TV	 Green	 Audio	 +  Shift + Dual
 NET	 Yellow	 Tuner	 +  Shift + TV/R
 Radio	 List	 USB	 +  Shift + Subt
 Party	 Format	 Bluetooth	 3D







Original	Replacement
 Power Receiver	 Power
 Power Source	 +  Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10/Memory	 +  Shift + Guide
 ENT	 +  Shift + Ok
 Info	 INFO Info
 Sleep	 SLEEP Sleep
 Top Menu	 +  Shift + Menu

Original	Replacement
 Pop Up Menu	 Menu
 On Screen	 +  Shift + Options
 Option	 OPT Options
 Return	 BACK Back
 Display	 +  Shift + Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Mode	 MEDIA Media
 Stop	 Stop
 Pause	 Pause
 Play/Band	 Play
 << Tuning	 <<
 Tuning >>	 >>
 I<< Preset	 I<<





Original	Replacement
 Preset >>I	 >>I
 Program+	 Ch +
 Program-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 BD/DVD	 Red
 TV	 Green
 NET	 Yellow
 Radio	 TV/R
 Party	 Format
 HDMI Out	 AV
 HDMI 1	 Shift + 1
 HDMI 2	 Shift + 2
 HDMI 3	 Shift + 3
 HDMI 4	 Shift + 4
 HDMI 5	 Shift + 5

Original	Replacement
 V-AUX	 Shift + 6
 AV 1	 Shift + 7
 AV 2	 Shift + 8
 AV 3	 Shift + 9
 AV 4	 Guide
 AV 5	 Shift + 0
 AV 6	 Pre Ch
 Audio	 Dual
 Tuner	 D. Menu
 Bluetooth	 Subt
 USB	 Text
 NET	 Shift + Media
 Phono	 Smart

