

# BAMBA

## BAMBA PRECISIONCARE 7500 POWER BLADE

Barbero/Beard trimmer



cecotec

Manual de instrucciones  
Instruction manual  
Manuel d'instructions  
Bedienungsanleitung  
Manuale di istruzioni  
Manual de instruções  
Instructiehandleiding  
Instrukcja obsługi

## INDEX

4	1. Safety instructions
56	2. Parts and components
61	3. Before use
61	4. Operation
62	5. Cleaning and maintenance
64	6. Technical specifications
64	7. Disposal of old electrical appliances
65	8. Technical support service and warranty

## SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users.

1. Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that

the wall outlet is grounded.

2. This product is for household only. Do not use for commercial or industrial purposes and do not use outdoors.
3. Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the official Technical Support Service of Cecotec in order to avoid any type of danger.
4. Do not use the device if its cord or any other part is damaged. In this case, contact the official Technical Support Service of Cecotec.
5. Keep children away from the packaging materials. Risk of suffocation.
6. This appliance must be checked

frequently for signs of wear or damage.

If such signs are present, or if the appliance has been used improperly, contact the official Technical Support Service of Cecotec.

7. Do not try to repair the device by yourself. To charge the battery use only the detachable supply unit provided

with the appliance.

8. The charging unit contains a transformer.
9. Always unplug the appliance before you clean it under the tap.
10. Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.

Always replace a damaged part with its original replacement.

- 11. Do not open the appliance to replace the rechargeable battery.
- 12. Switch off the device immediately in the event of defects or malfunctions.
- 13. Do not use accessories or parts that have not been provided by Cecotec.

14. Do not leave the device unattended while in use.

- 15. Do not try to open, disassemble or repair the product. There are no serviceable parts inside the device.
- 16. The device is exclusively designed for trimming natural beards. Do not use with artificial or animal hair.

17. Cecotec accepts no liability for damage caused by improper or incorrect use.
18. The appliance is suitable for mains voltages ranging from 100 to 240 volts.
19. Never use water hotter than 80°C to rinse the appliance.
20. Only use this appliance for this intended purpose as shown in the user manual.
21. For hygienic reasons, the appliance should only be used by one person.
22. Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
23. Do not use the supply unit in or near wall sockets that contain an electric


air freshener to prevent irreparable damage to the supply unit.

24. Do not use the device if your skin or head skin is damaged or suffers from any type of illness.

25. Turn off and unplug the device from the power supply before assembling or disassembling attachments.

26. This appliance cannot be used by children or persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge. Supervise young children to make sure that they do not play with the appliance.



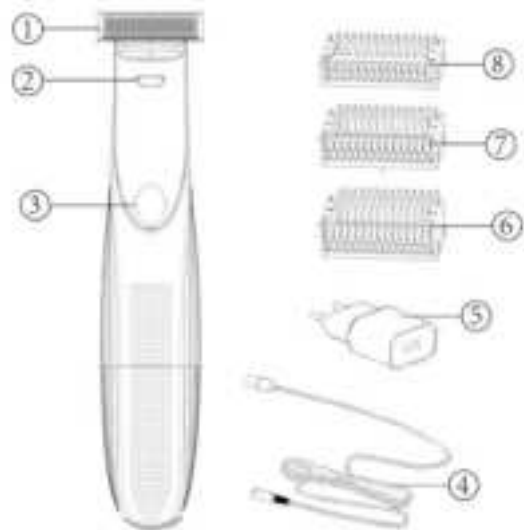

## PARTS AND COMPONENTS

1. Blade x2
2. Blade release button
3. On/off button/battery charge indicator
4. USB charging cable
5. Power adapter
6. 3 mm click-on guide comb
7. 2 mm click-on guide comb
8. 1 mm click-on guide comb

### 3. BEFORE USE

- Take the product out of the box.
- Remove all packaging materials. Keep the original box.
- Make sure all the components are included and in good conditions, otherwise, contact immediately the official Technical Support Service of Cecotec.
- This appliance is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the appliance can therefore only be used without the charging cord.

**WARNING:** Switch off the device before replacing or changing the attachments.

### 4. OPERATION

#### Shaving

**Warning:** Before you use the appliance, always check the blade for damage or wear. If the blade is damaged or worn, do not use the appliance, as injury may occur. Replace the damaged blade before you use the appliance.

1. To switch on the appliance, press and hold the on/off button.
2. Select the stubble comb you wish to use depending on the size of cut.
3. Click desired comb into place and make sure it is correctly fixed.
4. Switch on the appliance.

5. Place the comb onto the skin and move the appliance in the direction of the teeth of the comb.
6. Switch off and clean the appliance after every use.

### Trimming with comb

1. Select the stubble comb you wish to use depending on the size of cut.
2. Click the desired comb into place and make sure it is correctly fixed.
3. Make sure the comb teeth are pointing upwards.
4. Switch on the appliance.
5. Place the comb onto the skin and move the appliance in the direction of the teeth of the comb.
6. Switch off and clean the appliance after every use.
7. To remove the comb, hold it from both sides and pull it off the blade.

**Note:** Always trim in the direction of the teeth of the comb. This will give you the best results.

## 5. CLEANING AND MAINTENANCE

- Clean the appliance after every use.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- Do not tap the appliance against a surface to remove water from it, as this may cause damage. Replace the blade if it is damaged.
- Remove the comb from the blade. Always turn the appliance off before putting on or taking off combs
- If a lot of hairs have accumulated on the comb, first blow them off. Then rinse the comb with lukewarm water.

- Do not dry the blade with a towel or a tissue as this may cause damage. Let the appliance and comb dry naturally.

### **Cleaning the appliance**

1. Remove the comb from the blade. Always turn the appliance off before putting on or taking off combs.
2. Switch on the appliance and rinse the blade with lukewarm water.
3. Rinse the comb with lukewarm water
4. Let the appliance and comb dry.

### **Removing the blades**

1. Press the blade release button and hold the blade on its sides to remove the blade and prevent it from falling out.
2. Hold the new blade on its sides and push it into the device until it clicks into position.

### **Replacing the blades**

- Similar to what you would experience with a manual blade, this blade becomes blunt over time, which results in increased hair pulling and reduced cutting performance.
- For optimal cutting and gliding performance of the blade, we advise you to replace the blade every 6 months or when it no longer provides the shaving or trimming results you expect.
- The advice of replacing every 6 months is based on two full shaves a week. Depending on your usage behaviour the exact lifetime of the blade could be longer or shorter.

## **6. TECHNICAL SPECIFICATIONS**

Product name: PrecisionCare 7500 Power Blade

Product reference: 04230

Voltage: 100-240V AC 50/60Hz

Made in China | Designed in Spain

## 7. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly. If the product has a built-in battery or uses batteries, they should be removed from the appliance and disposed of appropriately.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

## 8. TECHNICAL SUPPORT SERVICE AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

- The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.
- The product has been disassembled, modified, or repaired

## ENGLISH

by persons, not authorised by the official Technical Support Service of Cecotec.

- Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at +34 963 210 728.

# BAMBA

**PrecisionCare 7500 Power Blade**