


GEEVON Wireless Thermometer

Item No.T226150

User Manual

Thank you for purchasing T226150 Thermometer.Please take a moment to read this guide and store it for Future reference.

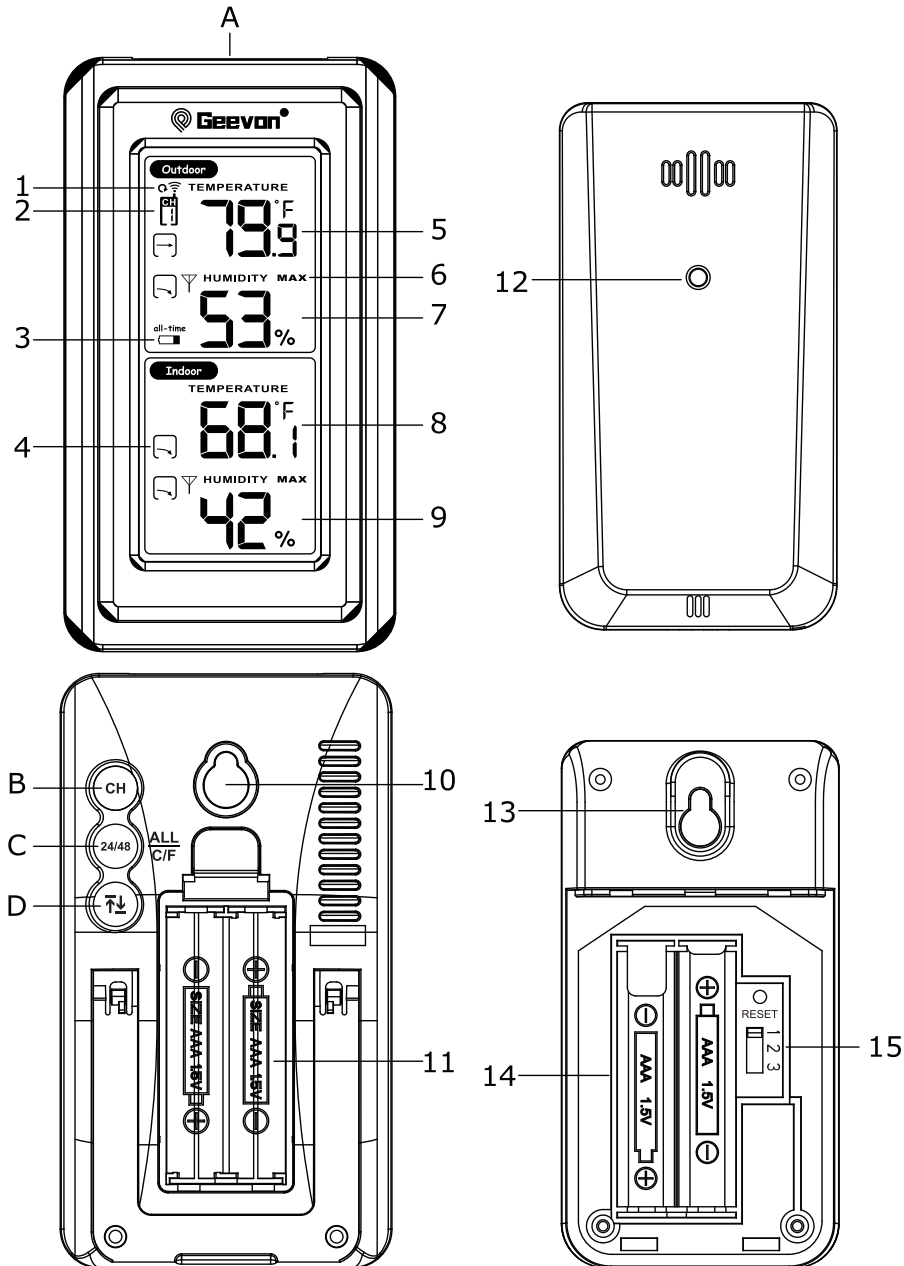

Displays and Controls

- 1.Channel Cycle Symbol
- 2.Channel Selection
- 3.Low Battery Indicator
- 4.Temperature Trend
- 5.Outdoor temperature
- 6.Maximum Temperature and Humidity
- 7.Outdoor Humidity
- 8.Indoor Temperature
- 9.Indoor Humidity
- 10.Hang Hole
- 11.Main Unit Battery (2*AAA)
- 12.Data Transfer Light (Data is transmitted to the main unit when it flash)
- 13.Sensor Hang Hole
- 14.Sensor Battery (2*AAA)
- 15.Sensor Channel Select Button

Buttons

- A:LIGHT Button
- B:CH Select Button
- C:C/F/Today/48Hr/All-Time Button
- D:Max/Min Display Button

Main Functions

1. Indoor Temperature Display:-10°C/14°F ~ 50°C/122°F
2. Outdoor Temperature Display:-40°C/-40°F - ~ 60°C/122°F
3. Indoor/Outdoor Humidity Display: 10%-99%
4. Indoor/Outdoor Temperature Trend
5. Indoor/Outdoor Humidity Trend
6. Low Battery Indicator
7. Backlight
8. 3 Channels for RF Cycle Display
9. Today/48Hr/All-Time Outdoor/Indoor Temperature/Humidity History
- 10.Temperature Unit °C/°F Switch

Setting Up Power Supply Base Device

Proceed as follows:

- 1.Remove the battery compartment cover.
- 2.Insert the batteries into the battery compartment. Ensure that the battery polarity (+/-) is correct.

3. Replace the battery compartment cover.

Remote sensor

- 1.Remove the battery compartment cover.
- 2.Insert the batteries into the battery compartment. Ensure that the battery polarity (+/-) is correct.
- 3.Set the channel selector switch to the desired channel.
4. Replace the battery compartment cover.

NOTICE!

This thermometer can be operated with 3 remote sensors. Each remote sensor being connected must be operated on a different channel. If only one remote sensor is connected, it should be operated on channel 1.

Channel Select

- 1.In normal mode, press the CH button to select Channel 1, Channel 2 or Channel 3. Hold the CH button for approx. 3 seconds to reset values and search for an RF signal.
- 2.When you keep pressing this button until the circle symbol appears,the thermometer will show three-channel loop display.

NOTICE!

Always make sure the channel chosen on the display unit matches the channel option chosen on the outdoor sensor.

°C/°F Switch/Today/48Hr/All-Time History

- 1.In normal mode, hold and press this button for approx. 3 seconds to switch the temperature unit °C/°F

- 2.Press this button to switch the display of today/48hr/all-time history

MAX/MIN Temperature and Humidity

- 1.In normal mode, press this button to check the max/min temperature and humidity history
- 2.Press and hold for 3 seconds to clear the current temperature and humidity history

Backlight

When connect with batteries, press the LIGHT button to light up the screen. The lights will keep 8 seconds .

Technical Data

Main unit

Batteries: 2xAAA Battery (Not Incl)

Temperature measuring unit: °C / °F

Temperature display range: 14°F-122°F

Humidity display range: 10% - 99%

Remote sensor

Batteries: 2x AAA Battery (Not Incl)

Temperature measuring range: -40°F-122°F

Humidity display range: 10% - 99%

Transmission range: 100 m