

USERS'MANUAL FOR URC-22

I General Description

The universal remote controller of URC-22B is a new model of multi-functional remote control for European Market.

It features:

1、7 Device Banks: TV1, TV2, VCR1, VCR2, SAT/CABLE, CABLE/SAT and AUX.

2、3 Operating Modes: Set-up Mode, Quick Search Mode, and Display Mode.

3、Transmission and Set-up Indicating LED.

II Operating Process

1、Set Up Devices

According to the brand code in the attached Device Code List, find out the code of the device that you want to control. Then follow steps as below:

1) Press [SET] key and hold it, then press the device key that you want to control, such as [TV1], [TV2], [VCR1] or [AUX], etc.

2) The LED will be on at the moment, Release the pressed keys.

3) Enter the 3-digit Device Code.

4) If the entered Device code is correct, the LED will be off automatically. If the entered Code is in correct, the LED will blink twice and keeps being at setup mode (being on). then pls return to Step 3).

5) Try if keys on Remote Controller work or not. If most keys work improperly, please find other code in the same brand, repeat (1-5) till you

feel the main keys work well enough.

Note: In the process of setup, if you want to stop setup work, pls press device

key. (If no key is pressed in 10 seconds, the remote controller will leave setup mode automatically.)

2、Quick Search

After you have set up several times the device you want to control, it still does not work (i.e. the device still cannot be controlled by URC-22B), or you cannot find the correct code in the Device Code List, you can use Quick Search function to find out the correct code. When URC-22B has entered into Search Mode, the preset search direction is Forward Search, but you can use [SET] key to switch between Forward Search and Backward Search during search process.

1) Power on the device you want to control. If it's a VCR, it must be inserted with a tape.

2) Press and hold [SET] Key. In the meantime, press the Device Key that you want to control, such as [TV12#], [VCR2] etc.

3) The LED will be on at the moment. Release the pressed keys.

4) Press the [SET] key again and release it. Now the URC-22B unit enters into Quick Search Mode and the LED keeps flashing.

5) Point the URC-22B unit to the device and press [POWER] key. If it's VCR/AUX, you can press either [POWER] key or [PLAY] key. See if the device work or not (power off or play). If the device works, turn to step 6). If not, repeat step 5).

6) Then check if other keys such as

[CH+/-], [VOL+/-]...can function properly (i.e. if the device can be controlled. if not, return to step 5).

7) Some devices react slowly to [POWER] signal. In search process, you can press [SET] key to switch between Forward/Backward Search to change search direction and find the right code quickly.

8) Whenever you want to leave Search Mode, press Device Key, and the LED will be off.

Note: In Search Mode, besides [POWER] key ([POWER] key and [PLAY] key in the case of VCR/AUX), all other keys can be checked function normally. That means you can test other Keys without leaving Search Mode. The URC-22B unit will leave Search Mode if no key is pressed for 30 seconds.

3. Auto Search

1) Power on the device you want to control. If it is a VCR, it must be inserted with a tape.

2) Press and hold [SET] key. In the meantime, press and hold [POWER] key for more than 3 seconds and the auto search will begin.

3) Press any key to exit.

4、Brand Code Display

The control Code is a 3-digit number and the URC-22B unit can make all the 3 digits display.

1) Press and hold the [SET] key, in the meantime press the digit that you want to display, such as 1, 2 or 3.

2) Release the [SET] key.

3) Count the time the LED blinks, and the blinking time is the digit. If there is no blink, the digit is zero.

5、Remarks:

Please do not press any keys when replacing batteries to avoid missing set-up data.

8 in 1 Universal Remote Control



IMPORTANT
READ THESE
INSTRUCTIONS BEFORE
USE. PLEASE RETAIN
FOR FUTURE REFERENCE

User Manual

Maspro	0388 0393 0402 0490	Provision	0514
Super Max	0646,0848,0849,0850	Triumph	0506
Supex	0858,0862,0869	Trwam	2005
Tadiran	0817	Unbranded	0481
Tagra	0512	Uniden	0403,0404,0406,0443,0630,0831
Tantec	0396	Unitat	0499
Technisat	0409,0428,0429,0430,0431,0487	United Satellite	0440
	0499,2018	Universum	0520
Technosat	0263,0467,0802,0869	US Electronics	0417
Technowell	0520	Victor	0430,0487
Tedalex	0466	Vendata	0499
Teknika	0471	Viewstar	0477
Telasat	0516	Vision	0519
Teleciel	0522	Vortec	0459,0801,0855
Telecom	0884	Vortic Star	0801
Telekia	0522	Vitech	0434,0507
Telemaster	0514	Wela	0497
Telemax	0432	Wetekom	0516
Telemister	0398,0409,0428,0430,0499,0487	Winer	0080,0387,0449,0844
Teletech	0513	Wintegarten	0511
Telewire	0512	WISI	0409,0420,0435,0436,0437,0438
Thomson	0520,2009,2017		0439
Thom-Ferguson	0394,0395,0400,0401,0402,0433	Woorisat	0514
	0485	XSAT	0500
Tokai	0499	Zehnder	0390,0507,0514
Tonna	0512	Zenith	0441,0444,0445,0446,0447
Topfield	0509	Zimwell	0821
Toshiba	0442,0444,0506,0833	Zodiac	0522
TPS	0805	Others	0820,0861

CABLE Codes

ABC	0452	Paragon	0806
Jerrol	0417	TADA	0448

HIFI Codes

Blaupunkt	0568	Pioneer	0545
Fisher	0529	Sanyo	0539
Hitchi	0530	Sharp	0531
Kenwood	0527,0531,0532,0533,0534	Sherwood	0540,0541,0577,0578
Lenco	0595,0596,0597,0598,0599,0600	Sikardin	0644
	0601	Sony	0617
Nordmende	0535,0549	Technics	0542
Onkyo	0536,0537	Yamaha	0543,0544
Panasonic	0538		
National			

CD Codes

Alwa	0581	Philips	0552,0553,0579,0604
ATLE	0579	Pioneer	0554,0555,0610
Denon	0547	Proton	0553
Fisher	0546	Radiotone	0549
Haitai	0548	ROTEL	0553,0582,0583
Inkei	0541	SAE	0553
JBL	0623,0624	Sansui	0603
JVC	0605	Sanyo	0604,0606
Karcher	0549	Sharp	0550,0566
Kenwood	0550,0580	Sony	0556,0557,0575,0607
Lenco	0600,0549,0585,0586,0587,0588	Sylvania	0553,0604
	0589,0590,0591,0592,0593,0594	Teac	0608,0611
Magnavox	0553,0576,0604	Technics	0558,0609
Mission	0553	Victor	0605
NEC	0551	Yamaha	0612
Onkyo	0613,0614,0615,0616		

LD/DVD Codes

Alfreay	0688	Elypio	3000
Alwa	0626,0649	Encore	0688
Alba	0680	Enzer	0684
AMC	0643	Ferguson	0679
APEX	0672	Goldstar	0633,0882
Arianet	0654	Grundig	0655,0686
ATLM	0627,0671	Harman/Kardon	0690
BBK	3003,3004,3005,3006,3007,3008	Hitechi	0684
	3009	JMB	0686
Bentley	0635	JVC	0636,0664,3012
BSkyB	0680	Kenwood	0572,0630,0663
Bush(UK)	0680,0685,0689	Kiss	0684,3015
Caravell	0622	Lenco	0689
CineULTRA	0689	Lescon	0687
CONIC	0673	LG	0682
Daeewo	0660,3013	Logik	0669
Denca	0685	Magnavox	0571
Denver	0689	Manta	3011
Denzel	0684	Matsui	0683,0686
Desay	0625	Maxview	0670
Diamond	0683	M & B	0670
Dual	0684	Microsoft	0619,0620
Eltax	0642	Mitsubishi	0662

Monyka	0684	SEG	0684
Mullek	0638	Sharp	0628,3010
Neufunk	0684	Skymaster	0656
Onkyo	0647,0653	Sokol	0645
Orion	0686,3010	Sony	0575,0631,0632,0641,0657
Oritron	0683	Talung	0659
Pacific	0676,0677,0678,0679	Teac	0634
Panasonic	0573,0574,0629,0639	Telestar	0651
National		Tevion	0683
Philips	0559,0675	Thomson	0668
Phonotrend	0689	Tokai	0684
Pioneer	0571,0658	Toshiba	0571,0640
Ralte	0684	Universum	0682
RCA	0602,0661,0667	Wesder	0689
REC	0685	Wharfedale	0687
Red Star	0650,0652	Wilson	3014
Roadstar	0685,0689	Xoro	3017
Sampo	0688	Yakumo	3018
Samsung	0637,0648,0666	Yamaha	0646
Sansui	0686	Yamakawa	0684,3016
Sanyo	0681	Zenith	0570,0682
Schneider	0679	Others	0674
Schwaiger	0679		

BBK	3001,3002
Blaupunkt	0569(VHS)
Cabletime	0524,0525,0526(CTV)
Denon	0564(TUNE)
	0569(DECK)
Microsoft	0621(MCE)

Philips	0560(EQ)
	0561(PP)
	0562(MPE)
	0563(TUNE)
	0567(JCC)
ROTEL	0584(MPE)
Sony	0563(MPE)
	0579(CDV)
	0618(TUNE)

Customer Helpline 01473 292 862

Monday to Friday 9:00am-12:30pm
& 1:30pm-5:00pm

Supalec reserve the right to
change specifications without prior notice.
Pictures for illustration purposes only.
Actual products may differ slightly.

