 
 
 
 
 
 
 
 
 




Original	Recharge	Original	Recharge
	POWER		Power
	↶		Shift + Smart / List
	*/Ö		Shift + Display / Media
	*/♀		Shift + Red / Netflix /
	SOURCE		AV / Input / RDS
	PRESETS		Smart / List
	+++		Set up / OPT /
	♪ ☺ □		Display / Media
	SLEEP		Sleep / Timer
	1 . / @		1
	2 abc		2
	3 def		3
	4 ghi		4
	5 jkl		5
	6 mno		6
	7 pqrs		7
	8 tuv		8
	9 wxyz		9
	TV		TV/ Radio /
	0		0
	↔		Shift + Back / Return
	TV GUIDE		Guide / EPG / - / -
	[≡]		Text / Goto
	MENU		Menu / Home
	Q MENU		D. Menu / Top
	UP		Up
	LEFT		Left
	OK		OK
	RIGHT		Right
	DOWN		Down
	BACK		Back / Return
	Picture / Format		Picture / Format
	EXIT		Exit / Cancel / Clear
	*FAV		Fav / Marker / PC



[illegible]