

 
 


65" SMART HDR 4K LED TV

SERIES 8 NU8020

(KALED65NU8020SZA)

COMPONENTS

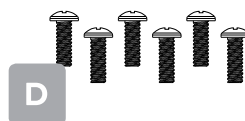

A Kogan 65" HDR 4K
Smart LED TV

B Remote control

C Stand (x2)

D M4 x 14mm screw (x6)

E AAA battery (x2)

 
F Quick-start guide

G Warranty card


NOT INCLUDED

Phillips head screwdriver, antenna cable, broadband internet connection.

REMOTE CONTROL OVERVIEW

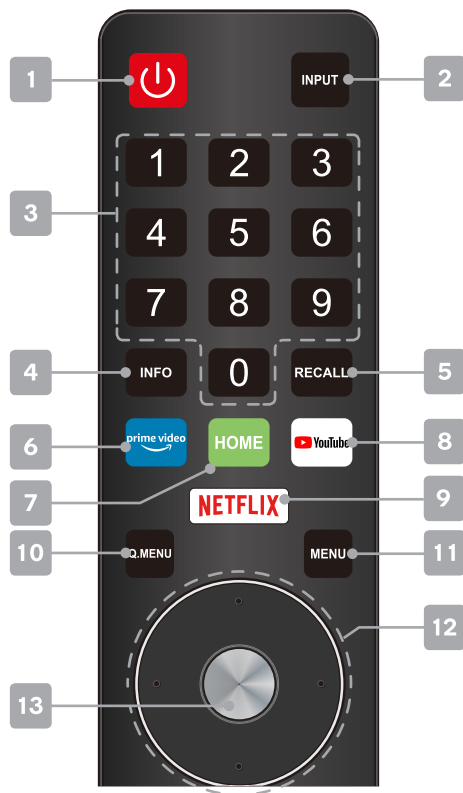

- 1** **Power**, press to enter or exit standby mode
- 2** **INPUT** displays the list of input source channels.
- 3** **Number buttons**, press to select channels or input passwords
- 4** **INFO** displays the current program information
- 5** **RECALL** switches to the previous program
- 6** **prime video** If network connects, press this key to open and view amazon prime video directly
- 7** **HOME** Access the home page
- 8** **YouTube** to open app homepage
- 9** **NETFLIX** to open app homepage
- 10** **Q.MENU** to bring up the quick menu
- 11** **MENU** to open the full menu, featuring optional, adjustable settings
- 12** **▲/▼/◀/▶ Direction buttons** for navigating menus and settings
- 13** **Enter** select the current item or confirm selection

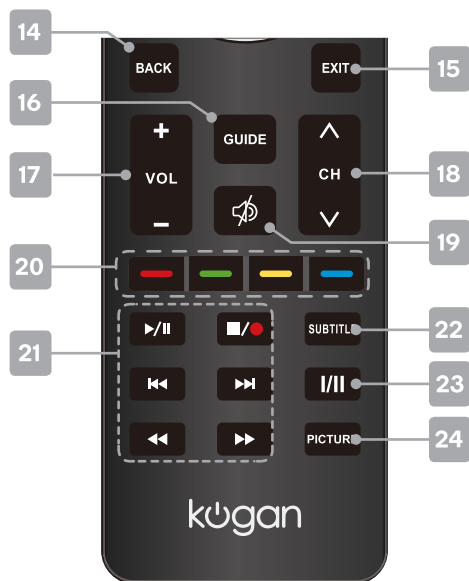 

14 **BACK** to the previous menu

15 **EXIT** to quit the current interface

16 **GUIDE** opens the Electronic Program Guide in DTV mode

17 **+ VOL -** to adjust the volume up or down

18 **^ CH v** to scroll channels

19 **Mute** to toggle sound on/off

20 **Colour buttons** for navigational use within apps

21 **Media control buttons** including play/pause, stop/record, previous, backward, next, and forward for use in Media mode

22 **SUBTITLE** to toggle subtitles on/off

23 **I/II**, set the audio language

24 **PICTURE** to select among Sports, Normal, Mild, User

 
ASSEMBLY AND INSTALLATION

BEFORE YOU GET STARTED

Spread cushioning flat to lay the TV on. This will help to prevent damage.


1. Stand assembly

- Attach stand to base of TV.
- Insert three 14mm screws and use Phillips head screwdriver (not supplied) to tighten.
- Repeat these steps for second stand.

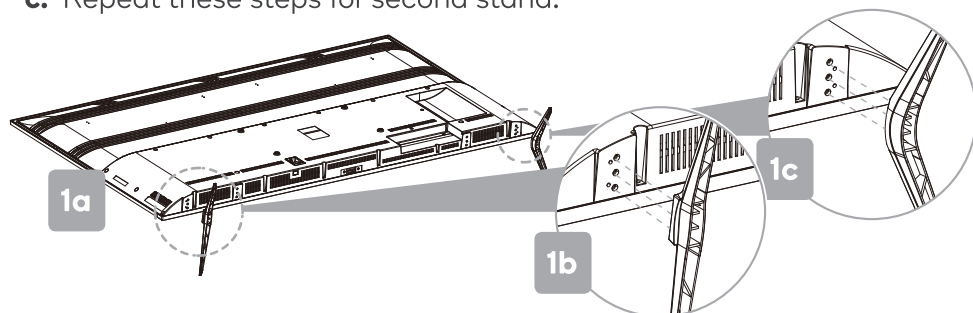


2. Remote control assembly

 - Open the battery compartment cover on the back side.
- Insert two 1.5V AAA size batteries, making sure to match the polarity markings (+ / -) of the batteries with the diagram inside the compartment.
- Replace battery compartment cover.

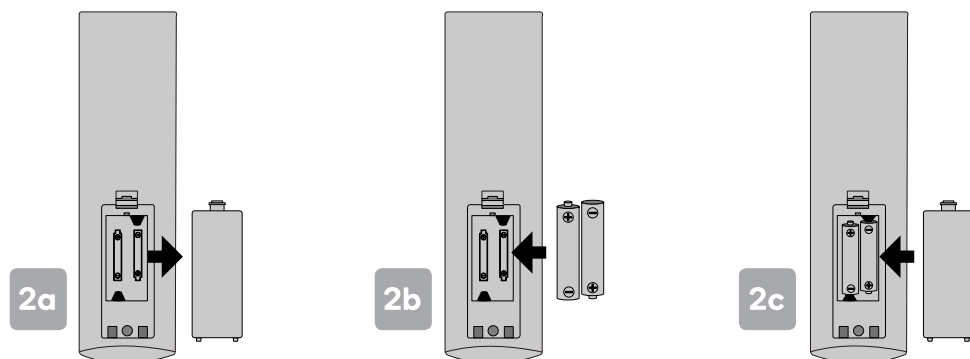

3. Connect to antenna

 - a. Connect an antenna cable (not supplied) via the 'ANT' input port at the back of the TV.
- b. Ensure the antenna cable is also connected to a working antenna, either via an antenna wall socket in your home, or directly.

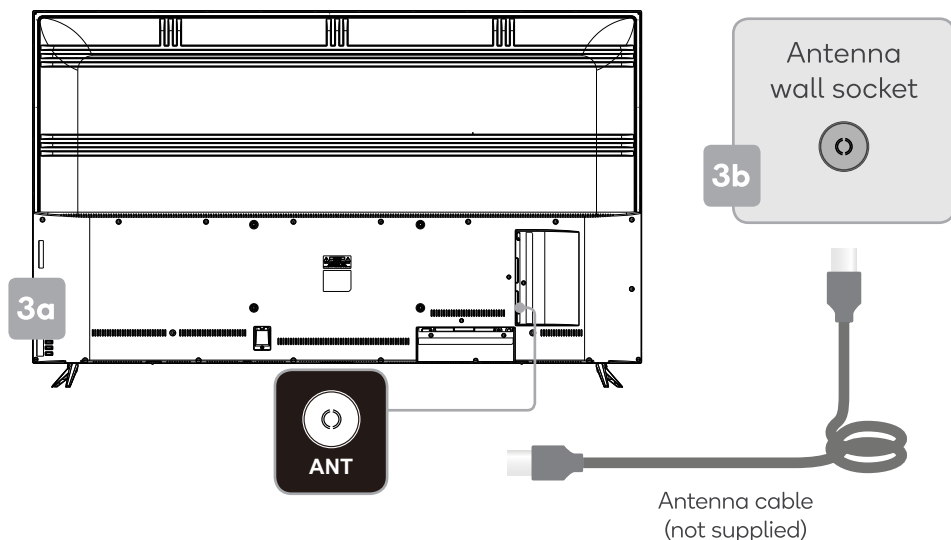

4. Turning TV on

Plug the power cord into a suitable power outlet, then press the POWER (⏻) button on the remote control, making sure to aim it at the sensor at the front of the TV. Alternatively, you can press the power button on the lower side of the back panel on the TV.

TURNING TV OFF

Press the POWER (⏻) button on the remote control to enter standby mode. To power down the TV completely, unplug the power cord from the power outlet.

Do not leave your set in standby mode for long periods of time. If you will not use the TV for a long time, it is recommended to unplug the set from both the power outlet and aerial.

FIRST TIME SETUP

When turning the TV on for the first time, the **Setup Wizard** screen will appear. Use the **▲**, **▼** and **ENTER** buttons to navigate the following options.

Language

Select your menu language.

Data Collection and Firmware Updates Notice

Accept terms and conditions, or select to view additional details.

Timezone

Select your timezone.

Connecting to the Internet

 
Select between wireless or wired connectivity.

- **Wi-Fi:** For wireless connectivity, select 'Wi-Fi'. The TV will automatically scan for wireless networks nearby. Ensure the TV is within range of your wireless modem or router, and have your password handy. Follow the prompts to input your password and connect your TV to your selected network.
- **Wired:** To select 'Wired', ensure you have connected an ethernet cable (not supplied) to the 'LAN' input port at the back of the TV **(4a)**, and that it is correctly connected to the internet.

Netflix

If you already have a Netflix account, you can login during the Setup Wizard so it is ready to go as soon as the TV is running. If you do not have an account, this can be skipped now and set up later.

Following these options, the **Auto Tuning** screen will appear. Ensure you have an antenna cable connected to the 'ANT' input port at the back of the TV **(4a)**.

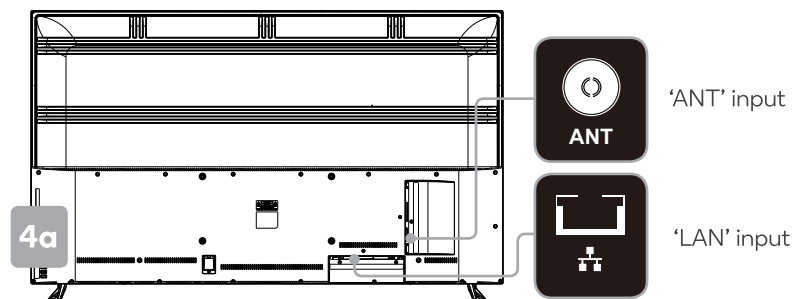

USING APPS

Press the **Home** (🏠) button on the remote to display the main interface (5a).

Use the directional buttons on your remote control to navigate through the pages (5b), and press the Enter button to launch selected app. For Netflix and YouTube, you can launch the apps directly using the remote control hotkeys.

Netflix

Sign into your Netflix account to browse by genre, search for titles, manage your Instant Queue and review Netflix recommendations all from your TV. If you do not already have a Netflix account, you will need to sign up to use this feature. For more information, visit **netflix.com**

YouTube

Enjoy the videos and music you love, upload original content, and share it all with friends, family, and the world on YouTube.

Facebook

Connect with friends, family and other people you know. Share photos and videos, send messages and get updates.

Twitter

From breaking news and entertainment to sports and politics, get the full story with all the live commentary.

Smart TV Apps

The app portal lets you access a range of streaming applications like Eros Now, Yupptv, BIGSTAR Movies, and many more. Paid subscription may be required for some services.

Yahoo Weather

See the weather like never before – Yahoo Weather's immersive experience makes checking the weather inspiring and entertaining.

Toon Goggles

 
 
The premier on-demand entertainment destination for children, offering a vast and diverse amount of programs.

Screencast

Mirror your Windows 10 or supported Android devices with the TV to display your personal pictures and videos.

Browser

Take advantage of the TV's inbuilt browser to search the internet at your leisure.

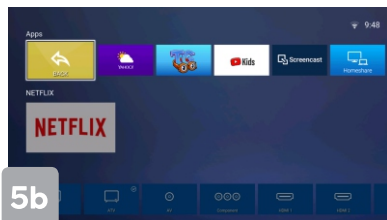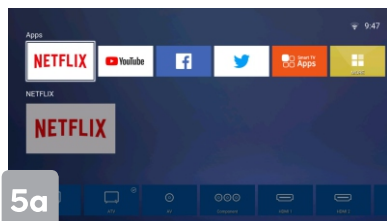

Select 'More' to access next page, select 'Back' to return.



Some of the many applications on the Smart TV Apps portal

Apps listed above are for reference only, subject to change without notice.
Please refer to Kogan support for further information.

SETTINGS MENU

The full settings menu is located on the Home page, beneath the Apps and Source options **(6a)**. The **MENU** button on the remote control will also bring up the same menu.

Picture

Adjust settings for contrast, brightness, colour, sharpness, tint, backlight, colour temperature, aspect ratio, noise reduction, and HDR **(6b)**.

Sound

Adjust audio settings, including EQ, auto volume limiter, surround sound, and more.

Setting

General adjustable settings such as menu language, time, HDMI ARC setup, auto power and auto standby.

Lock

Control parental guidance and password protection options.

PVR Option

Adjust settings for PVR (personal video recorder). USB storage device is required. Please refer to the full user manual on how to use the PVR functionality.

Tuning

Tuning settings for DTV and ATV (ATV is no longer supported in Australia).

 
Network

Internet and connectivity options.


About

View system and app information, the end-user license agreement, and install software updates (via USB).

The **Q.MENU** button on the remote will bring up the Quick Menu, a simpler version of the settings with options for picture mode, sound mode, aspect ratio and the sleep timer.

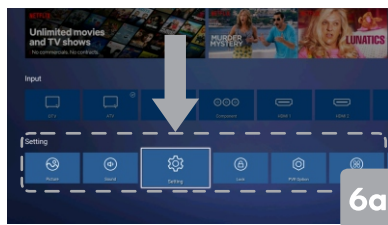

Accessing menu via the home page

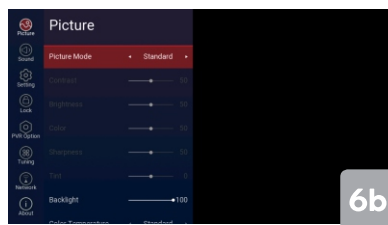 

Picture settings

BASIC TROUBLESHOOTING

Poor picture and sound quality

- Try a different channel
- Adjust the antenna
- Check all connections

No picture or sound in TV status

- Try another channel
- Press the TV/AV button
- Make sure TV is plugged in
- Check the antenna connection

No sound or sound is too low at maximum volume

- Check the volume settings on any external speakers connected to your television
- Adjust the TV volume accordingly
- Check another channel or input
- Check that MUTE hasn't been turned on

No colour, wrong colour or tints

- Make sure the program itself is broadcast in colour
- Select the picture menu, then adjust the colour and tint submenus

Picture rolls vertically

- Check all connections

Blurred or snowy picture, distorted sound

- Check direction, location and connections to your antenna
- Issues may be caused by the use of an indoor antenna (poor signal)

Remote control malfunctions

- Replace remote control batteries
- Check battery terminals
- Remote is out of range, move closer to TV
- Remove any obstructions between remote and IR sensor of TV
- Make sure the power cord to your TV is plugged in and turned on

Image is not centred on the screen

- Adjust the horizontal and vertical position

“No Signal” on HDMI source

- Test the device with a different HDMI cable
- Plug the device into another HDMI port
- Try a different device connected to the same cable and port
- Perform a factory reset on your TV

For our full TV troubleshooting guide and extended User Manual for this TV, head online to help.kogan.com

Need more information?

This is a **Quick Start Guide**, and while we hope that this has given you the assistance needed for a simple set-up, a full user guide outlining all of this product's instructions and features can be found online at **help.kogan.com**

kogan.com