



Original	Replacement
 Zone Off	 +  Shift + Power
 Zone On	 Power
 Quick Select 1 (DVD)	 1
 Quick Select 2 (SAT/CBL)	 2
 Quick Select 3 (VCR/iPod)	 3
 DVD	 +  Shift + 2
 TV	 +  Shift + 1
 iPod	 Guide / EPG / -/--
 HDP	 7
 Net/USB	 8
 SAT/CBL	 9
 VCR	 4
 DVR	 D.Menu / Top
 V.AUX	 Fav / Marker / PC
 Tuner	 6
 SAT TU	 0
 DTU	 5

Original	Replacement
 CD	 +  Shift + 3
 Phono	 Smart / List
 M.Zone Call	 Display / Media
 CH+	 CH+ / Page+
 Shift	 Setup / OPT /
 Vol+	 Vol+
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Menu	 Menu / Home
 Up	 Up
 Memory	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Search	 Red / Netflix / Search
 Down	 Down







Original	Replacement
 Zone Off	 +  Shift + Power
 Zone On	 Power
 Quick Select 1 (DVD)	 1
 Quick Select 2 (SAT/CBL)	 2
 Quick Select 3 (VCR/iPod)	 3
 DVD	 +  2 Shift + 2
 TV	 +  1 Shift + 1
 iPod	 Guide / EPG / -/--
 HDP	 7
 NET/USB	 8
 SAT/CBL	 9
 VCR	 4
 DVR	 D.Menu / Top
 V.AUX	 Fav / Marker / PC
 Tuner	 6
 SAT TU	 0
 DTU	 5

Original	Replacement
 CD	 +  3 Shift + 3
 Phono	 Smart / List
 M.Zone Call	 Display / Media
 CH+	 CH+ / Page+
 Shift	 Setup / OPT /
 Vol+	 Vol+
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Menu	 Menu / Home
 Up	 Up
 Memory	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Search	 Red / Netflix / Search
 Down	 Down







Original	Replacement
 Zone Off	 +  Shift + Power
 Zone On	 Power
 Quick Select 1 (DVD)	 1
 Quick Select 2 (SAT/CBL)	 2
 Quick Select 3 (VCR/iPod)	 3
 DVD	 +  2 Shift + 2
 TV	 +  1 Shift + 1
 iPod	 Guide / EPG / -/--
 HDP	 7
 NET/USB	 8
 SAT/CBL	 9
 VCR	 4
 DVR	 D.Menu / Top
 V.AUX	 Fav / Marker / PC
 Tuner	 6
 SAT TU	 0
 DTU	 5

Original	Replacement
 CD	 +  3 Shift + 3
 Phono	 Smart / List
 M.Zone Call	 Display / Media
 CH+	 CH+ / Page+
 Shift	 Setup / OPT /
 Vol+	 Vol+
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Menu	 Menu / Home
 Up	 Up
 Memory	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Search	 Red / Netflix / Search
 Down	 Down







Original	Replacement
 Zone Off	 +  Shift + Power
 Zone On	 Power
 Quick Select 1 (DVD)	 1
 Quick Select 2 (SAT/CBL)	 2
 Quick Select 3 (VCR/iPod)	 3
 DVD	 +  Shift + 2
 TV	 +  Shift + 1
 iPod	 Guide / EPG / -/-
 HDP	 7
 NET/USB	 8
 SAT/CBL	 9
 VCR	 4
 DVR	 D.Menu / Top
 V.AUX	 Fav / Marker / PC
 Tuner	 6
 SAT TU	 0
 DTU	 5

Original	Replacement
 CD	 +  Shift + 3
 Phono	 Smart / List
 M.Zone Call	 Display / Media
 CH+	 CH+ / Page+
 Shift	 Setup / OPT /
 Vol+	 Vol+
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Memory	 Info / Angle
 Search	 Red / Netflix / Search
 I<</Tuning-	 I<< / Preset-
 >>I/Tuning+	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Repeat	 Green / APP / Repeat



