



| Original                                                                                  | Replacement                                                                              | Original                                                                                                   | Replacement                                                                                        |
|-------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|
|  Power   |  Power  |  Prog-                  |  Ch -           |
|  Eject   |  Eject  |  Input                  |  AV             |
|  HDD     |  Media  |  TV/DVD                 |  TV/R           |
|  DVD     |  Smart  |  Subtitle               |  Subt           |
|  1       |  1      |  Angle                  |  Format         |
|  2       |  2      |  Text                   |  Text           |
|  3       |  3      |  Menu                   |  Menu           |
|  4       |  4      |  Red                    |  Red            |
|  5       |  5      |  Green                  |  Green          |
|  6      |  6     |  Yellow                |  Yellow        |
|  7     |  7    |  Blue                 |  Blue         |
|  8     |  8    |  System Menu          |  D. Menu      |
|  9     |  9    |  Title List/ Top Menu |  Shift + Menu |
|  0     |  0    |  Guide                |  Guide        |
|  Audio |  Dual |  Timer                |  Sleep        |
|  Clear |  Exit |  Info                 |  Info         |
|  Prog+ |  Ch + |  Up                   |  Up           |





| Original                                                                            | Replacement   |
|-------------------------------------------------------------------------------------|---------------|
|    | Left          |
|    | Enter         |
|    | Right         |
|    | Down          |
|    | Exit / Return |
|    | Display       |
|    | I<< / Page -  |
|    | ← •           |
|    | • →           |
|   | >>I / Page +  |
|  | <</Day-       |
|  | Play          |
|  | >>/Day+       |
|  | Tv Pause      |
|  | Pause         |
|  | Stop          |
|  | Rec           |

| Original                                                                              | Replacement |
|---------------------------------------------------------------------------------------|-------------|
|    | Rec Stop    |
|    | HUB HDD/DVD |
|    | Rec mode    |
|    | Zoom        |
|    | Play Mode   |
|    | Vol+ TV     |
|    | Vol- TV     |
|    | Prog+ TV    |
|    | Prog- TV    |
|   | Power TV    |
|  | Source TV   |
|                                                                                       |             |
|                                                                                       |             |
|                                                                                       |             |
|                                                                                       |             |
|                                                                                       |             |
|                                                                                       |             |
|                                                                                       |             |

