

INSTRUCTIONS FOR CR4-2 AND CR4B-2

Full Function TV Remote Control with Input, Navigation, Dash for Digital Channels and More.

This Remote Is Not For Cable Boxes Or Any Brand Of ROKU Or FIRE TV

Battery Installation

1



Looking at the keypad, slide the dark lens cover away from you (STEP 1) and lift the lid from the back (STEP 2).

2



Install 2 AAA batteries. Make sure the + and - symbols on the metal hinge of the battery compartment correspond with the + and - end of each battery.

3



With the keypad facing away from you, close the cover by gently pressing it down (STEP 1) and sliding it until it aligns with the front (keypad) of the device (STEP 2).

4

Test the remote by pressing the power button. The LED should light up, indicating the batteries are in correctly. If the LED fails to light up, the batteries are either incorrectly inserted or dead.

Important:
The optional screw for the battery compartment is taped to the lid of the blue box.

IMPORTANT

**The Remote Is Now Ready to Operate
All LG, Samsung, *RCA or *Philips TVs**

(*RCA & *Philips Commercial TVs)

For Additional TV Brands and Systems, a Code Is Required.

To enter the code press and hold both the POWER and INPUT keys until the LED light turns on and stays on. Next, enter the corresponding code from the list below. If entered properly the LED will turn off. Test the remote; if any features do not function properly, try the next code (if one is listed).

		Residential TVs					
Samsung LYNK Cloud		Dynex	20				
Hotel Key = INFO Key	39	Element	22				
Hotel Key = HOME Key	40	Hisense	16	26			
PDI TV (Multi-Bed)		Insignia	20				
PDI Bed A	04	NEC	24				
PDI Bed B	05	ONN	18				
PDI Bed C	06	Philips	12	13			
PDI Bed D	07	RCA	10	29	08	09	11
Cruise Line		Sceptre	23				
		TCL	14	15			
		Toshiba	19				
		Vizio	17				
		Westinghouse	25	21	22		

DIRECTV DRE SYSTEMS			
Dynex	33		
Hisense	34		
Insignia	33		
LG	34		
ONN	31		
Philips	36		
RCA	31	34	37
Samsung	35		
Sony	30		
TCL	31		
Toshiba	32		
Vizio	34		
Westinghouse	30		

For Reset Instructions and Philips TV Tips, See Below

Reset Instructions (Returns the Remote to Factory Settings)

Press and hold both the POWER and 0 until the LED flashes 3 times. The Remote is now reset and will operate any LG, Samsung, *RCA or *Philips TV (default mode).

Philips TV Tips

Did you know your Philips TV can power on to a TV Channel or the Home Screen?

The following options may be helpful but are not required: Your TV's home screen serves as the central hub for many TV features. By default, the Philips TV powers ON to this screen, providing guests with easy access to popular streaming apps like NETFLIX and YouTube, as well as casting. However, if your property does not offer these smart features, you can adjust the "Switch On Settings" so that the TV turns ON and displays regular TV channels instead.

For more information on changing your TV's "Switch On Settings" contact your Philips Dealer or visit the FAQ page on cleanremote.com. Regardless of the setting you choose, launching TV, streaming, and casting options can be done from the home screen.

Note: For more direct access to your Philips TV's Input and Sleep functions, set the remote to Philips only mode: Press and hold both the POWER and INPUT until the LED blinks and then stays on solid. Next enter code 03 to complete the process. If you have any issues, please visit cleanremote.com for customer support information.