

CLEARLINE[®]

STAINLESS STEEL
Jug kettle



Model Ek - 02

INSTRUCTIONS FOR USE

PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

Marketed By

CLEARLINE APPLIANCES LIMITED

177-G, Industrial Area, Phase-1 Chandigarh-160002 (INDIA)

In case of any complaint please Contact the above or
call at +91 172-4647707 or Email at : customercare@clearline.co.in

Safety Warnings

- Please read these instruction carefully before using the jug kettle for the first time.
- Before you connect the kettle to the mains supply, make sure that the voltage indicated on the rating plate, located on the bottom of the jug kettle matches the mains voltage in your home. If it dose not, contact your dealer and do not use the kettle.
- The kettle will switch off automatically when the water has boiled. You may switch the kettle off before the boiling process is complete by using the on/off switch.
- After the kettle has switched off automatically (or has been switched off manually) it may need time to cool down. After 15-20 secs, the kettle can be switched on again.
- If the kettle over boils dry, allow 15 minutes to cool before refilling with cold water. The safety cutout will automatically reset during this time.
- Please the kettle on a stable flat surface.
- Ensure that the kettle is switched off before removing it from its stand.
- Never immerse the kettle or cord in water or any other liquid, Do no allow liquid to penetrate the electrical parts of this kettle.
- Prevent children from pulling on the mains cord or knocking the kettle over.
- Before cleaning the kettle disconnect from the power supply and wait until it has cooled down.
- The kettle may be cleaned with a damp cloth.
- Pour away the first lot of water boiled in this kettle.

- The outside surface of the kettle may get hot during use, please take care when using the kettle.
- Never fill in water more then the maximum acceptable water level.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not open lid while the water is boiling.
- If the kettle is overfilled, boiling water may spill out.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

Description

Capacity: 1.8L

Power: AC 220-240V~50/60Hz

Using the kettle

FILLING

Take up the kettle from the base before filling.

- To fill the kettle, open the cover by lifting the lid.
- Fill to the desired level (Min 0.8 L~Max. 1.8L)
- Close the lid by pressing it down until it clicks into place.

Switching on

- Plug the power supply cord into the mains.
- To switch on the kettle, press the On/Off switch downwards. The power indicator lights up.

Warranty Card

Switching off

- When the water has boiled the kettle will automatically switch itself off.
- You can stop the boiling process at any time by lifting the On/Off switch. The power indicator will go out.

Note: Do not open the lid when steam is coming out of the spout.

Cleaning

- First read the instructions in the section title “SAFETY WARNINGS”.
- Avoid using abrasive cleaning agents.

Descaling

The major cause of damage to kettles is limescale and your kettle will require regular maintenance to ensure that it continues to work properly. Limescale deposits build up over time, blocking important parts of the kettle and stopping it from working properly.

How to De-scale

- Descale
- If you see even short scale buildup.

Types of problems caused by limescale build-up:

- Colour- Limescale will discolour your kettle.
- Performance - your kettle will take longer to boil (wasting electricity) and eventually will switch off before it has boiled.
- Taste - limescale can give the water a chalky taste and limescale flakes will give a gritty texture.

Other care tips:

- To clean the outside of your kettle use a soft, wet cloth.
- The first time you use your kettle the water may taste of plastic. Always boil your kettle a couple of times before you using it for beverages.

SERIAL NO.

PURCHASER'S NAME & ADDRESS

DEALER'S NAME & ADDRESS

DEALER'S SIGNATURE

BILL NO. DATE OF PURCHASE