




Original	Recharge
 Power	 Power
 Energy Saving	 Sleep / Timer
 AV Mode	 Picture / Format
 Input	 AV / Input / RDS
 Tv/Rad	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Q.Vlew	 Setup / OPT /

Original	Recharge
 Vol+	 Vol+
 FAV/Mark/Char/Nu	 Fav / Marker / PC
 P+	 CH+ / Page+
 Vol-	 Vol-
 3D	 Zoom / Size
 Mute/Delete	 Mute / Dimmer
 P-	 CH- / Page-
 Menu	 Menu / Home
 NetCast	 Sound / Title
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Back	 Back / Return

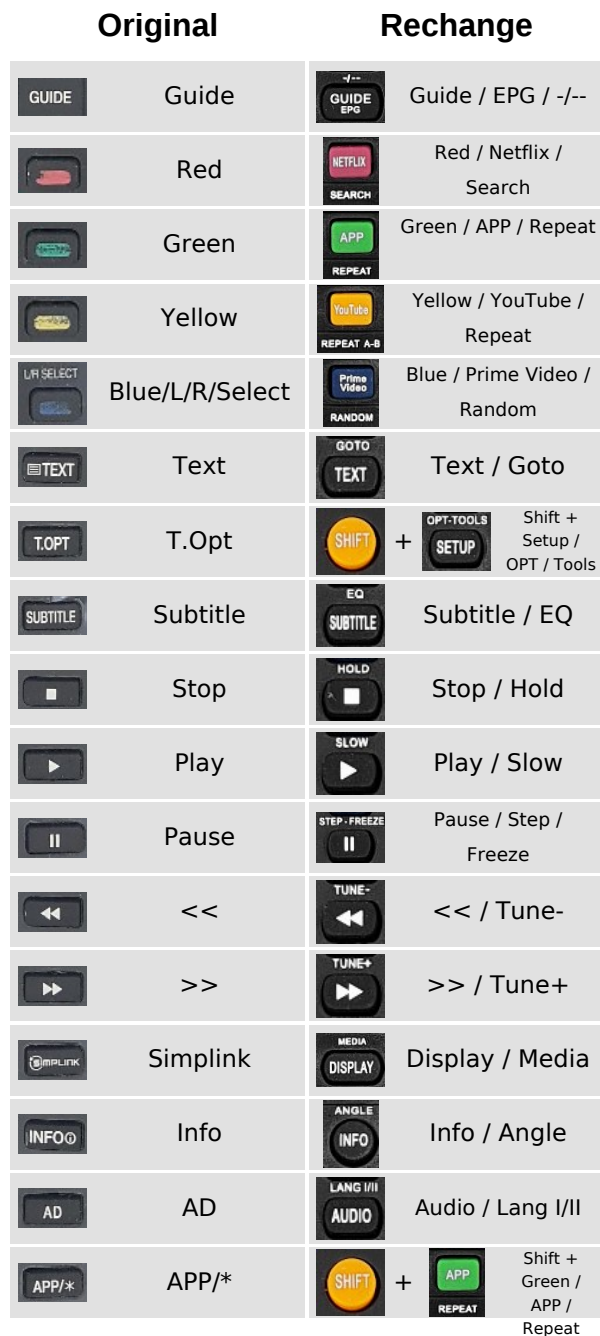



Power

DIMMER
MUTE

SHIFT

TV DVD SAT AUX

SLOW STEP-FREEZE HOLD REC MODE

TUNE- TUNE+ PRESET- PRESET+

◀ ▶ ◀▶ ▶▶

TITLE LANG VIII EQ SURROUND

SOUND AUDIO SUBTITLE

FORMAT SIZE TIMER PROGRAM

PICTURE ZOOM SLEEP TV RADIO

TOP MENU OPT-TOOLS GOTO RDS

D.MENU SETUP TEXT AV INPUT

HOME ANGLE

MENU INFO

OK

CLEAR RETURN

EXIT BACK

CANCEL

LIST

SMART

MEDIA

DISPLAY

+

VOL

CH PAGE

TV DVD CD-STD

1 2 3

VIDEO TAPE TUNER

4 5 6

AUX-HDD USB BLUETOOTH

7 8 9

HDMI-BAT PC

GUIDE 0 FAV MARKER

NETFLIX APP YouTube Prime Video

SEARCH REPEAT REPEAT A-B RANDOM

Mandis
shop

www.mandis.tv