


Recommended Maximum Weight

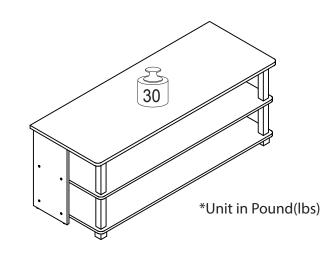

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

>Put heavier items on lower shelves.



00:30

Approx. 30 minutes


Assembly Instruction

Furinno TV STAND

17077 MODEL





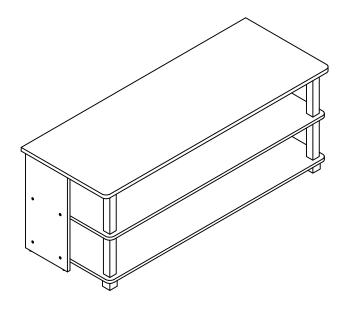



Customer Support

NEED HELP? For replacement requests or product inquiries, please contact our Customer Service Team by emailing us at support@furinno.com. Thank you for selecting Furinno!

www.furinno.com












1707720180703

HARDWARE & PARTS LIST

NO	HARDWARE LIST	QTY
1	SHORT POLE	4pcs
2	LEG	2pcs
3	PLUG LEG •	1pc
4	SCREW	12pcs
5	CAM-LOCK SCREW	8pcs
6	CAM-LOCK NUT	8pcs
7	NAIL LEG	6pcs
8	LONG DOWEL	2pcs
9	SHORT DOWEL	2pcs

NO	PARTS LIST	QTY
A	TOP PANEL	1pc
В	SHELF / BOTTOM PANEL	2pcs
С	SIDE PANEL	2pcs
D	BACK PANEL	1pc
Е	CENTER UPPER PANEL	1pc
F	CENTER BOTTOM PANEL	1pc

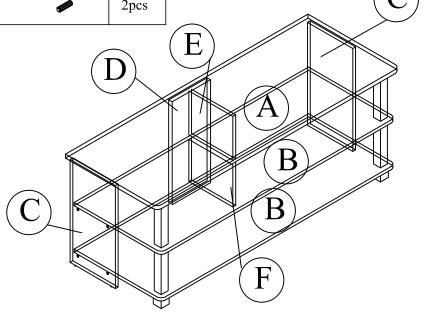



USEFUL HINTS BEFORE YOU START:

- 1. Read each step carefully before starting.
- 2. It is important that each step is performed in correct order to avoid difficulties.
- 3. Identify, sort and count the parts before assembly.
- 4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
- 5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
- 6. Using uncompatible hardware might cause damage to product.


ASSEMBLY INSTRUCTIONS

BEFORE YOU BEGIN, PLEASE READ ASSEMBLY INSTRUCTION CAREFULY, FOLLOW THEM STEP BY STEP.

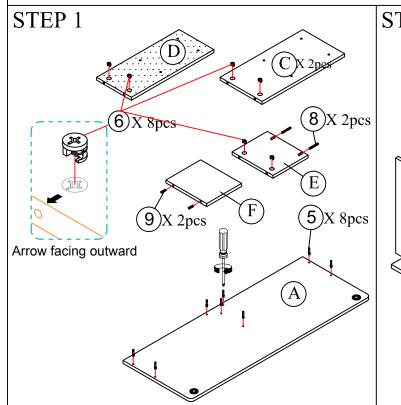


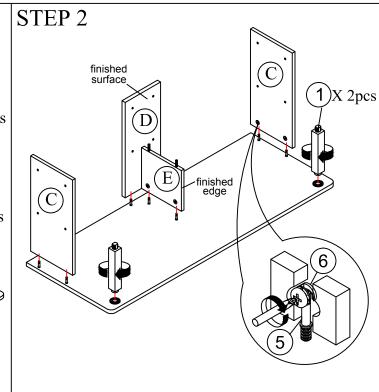

STEP 3

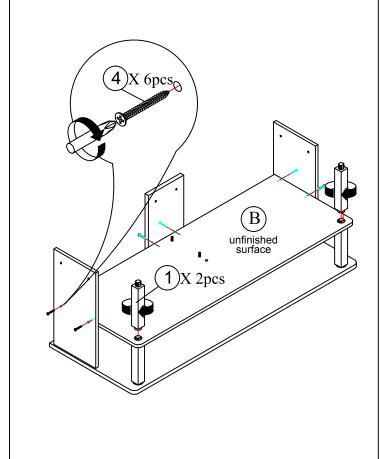

STEP 4

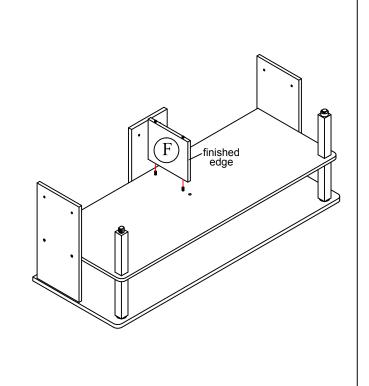

1