



"RECIPE BOOK NOT INCLUDED"

SHAVED ICE MAKER

Instruction Manual

PLEASE READ THIS MANUAL CAREFULLY BEFORE OPERATING YOUR UNIT AND RETAIN FOR FUTURE REFERENCE.

8 1 4 1 0 0 0 4 3




IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- When using electrical appliances, basic safety precautions should be followed to help prevent:
- Read all instructions.
- Be sure all tags and packaging from appliances follow instructions.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance in a manner other than its intended use. For household use only. Do not use outdoors.
- Close supervision is necessary when any appliance is used by or near children.
- To avoid risk of shock, do not attempt to open, repair, replace, or plug, motor unit, or any electrical cord in water or other liquids.
- Do not operate the machine without ice. Do not use the appliance to shave or cut materials other than ice.
- Do not place your fingers in the appliance as the blades are sharp and may cause injury.
- Do not attempt to sharpen the blades.
- To make it easier to clean the Dash Shaved Ice Maker from over-icing, do not operate it in a manner that causes it to over-ice. Allow the appliance to rest in between uses.
- Do not operate the appliance with a damaged cord or damaged plug; after the appliance malfunctions is repaired, or damaged in any manner. Contact a service center.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Be careful when taking out and inserting the power cord into the appliance as the power cord may be pulled on by children or tripped over and result in fire, electric shock, or personal injury.
- Do not let the cord touch hot surfaces, or hang over the edges of tables or counters.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Always be sure to unplug the appliance from the outlet prior to moving, cleaning, storage, and when not in use.
- Use a standard 3-pronged electrical plug for the appliance. Do not use a standard 2-pronged electrical plug for the appliance.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit correctly in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power supply cord is to be used to reduce the risk of tripping from the appliance. If a longer cord is needed, use a cord that is at least as long as the distance from the appliance to the outlet. The cord should be pulled on by children or tripped over and result in fire, electric shock, or personal injury.

PARTS & FEATURES

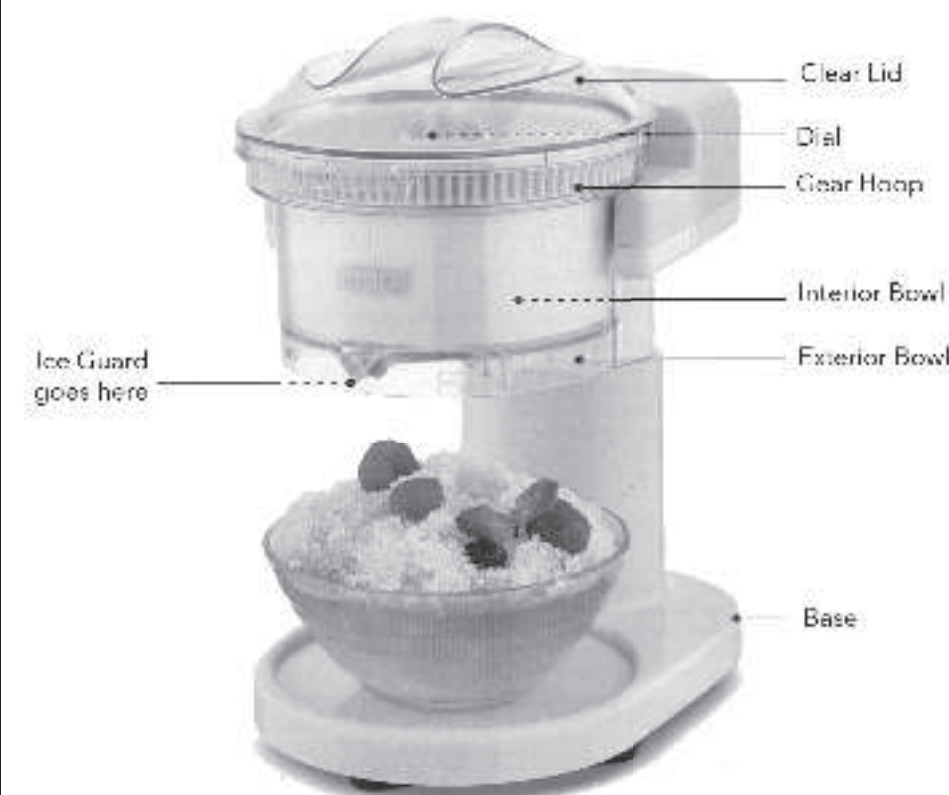

SETTING UP YOUR DASH SHAVED ICE MAKER

NOTE:

Please clean your Dash Shaved Ice Maker before first using.



1 Place the Base on a stable and dry surface.



2 Install the Motor unit on the Base.



3 Align and insert the Exterior Bowl into the assembled Motor Unit and Base. The two notches on the side of the Exterior Bowl should fit into the two notches on the inside of the Motor Unit.

Lastly, plug in the Power Cord.

USING YOUR DASH SHAVED ICE MAKER



1 Place ice cubes inside the Interior Bowl. The bowl should be filled to the top level. If the ice has been in the freezer for a long time, it may be too hard and may need to rest at room temperature for a few minutes before shaving. The machine will then produce a fluffier snow.



2 Place the Clear Lid on top of the Interior Bowl, locking it into place by aligning the lip-shaped notch on the lid with the corresponding notch on the Motor Unit.



3 Place an empty bowl on the base of the unit. This bowl will be used to collect the shaved ice.

NOTE: At this time you may want to insert the Ice Guard, which helps the ice shavings go more directly into the bowl. Simply slide the Ice Guard into place so that the notches on the Ice Guard and the Exterior Bowl align. (See red arrows on the left for reference.)



4 To activate the machine, turn the lid counter-clockwise until the lip-shaped notch activates the Safety Switch. To stop the shaving process, turn the lid clockwise to deactivate the Safety Switch. For optimal results, hold onto the lid during the shaving process to ensure all ice is shaved.

Unplug the Dash Shaved Ice Maker after each use.

- The images shown in this manual are for illustrative purposes only and may be subject to change. -

PARTS & FEATURES



- Accessory type and quantity may vary depending on the model. -

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

DISASSEMBLY & ASSEMBLY

Always ensure that the appliance is switched off and that it is not plugged into an electrical outlet before you disassemble or assemble the Dash Shaved Ice Maker.

TO DISASSEMBLE:



TO ASSEMBLE:

To assemble the Shaved Ice Maker, simply follow the steps in reverse order.

- The images shown in this manual are for illustrative purposes only and may be subject to change. -

CLEANING & MAINTENANCE

IMPORTANT:

- Disassemble the appliance before cleaning.
- When cleaning, exercise caution and avoid touching the Shaving Blade to prevent injury.
- DO NOT submerge the Motor Unit in water or other liquids. Wipe with a damp cloth before drying thoroughly.
- Avoid using abrasive cleaning agents when cleaning the appliance.
- All other parts may be washed in warm water with mild soap and rinsed. All parts of the Dash Shaved Ice Maker are NOT dishwasher safe.
- Dry all parts thoroughly before storing.

PRINTED IN MEXICO

Elbrd: J.M. / SC: 02-28-2025

OBPN: DSIM100_20171215_v6

SHDML: DSIM100GBAQ02_B

8 1 4 1 0 0 0 4 3

