

# BIYU WOODBOY MANUAL

**Your BIYU guide to acing your Woodboy**



NOTE: At BIYU, we rent the Woodboy with a certain selection of accessories and consumables. This manual applies to the Woodboy with the accessories and consumables we provide with it.



## Accessories



Drive disc with pin back



Brush edge with rubber band



Vacuum cleaner hose  
5m



Vacuum cleaner  
adapters

## Consumables



Pad 16 Inch black

Comes standard with 1  
pad



Sanding mesh double-  
sided Ø 406 mm

You can order sanding  
mesh (60, 80, 100, 120)  
through customer  
service.

# PRODUCT OVERVIEW

## What is attached to the Woodboy:



Hose Splitter



Brush edge with rubber band



2x Suction hose

## What is in the box:



Vacuum cleaner hose 5m



Vacuum cleaner adapters



Drive disc with pin back



Pad 16 inch black

Happy Woodboying! 🪵



# USING THE WOODBOY FOR DIFFERENT PURPOSES

## Using the Woodboy for sanding with the sanding mesh

Put the black pad on the drive disc with pin back and the sanding mesh on the pad.



## Using the Woodboy with the pad(s)

Pads are available for various applications.

- Black:** Intermediate sanding of coatings and usable as pad for mesh sanding discs.
- White:** Polishing and brightening waxes
- Beige:** Scrubbing in and out of wax
- Red:** Polishing or light scrubbing
- Green:** Scrubbing and removal of ground-in dirt, grease and streaks

BIYU only has the black pads, which can be used to attach the mesh sanding discs and for intermediate sanding and scrubbing of floors.



# HOW TO OPERATE

1. Unroll the power cord completely.
2. Attach the drive disc



3. If you are using the Woodboy for sanding, attach the black pad to the drive disc and attach the sanding mesh to the black pad.



If you are using the Woodboy for intermediate sanding or floor scrubbing, attach the black pad to the drive disc.





# HOW TO OPERATE

5. Use the large gray switch to position the handle at hip height. This provides maximum control of the machine.



6. Plug in the power cord.
7. Place the Woodboy in the center of the room and simultaneously press the yellow switch down with your right thumb and the gray switches on the handle with both hands. You can release the yellow switch once the machine is spinning.

The first time the machine will probably swing 1 way, loosen the gray knobs to make the machine stop before hitting anything. The trick is to hold the handle so that the Woodboy keeps spinning on the spot. You only need to make minimal movements with the handle to make the Woodboy go in the right direction once you have 1 found the zero point. This requires very little force.

- Handle up: Woodboy moves to the right
- Handle down: Woodboy moves to the left
- Handle left: Woodboy moves forward
- Handle right: woodboy moves backwards

