

User manual

CAR JUMP STARTER

Please read the manual carefully to operate the product correctly

Model

PRECAUTIONS



Please read the following precautions carefully before use to ensure the correct and safe use of this product!

- When starting the auto, please keep a safe distance from the engine to avoid personal injury caused by the rotation of the engine!
- Do not hold the key for a long time to start the auto, if it fails to start successfully within 3 seconds, please release the key and try again later!
- When you need to use this product to start the auto continuously, please leave it at least 1 minute apart!
- Please disconnect the connection within 30 seconds after the auto is started to avoid damage to the product or even an accident!
- The EC5 output interface is only used to connect the matching charger lead to start the auto, please do not use it with other loads!
- Under any circumstances, it is forbidden to short-circuit the positive and negative poles of the charger lead, or reverse the positive and negative poles of the charger lead to the auto to avoid safety accidents!
- After starting the car with the multi-functional auto emergency power, do not charge it immediately. It needs to be placed for 30 minutes for the battery to cool down!
- Please do not charge this product in an environment below 0°C or above 40°C!
- This product is equipped with a battery inside, please take appropriate fire prevention measures when using it!
- Please do not intentionally or unintentionally short-circuit the positive and negative poles of the EC5 output, and do not mix with metal objects or sharp objects (such as screwdrivers) when storing!
- When children use it, they must be guided by their parents and operate in strict accordance with the contents of the manual to ensure their correct use!
- During use or charging, if the device is slightly heated, it is a normal phenomenon and not a malfunction.
- When using this product, keep the surrounding well ventilated, do not block the cooling holes, and do not use it in the following environments:
 - Damp places and places easily splashed by water.
 - Places easy to fall.
 - Places with vibration, corrosion, dust and chemical gas hazards.
 - Places where inflammables and explosives are stored and near high-temperature heat sources.
- When not in use, please unplug all external devices to reduce power consumption.

001

- When not in use for a long time, it is recommended to keep the battery at a certain level and charge the product at least once every three months.
- Do not scrub with harsh chemicals, such as soap or other cleaners containing strong alkalis and acids.
- Non-professionals should not disassemble the machine, so as not to damage the machine or cause safety accidents.
- Please do not litter or burn discarded battery products, please take care of the environment.
- The power indicator on the product is only for reference and does not guarantee complete accuracy. If there is a slight error, it is a normal phenomenon.
- All patterns used in this manual are for reference only, please refer to the actual product for details.

PRODUCT DETAILED ACCESSORIES DIAGRAM

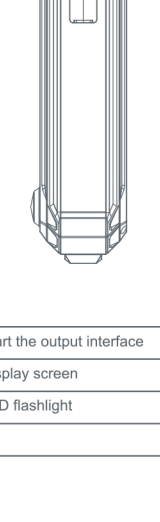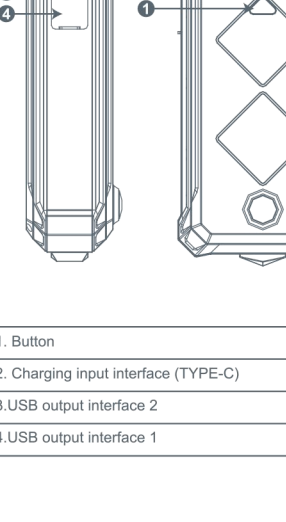


NOTE:

The above pictures are for reference only, please refer to the actual product!

002

PRODUCT FUNCTION ILLUSTRATION

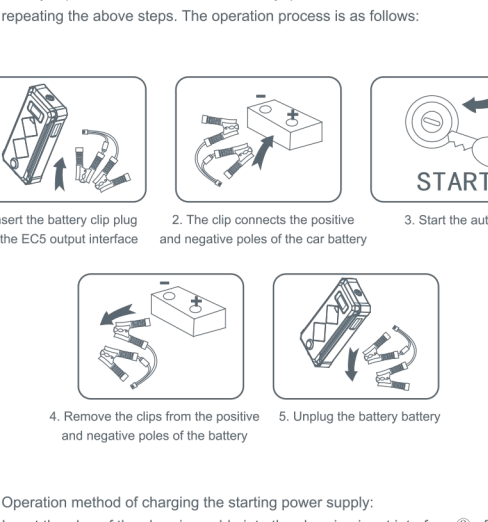

| | |
|--------------------------------------|-------------------------------|
| 1. Button | 5. Start the output interface |
| 2. Charging input interface (TYPE-C) | 6. Display screen |
| 3.USB output interface 2 | 7. LED flashlight |
| 4.USB output interface 1 | |

003

FUNCTIONAL OPERATION INSTRUCTIONS

- Operation method of starting the auto:**

Firstly, check the remaining power of the starting power supply. Generally, as long as it is greater than 20%, the auto can be started.

Insert the plug of the battery clip into the charging input interface ② of the starting power supply, then connect the positive and negative poles of the matching battery clip to the positive and negative poles of the auto battery cable, clamp red to red, black to black, and then twist the auto key to the starting gear, the car started. After successful startup, unplug the auto key and then remove the battery clip. If it does not start successfully, please wait 1 minute before repeating the above steps. The operation process is as follows:

1. Insert the battery clip plug into the EC5 output interface

2. The clip connects the positive and negative poles of the car battery

3. Start the auto

4. Remove the clips from the positive and negative poles of the battery

5. Unplug the battery battery
- Operation method of charging the starting power supply:**

Insert the plug of the charging cable into the charging input interface ② of the startup power supply, and plug the other end into the charger. The "IN" icon flashes on the display screen, indicating that charging has started. When the icon stops flashing and the battery shows 100%, it means that it is fully charged.

004

- Operation method of turning on LED lighting:**

Short press the function button ① to turn it on, then long press the function button again to turn on the LED lighting function, then short press the function button, the LED function changes from long on to SOS, flashing, long on, and then long press the function button to turn off the LED lighting function.
- Operation method of charging digital products such as mobile phone, PSP, MP3 / MP4 and tablet computer:**

Short press the function button ① to turn it on, and then plug the mobile phone charging cable into the USB output interface to charge digital products such as mobile phones, PSP, MP3/MP4, and tablet computers. When the output is detected, the icons of "OUT", "5V/2.1A" and "FAST" will be displayed on the right side of the display screen. After fully charged or unplug the charging cable, the system will turn off the icon on the right side of the display screen, and automatically turn off the USB output and shut down after 10 seconds.

PRODUCT PARAMETERS

Product function parameters are subject to change without prior notice, the company reserves the right of final interpretation!

| | |
|-----------------------------|-------------------------------------|
| USB output 1 | 5V---2.1A |
| USB output 2 | 5V---2.4A 9V---2A 12V---1.5A |
| Start output | 2000A |
| TYPE-C input | 5V--2A 9V--2A support fast charging |
| Cell capacity | 20000mAh |
| Discharge temperature range | - 20°C ~ + 60°C |
| Charging temperature range | 0°C ~ + 40°C |
| Overall size | 186mm(L) x89mm(W)×45.5mm(D) |

005

FREQUENTLY ASKED QUESTIONS

- Question 1: After a few seconds of successful startup, it will automatically turn off or turn off as soon as the battery clip is removed.**

This situation is generally caused by the complete damage of the auto battery, which must be replaced with a new one.
- Question 2: no charging.**

Please check whether the charging cable is correctly connected to the charger and whether there is electricity on the mains socket; can try to replace a charger or charging cable and try again (this startup power supply can directly use the charger and cable of the mobile phone).
- Problem 3:no charge for phone.**

Please check whether the USB output of the startup power supply is turned on; Check whether the charging cable is damaged.
- Question 4: can't start the car.**

The engine does not move at all when starting: first check whether the clip is connected reliably, if the battery cable is dirty or severely corroded, please clean it up and try again. If it is confirmed that it has been connected, it may be that the auto has entered a protection state. For some models, you can try to keep pressing the start button for about 10 seconds, and release it when the engine moves. The engine works when starting, but cannot start: Please check whether the clip is securely connected to the copper head of the battery cable. If the negative pole is connected to the iron shell of the car, it will affect the starting performance.

If the above answers cannot solve the problem, please contact us at acmount@hotmail.com, DO NOT DISASSEMBLE THE MACHINE YOURSELF!!!

006

