


3.1101.616791.00000000  
原材料 机乐堂 JR-CB2 二合一蓝牙收发器 说明书  
尺寸: 60x75mm  
材质: 128g铜版纸+正反单色印刷+风琴折

JOYROOM

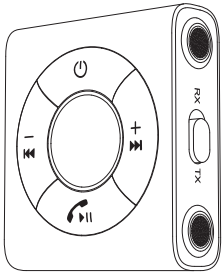

User Manual

2-in-1 Wireless Transmitter/Receiver

Product diagram

LED power/volume level display

Microphone

Power Button

3.5mm audio port

Volume down/Previous

RX/TX mode switch

TF card slot

Pause/Play/Call

Type-C charging port

Volume up/Next

Packing list

Wireless receiver

Metal plate

3.5mm audio adapter

Audio cable

Chargin g cable

Manual & Warranty card

Basic parameters

Name: 2-in-1 Wireless Transmitter/Receiver

Model: JR-CB2

BT version: V5.3

Audio decoding: SBC

Supported protocols: HSP, HFP, A2DP, AVRCP

Supported modes: receiving, transmitting, BT, AUX, TF card

Transmission range: ≤12m

Mic sensitivity: -38±2dB

TX mode music time: about 6.5h (60% volume)

RX mode music time: about 9h (60% volume)

RX mode calling time: about 7h (60% volume)

Standby time (connected): about 24h

Battery capacity: 300mAh

Charging time: about 2h

Charging port: Type-C

Charging input: 5V≡180mA

Product size: 48\*42\*15.2 mm

Product material: ABS+PC

Net weight: 34g

Pairing operation

1. RX mode

(1) Slide the mode switch to RX mode.

(2) Press and hold the power button for 1s to turn it on.

(3) When the 4-color light ring keeps on, it means the product is ready for pairing.

(4) Turn the phone's BT function on, search for the BT device "JR-CB2".

(5) After "JR-CB2" is found, click to pair and connect with it.

Metal plate using method:

1. Remove the protective film.

2. Stick the metal plate onto dashboard.

3. Put the wireless receiver onto the metal plate.

(6) Plug one end of the audio adapter into the 3.5mm port of the wireless receiver.

(7) Plug the other end into the 3.5mm port of car audio system.

(8) Switch the car audio system to AUX mode, you can start to use the wireless receiver to enjoy music or answer calls.

2. TX mode (connecting computers or TVs without BT function)

(1) Slide the mode switch to TX mode.

(2) Press and hold the power button for 1s to turn it on.

(3) Turn on the BT device (e.g. wireless earphones or speaker) that is to be connected to the computer or TV.

(4) Place the transmitter/receiver near the BT device, it will start searching automatically (the 4-color light ring keeps on).

(5) When the light ring changes from constant on status into slow breathing status, it means the transmitter/receiver is successfully connected to your BT device.

(6) Plug one end of the 3.5mm audio cable into the 3.5mm audio port of the transmitter/receiver; plug the other end into the 3.5mm output port of the computer or TV.

(7) After connecting successfully, you can start to use the computer to operate the audio function.

(8) Plug the TF card into the transmitter/ receiver, you can start to use the BT device to play audios in the TF card.

Operation instructions

1. Turn on/off

Turn on

Turn off

5min Turn off

The product will turn off automatically if not connected for 5 min

2. Voice assistant

"di-di"

2s

Press and hold the call button for 2s, and then release after hearing a "di-di" sound (only in RX mode).

3. Music function

Volume down: click the volume down button.

Previous song: long press the volume down button for 1 second.

Pause/play: click the multifunctional button.

Volume up: click the volume up button.

Next song: long press the volume up button for 1 second.

4. Restore factory settings

Under turned on status, press and hold the "+" and "-" buttons simultaneously for 5s

5. Call function

Answer/End call: Click the call button (only in RX mode)

Reject call: Press and hold the call button for 2s (only in RX mode)

Redial last number: Double-click the call button (only in RX mode)

6. Mode switch function

Switch between TX and RX mode: Slide the mode switch

RX: Switch between BT and TF card mode

TX: Switch between AUX and TF card mode

Double-click the power button (note: you need to insert a TF card)

Indicator instructions

Turn on	The 4-color light of the light ring flash 3 times simultaneously
Turn off	The 4-color light of the light ring flash 3 times simultaneously
Ready for pairing	The 4-color light of the light ring keep on
Connected	The 4-color light of the light ring breathe slowly
Low battery	The ones digit of the LED power display flashes
Charging	The ones digit of the LED power display flashes
Fully charged	The LED power display shows "100" and keeps on

Prompt tone instructions

Turn on	"doo-doo-doo" sound in rising tone
Turn off	"doo-doo-doo-doo" sound in falling tone
Connected	"doo-der" sound.
Disconnected	"doo-doo-doo" sound in falling tone
Low battery warning	"di-di-di" sound every 60s
Call reminder	Synchronize with the ringtone for iOS system; or "doo-" "doo-" "doo-" sound for Android system that cannot synchronize the ringtone.

function, you can click "JR-CB2" manually on the BT interface.

Q: Why can't the product be connected to BT device under TX mode?

A: ① It may be that the mode switch is not slid to TX mode, please slide it to TX mode manually.  
② It may be that the BT device has been connected to another device (such as a computer or mobile phone). Please disconnect it from the device and make a reconnection.  
③ It may be that the transmitter/receiver has been connected to another BT device (such as wireless earphones or speaker). Please disconnect it from the BT device and make a reconnection.  
④ It may be that the transmitter/receiver is kept too far away from the BT device. Please place it near the BT device.

Q: Why can't the product be charged?

A: ① The charging port and cable may not be connected properly, please pull the cable out and plug it in again repeatedly to make sure it is well inserted.  
② Please use adapters that conform to national/regional safety standards together with the included charging cable to charge the product. Chargers with excessive power may be incompatible or damage the product's battery.  
③ The product does not work with PD charging cables.

Safety Criterion

1. Please follow the instructions, do not disassemble the product or refit it for any reason, otherwise it may break down or burn down.  
2. Do not immerse it in any liquid or wash it with water.  
3. Please use adapters that conform to national/regional safety standards together with the included charging cable to charge the product, otherwise its battery may be damaged or cause safety problems.  
4. Please use and store it in normal temperatures; too low or too high temperature (below 0℃ or above 45℃) is not permitted.  
5. Do not block the openings of the product, such as charging port, audio port and microphone, etc.  
6. Do not use it under thunderstorm which may lead to abnormal performance and signal interruption.

Warranty Card

User Name: \_\_\_\_\_

User Tel: \_\_\_\_\_

User address (with postcode): \_\_\_\_\_

Purchase date: \_\_\_\_\_

Invoice No.: \_\_\_\_\_

Dealer Name: \_\_\_\_\_

Dealer Address (with postcode): \_\_\_\_\_

Dealer Tel: \_\_\_\_\_

Warranty

A. If there is performance failure on this product and it's not cause by human error damage, we will provide 12-month free warranty service for consumers from the date of purchase.

B. Warranty Exceptions:

● Human damage;  
● Beyond the warranty period;  
● Failure to provide valid purchase certificate;  
● Product damage caused by failure to follow the use, maintain and preserve instructions;  
● Product damage caused by dismantle it or repair the product without authorization, or immerse the product in water;  
● Damage caused by other force majeure.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.