

<div>US UK</div> <div>Dear user</div> <div>Thank you for choosing REDRAGON product. To protect your rights and for better customer service, please read the following warranty rules carefully.</div> <div>1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.</div> <div>2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.</div> <div>1</div>	<div>Function Introduction</div> <div>1. Computer USB port interfaces with the keyboard without needing to install drivers or software.</div> <div>2. Multi-level backlight brightness: Press and hold the [FN] key, and then press the arrow key “↑” to increase the backlight brightness of the keyboard. Press and hold the [FN] key, and then press the arrow key “↓” key to decrease the backlight brightness of the keyboard.</div> <div>3. There are 18 backlighting effects: FN + [Insert] key: switch 3 backlighting modes: 1. The trial of Light; 2. Breathing; 3. Normally on FN + [Home]: switch 3 backlighting modes: 1. Ripple Graff; 2. Pass without Trace; 3. Coastal FN + [Page Down]: switch 3 backlighting modes: 1. Both ways; 2. Surmount; 3. Fast and the furious FN + [Del]: switch 3 backlighting modes: 1. Go with the stream; 2. Clouds fly; 3. Winding Paths FN + [End]: switch 3 backlighting modes: 1. Flowers blooming; 2. Snow winter jasmine; 3. Swift action FN + [Page Up]: switch 3 backlighting modes: 1. Hurricane; 2. Accumulate; 3. Digital Times</div> <div>4. To disable the [WIN] key: Press and hold the [FN] key, and then press left [WIN] key to turn off [WIN] key in order to avoid leaving gaming function if user presses [WIN] key by mistake. Repeat the above operation to restore the function.</div> <div>5. Adjustable lighting direction: When backlit keys are cycling through effects press FN + [←] to change directions.</div> <div>6. Adjustable colors: Press FN+[→] to change backlight colors(8 colors option)</div> <div>7. Adjustable lighting speed: Press FN+ [-] or FN+ [+] adjust light rotating speed.</div> <div>2</div>	<div>8. Customized backlighting mode: Press FN+[~] get ready for set the colors on the key, [~] key now is your palette, Press FN+[→] for color switching, there are 9 modes including 8 colors options and light off mode, 3 indicators [Num, Cap, Scroll] twinkle in same time during customization, Press the desired key for colors setting. Press FN[~] key to save the setting. For example, Set [T] key as BLUE color, FN+[~] → press the letter [T] key →Press FN+[→] to switch palette key [~] as BLUE color →Press [T] key again to set Blue color on it →Press FN+[~] to save the customization.</div> <div>9. Switchable backlighting modes on sides: Press FN+PAUSE to switch lighting modes.</div> <div>10. Adjustable lighting speed on sides: Press FN+SCRLK to adjust the lighting speed.</div> <div>11. Back to factory setting: Press FN+PRTSC</div> <div>Multi-media keys(FN+F1~F12)</div> <table><tr><td>FN+F1</td><td></td><td>Media player</td></tr><tr><td>FN+F2</td><td></td><td>Volume-</td></tr><tr><td>FN+F3</td><td></td><td>Volume+</td></tr><tr><td>FN+F4</td><td></td><td>Mute</td></tr><tr><td>FN+F5</td><td></td><td>Stop</td></tr><tr><td>FN+F6</td><td></td><td>Pre-track</td></tr><tr><td>FN+F7</td><td></td><td>Play/pause</td></tr><tr><td>FN+F8</td><td></td><td>Next track</td></tr><tr><td>FN+F9</td><td></td><td>E-mail</td></tr><tr><td>FN+F10</td><td></td><td>Home</td></tr><tr><td>FN+F11</td><td></td><td>Calculator</td></tr><tr><td>FN+F12</td><td></td><td>Search</td></tr></table> <div>3</div>	FN+F1		Media player	FN+F2		Volume-	FN+F3		Volume+	FN+F4		Mute	FN+F5		Stop	FN+F6		Pre-track	FN+F7		Play/pause	FN+F8		Next track	FN+F9		E-mail	FN+F10		Home	FN+F11		Calculator	FN+F12		Search
FN+F1		Media player																																				
FN+F2		Volume-																																				
FN+F3		Volume+																																				
FN+F4		Mute																																				
FN+F5		Stop																																				
FN+F6		Pre-track																																				
FN+F7		Play/pause																																				
FN+F8		Next track																																				
FN+F9		E-mail																																				
FN+F10		Home																																				
FN+F11		Calculator																																				
FN+F12		Search																																				

<div>FAQ</div> <div>1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.</div> <div>2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excessliquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.</div> <div></div> <div>3</div>	<div>FCC Statement</div> <div>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</div> <div>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</div> <div>→ Reorient or relocate the receiving antenna.</div> <div>→ Increase the separation between the equipment and receiver.</div> <div>→ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</div> <div>→ Consult the dealer or an experienced radio/TV technician for help</div> <div>This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</div> <div>4</div>	<div></div> <div>REDRAGON</div> <div>ARCO</div> <div>REDRAGON HOT-SWAPPABLE MECHANICAL KEYBOARD</div> <div>Mechanical Gaming Keyboard Operating Instructions</div>
---	---	--

型号	K670-RGB/8972		备注：尺寸：100x100mm (折页) 材质：80g书写纸 印刷：单黑色双面印刷					
名称	说明书							
日期	2023-8-11							
页码	1 OF 1		文件编号					
绘图	雷国建	审核	香敏琪	核准		版本	A.1	