
# 3-Key Single Color LED IR Controller

Model No.:F1-D

1 channel constant voltage/Max 5A output/Step-less dimming/IR remote control

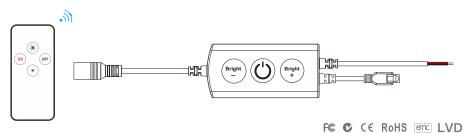

#### **Features**

- 1 channel constant voltage single color LED mini controller.
- 3 key operation with on/off and dimming.
- 5A output, connect with 5 meters single color LED strip.
- 8192 levels 0-100% dimming smoothly without any flash.

#### **Technical Parameters**

Input and Output		
Input voltage	12-24VDC	
Output voltage	12-24VDC	
Output current	Max. 5A	
Output type	Constant voltage	


Safety and EMC		
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4	
Safety standard(LVD)	EN 62368-1:2020+A11:2020	
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2	
Certification	CE,EMC,LVD,RED	

Warranty and Protection		
Warranty	5 years	
Protection	Reverse polarity Over heat Short circuit	

Dimming data		
Input signal	IR	
Control distance	10m(Barrier-free space)	
Dimming gray scale	8192 (2^13) levels	
Dimming range	O-100%	
Dimming curve	Logarithmic	
PWM Frequency	2000Hz (default)	


Environment	
Operation temperature	Ta:-30°C ~ +55°C
Case temperature (Max.)	T c:+85°C
IP rating	IP20

#### Dimension

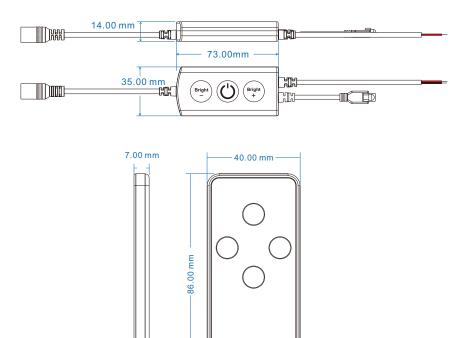

## Wiring Diagram

AC100-240V

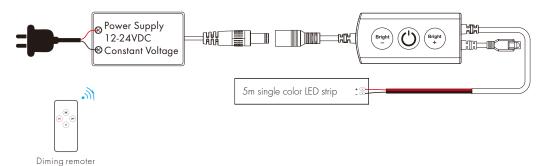

User Manual Ver 1.0.0

#### Key Function of controller

:Turn on or off light.

:Brightness -, short press 10 levels, long press 1-6s for continuous 256 levels adjustment.

:Brightness +, short press 10 levels, long press 1-6s for continuous 256 levels adjustment.

### Key Function of remoter




ON :Turn on the light.

**OFF** :Turn off the light.

:Increase brightness,
Short press 10 levels, long press 1-6s for continuous 256 levels adjustment.

:Decrease brightness, Short press 10 levels, long press 1-6s for continuous 256 levels adjustment.

# Dimming Curve

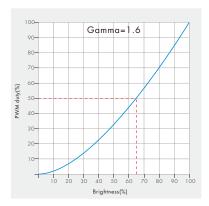

(\*)

### Malfunctions analysis & troubleshooting

Malfunctions	Causes	Troubleshooting
No light	No power.     Wrong connection or insecure.	Check the power.     Check the connection.
No response from the remote	The battery has no power.     Beyond controllable distance.	Replace battery.     Reduce remote distance.

User Manual Ver 1.0.0