

**VIVITAR®**

# SUITCASE TURNTABLE WIRELESS SPEAKER

3 Speed Suitcase Turntable



AUX-IN, RCA OUTPUT  
AND HEADPHONE JACK



BUILT-IN  
STEREO SPEAKERS

User's Manual

Item: V60067BT

 **Bluetooth®**

# Important Safety Precautions

When using your Suitcase Turntable Wireless Speaker, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER, AND KEEP FOR FUTURE REFERENCE.
2. Do not allow children or the infirm to play with your speaker without adult supervision.
3. Do not expose your speaker to excessive heat, flames or fire.
4. Always press all buttons carefully. Do not manhandle your speaker.
5. Do not use in extremely dry environments, as this can lead to static discharge during usage.
5. Do not expose your speaker to temperatures above 50°C. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if your speaker is in need of service.
8. Do not drop, puncture or expose your speaker to excessive trauma.
9. Your speaker is not intended for commercial use.
10. Use only the supplied power cables. Unplug this device when not in use for long periods of time or during lightning storms.
11. Do not block any ventilation openings. Keep at least 5 cm around the apparatus for sufficient ventilation and air flow.

# Introduction

Thank you for purchasing the Vivitar Suitcase Turntable Wireless Speaker, item V60067BT. Listen to all of your favorite vintage records with this compact, portable device. In order to get the best results, please read this manual closely before using.

## Package Contents

- Suitcase Record Player
- Power Adapter
- User's Manual with Warranty Information

## Specifications

### **AC/DC Adapter:**

Input: 100-240V, 50/60Hz, 0.5A

 
Output: 5V=1A

Power: 5W


Speaker Impedance: 4ohm, 3W

Max Power Consumption: 5W

# A Quick Look at Your Device

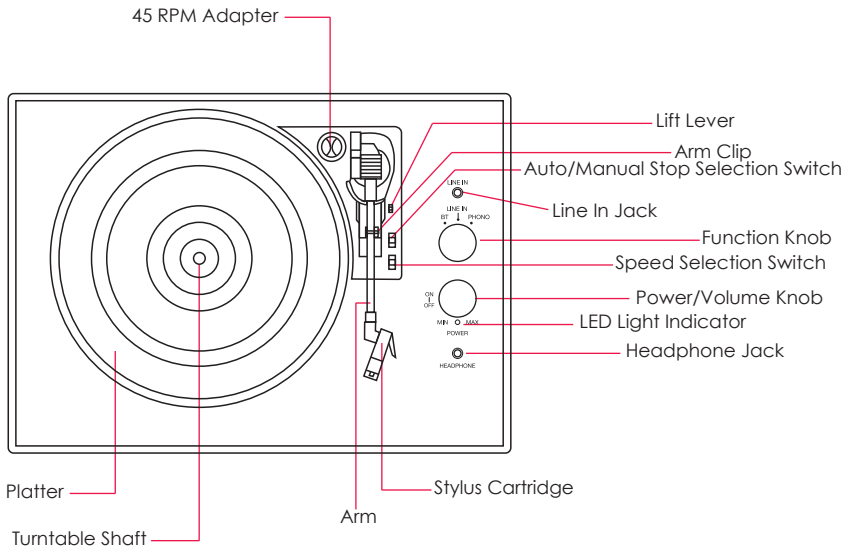


# A Quick Look at Your Device (continued)

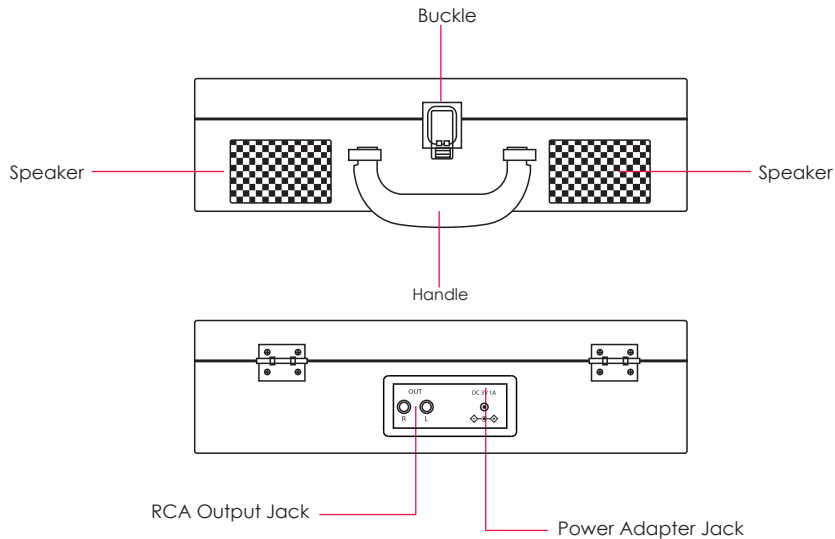 


# Powering Your Device

 In order to power your device, connect one end of the included power adapter into a suitable power outlet in your home.



 Insert the other end into the **POWER ADAPTER JACK** on the rear of your device.



Power Adapter Jack

# Using Your Device to Play a Record

1. Open your turntable by lifting the external **BUCKLE** and lifting the top lid.
2. Rotate the **FUNCTION KNOB** until it is in the PHONO position.
3. Power on your unit by rotating the **POWER/VOLUME KNOB** in a clockwise direction. Once powered on, the **LED LIGHT INDICATOR** will turn red.
4. Place a record on the **TURNTABLE PLATTER**. Select the desired speed (33 1/3, 45, 78) by sliding the **SPEED SELECTION SWITCH** in the appropriate direction for your record. Note that when playing a 45 RPM record, you can use the included **45 RPM ADAPTER** located in the holder next to the **TURNTABLE PLATTER**.
5. Open the **ARM CLIP** in order to release the **ARM**. Push the **LIFT LEVER** backwards to raise the **ARM**. Gently move the **ARM** to the desired position over the record. The turntable will begin to spin when the **ARM** is towards the record. Push the **LIFT LEVER** forward and lower the **ARM** slowly on the desired position on the record to begin playing.

NOTE: The record will begin to spin only when the **ARM** is moved over the record if the **AUTO STOP** is turned ON.

6. If the **AUTO/MANUAL STOP SELECTION SWITCH** is turned ON, the record will stop automatically when finished. If the switch is turned OFF the record will NOT stop automatically when finished.
7. To adjust the volume level, rotate the **VOLUME KNOB**.

# Replacing the Turntable Needle

## Removing the Stylus from the Cartridge

1. Set a screwdriver at the tip of the stylus and push down (see graphic A to the right).

**WARNING:** Do not apply too much pressure when applying force to the stylus. Doing so can cause the stylus to break.

2. Pull the stylus out. (see graphic B to the right).

## Installing the Stylus

1. Hold the tip of the stylus and insert the other edge by pressing towards point C. (See graphic to the right).

 
 
2. Push the stylus up towards direction D (See graphic to the right) until it locks at the tip.

### **WARNING:**


- Do not bend the stylus needle.
- Do not touch the needle to avoid injury to your hand.
- Turn off the unit's power before you replace the stylus.

**NOTE:** The stylus typically lasts around 50 hours under normal use. It is recommended that the stylus be replaced as soon as you notice a change in sound quality.

When replacing the needle, use replacement needle ITNP-S1.

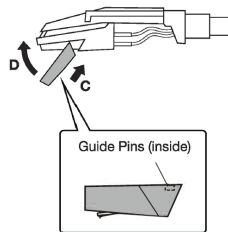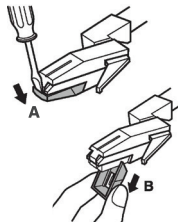


# Bluetooth Pairing

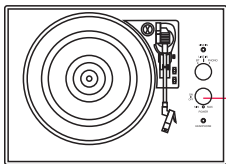 

POWER/VOLUME KNOB

 1. Power on your unit by rotating the **POWER/VOLUME KNOB** in a clockwise direction.

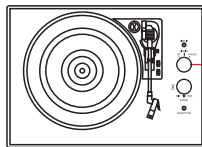


FUNCTION KNOB

2. Rotate the **FUNCTION KNOB** until it is in the BT position.



 3. Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "V60067BT."

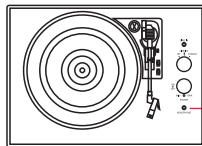

Pairing Mode  
Blue Flashing LED



Paired  
Blue LED




4. The **LED Indicator Light** will turn blue and flash when in pairing mode and remain blue and shine steadily when your turntable's speakers are paired with your Bluetooth device. You can now listen to music from your Bluetooth device on the turntable's speakers.

# LINE IN FUNCTION/RCA OUTPUT

 Insert one end of a 3.5mm audio cable (not included) into the **LINE IN JACK** and connect the other end into an external audio source.


Rotate the **FUNCTION KNOB** until it is in the **LINE IN** position.

The LED Indicator Light will turn purple, indicating that your turntable's speakers will play audio from your external audio source.

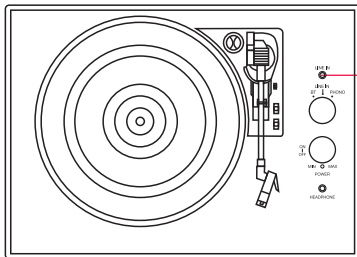

Line In Jack

 Insert RCA cables (not included) to the **RCA OUTPUT JACK** in order to connect your turntable to external speakers so that you can listen to records on the speakers of your choice.

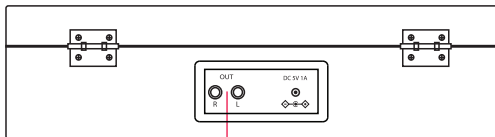


RCA Output Jack

# HEADPHONE JACK

 For a more quiet listening experience plug headphones into your turntable's **HEADPHONE JACK**.

When headphones are plugged in, music will automatically play on your headphones, and your turntable's speakers will be muted.

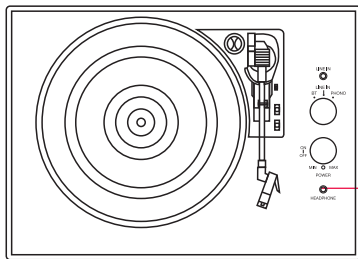

Headphone Jack

# Maintenance and Care

- Use a soft cloth or paper towel to clean your speaker. Never use any harsh chemicals or detergents for cleaning. Make sure your speaker is dry before charging.
- When your speaker is not in use, it should be stored in a cool, dry place.
- Never tug or yank on a cable while it is connected to your speaker. Connect and disconnect cables as carefully as possible.
- Never expose your speaker to high temperatures, extreme cold.
- Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.



# FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body

# Vivitar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

## What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 or visit our website at [www.vivitar.com](http://www.vivitar.com).

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepared.

# Vivitar One Year Warranty (continued)

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION -ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.

©2022 Sakar International  
195 Carter Drive  
Edison, NJ 08817  
Support: 800 592 9541  
[www.vivitar.com](http://www.vivitar.com)

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners.



VIVITAR®