


Model 60TG

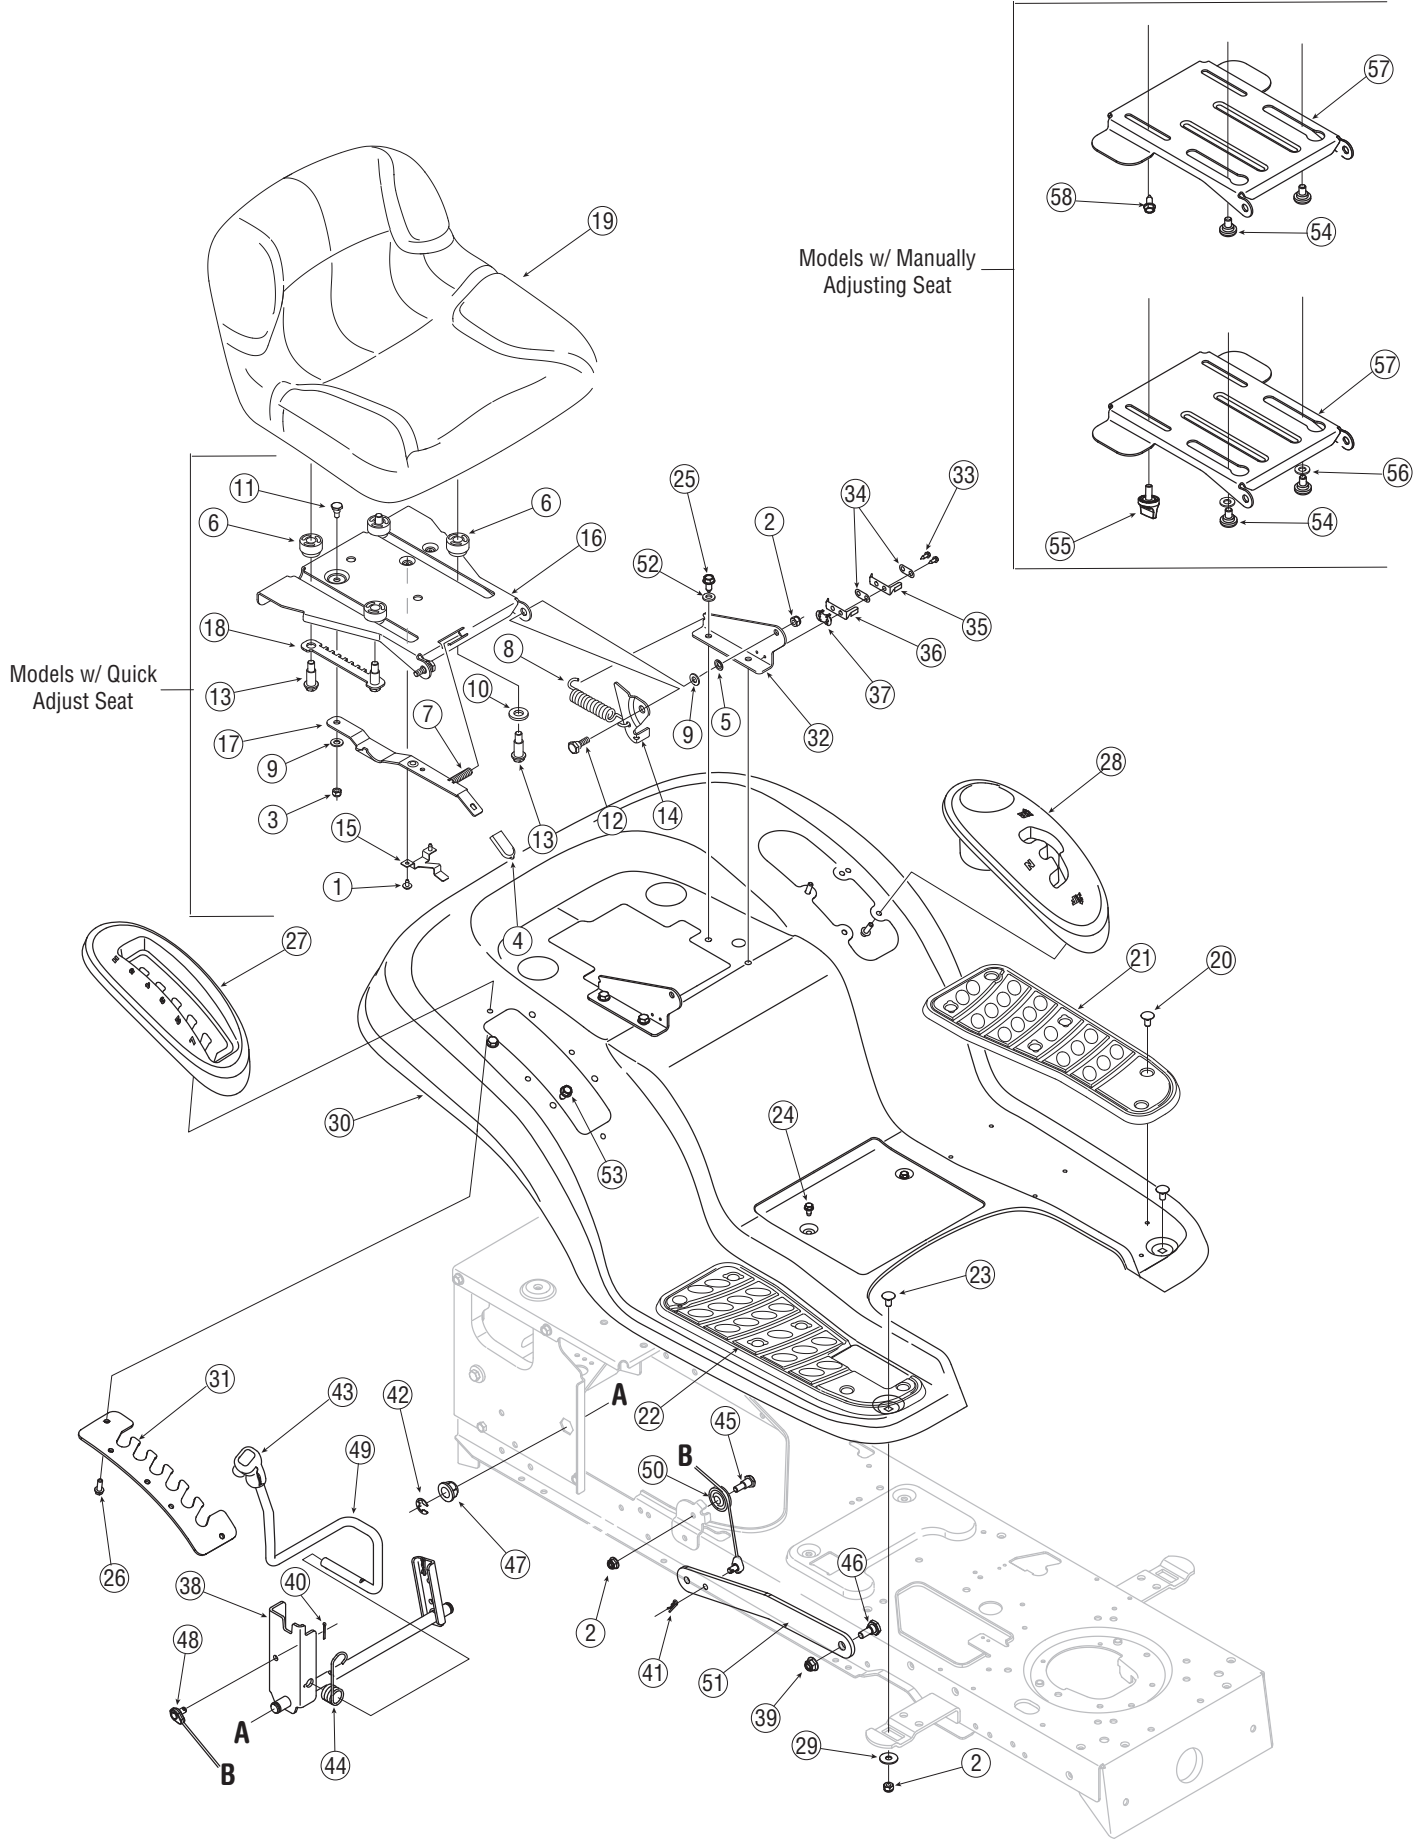

| Ref. No. | Part No.   | Description                      | Ref. No. | Part No.    | Description                     |
|----------|------------|----------------------------------|----------|-------------|---------------------------------|
| 1        | 710-1268†  | Screw, #10-16 x.375              | 31       | 783-0677B   | Adjust. Brkt., Lift             |
| 2        | 712-04063  | Nut, Flange Lock, 5/16-18, GrF   | 32       | 783-1489B   | Mounting Bracket, Seat          |
| 3        | 712-3027†  | Nut, Flange Lock, 1/4-20         | 33       | 710-0227    | Screw, #8-18 x.50               |
| 4        | 720-0309A† | Seat Adjuster Grip               | 34       | 726-0279    | Plate, Insulator                |
| 5        | 726-0201†  | Nut, Speed,.3125 ID              | 35       | 725-1303    | Spring Switch, Outer            |
| 6        | 731-04074† | Spacer                           | 36       | 725-1439    | Spring Switch, Inner            |
| 7        | 732-0499†  | Compression Spring,.41 x 1.5     | 37       | 726-0278    | Plate, Insulator Boss           |
| 8        | 732-1184   | Spring, Extension,.84 Dia. x 4.6 | 38       | 683-04079   | Shaft Assembly, Lift            |
| 9        | 736-0275†  | Wash, Flat,.344 x.688 x.065      | 39       | 712-04065   | Nut, Flange Lock, 3/8-16, GrF   |
| 10       | 736-3019†  | Wash, Flat,.531x 1.062 x.134     | 40       | 714-0104    | Pin, Cotter,.072 Dia. x 1.13    |
| 11       | 738-0137A† | Screw, Shld,.340 x.285, 1/4-20   | 41       | 714-0111    | Pin, Cotter, 3/32, 1.0          |
| 12       | 738-0296   | Screw, Shoulder,.437 x.268       | 42       | 716-0106A   | Ring, E Type,.625 Dia.          |
| 13       | 738-0966†  | Screw, Should,.50 x.925, 3/8-16  | 43       | 720-0311    | Grip, Handle, 1/2               |
| 14       | 783-0209D  | Seat Bracket, Lift               | 44       | 732-0874    | Spring, Torsion                 |
| 15       | 783-0611†  | Seat Stop                        | 45       | 738-0138A   | Screw, 5/16-18 x.620 Gr2        |
| 16       | 783-0738C† | Seat Pivot Bracket               | 46       | 738-04130   | Scr.,Shldr, .625 x.165          |
| 17       | 783-0739A† | Seat Adjustment Lever            | 47       | 741-0225    | Bearing, Hex Flange             |
| 18       | 783-0753†  | Seat Adjustment Selector         | 48       | 746-0968    | Cable, Lift, 16.16              |
| 19       | 757-04001  | Low Back Seat                    | 49       | 747-04155   | Handle, Lift                    |
| 20       | 726-3046   | Ratchet Clip                     | 50       | 756-1154    | Pulley, Roller                  |
| 21       | 735-0657   | LH Foot Pad, Rubber              | 51       | 783-04494   | Arm, Lift - RH                  |
| 22       | 735-0656   | RH Foot Pad,Rubber               |          | 783-04711   | Arm, Lift - LH                  |
| 23       | 710-0451   | Bolt, Carriage, 5/16-18,.75, Gr1 | 52       | 736-0607    | Lock Washer, 5/16               |
| 24       | 710-0599   | Screw, 1/4-20, 0.500             | 53       | 710-0726    | Screw, 5/16-12                  |
| 25       | 710-0604A  | Screw, 5/16-18, 0.625            | 54       | 738-04012A† | Shoulder Screw                  |
| 26       | 710-0895   | Screw, 1/4-15, 0.750             | 55       | 720-04061†  | Knob, 3/8-16                    |
| 27       | 731-1990   | Cover, Lift Lever                | 56       | 736-0300†   | Flat Washer, .406 x .875 x .059 |
| 28       | 731-2104C  | Cover, w/ Cup Holder             | 57       | 783-04081A† | Seat Pivot Bracket, Manual Adj. |
| 29       | 736-3078   | Washer, Flat,.344 x 1.0 x.063    | 58       | 710-0870†   | Hex Head Washer Screw, 3/8-16   |
| 30       | 783-04333A | Fender                           |          |             |                                 |

† If Equipped

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


# 10

## Illustrated Parts List



To order replacement  
parts, call the Customer  
Service Line at  
**1-800-648-6776,**  
or visit  
**[www.troybilt.com](http://www.troybilt.com)**.

Model 60TG

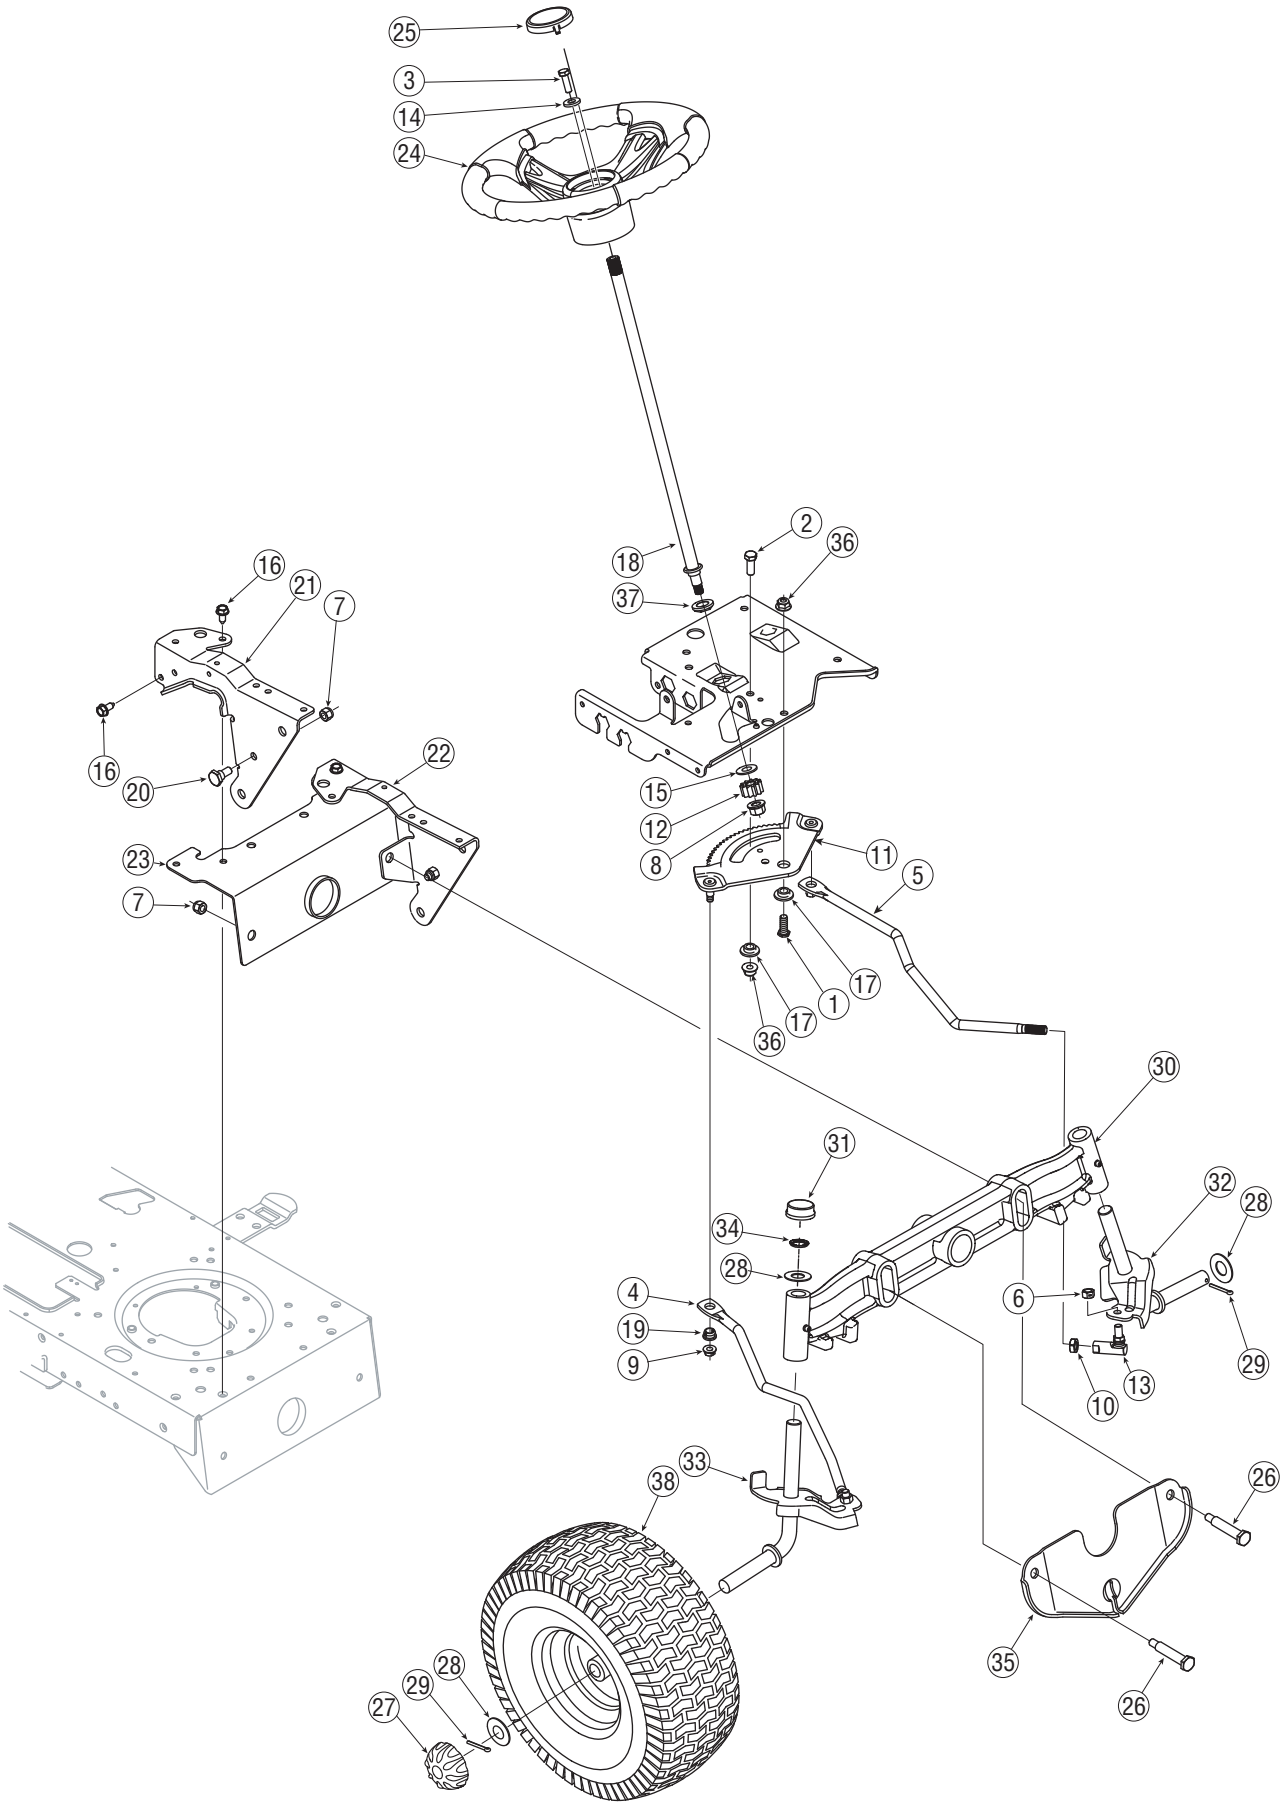

| Ref. No. | Part No.  | Description                        |
|----------|-----------|------------------------------------|
| 1        | 710-04095 | Hex Screw, 3/8-16, 1.00, Gr5       |
| 2        | 710-0514  | Hex Screw, 3/8-16, 1.00, Gr5       |
| 3        | 710-0643  | Hex Screw, 5/16-18, 1.00, Gr5      |
| 4        | 711-1408  | Link, Drag, RH                     |
| 5        | 711-1409A | Link, Drag, LH                     |
| 6        | 712-0214  | Nut, Hex Lock, 3/8-24              |
| 7        | 712-04065 | Nut, Flange Lock, 3/8-16, Grf      |
| 8        | 712-0459  | Nut, Flange Lock, 7/16-20          |
| 9        | 712-3004A | Nut, Flange Lock, 5/16-18, Gr5     |
| 10       | 712-0240  | Nut, Jam, 7/16-20, Gr2             |
| 11       | 717-1550E | Gear, Steering, 11/90 Ratio        |
| 12       | 717-1554  | Gear, Pinion, Steering             |
| 13       | 723-0448A | Ball Joint, 7/16-20, Lock          |
| 14       | 736-3004  | Washer, Flat, .406 x .875 x .105   |
| 15       | 736-3084  | Washer, Flat, .51 x 1.12 x .06     |
| 16       | 710-1260A | Screw, 5/16-18, 0.750              |
| 17       | 738-04154 | Spacer, Shoulder, .38 x 1.00 x .31 |
| 18       | 738-1001A | Shaft, Steering, .625 OD x 24.25   |
| 19       | 741-0475  | Plastic Bushing .380 ID            |
| 20       | 738-0143  | Screw, Shoulder, .498 x .340       |
| 21       | 783-0726E | Pivot Bracket, Support RH          |
| 22       | 783-0727D | Pivot Bracket, Support LH          |
| 23       | 783-0728  | Pivot Bracket, Bar                 |
| 24       | 631-04028 | Steering Wheel                     |
| 25       | 731-04681 | Steering Wheel Cap                 |
| 26       | 738-04128 | Shoulder Screw, .5 x 2.380, 3/8-16 |
| 27       | 734-2290A | Deluxe Hub Cap                     |
| 28       | 736-0316  | Flat Washer, .78 x 1.589 x .06     |
| 29       | 714-04039 | Cotter Pin, 5/32 x 1.25            |
| 30       | 719-04105 | Cast Iron Pivot Bar                |
| 31       | 731-04693 | Push Cap                           |
| 32       | 638-04006 | LH Axle Assembly, .750             |
| 33       | 638-04005 | RH Axle Assembly, .750             |
| 34       | 726-04035 | Push Nut                           |
| 35       | 783-04568 | Front Deck Hanger Bracket          |
| 36       | 712-0431  | Flange Lock Nut, 3/8-16            |
| 37       | 741-0656A | Hex Flange Bearing                 |
| 38       | 634-04086 | Wheel Assembly Complete, 15 x 6    |
|          | 734-1731  | Tire Only 15 x 6 x 6               |
|          | 634-04081 | Rim Only w/ Valve Stem             |


# 10

## Illustrated Parts List



To order replacement  
parts, call the Customer  
Service Line at  
**1-800-648-6776,**  
or visit  
**[www.troybilt.com](http://www.troybilt.com)**.

Model 60TG

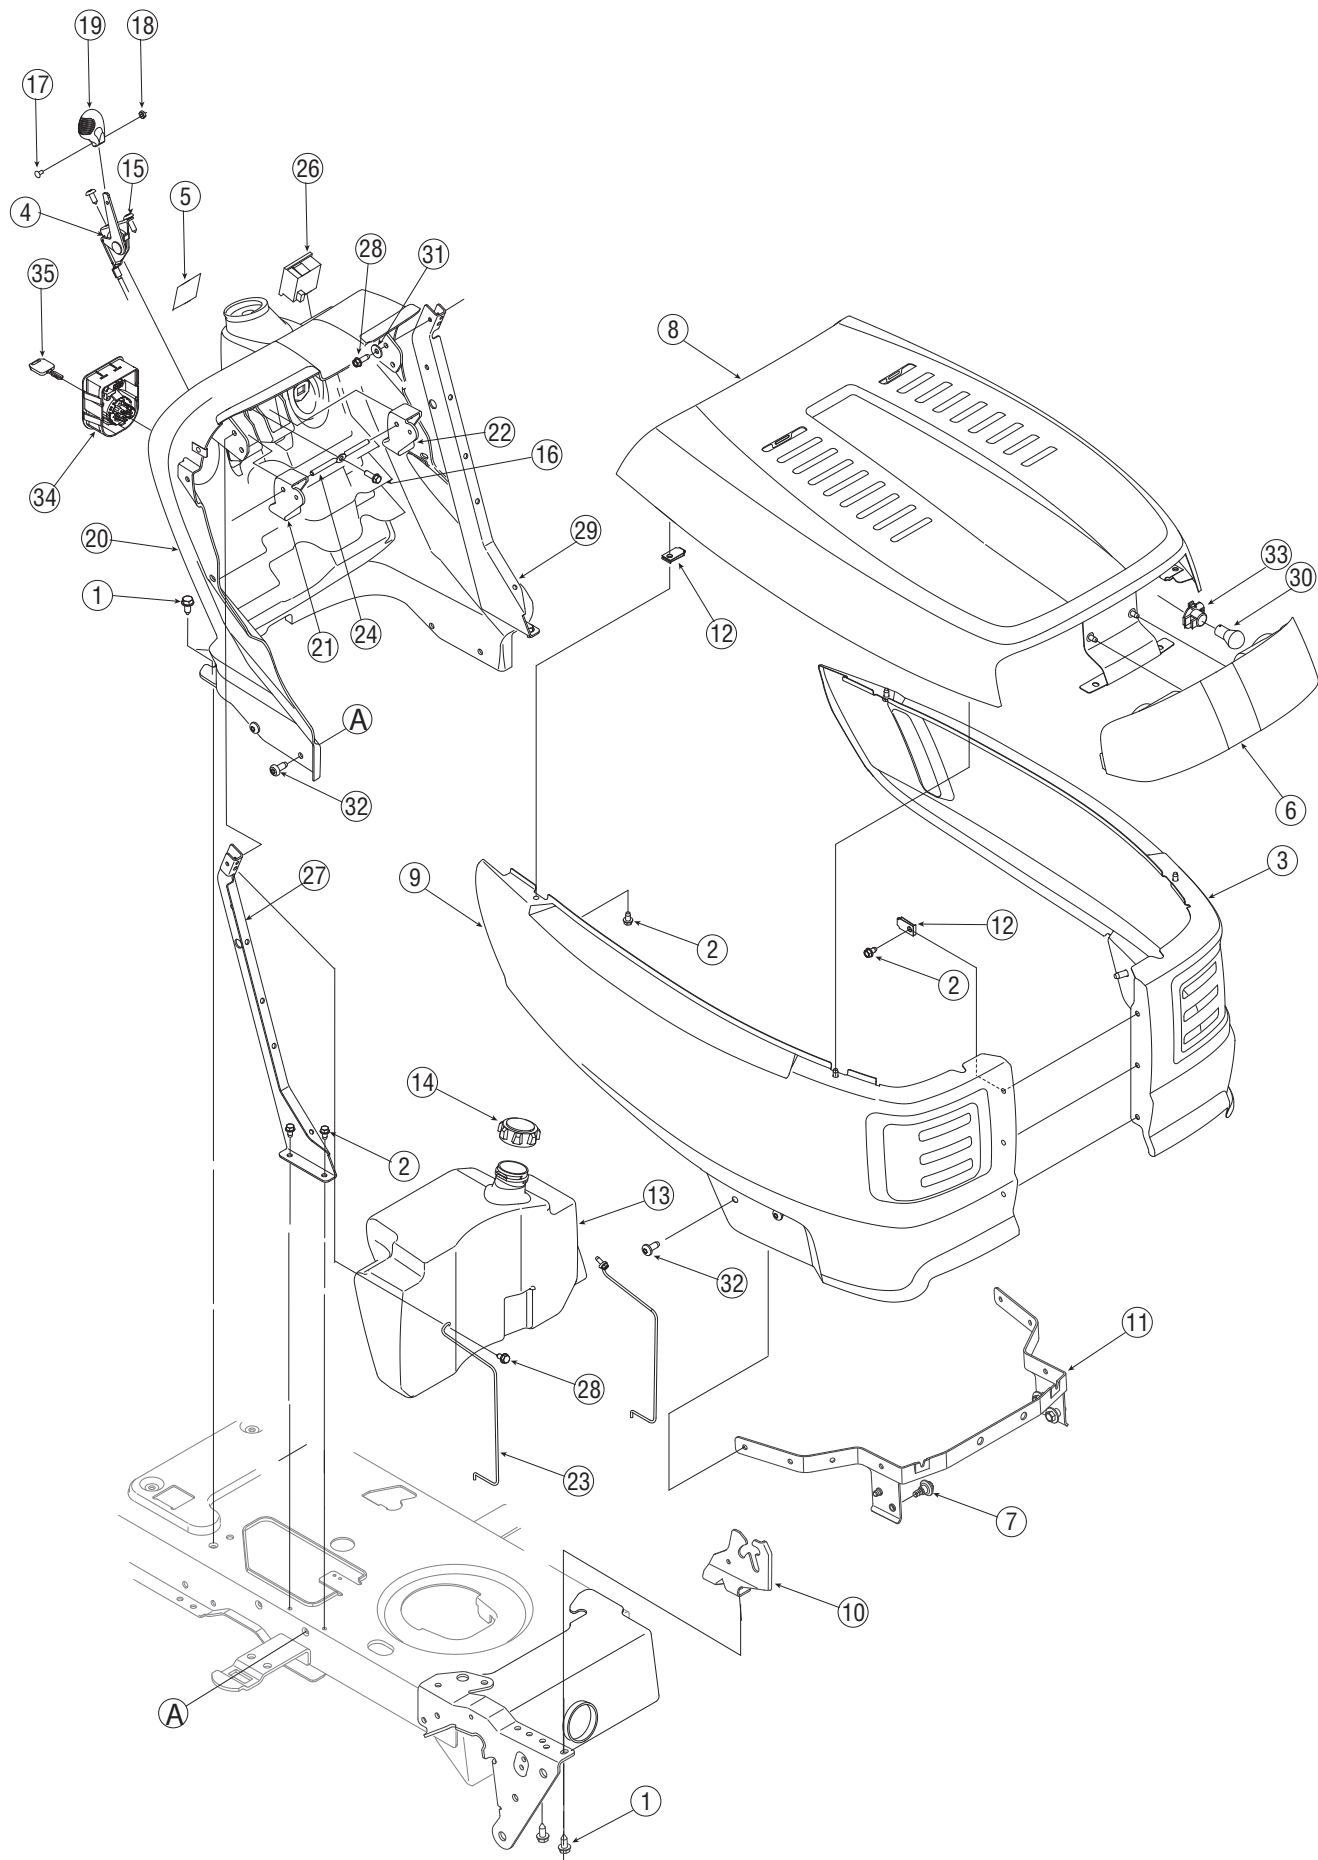

| Ref. No. | Part No.   | Description                       |
|----------|------------|-----------------------------------|
| 1        | 710-0726   | Screw, 5/16-12 x.750              |
| 2        | 710-0599   | Self-tapping Screw, 1/4-20 x.5    |
| 3        | 783-04829  | Side Panel - LH                   |
| 4        | 746-1084   | Throttle Control/Cable            |
| 5        | 731-1999   | Choke Plug                        |
| 6        | 731-05357  | Headlight Lens                    |
| 7        | 738-04091  | Shoulder Screw,.43 x.29           |
| 8        | 783-04827  | Hood, T Style                     |
| 9        | 783-04828  | Side Panel - RH                   |
| 10       | 783-04840  | Pivot Bracket - RH                |
|          | 783-04841  | Pivot Bracket - LH                |
| 11       | 783-04606A | Grill Pivot Bracket               |
| 12       | 712-0185   | Speed Nut                         |
| 13       | 751-10283  | Fuel Tank, Three Gallon           |
| 14       | 751-0603   | Fuel Cap                          |
| 15       | 710-1017   | Screw, 1/4-14 x.625               |
| 16       | 710-0895   | Self-tapping Screw, 1/4-15 x.75   |
| 17       | 710-3217   | Truss Phillips Screw, #8-32 x.375 |
| 18       | 712-0142   | Hex Nut, #8-32                    |

| Ref. No. | Part No.   | Description                     |
|----------|------------|---------------------------------|
| 19       | 731-1857   | Throttle Control Knob           |
| 20       | 731-05001A | Dash Panel                      |
| 21       | 731-04729  | Cruise Control Button           |
| 22       | 731-04728  | Parking Brake Button            |
| 23       | 747-04161  | Tank Support Rod                |
| 24       | 747-1196   | Brake/Cruise Pivot Rod          |
| 25       | 629-04083† | Headlight Wire Harness          |
| 26       | 725-04156  | Systems Ind. Monitor w/ Ammeter |
| 27       | 783-04908  | RH Dash Support Plate           |
| 28       | 710-0642   | Self-tapping Screw, 1/4-20 x.75 |
| 29       | 783-04909  | LH Dash Support Plate           |
| 30       | 725-0963   | Lamp                            |
| 31       | 736-0270   | Bell Washer,.265 x.75 x.062     |
| 32       | 710-1611B  | Screw, 5/16-18 x.75             |
| 33       | 725-1649   | Headlight Socket                |
| 34       | 725-04227A | Ignition Switch                 |
| 35       | 725-1745   | Ignition Key w/ plastic cover   |
|          | 725-1744   | Ignition Key w/o plastic cover  |
| —        | 725-04334† | Wire Harness                    |

† Not Shown


# 10

## Illustrated Parts List



To order replacement  
parts, call the Customer  
Service Line at  
**1-800-648-6776,**  
or visit  
**www.troybilt.com.**

Model 60TG

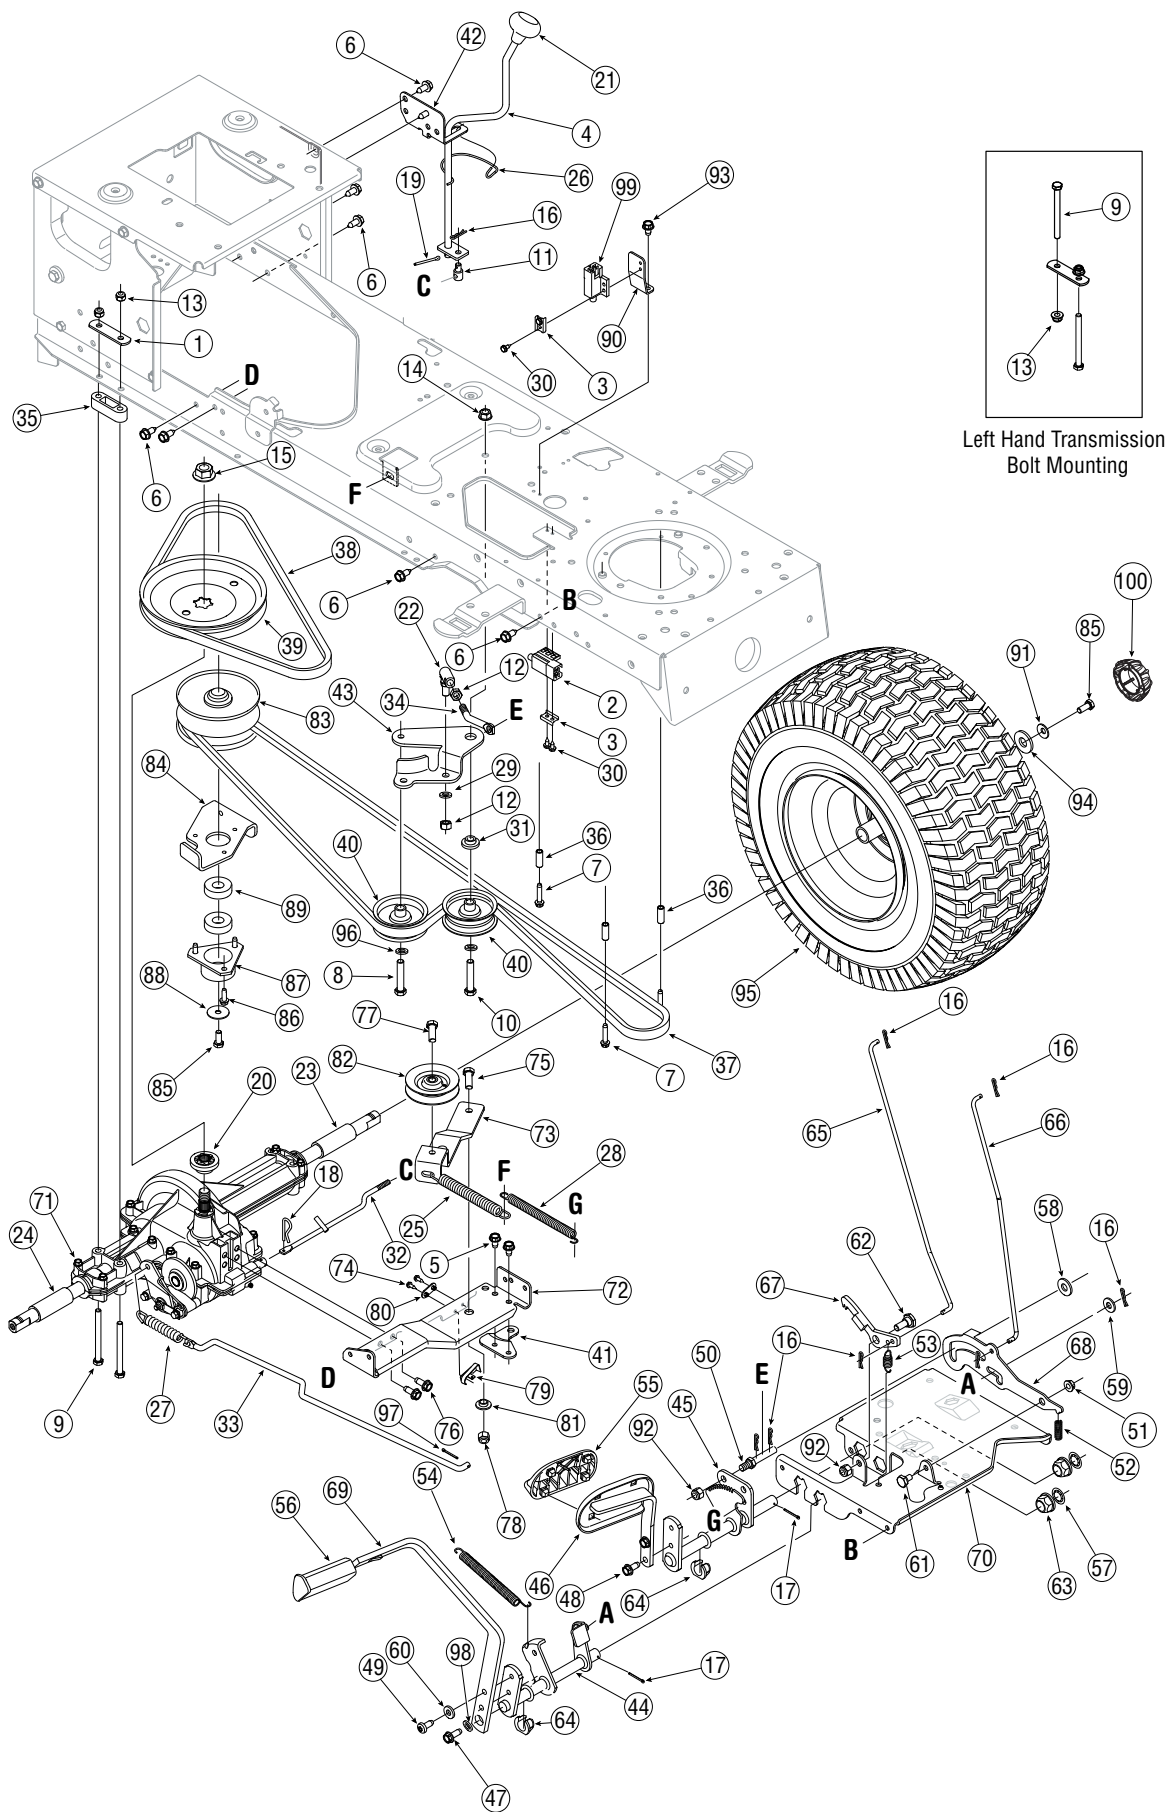



| Ref. No. | Part No.   | Description                      |
|----------|------------|----------------------------------|
| 1        | 17840      | Mounting Bracket, Transaxle      |
| 2        | 725-04039  | Switch, Interlock                |
| 3        | 17962      | Plate, Switch                    |
| 4        | 647-04020  | Lever Assembly, Shift            |
| 5        | 710-0607   | Screw, 5/16-18, 0.500            |
| 6        | 710-0726   | Screw, 5/16-12, 0.750            |
| 7        | 710-0809   | Screw, 1/4-20, 1.250             |
| 8        | 710-1007   | Screw, Sems, 3/8-16, 1.500       |
| 9        | 710-1266   | Screw, 5/16-18, 3.50, Gr5        |
| 10       | 710-3144   | Screw, 3/8-16, 2.00, Gr5         |
| 11       | 711-0736   | Adjustment Ferrule 1/4-20 x 1.   |
| 12       | 712-0241   | Nut, Hex, 3/8-24, Gr5            |
| 13       | 712-04063  | Nut, Flange Lock, 5/16-18, GrF   |
| 14       | 712-0431   | Nut, Flange Lock, 3/8-16, GrF    |
| 15       | 712-0700   | Nut, Flange, 9/16-18, Gr2        |
| 16       | 714-0104   | Pin, Cotter,.072 Dia. x 1.13     |
| 17       | 714-0111   | Pin, Cotter, 3/32, 1.0           |
| 18       | 714-0209   | Cotter Pin, Internal,.125 Dia.   |
| 19       | 714-0470   | Pin, Cotter, 1/8 x 1.25          |
| 20       | 718-0758A  | Pulley Hub, 5/8 Spline           |
| 21       | 720-04028  | Knob, Shift                      |
| 22       | 723-3018   | Ball Joint                       |
| 23       | 731-04602  | Sleeve,.758 x.821 x 3.3125       |
| 24       | 731-04604  | Sleeve,.758 x.821 x 2.4375       |
| 25       | 732-0384   | Spring, Extension,.62 Dia x 6.12 |
| 26       | 732-0525   | Spring Clip, Shifter             |
| 27       | 732-0716C  | Spring, Extension,.59 OD x 4.00  |
| 28       | 732-0963   | Spring, Extension,.50 Dia x 6.37 |
| 29       | 736-0169   | Washer, Lock, 3/8                |
| 30       | 710-0224   | Screw, #10-16,.50                |
| 31       | 738-0372B  | Spacer, Shoulder, 1.00 x.38 x.38 |
| 32       | 747-04146A | Rod, Shift                       |
| 33       | 747-04164  | Rod, Brake                       |
| 34       | 747-1127   | Idler Rod, Adjustable, 3/8       |
| 35       | 748-0334   | Spacer,.68                       |
| 36       | 750-0566A  | Spacer,.260 x.372 x 1.030        |
| 37       | 754-0467   | Belt, V-Type                     |
| 38       | 754-0468   | Belt, V-Type                     |
| 39       | 756-04002  | Pulley, V-Type, 7.25 Dia.        |
| 40       | 756-04224  | Idler Pulley, Flat 2.75 OD       |
| 41       | 783-04283  | Bracket, Shift                   |

| Ref. No. | Part No.   | Description                      |
|----------|------------|----------------------------------|
| 42       | 783-04360  | Bracket, Shift, F-N-R            |
| 43       | 783-04442  | Idler Bracket, Center Double     |
| 44       | 647-0031B  | Control Assembly, Brake          |
| 45       | 647-0032A  | Control Assembly, Speed          |
| 46       | 683-0266   | Pedal Assembly                   |
| 47       | 710-0650   | Screw, 5/16-18, 0.875            |
| 48       | 710-1260A  | Screw,5/16-18, 0.750             |
| 49       | 710-1611B  | Screw, 5/16-18, 0.750            |
| 50       | 711-04159B | Pin, 3/8-16 x 2.68               |
| 51       | 731-2290A  | Hub Cap                          |
| 52       | 732-0335   | Spring, Compression,.405 x 1.17  |
| 53       | 732-0955   | Spring, Extension,.50 OD x 1.41  |
| 54       | 732-0963   | Spring, Extension,.50 OD x 6.37  |
| 55       | 735-0662   | Pad                              |
| 56       | 735-3049   | Pad, Brake                       |
| 57       | 736-0187   | Washer, Flat,.64 x 1.24 x.06, Ht |
| 58       | 736-0262   | Washer, Flat,.385 x.870 x.092    |
| 59       | 736-0300   | Washer, Flat,.406 x.875 x.059    |
| 60       | 736-3008   | Washer, Flat,.344 x.750 x.120    |
| 61       | 738-0155   | Screw, Shoulder.437 Dia x.162    |
| 62       | 738-0380   | Screw, Shoulder,.50 x.27 Lg,     |
| 63       | 741-0225   | Bearing, Hex Flange              |
| 64       | 741-3065B  | Split Bearing, Hex Flange        |
| 65       | 747-04093  | Rod, Brake Lock                  |
| 66       | 747-04096  | Rod, Cruise Control              |
| 67       | 748-04039B | Latch, Cruise Control            |
| 68       | 783-0732A  | Bracket, Lockout                 |
| 69       | 783-0773A  | Ped, Brake                       |
| 70       | 783-04612  | Bracket, Steering Support        |
| 71       | 618-04034  | Transmission, Single Speed       |
| 72       | 683-04055A | Bracket Assembly, Torque         |
| 73       | 683-04130  | Bracket, Idler                   |
| 74       | 710-0227   | Screw, #8-18 x.50                |
| 75       | 710-0514   | Screw, 3/8-16, 1.00              |
| 76       | 710-0604A  | Screw, 5/16-18,.625              |
| 77       | 710-1315   | Screw, 3/8-16, 1.250             |
| 78       | 712-0130   | Nut, Lock, 3/8-16, Nylon         |
| 79       | 725-1644   | Switch Spring, Short             |
| 80       | 726-0320   | Plate, Insulator                 |
| 81       | 750-04294  | Spacer, Shoulder                 |
| 82       | 756-04209  | Pulley, V-Type, 3.06             |

Continued on next page

# 10

## Illustrated Parts List



To order replacement  
parts, call the Customer  
Service Line at  
**1-800-648-6776,**  
or visit  
**www.troybilt.com.**



# 10

## Illustrated Parts List



To order replacement  
parts, call the Customer  
Service Line at  
1-800-648-6776,  
or visit  
[www.troybilt.com](http://www.troybilt.com).

### Model 60TG


| Ref. No. | Part No.  | Description                     |
|----------|-----------|---------------------------------|
| 83       | 656-04015 | Pulley Ass'y, Variable Speed    |
| 84       | 683-04129 | Bracket, Pulley                 |
| 85       | 710-0627  | Screw, 5/16-24,.750             |
| 86       | 710-1652  | Screw, 1/4-20,.625              |
| 87       | 718-04012 | Cup, Bearing                    |
| 88       | 736-0362  | Washer, Flat                    |
| 89       | 741-0600  | Ball Bearing                    |
| 90       | 783-04722 | Switch Bracket, Parking Brake   |
| 91       | 736-0242  | Washer, Bell,.340 x.872 x.060   |
| 92       | 712-04065 | Nut, Flange Lock, 3/8-16, GrF   |
| 93       | 710-0599  | Screw, 1/4-20 x.500             |
| 94       | 736-0430  | Flat Washer,.350 x 1.59 x.062   |
| 95       | 634-0104  | Wheel Assy Comp, 20 x 8 x 8     |
|          | 734-1730  | Tire Only 20 x 8 x 8            |
|          | 734-0603A | Rim Only w/ Valve Stem          |
| 96       | 736-3010  | Flat Washer, .407 x .812 x .135 |
| 97       | 714-0507  | Pin, Cotter, 3/32 x .750        |
| 98       | 736-0119  | Lock Washer, 5/16               |
| 99       | 725-3167  | Switch                          |
| 100      | 712-3004A | Nut, Flange Lock, 5/16-18, Gr 5 |

# 10

## Illustrated Parts List




To order replacement  
parts, call the Customer  
Service Line at  
1-800-648-6776,  
or visit  
[www.troybilt.com](http://www.troybilt.com).

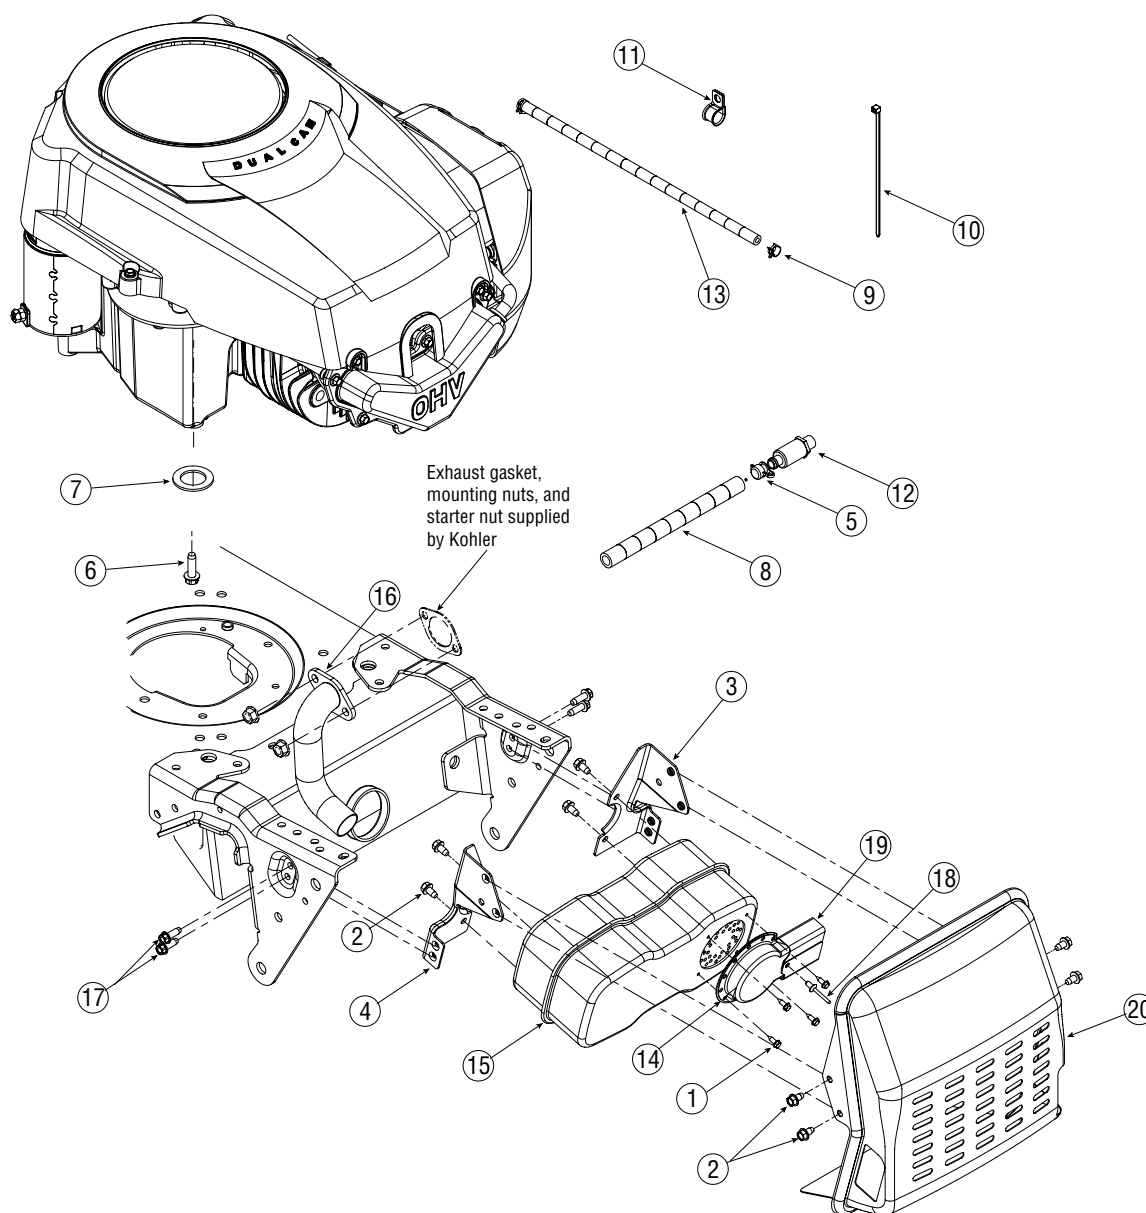

| Ref. No. | Part No.  | Description                       |
|----------|-----------|-----------------------------------|
| 1        | 710-0227  | AB Screw #8-18 x 0.5              |
| 2        | 710-0599  | TT Screw 1/4-20 x 0.5             |
| 3        | 783-04573 | LH Muffler Bracket                |
| 4        | 783-04574 | RH Muffler Bracket                |
| 5        | 751-3142  | Oil Drain Cap                     |
| 6        | 710-0654A | TT Screw 3/8-16 x 1.00            |
| 7        | 736-0277  | Flat Washer, 1.031 x 1.620 x .095 |
| 8        | 751-3141  | Oil Drain Extension Hose          |
| 9        | 726-0205  | Hose Clamp                        |
| 10       | 725-0157  | Cable Tie                         |

| Ref. No. | Part No.  | Description            |
|----------|-----------|------------------------|
| 11       | 726-0272  | Clamp                  |
| 12       | 751-3140  | Oil Drain Valve        |
| 13       | 751-10349 | Fuel Line Hose         |
| 14       | 751-0564B | Muffler Deflector      |
| 15       | 751-10162 | Muffler                |
| 16       | 751-10017 | Exhaust Pipe           |
| 17       | 710-0642  | Screw, 1/4-20, x .750  |
| 18       | 728-04000 | Pop Rivet              |
| 19       | 751-10353 | Long Muffler Deflector |
| 20       | 683-04256 | Muffler Shield         |

# Model 60TG

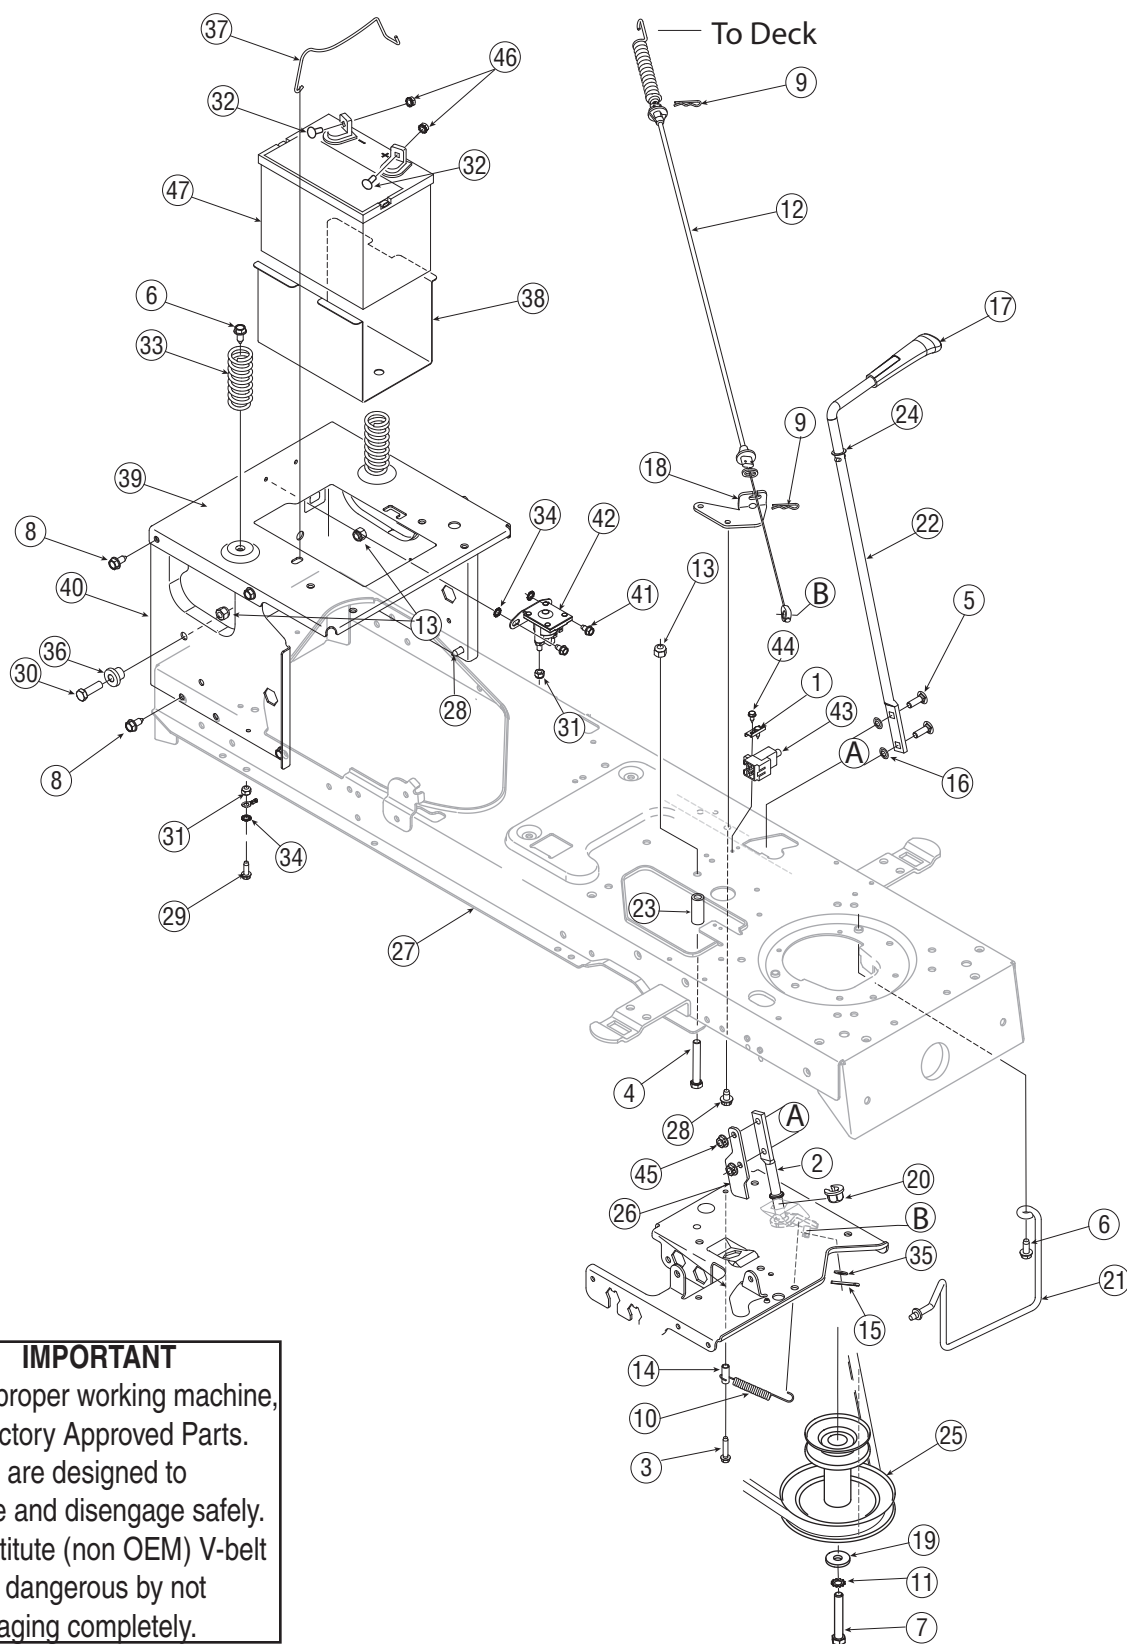

## IMPORTANT

For a proper working machine, use Factory Approved Parts. V-belts are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

| Ref. No. | Part No.   | Description                     |
|----------|------------|---------------------------------|
| 1        | 17962      | Plate, Switch                   |
| 2        | 647-04036  | Lever Assembly, Engagement      |
| 3        | 710-0778   | Screw, 1/4-20 x 1.500           |
| 4        | 710-0859   | Screw, 3/8-16, 2.50             |
| 5        | 710-0276   | Screw, Carriage, 5/16-18, 1.00  |
| 6        | 710-1260A  | Screw, 5/16-18 x.750            |
| 7        | 710-3157A  | Screw, 7/16-20, 3.25, Gr5       |
| 8        | 710-0726   | Screw, 5/16-12, 0.750           |
| 9        | 714-0145   | Click Pin                       |
| 10       | 732-04248  | Extension Spring,.38OD x 3.9LG  |
| 11       | 736-0171   | Lock Washer, 7/16               |
| 12       | 746-04092  | Deck Engagement Cable           |
| 13       | 712-04065  | Nut, Flange Lock, 3/8-16, GrF   |
| 14       | 750-0566A  | Spacer,.260 x.372 x 1.030LG     |
| 15       | 714-0470   | Pin, Cotter, 1/8 x 1.25         |
| 16       | 726-0201   | Nut, Speed,.3125 ID             |
| 17       | 731-2111A  | Knob, PTO                       |
| 18       | 783-04590A | Cable Bracket                   |
| 19       | 736-0322   | Washer, Flat,.450 x1.250 x.164  |
| 20       | 741-0708   | Bearing, Flange, .500 ID        |
| 21       | 747-04307  | Keeper Rod, Belt                |
| 22       | 747-04470  | Engagement Handle, Deck         |
| 23       | 748-0415B  | Spacer,.385 ID x.635 OD x 1.54  |
| 24       | 736-0108   | Flat Washer, .510 x .750 x .033 |

| Ref. No. | Part No.   | Description                      |
|----------|------------|----------------------------------|
| 25       | 756-04196  | Pulley, Engine, 3.39 x 6.12 Dia. |
| 26       | 783-0744A  | Stop Bracket, Engagement         |
| 27       | 683-04173  | Frame Assembly, Lower            |
| 28       | 710-0607   | Screw, 5/16-18, 0.500            |
| 29       | 710-0642   | Screw, 1/4-20, 0.750             |
| 30       | 710-3005   | Screw, 3/8-16, 1.25, Gr5         |
| 31       | 712-04064  | Nut, Flange Lock, 1/4-20, GrF    |
| 32       | 710-0703   | Screw, Carriage, 1/4-20,.75      |
| 33       | 732-04035  | Spring, Compr. , 1.28 OD x 3.125 |
| 34       | 736-0222   | Washer, Lock, 1/4, External      |
| 35       | 736-0275   | Flat Washer, .344 x .688 x .065  |
| 36       | 738-04058  | Spacer, Shoulder,.38 x 1.0 x.70  |
| 37       | 747-04121A | Hold Rod, Battery                |
| 38       | 783-0349   | Battery Tray                     |
| 39       | 783-04329A | Seat Bracket, Frame              |
| 40       | 783-04809  | Frame, Upper                     |
| 41       | 710-0599   | Screw, 1/4-20, 0.50              |
| 42       | 725-1426A  | Solenoid, 12V, 100 Amp           |
| 43       | 725-04039  | Switch, Interlock                |
| 44       | 710-0224   | Screw, #10-16,.50                |
| 45       | 712-3004A  | Nut, Flange, Lock Nut, 5/16-18   |
| 46       | 712-0271   | Nut, Sems, 1/4-20                |
| 47       | 725-1737A  | Battery, 190 CCA                 |
|          |            |                                  |


# 10

## Illustrated Parts List



To order replacement  
parts, call the Customer  
Service Line at  
**1-800-648-6776,**  
or visit  
**[www.troybilt.com](http://www.troybilt.com)**.

Model 60TG

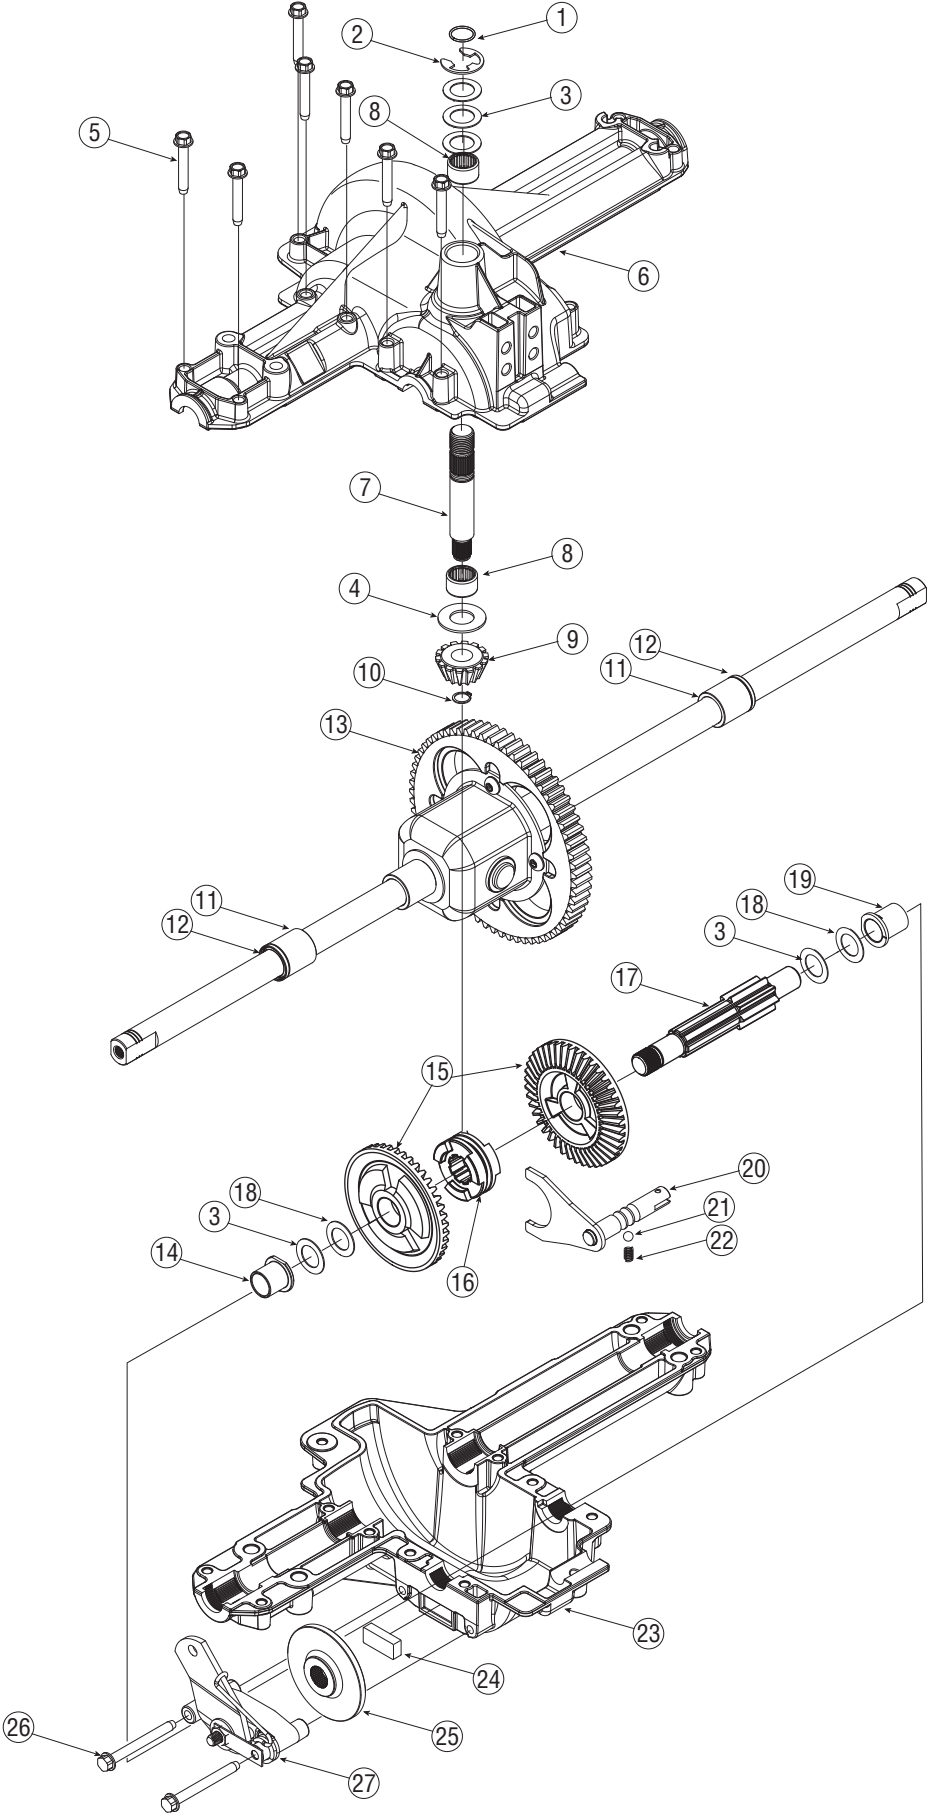

# 10

## Illustrated Parts List




To order replacement  
parts, call the Customer  
Service Line at  
**1-800-648-6776**,  
or visit  
**[www.troybilt.com](http://www.troybilt.com)**.

| Ref. No. | Part No.  | Description                        |
|----------|-----------|------------------------------------|
| 1        | 732-0614  | Ring, Wire                         |
| 2        | 716-0231  | Ring, E Type,.750                  |
| 3        | 736-0336* | Flat Washer, 5/8 x 1.0 x.030       |
|          | 736-0337* | Flat Washer, 5/8 x 1.0 x.040       |
|          | 736-0349* | Flat Washer, 5/8 x 1.0 x.020       |
| 4        | 736-0335  | Washer, Thrust.635 x 1.26 x.06     |
| 5        | 710-1325  | Self-tapping Screw, 1/4-20 x 1.625 |
| 6        | 719-04017 | Upper Housing                      |
| 7        | 711-1109  | Input Shaft                        |
| 8        | 741-0335  | Needle Bearing,.625 x.813 x.495    |
| 9        | 717-1464  | 14-tooth Bevel Pinion              |
| 10       | 716-0108  | Retaining Ring,.437                |
| 11       | 741-0340  | Sleeve Bearing,.75 x1.0 x 1.0      |
| 12       | 721-0338  | Seal,.75 x 1.0 x.125               |
| 13       | 618-04041 | Differential Assembly              |
| 14       | 741-0336  | Flange Bearing, 5/8 x 3/4 x 3/4    |
| 15       | 717-04056 | 42-tooth Bevel Gear                |
| 16       | 718-04045 | Clutch Collar                      |
| 17       | 711-04134 | Drive Shaft                        |
| 18       | 736-0495* | Thrust Washer, 1.0 x.632 x.0       |
|          | 736-0494* | Flat Washer,.632 x 1.00 x.035      |
| 19       | 741-0337  | Flange Bearing, 5/8 x 3/4 x 15/16  |
| 20       | 611-0011  | Detent Shaft Assembly              |
| 21       | 741-0862  | Detent Ball                        |
| 22       | 732-0863  | Compression Spring                 |
| 23       | 719-04018 | Lower Housing                      |
| 24       | 717-0678  | Brake Puck                         |
| 25       | 761-0202  | Brake Disc                         |
| 26       | 710-1206  | Self-tapping Screw, 1/4-20 x 2.375 |
| 27       | 661-0001  | Brake Assembly                     |
| —        | 737-0148  | Grease (19 oz.)                    |

\* Use applicable flat washer (ref. #'s 3 or 18) in this application allowing .0150/.0020 in. end-play

**NOTE:** If rebuilding the upper housing, include two ounces (2 oz.) of Unirex® N3 grease (Part No. 737-0289) in the input shaft cavity.



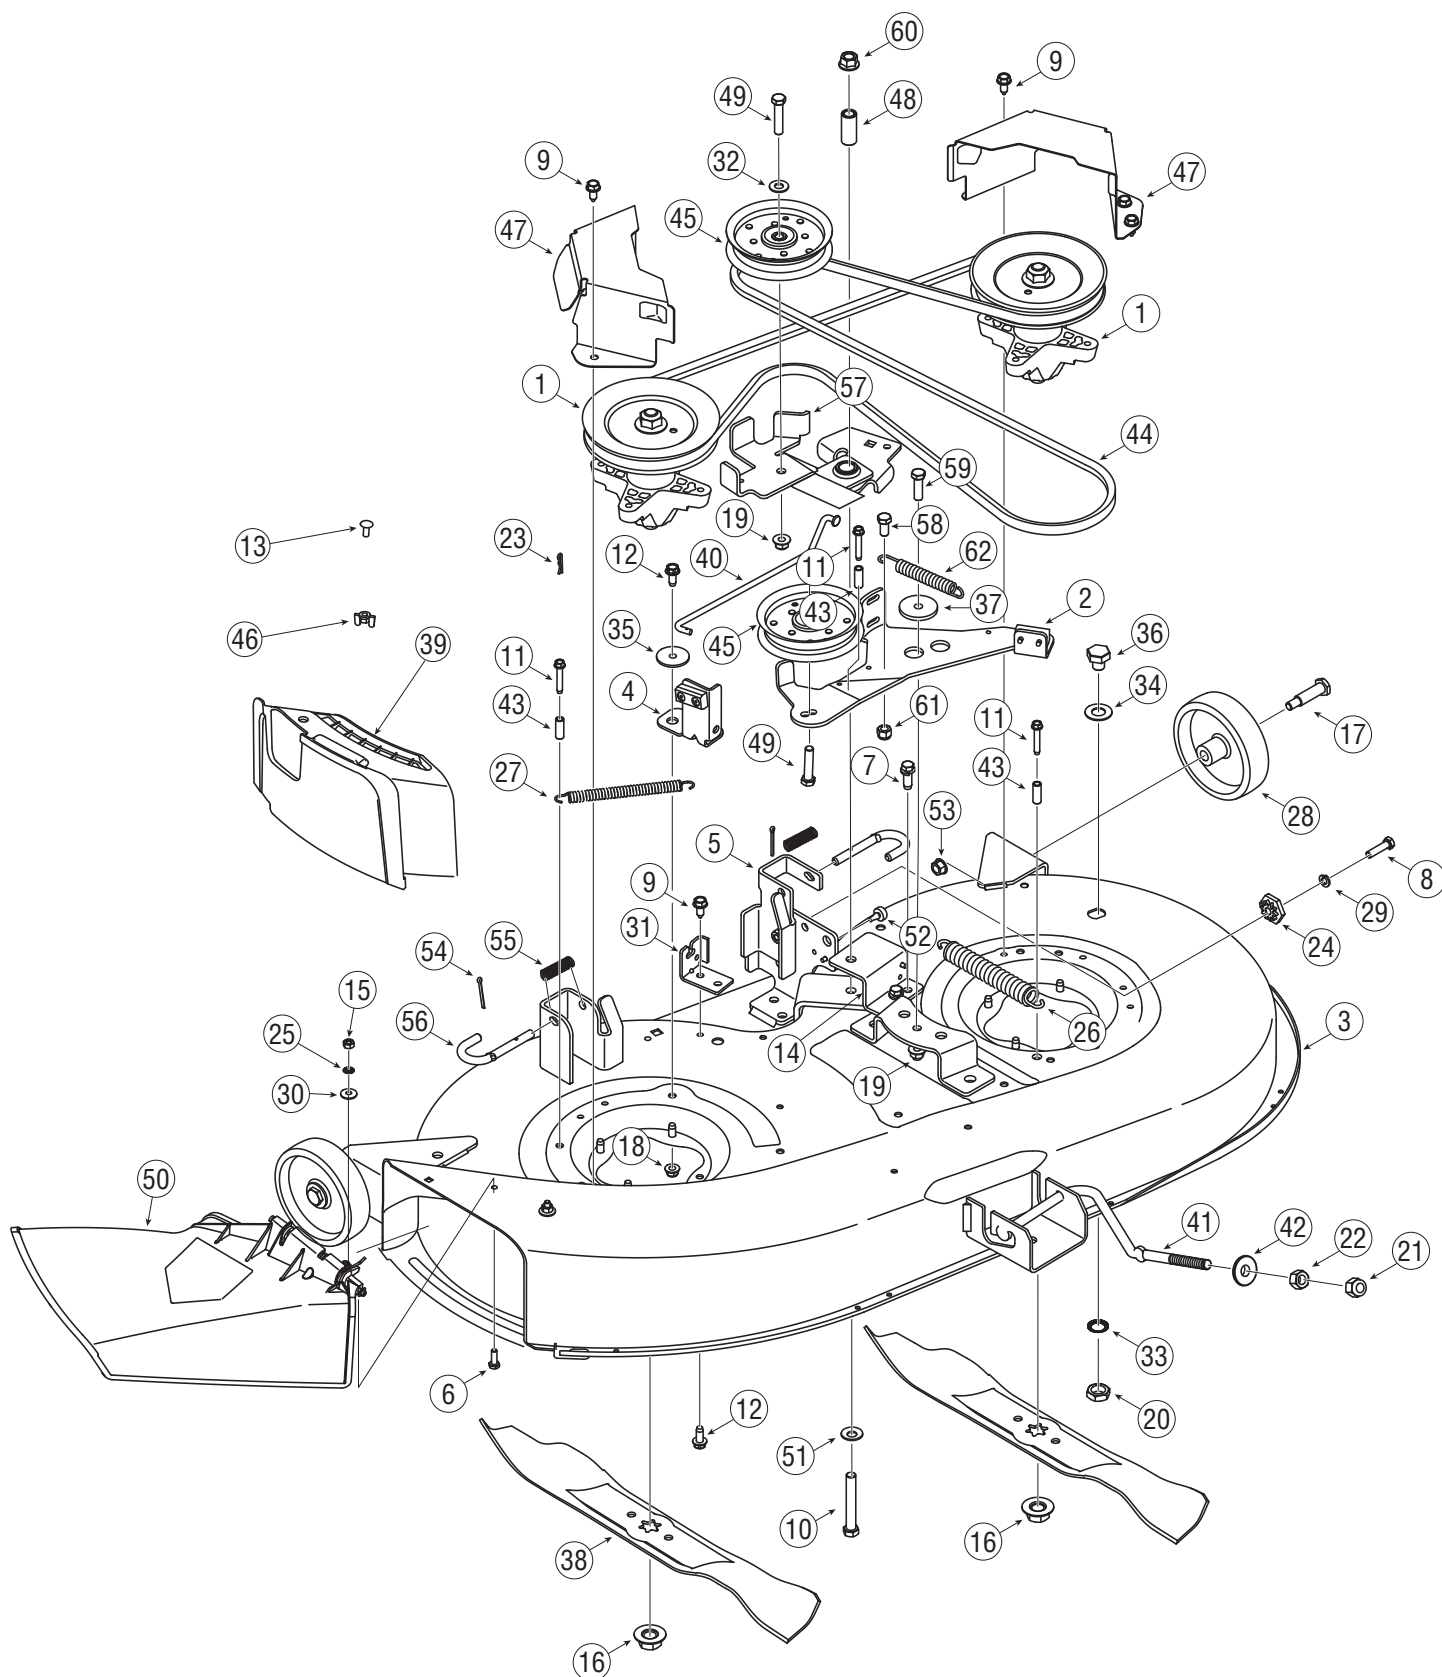

| Ref. No. | Part No.   | Description                       |
|----------|------------|-----------------------------------|
| 1        | 618-0624   | Spindle Assembly, Pul, 6.23" Dia  |
| 2        | 683-04138A | Brake Assembly, Deck              |
| 3        | 683-04261  | Deck Shell, 42"                   |
| 4        | 683-04167  | Brake Assembly, Deck              |
| 5        | 683-0254B  | Brkt. Ass'y, Deck, Hanger LH      |
| 6        | 710-3015   | Screw, 1/4-20, .75, Gr5           |
| 7        | 710-0654A  | Screw, 3/8-16, 1.00               |
| 8        | 710-0528   | Screw, 5/16-18, 1.250             |
| 9        | 710-0726   | Screw, 5/16-12, 0.750             |
| 10       | 710-0510   | Screw, 7/16-20, 3.00, Gr5         |
| 11       | 710-0778   | Screw, 1/4-20, 1.500              |
| 12       | 710-1260A  | Screw, 5/16-18, .75               |
| 13       | 710-0134†  | Carriage Screw, , 1/4-20 x .62    |
| 14       | 783-05045  | Pivot Support Bracket             |
| 15       | 712-3006   | Nut, Hex, 1/4-20, Gr5             |
| 16       | 712-0417A  | Nut, Flange, 5/8-18               |
| 17       | 738-0373   | Screw, Shldr, .498 x 1.53, 3/8-16 |
| 18       | 712-04063  | Nut, Flange Lock, 5/16-18, GrF    |
| 19       | 712-04065  | Nut, Flange Lock, 3/8-16, GrF     |
| 20       | 712-0641   | Nut, Hex, M16-1.5                 |
| 21       | 712-3083   | Nut, Hex Lock, 1/2-13, Gr8        |
| 22       | 712-0206   | Nut, Hex, 1/2-13, Gr5             |
| 23       | 714-0104   | Pin, Cot, .072 Dia. x 1.13 Lg     |
| 24       | 717-04074  | Gear, Deck Adjustment             |
| 25       | 726-0233   | Nut, Push, .25 ID x .50 OD        |
| 26       | 732-0459B  | Spring, Exten. , .94 Dia. x 6.74  |
| 27       | 732-04287  | Spring, Exten. , .50 Dia. x 6.375 |
| 28       | 734-0973   | Wheel, Deck 5.0 x 1.38            |
| 29       | 736-0119   | Washer, Lock, 5/16                |
| 30       | 736-0270   | Washer, Bell, .265 x .75 x .062   |
| 31       | 783-04740  | Deck Engagement Cable Bracket     |

| Ref. No. | Part No.   | Description                      |
|----------|------------|----------------------------------|
| 32       | 736-0300   | Washer, Flat, .406 x .875 x .059 |
| 33       | 736-0760   | Washer, Lock                     |
| 34       | 737-04003C | Deck Water Nozzle                |
| 35       | 738-04166  | Spacer, Shoulder, .5000 x .1475  |
| 36       | 721-04041  | Water Nozzle Adapter             |
| 37       | 738-04162A | Spacer, Shoulder, .8840 x .190   |
| 38       | 742-0616A  | Blade, 21.23", Star 3-in-1       |
| 39       | 731-2363†  | Mulch Plug                       |
| 40       | 747-04501  | Control Rod, Brake               |
| 41       | 747-04269A | Deck Rod, Front Adjustable       |
| 42       | 748-04069  | Pivot Cup, Deck Lift             |
| 43       | 750-0566A  | Spacer, .260 x .372 x 1.030      |
| 44       | 754-04045  | Belt, V-Type                     |
| 45       | 756-04129  | Idler Pulley, 4.25" Dia.         |
| 46       | 712-3087†  | Wing Nut, 1/4-20                 |
| 47       | 783-04327A | Cover, Belt, 6.00 Dia.           |
| 48       | 750-04637  | Spacr, .455 ID x .680 OD         |
| 49       | 710-0347   | Screw, 3/8-16 x 1.75             |
| 50       | 731-1032B  | Chute Assembly, Discharge        |
| 51       | 736-0407   | Bell Washer, .45 x 1.00 x .062   |
| 52       | 735-0271   | Bumper                           |
| 53       | 712-0431   | Flange Lock Nut, 3/8-16          |
| 54       | 714-0470   | Cotter Pin                       |
| 55       | 732-0306A  | Comp. Spring, .531OD x 1.75 Lg.  |
| 56       | 747-1116   | Deck Release Rod                 |
| 57       | 683-04252  | Deck Idler Assembly              |
| 58       | 710-0216   | Screw, 3/8-16 x .75              |
| 59       | 710-3005   | Screw, 3/8-16 x 1.25             |
| 60       | 712-0459   | Flange Lock Nut, 7/16-20         |
| 61       | 712-3061   | Hex Lock Nut, 3/8-24             |
| 62       | 732-0470A  | Extension Spring, .53 OD x 4.75  |

† If Equipped

#### IMPORTANT

For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# 10

## Illustrated Parts List



To order replacement parts, call the Customer Service Line at **1-800-648-6776**, or visit **www.troybilt.com**.