

# UREVO STROL U1 WALKING DEVICE

Model: URTM013



**IMPORTANT:** Read all instructions carefully before using this product. Retain this owner's manual for future reference.  
The specifications of this product may vary from this photo, subject to change without notice.

**Manufacturer:** Shanghai Runmi Technology Co., Ltd.  
Address: 15th Floor, Building 21B, No.1158, Zhongxin Rd, Songjiang district, Shanghai, P.R.China

Version: 3.0



MADE IN CHINA

## USER MANUAL



## Content

---

Important safety instructions	01
Welcome to use	03
Product and Accessories	04
Function Schematic Diagram	05
Guide for Initial Operation	09
How to Use	10
Safety Notice	11
Maintenance and Service	14
Trademark and Legal Declaration	15
Replacement and Disposal	17

## Important safety instructions

DANGER - To reduce the risk of electric shock:

1) Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

1) An appliance should never be left unattended plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.

2) Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.

3) Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.

4) Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

5) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.

6) Do not carry this appliance by supply cord or use cord as a handle.

7) Keep the cord away from heated surfaces.

8) Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.

9) Never drop or insert any object into any opening.

10) Do not use outdoors.

11) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

12) Caution - To reduce the risk of injury from moving parts - Unplug before servicing.

13) Warning - To reduce the risk of Electric shock - Unplug before cleaning or servicing.

14) Warning - Risk of personal injury - Keep children under the age of 13 away from machine.

15) To disconnect, turn all controls to the position, then remove plug from outlet.

16) Connect this appliance to a properly outlet only. See grounding instructions.

17) This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep children under the age of 13 away from this machine.

**SAVE THESE INSTRUCTIONS**

### GROUNDING INSTRUCTIONS:

 
This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock.

Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

1. If the supply cord is damaged, it must be replaced by a special cord set available from the manufacturer or its service agent.

2. The free area shall not be less than 0.6 metres greater than the training area in the directions from which the equipment is accessed.

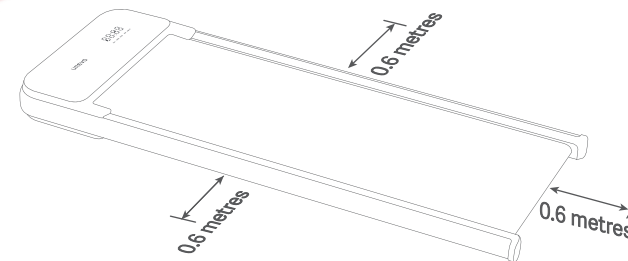

3. If any of the adjustment devices are left projecting, they could interfere with the user's movement.

4. Noise emission under load is higher than without load.


5. On airborne noise:  $\leq 65\text{dB}$ .

6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

# Welcome to use

 
Thank you for choosing the UREVO Walking device,hereinafter referred to as a Walking device,which possess various advantage including exquisite, concise, innovative integral design. From now on, enjoy the quality life of walking at home.

Performance indicators	Detailed parameters	Performance indicators	Detailed parameters
Product dimension	148.5×55.2×10.7cm	Minimum speed	0.8km/h
	58.5×21.73×4.21 inch		0.5 mph
Walking Area	120×42cm	Maximum speed	6km/h
	47.24×16.54 inch		4 mph
Gross weight	30kg	Rated voltage	110-120V 50-60Hz
	66.14 Lbs		
Net weight	25kg	Screen size	10×5.5 cm
	55.11 Lbs		3.94×2.17 inch
Maximum load	120 kg	Power input	560W
	264.5 Lbs	Suggested age	14-60 years old

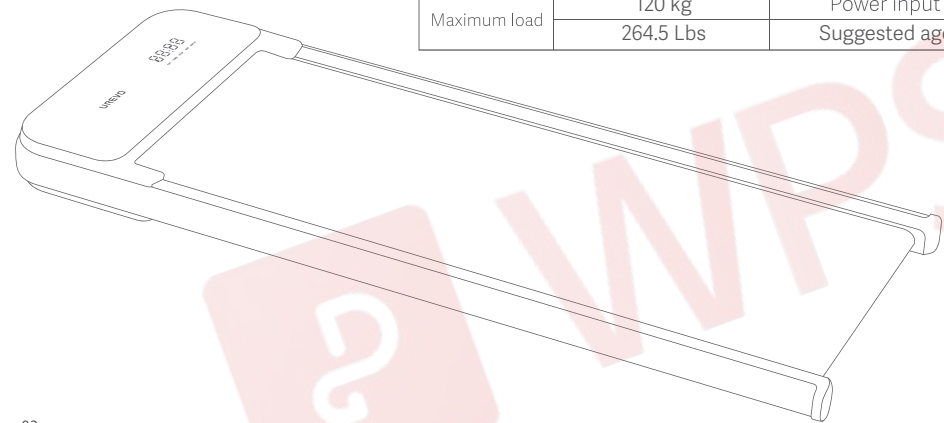

# 01 Product and Accessories

 Please carefully check whether the contents of the package are complete and intact. If there is any missing or damaged, please contact the seller.

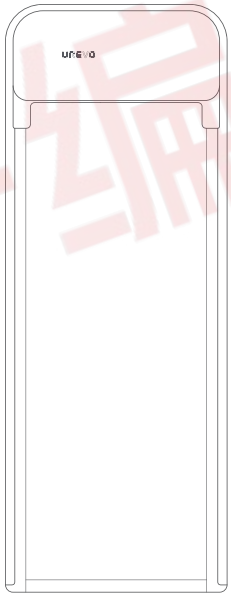

Main Product

## Parts



Power Cable



 
Remote Controller



Wrench



Silicone oil

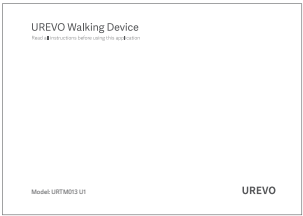

User Manual

## 02 Function schematic diagram

### 1. Product main body



## 02 Function schematic diagram

### 2. Introduction of the function of the indicator panel

2268

CAL

Display Calories  
0.0-9999

12:00

TIME

Display Time  
0-17:59

5896

STEP

Display Steps  
0-9999

16.38

MI

Display Distance  
0-99.99

2.23

 
MPH

0.8-6 km/h  
0.5-4 mph


#### Tips:

- 1,The data is cycle displayed in a five-second
- 2,All the data will recover to 0 when you stop the machine
- 3,When pause mode over 10 mins,the system will change to the economic mode,turn off the screen, and all the data will recover to 0


### 3. Walking device remote controller

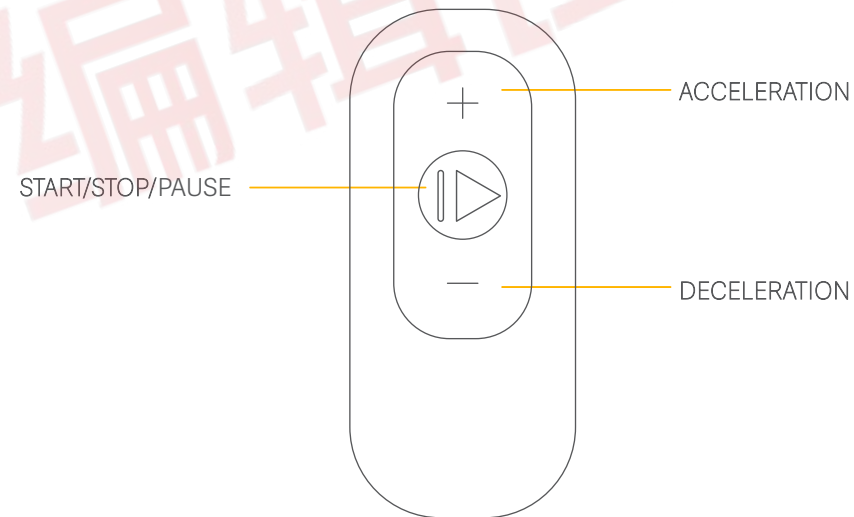


### 03 Guide for initial operation

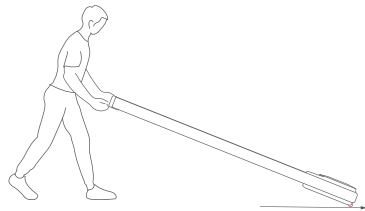 

 1. Choose flat ground to place the Walking device. It is forbidden to place it on thick and soft cushion.

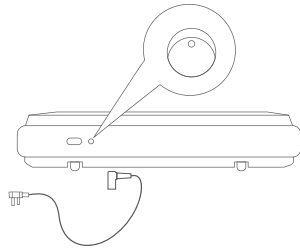

 2. Connect the power cord and press the button to switch on.

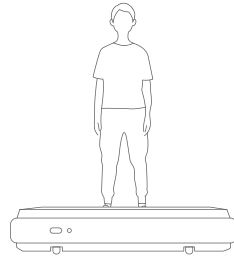

3. Start to use Walking device.

### 04 How to use

1. Ensure that the machine is powered on and the remote control is installed with battery

#### 2. Functions

Controller icon	Function	Operation	Note
+	Add speed	Click	Long press over 0.5 seconds,the speed constantly add.
	Start	Click	Start the machine
	Close	Long press 1.2"	Close the machine(all data recover to 0),the screen will show "END", 10 mins later, the system will change to the economic mode,turn off the screen, and all the data will recover to 0;press any key to activate the system,enter into the standby mode.
▶	Pause	Click (in start mode)	1,When pause mode within 10 mins,the screen will show "PAU",the time/step/-calorie/distance,data will retaining display,the speed will start from the minimum speed. 2,When pause mode over 10 mins,the system will change to the economic mode,turn off the screen, and all the data will recover to 0;press any key to activate the system,enter into the standby mode.
—	Reduce speed	Click	Long press over 0.5 seconds,the speed constantly reduce.

#### 3. Remote control pairing

- A. Long press the start-stop button of the remote control and turn on the power switch of the machine at the same time. After 6 seconds, the machine will emit a beeping sound, which means the pairing is successful.
- B. When the remote control do not respond or replace with a new remote control, perform the above operations.

#### 4. Error Warning Light

 
When error occurs, error warning light turns on and shows its error code.

E01/E13: Communication fault  
E02: Motor fault  
E05: Overcurrent protection


E06: Motor open-circuit  
E08: Memory error  
E10: Motor short circuit

E11: Voltage protection  
E12: Overloading protection


## 05 Safety notice

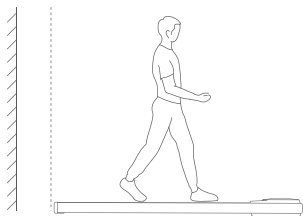

 
⚠ Please keep a rear distance of 100 cm or more.

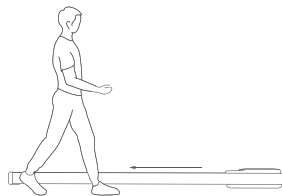

 ⊗ It is strictly forbidden to walk up and down the walking device while walking.

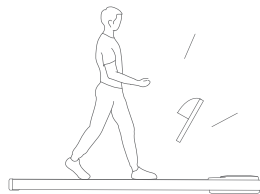

⚠ Please choose sport shoes.

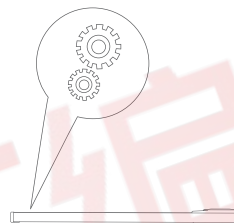 


⚠ Anti involved, please don't trample.



⊗ Prohibition of vertical placement.



 
⊗ Prohibition of lateral placement.

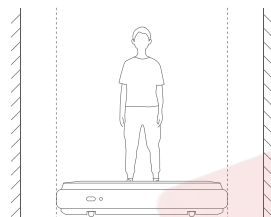


⚠ Please keep a distance of 50cm or more for both sides.



 
⚠ Please do not stand up on the walking device when it is under auto calibration situation (during 4s after starting).

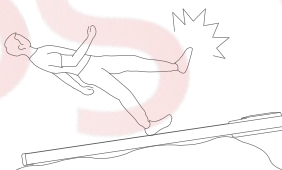


⊗ Using on uneven ground is prohibited.

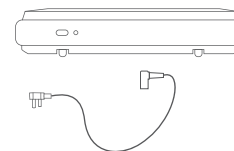 

 ⚠ Please pull out the plug when you are not using it to avoid uncontrolled using by other person.

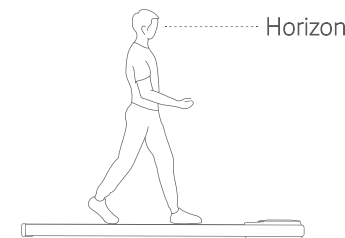

 
⚠ Please keep your sight horizontal to avoid dizziness.

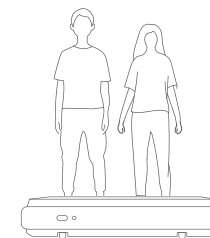


⊗ More than one person on the Walking device is prohibited.




## 05 Safety notice

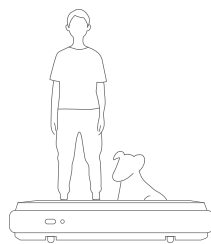 

 
- ⊗ Using machine with pet is prohibited.

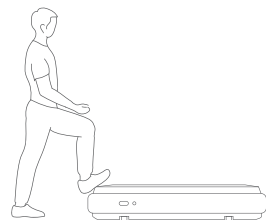

 
- ⊗ Trampling the machine head is prohibited.

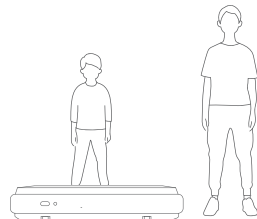

 
- ⚠ Children should be supervised to ensure that they do not play with the walking device.

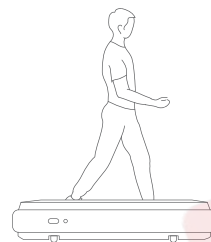

 - ⊗ Walking sideways on the machine is prohibited.

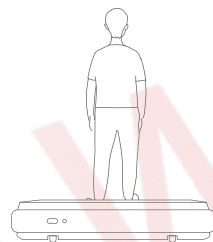

 
- ⊗ Walking backwards on the machine is prohibited.

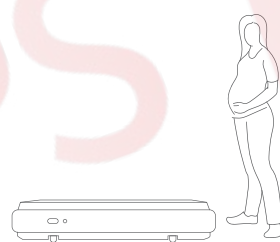

- ⚠ The elderly and pregnant women should use it cautiously.


## 06 Maintenance and Service
 
### 1. Clean the walking machine

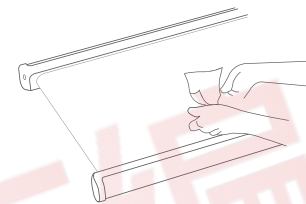


- Turn off the machine and unplug the power cord.
- Add several drops of detergent on 100% cotton rag or towel. Don't pour the detergent on the belt directly, and don't use acid or corrosive cleaners.
- Wipe off dust and stains on the frame, front panel and belt. Do not wipe backside of the belt.
- After using for a period, dust and stains may appear on the back part, which is normal situation. Just clean them up.

### 2. Adjust the belt

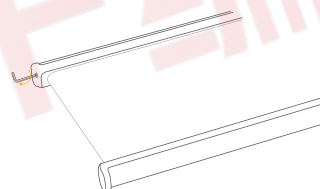 

- The speed is 4 km/hr. In time, stand at the back of walking device to adjust it.
- If belt deviates to the left: Turn the left adjusting screw for a half-circle clockwise.
- If belt deviates to the right: Turn the right adjusting screw for a half-circle clockwise.
- If belt is slipping: Turn both left and right adjusting screw for a half-circle clockwise at same time.
- Keep the machine running for 1-2 minutes and check whether it needs to readjust.
- Press "Start/Stop" button to exit the calibration mode.

### 3. Lubricate the belt

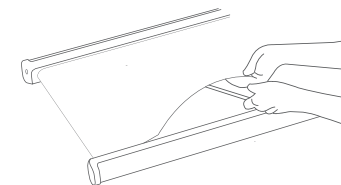 

- Turn off the machine and unplug the power cord.
- Lift up the belt and apply silicone oil on the backside of the belt.
- Turn on the machine again
- Keep the machine running under 4 km/hr for 10-20 seconds.
- Only apply 5 ml -10 ml lubricant oil each time, too much lubricant oil makes the belt become slipping. Apply for silicone oil once every 30H or 1 month, or when you feel big friction or noise, add lubricating oil.

## 07 Trademark and Legal Declaration

---

Shanghai Runmi Technology Co., Ltd. holds the patents of U'REVO Walking device series products.

Shanghai Runmi Technology edits and owns the copyright of this manual book. Without Shanghai Runmi Technology's written permission, any form of unauthorized distribution, reproduction, publication, release or quotation by any institution or individual is prohibited.

This manual contains as many as possible of all the functions and instructions for use. However, due to product imperfections, design changes, etc., the description may still have discrepancies with what you have purchased. In view of product updates, description in this manual book may differ from what you have purchased in color, appearance, etc. Actual supplies prevail.

## 08 Replacement and Disposal

---

The battery contained in this appliance must be removed for or disposal.

When replacing the battery, use only original battery, available from our online parts shop.

The battery compartment is located on the underside of the appliance. Open the compartment by removing the screw in the cover using a suitable screwdriver, and then press the lower end of the locking catch on the connectors. In that way, both sides of the connection can be separated by pulling them apart.

 
When inserting a new battery, push together the two connectors and ensure that the catch locks over the stop.

Never dispose of old battery in domestic garbage, but only through the proper public collection points. This also applies to the battery of defective appliances.

## 08 Replacement and Disposal

---

Devices marked with this symbol must be disposed of separately from your household waste, as they contain valuable materials which can be recycled. Proper disposal protects the environment and human health. Your local authority or retailer can provide information on the matter.

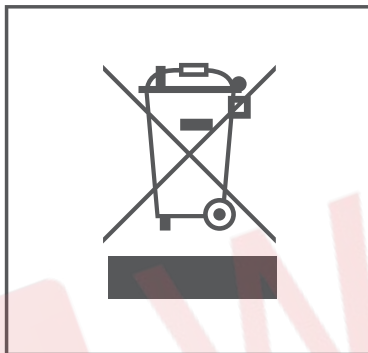

**This device complies with Part 15 of the FCC Rules.  
Operation is subject to the following two conditions:**  
**(1) This device may not cause harmful interference.**  
**(2) This device must accept any interference received,  
including interference that may cause undesired operation.**

# 上海润米科技有限公司

图纸提供单位

润米海外深圳团队

项目名称

URTM013 U1走步机英文说明书

版本号

3.0

材质工艺要求

材质要求: 封面120G铜版纸, 不过膜  
内页: 80G 铜版纸

成品尺寸: 190 x 145 mm

制作工序: 模切+印刷

工艺要求: 裁切准确, 内容清晰  
无爆角爆边, 骑马钉

颜色及 专色: 品牌专色印刷

纹理要求 无