






 



Dive into your next dimension


HORIZON

HORIZON 100 ARGB
Instructions manual

A Package details


 Motherboard screw	 The power screw	 HDD screws(6#*5)
 HDD screws(6-32)	 Copper pillar	 Hard disk shock pad
 Cable Tie		

B Schematic diagram of wire interface

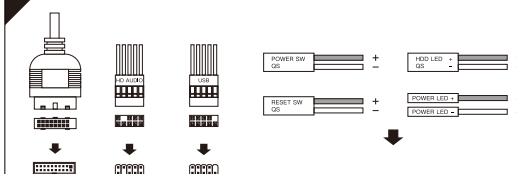


Please refer to the manual that came with your motherboard for any specific connection instructions

C Product size

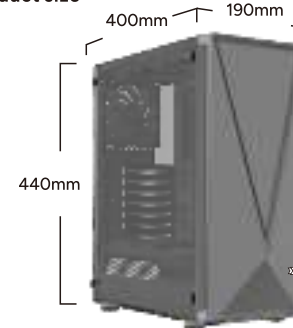


D


IO panel introduction

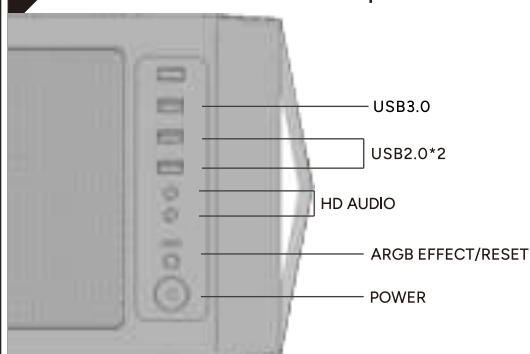


E Machine overview

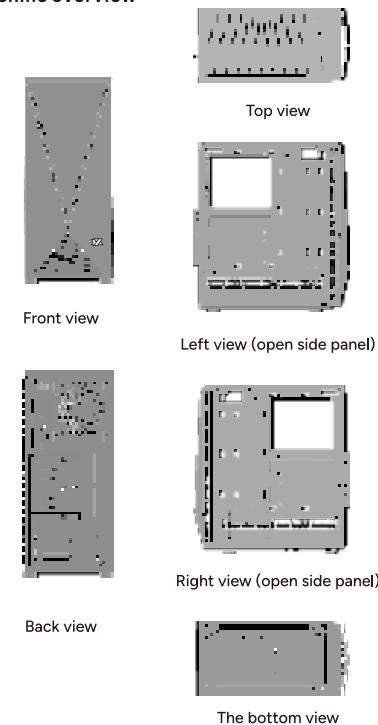

F Chassis disassembly diagram

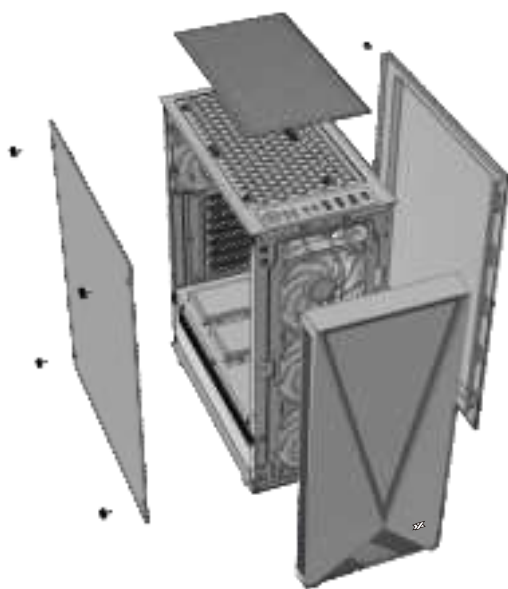


G Remove and install side panels

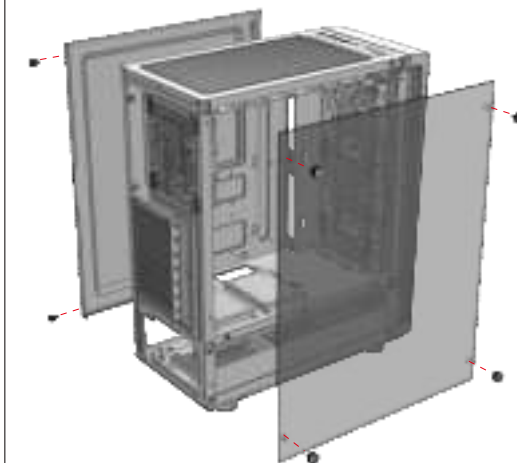


Glass side panel installation:
Fix the glass side panel with 4 screws (as shown above)
Metal side plate installation:
Buckle the side plate and fix it with two screws

H The power supply installation

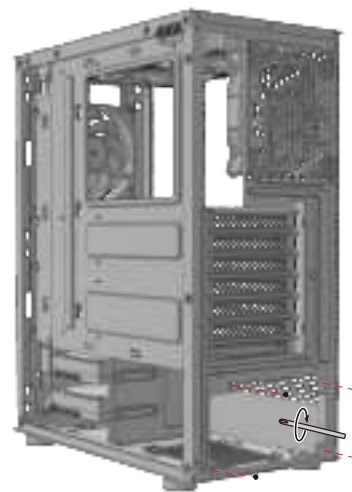

The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different, take the actual object as the standard

I Motherboard installation

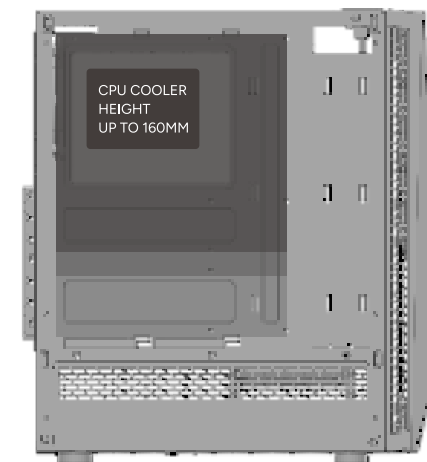

According to the motherboard type (ATX/M-ATX/ITX), the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Height limit: 160mm

