



Original	Replacement	Original	Replacement
	Input		AV / Input / RDS
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	Recall		Back / Return
	[+]		Display / Media
	Menu/Exit		Exit / Cancel / Clear
	Menu/Exit		Menu / Home
	Vol+		Vol+
	Up		Up
	CH+		CH+ / Page+
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	CH-		CH- / Page-
	Down		Down
	FAV		Fav / Marker / PC
	CH List		Smart / List
	I/I		Shift + Audio / Lang I/I
	Sleep		Sleep / Timer
	USB		Shift + 8
	Audio		Audio / Lang I/I
	Video		Shift + 4





Original	Replacement
 Info	 Info / Angle
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Teletext	 Text / Goto
 Mix	 Shift + Text /
 Size	 Zoom / Size
 Subpage	 Rec / Rec Mode
 Index	 Pause / Step / Freeze
 Subtitel	 Subtitle / EQ
 Hold	 Stop / Hold
 Reveal	 Play / Slow

Original	Replacement

