

FCC WARNING:

The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause interference with other electronic equipment. If you experience interference, you may need to take additional measures to reduce the interference. If you need to take additional measures, you may need to consult the manufacturer's manual for more information.

If this equipment does not cause harmful interference to radio or television reception, which can be determined by one of the following methods, the user is encouraged to try to correct the interference by one of the following measures:
1. Reorient or relocate the receiving antenna.
2. Increase the distance between the equipment and receiver.
3. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

The device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause interference with other electronic equipment. If you experience interference, you may need to take additional measures to reduce the interference. If you need to take additional measures, you may need to consult the manufacturer's manual for more information.

WHEN USING A KEYBOARD:

1. Maintain proper posture and avoid excessive force on the keys.
2. Clean regularly to avoid dirt and debris.
3. Avoid the keyboard regularly to prevent dust and dirt.
4. Avoid exposing the keyboard to liquid.
5. Keep the keyboard in a suitable environment, free from extreme temperature or humidity.

Remember these tips for a comfortable and durable keyboard experience.



GUARANTEE
Non-human damage
12-month warranty

PRODUCT BASIC

 
Manual	Switch and Keycaps Puller	Keyboard	USB Type-C cable	2.4 G Dongle
Size 351.52(L)×144.3(W)×43.57(H)mm	Backlight RGB	Version USB 2.0/4.0 BT	Layout 85 keys	Switch Mechanical Switches

INDICATOR LIGHT


Caps Lock Win Lock

Charging Indication: The red light always lights on when charging, goes off when fully charged, and the red indicator light flashes when the power is low.


KNOB FUNCTION

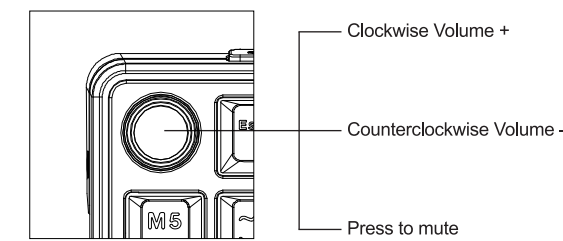

WIRED CONNECTION

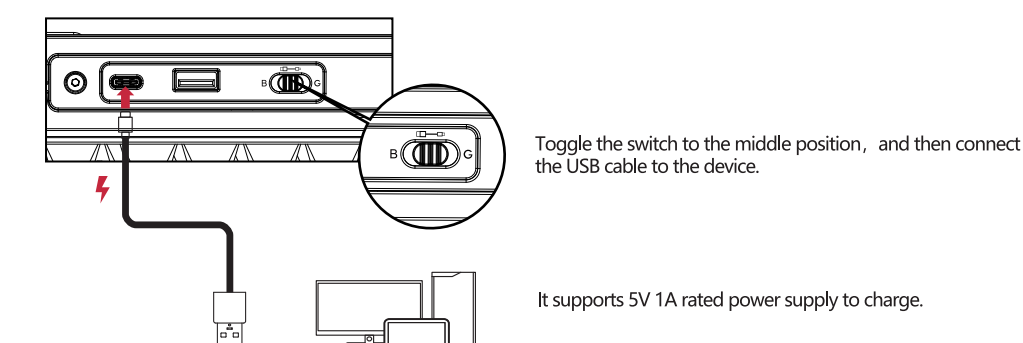 

BT CONNECTION

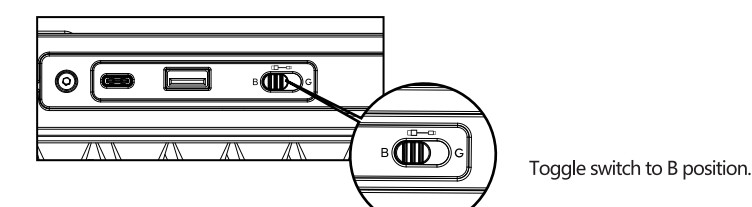 

1. Linking

 
+ + + Short press FN+Q/W/E to change BT channel.

2. Pairing

+ + + Long press FN+Q/W/E enter pairing mode.

BT Device 1 BT Device 2 BT Device 3

2.4 G MODE

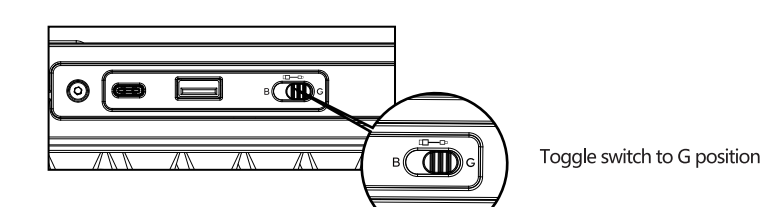


Pairing


+ Long press FN+P to match the code

Friendly reminder: The devices are already paired at the factory, so there is no need to pair them again.

 TOUCH FUNCTION

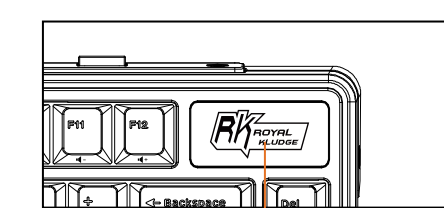

BATTERY LEVEL REMINDER

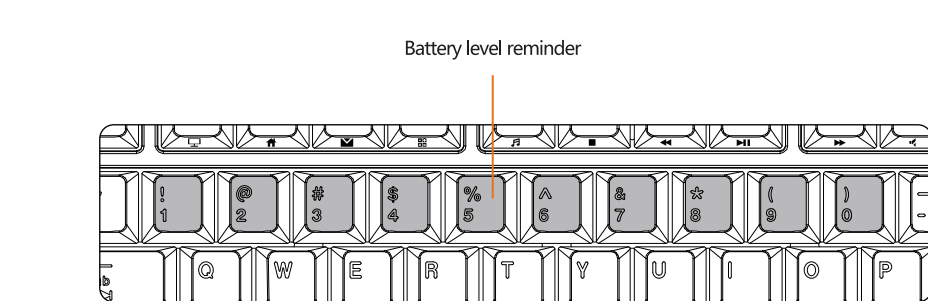 


For example

The backlight of the "1" key is illuminated, indicating that the keyboard's current battery level is at 10%.

~ The "1" and "2" keys are both illuminated, indicating that the keyboard's current battery level is at 20%.

Similarly

 ~ When the backlighting illuminates from "1" to "0" simultaneously, it indicates that the keyboard's battery is at 100% charge.

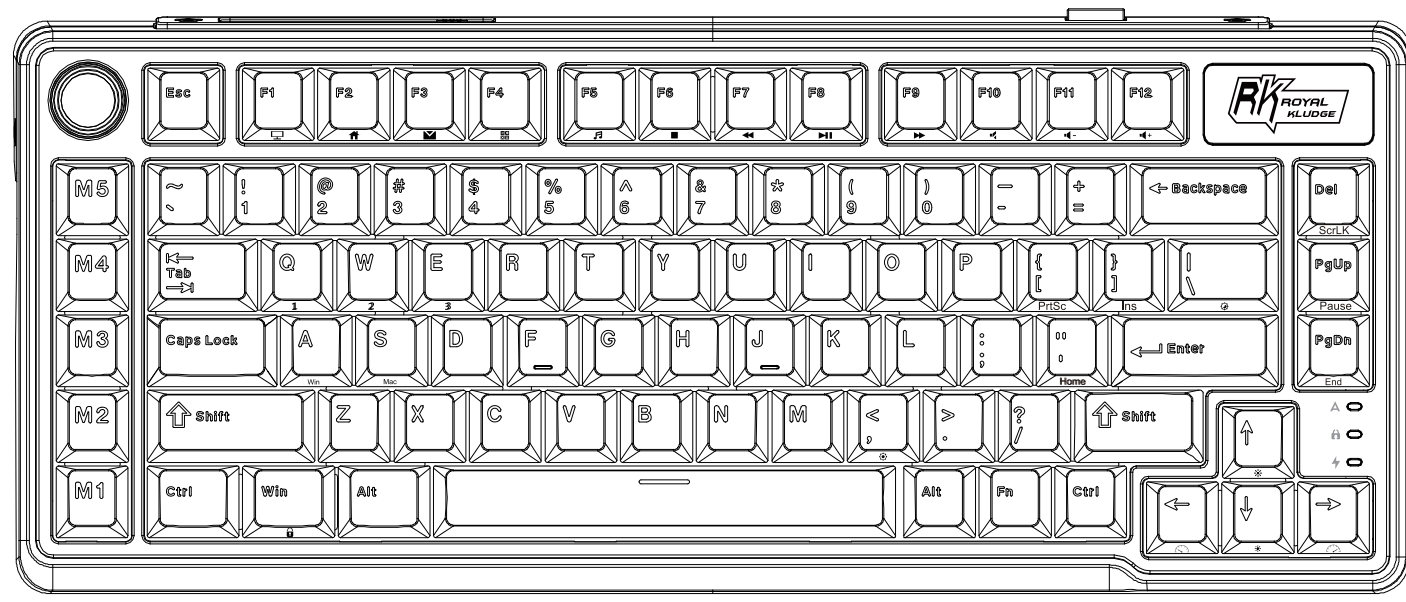

ISED STATEMENT:

1. Maintain proper posture and avoid excessive force on the keys.
2. Clean regularly to avoid dirt and debris.
3. Avoid the keyboard regularly to prevent dust and dirt.
4. Avoid exposing the keyboard to liquid.
5. Keep the keyboard in a suitable environment, free from extreme temperature or humidity.

Remember these tips for a comfortable and durable keyboard experience.

Copyright (c) 2023 RK ROYAL KLUDGE. All rights reserved. This document is the property of RK ROYAL KLUDGE. No part of this document may be reproduced or transmitted in any form or by any means electronic or mechanical, including photocopying, recording, or by any information storage or retrieval system, without permission in writing from RK ROYAL KLUDGE.

BATTERIES:

1. The device is powered by a battery pack. The battery pack is located on the bottom of the device. The battery pack is not user-replaceable.
2. The device is powered by a battery pack. The battery pack is located on the bottom of the device. The battery pack is not user-replaceable.
3. The device is powered by a battery pack. The battery pack is located on the bottom of the device. The battery pack is not user-replaceable.
4. The device is powered by a battery pack. The battery pack is located on the bottom of the device. The battery pack is not user-replaceable.



GUARANTEE
Non-human damage
12-month warranty

CUSTOM BACKLIGHT SET

+ / Non-customizable

+

+

e.g., + + +

Repeat key presses can change backlit colors

+

SECONDARY COMBINATION FUNCTION KEYS

+ Scroll + Pause + End

+ PrintSc + Ins + Home

Copy (Ctrl + C) Paste (Ctrl + V) Select All (Ctrl + A)

Cut (Ctrl + X) Undo (Ctrl + Z)

+ Switch to windows system + Switch to mac system

+

Press and hold for three seconds to restore factory settings

BACKLIGHT CONTROL

+ Backlight Brightness+ + Backlight Brightness- + Backlight Speed- + Backlight Speed+ + Switch the backlight color + Switch Backlight Mode

MULTIMEDIA KEYS

Windows system(Fn + A: switch to Windows system)

+ WIN: Computer + WIN: Browser + WIN: MailBox + WIN: Calculator + WIN: Player + WIN: Stop

+ MAC: Screen Brightness- + MAC: Screen Brightness+ + MAC: Keyboard Backlight Brightness- + MAC: Keyboard Backlight Brightness+

+ WIN: Last Song + WIN: Play/Pause + WIN: Next Song + WIN: Mute + WIN: Volume- + WIN: Volume+

+ MAC: Last Song + MAC: Play/Pause + MAC: Next Song + MAC: Mute + MAC: Volume- + MAC: Volume+