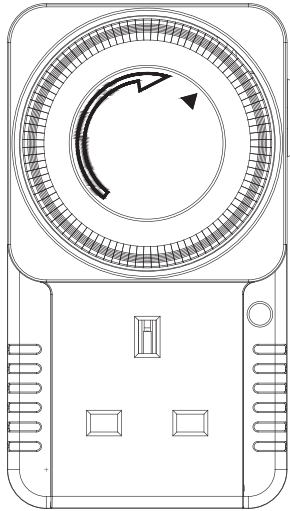
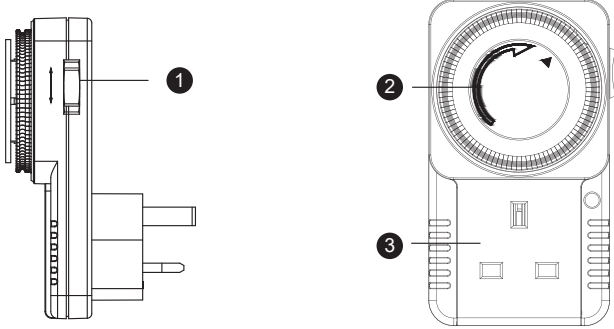


10.5cm

14.8cm

<div data-bbox="1141 819 1303 851"><i>dewenwils</i></div> <div data-bbox="1034 871 1427 924">Indoor Mechanical Pin Timer Switch Instruction Manual</div> <div data-bbox="1128 985 1318 1325"></div> <div data-bbox="1009 1360 1440 1476">Thank you for your purchase. Please contact us if you have any problem. Email: eusupport@dewenwils.com Please attach your User Name or Order ID so that We can assist you better.</div>	<div data-bbox="1517 831 1936 904">WARNING: To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.</div> <div data-bbox="1517 917 1971 1222"><ol style="list-style-type: none">1.Do not connect any devices which exceed the maximum ratings of the timer.2.Do not connect this timer to appliances that contain heating elements(cooking appliances, heaters, irons, etc.). Failure of the timer to shut off such devices may lead to overheating and potential fire.2. Do not immerse in water.3. Children are not allowed to use the timer without supervision.4. Do not disassemble or repair the product, but only by authorized service personnel.5. Always unplug and store indoors when not in use.</div> <div data-bbox="1517 1237 1687 1265">Product Layout</div> <div data-bbox="1547 1275 1951 1494"></div>
<div data-bbox="991 1597 1467 1854"><ol style="list-style-type: none">1.Side Switch The side switch is used to set the timer function: Always ON or Timer Control.2.Timer Dial: *Each pin represents 15 minutes: 4 pins = 1 hour *Pin in down position means ON *Pin in up position means OFF3.Outlet: Plug the lights or devices to be controlled by the timer into the outlet.</div> <div data-bbox="991 1887 1236 1912">Operation Instructions</div> <div data-bbox="991 1925 1467 2205"><ol style="list-style-type: none">1.Set the current time: Turning dial clockwise until the arrow indicates to current time.2.Begin with all pins pulled up. Push the pins down for the periods of time you want the timer to be ON. Pins in down position represents ON and up position represents OFF.3.Push the “ON / TIMER” switch to “TIMER” position and plug the timer into the wall socket. You may override operation of the timer by setting the switch to “ON” position. The power supply will be always ON. Be sure to set switch back to the “TIMER” for proper timer function.</div>	<div data-bbox="1517 1575 1986 1665"><ol style="list-style-type: none">4. Plug your electrical device directly into the timer. Make sure the device is in ON state so the timer can control it and make it work properly.5. If blackout, reset the timer as indicated above.</div> <div data-bbox="1517 1698 1674 1726">Specifications</div> <div data-bbox="1517 1733 1766 1779">Input Voltage: 240VAC 50Hz Max. Current: 13A 3120W</div> <div data-bbox="1517 1890 1988 2101"><p>One-year Limited Warranty</p><p>Dewenwils warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase. Warranty is void if damage is caused by misuse or improper installation. Please contact us if you have any questions. Email: eusupport@dewenwils.com Our dedicated customer service team will get back to you within 24 hours.</p></div>