



POWER SOURCE LOCATION

68025-01

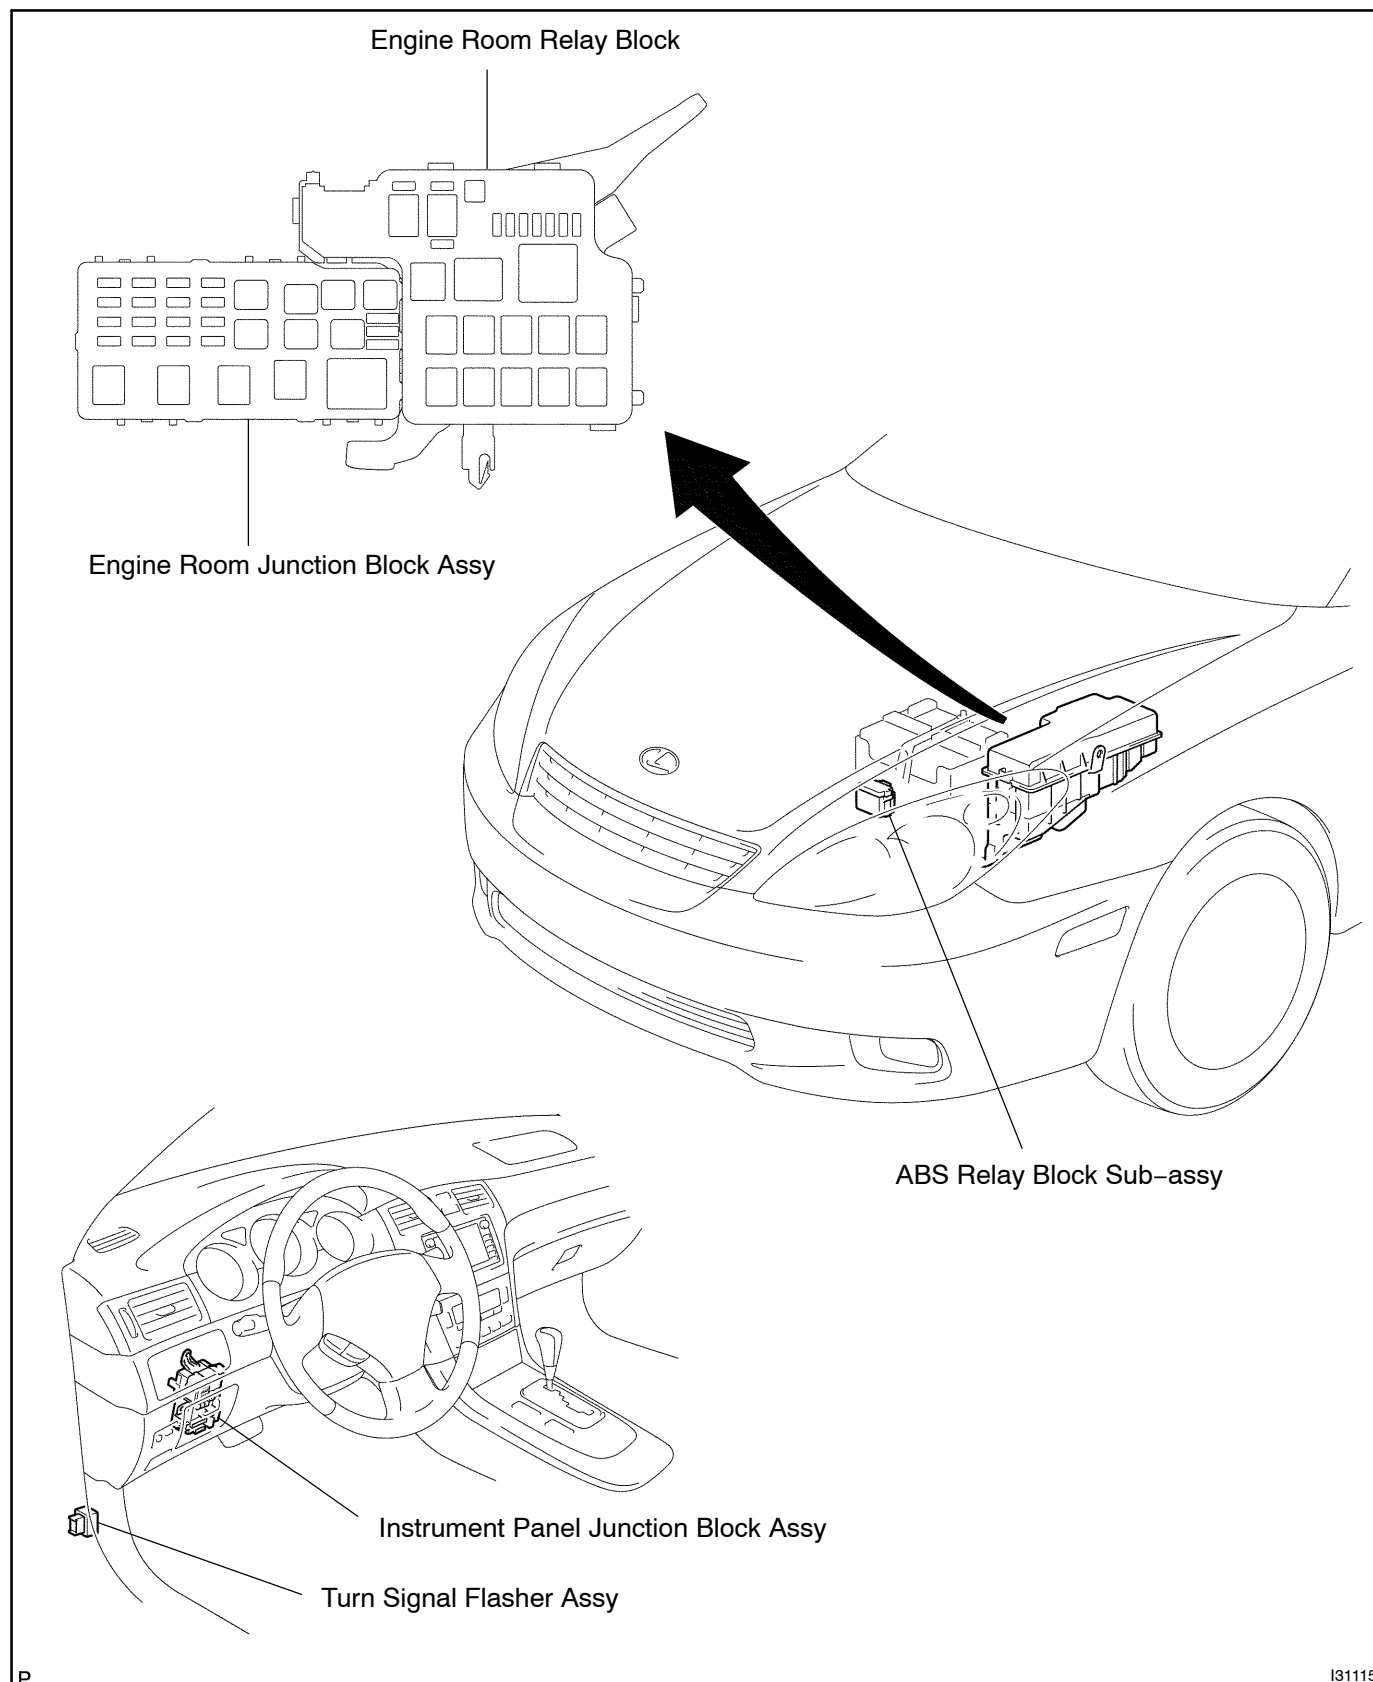

Engine Room Junction Block Assy

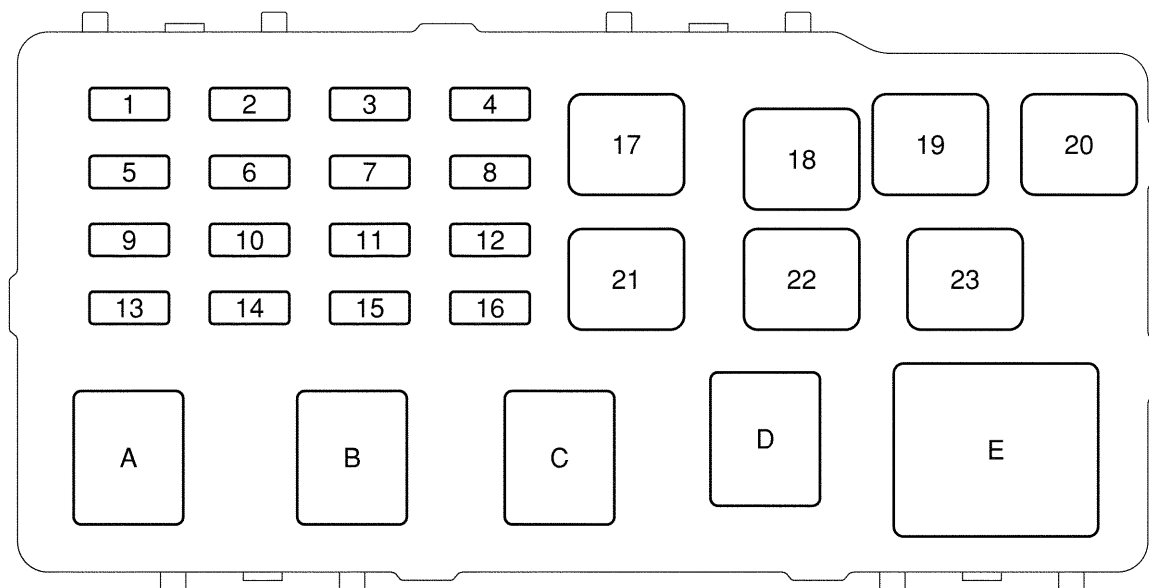


RELAY

A EFI
 B HORN
 C C/ OPN
 D FAN No. 1
 E HEAD

FUSE

1 A/ F	25 A	14 D.C.C	30 A
2 DOOR 1	25 A	15 IG 2	10 A
3 TEL	5 A	16 ST	5 A
4 AM 2	30 A	17 ADJ PDL	30 A
5 -		18 CDS	30 A
6 EFI	20 A	19 ABS No. 2	40 A
7 ALT-S	5 A	20 MAIN	40 A
8 HEAD LH UPR	10 A	21 ABS No. 3	40 A
9 ETCS	10 A	22 HTR	50 A
10 HORN	10 A	23 RDI	30 A
11 IGN	15 A		
12 HEAD RH UPR	10 A		
13 HAZ	15 A		

Engine Room Relay Block

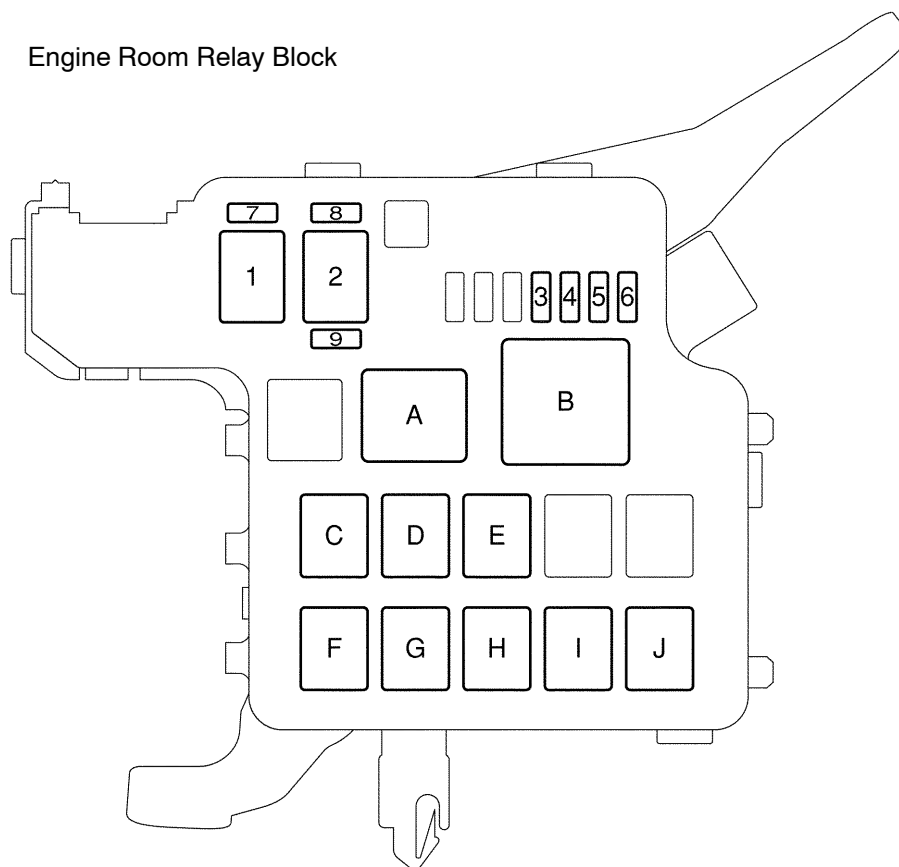


RELAY

A ST	H FAN No. 3
B HTR	I ADJ PDL
C FAN No. 2	J DRL No. 4
D DRL No. 3	
E DRL No. 2	
F A/ F HTR	
G MG CLT	

FUSE

1 ABS No.1	60 A
2 ALT	120 A
3 A/C	10 A
4 DRL	5 A
5 HEAD RH LWR	15 A
6 HEAD LH LWR	15 A
7 SPARE	5 A
8 SPARE	10 A
9 SPARE	15 A

ABS Relay Block Sub-assy

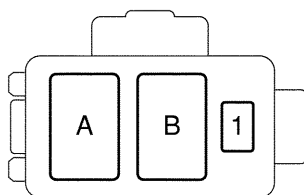


RELAY

A ABS MTR
B ABS SOL

FUSE

1 ABS No. 4	7.5 A
-------------	-------

Instrument Panel Junction Block Assy

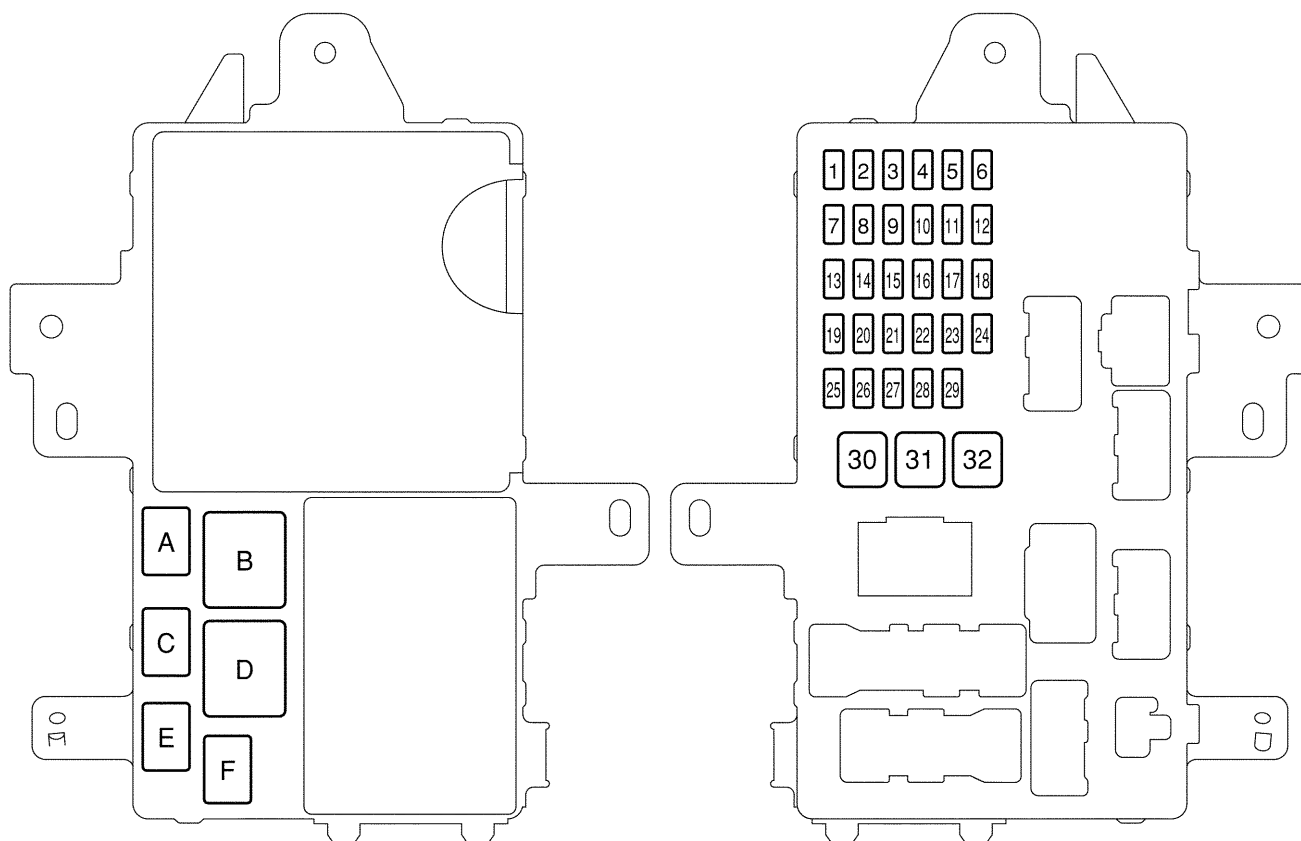

RELAY	FUSE					
A FOG	1 ECU-B	10 A	12 MIR HTR	10 A	23 WASHER	15 A
B RR DEF	2 DOME	7.5 A	13 AM 1	5 A	24 FAN RLY	10 A
C TAIL	3 CIG	15 A	14 FOG	15 A	25 STOP	15 A
D IG 1	4 ECU-ACC	5 A	15 SUN-SHADE	15 A	26 FUEL OPN	5 A
E ACC	5 RAD No. 2	10 A	16 GAUGE 2	10 A	27 DOOR No. 2	25 A
F -	6 POWER POINT	15 A	17 PANEL	10 A	28 AMP	25 A
	7 RAD No. 1	20 A	18 TAIL	10 A	29 PWR No. 3	20 A
	8 GAUGE 1	10 A	19 PWR No. 4	20 A	30 PWR SEAT	30 A
	9 ECU-IG	10 A	20 PWR No. 2	20 A	31 PWR No. 1	30 A
	10 WIPER	25 A	21 OBD	7.5 A	32 DEF	40 A
	11 HTR	10 A	22 SEAT HTR	20 A		