

fingers[®]



Quick Start Guide

PDF



nteClicks WB4

chargeable Wireless + BT Mouse

I. Important - Warnings & Safety Instructions

1. Do not place the mouse near the heat sources such as radiators, fire, stoves, light candles and other apparatus that produce heat.
2. Focus on your safety and that of others. We recommend keeping it dry and not allow the mouse to get wet or exposed to moisture/rain, which may present the possibility of fire or shock to yourself or others
3. Use only those accessories supplied by FINGERS.
4. It is recommended to refer all servicing to qualified personnel. Servicing is required when the keyboard has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

CAUTION

This device contains small parts which are hazardous to children. Keep it away from children of age 3 and under.

 
II. Care and Maintenance

1. Switch off the mouse before cleaning it.
2. Use soft, damp cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings.

III. In the box

- 1 x FINGERS CuteClicks WB4
- 1 x Type-C Charging Cable
- 1 x USB Receiver
- 1 x Quick Start Guide
- 1 x Brand Note

IV. On-board Controls

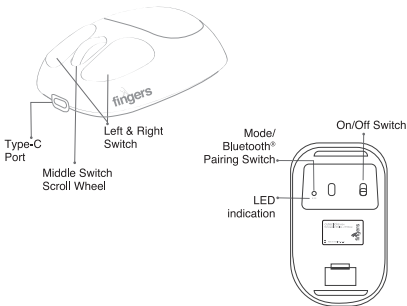

V. Charging

- Plug the Mouse into a USB port using Type-C Charging Cable.
- Allow up to 2 hours for the mouse to fully charge.

Please note: Use only Type-C cable for charging.

VI. Setting up

Step 1: Switch on the Mouse using On-Off Switch on the back.

Step 2: You can use the Mouse by using USB Receiver and Bluetooth modes.

 
1. USB Receiver Mode



- **Step 3a:**
Open the Mouse case and take out the USB receiver.




- **Step 3b:**
Plug the USB receiver into your Laptop/PC.




- **Step 3c:**
Press the mode button on the back until the LED status switches to Red which is USB mode.

You're ready to use!

 2. Bluetooth® Mode



 - **Step 3a:** Press the mode button on the back until the LED Status switches to Blue which is 1st Bluetooth® mode. To connect a 2nd device, press the mode button until the LED Status switches to Green which is 2nd Bluetooth® mode.
- **Step 3b:** Press and hold the mode button to enter Bluetooth® pairing mode.



- **Step 3c:** On your tablet, laptop, smartphone or other Bluetooth®-enabled device, go to the Bluetooth® setting, enable Bluetooth®, find device list and select 'FINGERS CuteClicks WB4'.

Please Note:

- While pressing Mode Button again, USB mode activated where USB receiver is plugged.
- If the mode button is pressed again, it will be activated to Bluetooth® modes.
- 3 Devices can be connected at the same time, i.e. 2 devices via Bluetooth® and 1 device via USB mode.

VII. Product Specifications

Parameters	CuteClicks WB4
Technology	Wireless Optical Technology (2.4 GHz) + Bluetooth® (BT v3.0 & 5.2) with illuminating LED lights
Button	3 + 2 Buttons with Scroll Wheel Buttons - Left Right Middle On-Off Switch Bluetooth
Power Source	In-built battery: 3.7 V, 500 mAh
Charging Voltage:	5 V, 500 mA
Wireless Effective Range	Up to 10 m
Charging Type	Type-C for Charging
Charging Time	Up to 2 hours
Battery Backup Time	Up to 25 days*
Resolution	1200 DPI
Interface	USB/Bluetooth
Switch Life	3 million life cycles
System Requirements	Windows® macOS 8.6 Linux ChromeOS iPadOS Android 11 and above
Dimensions	3.5 (H) x 6.3 (W) x 10.5 (L) cm
Weight	75 g
Colour	Sunshine Yellow Happy White + Teal

fingers.co.in | Ver.1.0.0

 
¹One device can be connected via USB receiver, while other 2 devices can be connected via Bluetooth.

²Tested under ideal conditions and varies depending on usage.


* Images shown may vary from actual product.

* Specifications, features and appearance are subject to change without notice. • All logos, brands, trademarks and product names are properties of their respective owners. • Product warranty is governed by warranty terms mentioned on www.fingers.co.in • This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website www.fingers.co.in

2. Bluetooth® Mode



 - **Step 3a:** Press the mode button on the back until the LED Status switches to Blue which is 1st Bluetooth® mode. To connect a 2nd device, press the mode button until the LED Status switches to Green which is 2nd Bluetooth® mode.
- **Step 3b:** Press and hold the mode button to enter Bluetooth® pairing mode.



- **Step 3c:** On your tablet, laptop, smartphone or other Bluetooth®-enabled device, go to the Bluetooth® setting, enable Bluetooth®, find device list and select 'FINGERS CuteClicks WB4'.

Please Note:

- While pressing Mode Button again, USB mode activated where USB receiver is plugged.
- If the mode button is pressed again, it will be activated to Bluetooth® modes.
- 3 Devices can be connected at the same time, i.e. 2 devices via Bluetooth® and 1 device via USB mode.