 



Small Comfort, Big Health

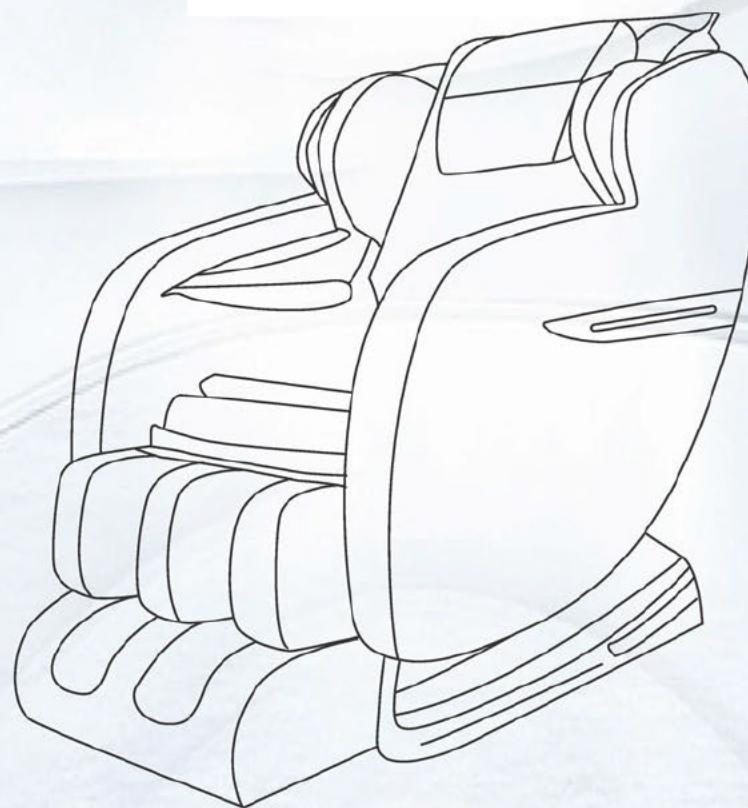

Please check the instructions carefully before use
Please be assured that our massage chair is 100% tested
and inspected before leaving the factory.

Thank you very much for purchasing the Ugears massage chair. This operating manual contains important information about how to use the chair safely and correctly. Be sure that you have read all safety precautions thoroughly before using our massage chair. Please keep this manual nearby so that you can refer to it anytime.

 “**Ugears**” reserves the right to change the product design without notice at any time. Pictures are for reference only and may vary from actual product.

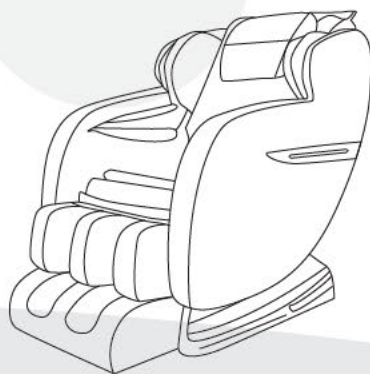

CONTENT

Safety Guidelines-----	01-03
Warranty Clauses-----	04
Product Installation Instructions-----	05-08
Components and Description-----	09
Remote Control-----	10
Operational Guides-----	11
Function Description -----	12
Product Specification-----	13
Troubleshooting-----	14-15
Product Maintenance-----	16



Warning!

Please check all the instructions before using our B-M massage chair. The plug must be fully inserted into an appropriate outlet. Improper connection of the equipment-grounding conductor can result in an electric shock. If you find the outlet is unsuitable, please check with qualified electrician or support center for help.

When using the massage chair, basic precautions should always be followed to reduce the risk of electric shock, an injury or burns to the person.

Please carefully read the following details before usage:



Electrical Alerts

- Be sure to insert the massage chair plug into a proper electrical outlet to avoid the risk of short-circuit or fire.
- Always unplug the massage chair from the outlet immediately after use and before cleaning.
- If the power goes off during use, be sure to turn the power switch to the OFF position and pull the power plug out from the socket to prevent any damages at the time when the power comes back.
- NEVER operate the massage chair if the power cord is wet or damaged and NEVER use wet hands to plug/unplug the power cords
- Do not use accessories and components that are not recommended for this chair
- If the supply is damaged, it must be replaced by a special cord or assembly available from the manufacturer.
- This massage chair is equipped with heating function. **DO NOT** use over insensitive skin area or in the presence of poor circulation.



Other Alerts

- 01** **DO NOT** use the massage chair outdoors and avoid places with direct sunlight or places of high humidity.
- 02** **DO NOT** fall asleep in the chair during a massage.
- 03** **DO NOT** use the massage chair for more than 30 minutes at one time and **DO NOT** massage in a concentrated area for more than 15 minutes. Over-massaging can produce overheating thus giving it a shorter lifespan.
- 04** **DO NOT** use the massage chair after consuming alcohol or massage on swollen or inflamed parts of the body.

Safety Guidelines

The follow persons are requested to consult a doctor prior to use in order to reduce the risk of users feeling sick or suffering from injury:



Those who have malignant illness or suffer from heart disease.



Pregnant women.



Persons with high fever or menstruation.



Persons require complete rest or under medical treatment.



Persons with severe osteoporosis.



People who are heat sensitive.



Children under 12 years old without supervision.



Persons with wet bodies

Warranty Clauses



Warranty Clauses

- Warranty is not transferable and only applicable to the original buyer.
- The warranty is effective only if the product is purchased from Ugears brand.
- The free warranty period is 1 year (12 months) from the date of purchase and the order detail proof is required for all warranty repairs.
- During the free warranty period, the product repair time should be determined according to the actual situation.
- **NOTE:** After the product is repaired, the warranty period will be calculated according to the remaining time of the warranty period, or the warranty period is limited to 100 days. The longer warranty period prevails.
- Warranty does not cover accessories and attachments which do not belong to our massage chair.
- Warranty is not effective to rental, Business, commercial institutional, or other non-residential users.
- All services covered by this warranty must be approved by Ugears and repaired by authorized technicians only.
- During the non-warranty period, users will be charged for product maintenance according to the fee standard stipulated in the "Paid Service Manual".

 
Note: If there is a quality problem, we hope to solve the problem by re-sending the accessories first. If it does not work, we will bear the freight and provide a return label for return after we confirm the issue. However, if the return is caused by the customer's personal reasons and with no quality issue, the customers will bear the freight and arrange a refund after receiving the returned product.

Product Installation Instructions

Compinents



Accessories From Box

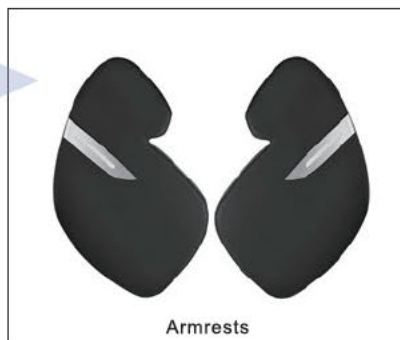

Product Installation Instructions

Installation Instructions-Armrest



Installation Instructions-Cushion



Next, install the seat



Connect the two air plug and the wire firmly.



Next install the chair pad



The chair pad is attached top with a zipper.



Connect the pad wire to the main unit

Moving the chair

1. Restore the footrest to its original position.
2. Recline the chair to tilt approximately 45 degrees. Move the chair using the wheels as the fulcrum.

Installation Instructions-Power Cable



Connect the remote to mainbody.



Install the remote bag to right arm



Put the remote control into the bag.



 
Plug in the main power

Note:


1. Always return the footrest to its original position before moving the chair, otherwise injury during movement may result.
2. Do not move the chair while a person is seated on it.
3. Place a mat on the floor and gently roll the chair over it to avoid damaging the floor.

Components and Description


Chair:

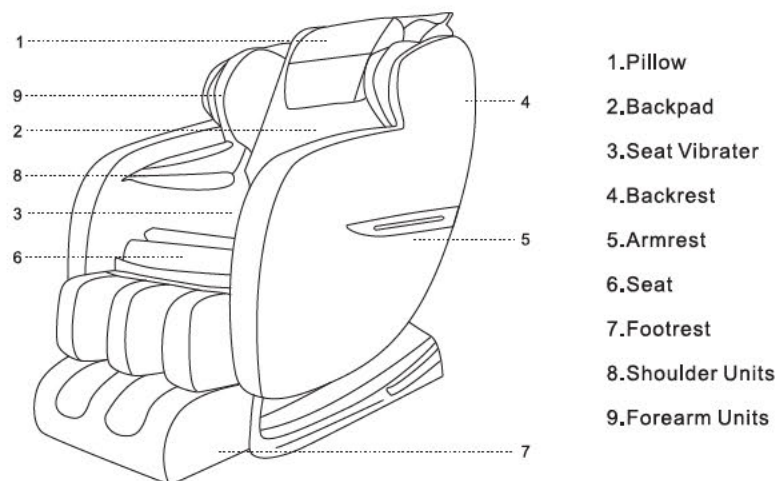

 
- 10. Air Vent
- 11. Specification Label
- 12. Power Supply
- 13. Wheels
- 14. Cord Connector
- 15. Electrical Fuse
- 16. Power Switch

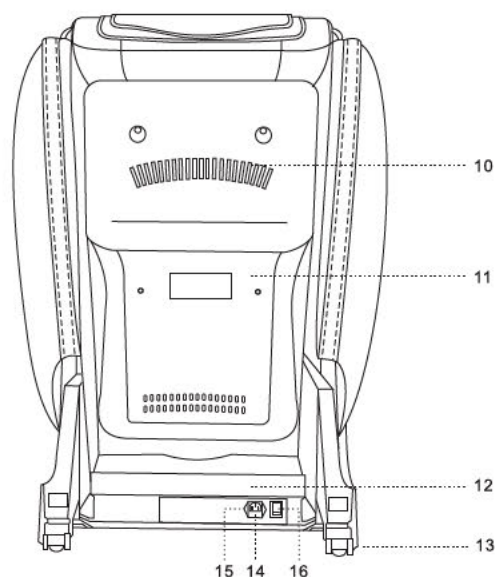

Remote Control

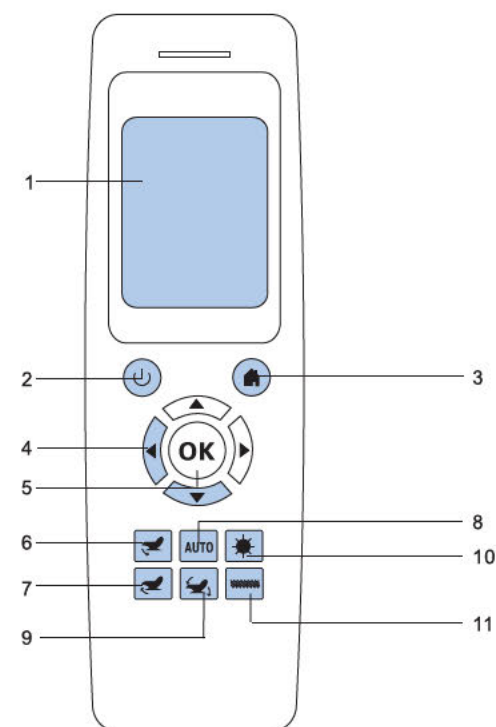 

 - 1. TFT Display
- 2. Power Button
- 3. Menu Button
- 4. Direction Buttons
- 5. OK Button
- 6. Backrest Rise
- 7. Backrest Down
- 8. Auto Mode Selection Button
- 9. One-Button Zero Gravity
- 10. Heater Button
- 11. Seat Vibrate Control ON/OFF Button

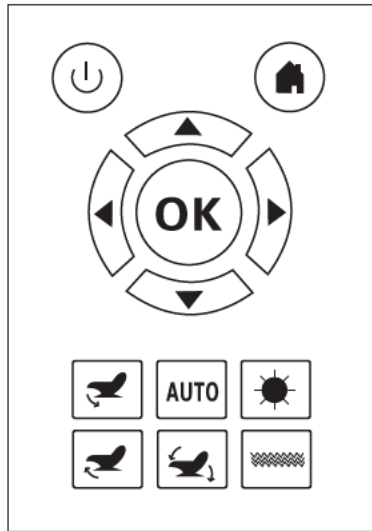

Connect to the cord connector, and then turn the power switch to ON position, chair lights flash and it is in idle mode which means the electric is connected.

Main control buttons for the massage chair:



ON/OFF(START/STOP)Button

Press this button and the LCD screen of remote control will light up and automatically start massaging. Press again the button to stop all massage functions and will return to original position.

When the unit is turned on, it will automatically start to massage.

In automatic mode, the intensity and strength of massaging cannot be adjusted. If you would like to adjust intensity and strength, please select a specific area such as: arm, foot, or shoulders.



Menu Button

Auto program:
Relaxing, mild, strong and sleep mode.

Airbag program:
All airbag: The default mode is auto mode, you can also switch to the "manual" mode
Turn ON/OFF the arm, cushion, leg airbag and adjust the airbag modes.

Manual program:
Neck and waist mode: Kneading/Pushing/Stop
Neck and waist speed: MIX/MAX/MID

Other:
Turn ON/OFF the foot Rollers,
heating and vibration and change the foot roller speed

Setting program:
Timer: 5/10/15/20/25/30 minutes



Backrest/Backrest Rise or Down:

Long press the backrest/footrest up and down to adjusting the reclining angle



One-click Zero Gravity Button:

Click the zero gravity button and you can enjoy the zero gravity position.

When the massage time is finished the unit will return to original position and shut down automatically. Please also turn the power switch to OFF and unplug the cord connector.

Product Specification

Product Specification

Product Name: Ugears B-M massage chair

Model No.: B-M series

Measurement:

Main Unit:43.7" *28.94" *25.79"

Armrest:49.21"*25.59"*10.63"

G.W:

Main Unit:117.95LB

Armrest:440.79LB

Rated Power:100W

Rated Voltage:110V-60Hz

Timer:5/10/15/20/25/30 minutes

Maximum Operating Period: 30 minutes

Usage Condition:

Environment Temperature: 10℃-40 ℃
Contrasting Humidity: 30-85RH

Safety Feature: Equipped with overheated and power surge safety protection

Usage Benefits: Relieving muscular fatigue, alleviate lumbar discomfort, reduce physical and mental exhaustion and stress levels

Trouble Shooting

Trouble Shooting

Issue	Causes	Trouble Shooting
The surface is hot	Continuous or long-term use for more than 4 hours	Shut down and rest for half an hour to one hour
Pause in massage.	Weight is too heavy or the power supply is loose	Remove the load and try again or check the power supply
Controller does not work	Check whether the power switch is turned on	Check the power plug and power socket for connection
The chair does not work	The rated time ends up	Rest for half an hour
	Continuous operation for long time	
	Automatic shutdown by the temperature control protection switch	

QA:

1.The foot roller can not fixed in a position

The footrest unit will automatically extend to suit taller individuals.

However, The stretchable design of the footrest is not in a fixed position. And we do not recommend forcibly stretching the legs during the massage. If the excessive force in the legs will not achieve the effect of relaxing massage and may cause injuries.

2.Too strong or weak Intensity and strength

The massage intensity and strength was adjusted according to the local US customers and we did massive tests to view the results and then finally produced this massage chair. In addition, the intensity and strength of our massage chair is lower than that of products in the same industry.

3.Do not know how to do the zero gravity without massaging

Go to menu—airbag section: turn off all buttons and the manual: close neck and waist mode—long click the back-rest/footrest up or down to enjoy the zero gravity position.

* **Note:** If there are any abnormal issues, please close the massage chair and contact the local distributor or support center.

Maintenance

- Do not use chemical base cleaning detergent to clean the surface of the chair. Use a piece of soft, dry cloth to clean the chair.
- Unplug the cord connector after massage is finished.
- Press the controller's buttons with gently during operations avoid hitting with hard object.
- Do not use the chair when the power socket is loose.

If the chair is not used for a long time, the power cord should be rolled up and the chair should be stored in a dry and dust free environment.

- The chair can only be repaired by the service center designated by the manufacturer. Users cannot disassemble or repair the chair without permission.
- The mechanical parts and components of this chair are specially designed and manufactured to be used straight out of the box. It is maintenance free and does not need any adjustments or lubrication to its part.
- Avoid sharp objects near the chair.
- Do not roll or drag the chair on uneven ground. It should be lifted when moving.