

CTIONS / (FR) MODE D'EMPLOI / (DE) ANLEITUNG / (NL) INSTRUCTIES /
CIONES / (IT) ISTRUZIONI / (PT) INSTRUÇÕES / (DK) BRUGSANVISNING /
KSJONER / (FI) OHJEET / (SE) INSTRUKTIONER

The diagram illustrates the removal of the battery cover and the disposal of the old batteries. It shows the back of the device with the battery cover being lifted off. Below the cover, two AA batteries are shown with the label "(x2) 'AA'". The main body of the device is shown with four AA batteries inserted into the battery compartment. Below the device, four AA batteries are shown with the label "(x4) 'AA'". A hand is shown inserting a new battery into the compartment. Finally, a wire is shown being inserted into a disposal bin, indicating that the old batteries should be disposed of properly.

2.6 GHz

(EN) CONTROLLER (48024X2): x2 1.5V AA (R6LR6) BATTERIES REQUIRED (NOT INCLUDED)
SONIC SPEED RC (48024X2): x1 1.5V AA (R6LR6) BATTERIES REQUIRED (INCLUDED)

(ES) CONTROLLER (48024X2): x2 1.5 V AA (R6LR6) BATERÍAS REQUERIDAS (NO INCLUIDAS)
SONIC SPEED RC (48024X2): x1 1.5 V AA (R6LR6) BATERÍAS REQUERIDAS (INCLUIDAS)

(FR) MANETTE (48024X2): x2 1.5 V AA (R6LR6) BATTERIES REQUIÉRENT (NON COMPRIS)
SONIC SPEED RC (48024X2): x1 1.5 V AA (R6LR6) BATTERIES REQUIÉRENT (INCLUSES)

(DE) FERNSTEUERUNG (48024X2): x2 1.5 V AA (R6LR6) BATTERIEN VERFORDERT (NICHT MIT GELIEFERT)
SONIC SPEED RC (48024X2): x1 1.5 V AA (R6LR6) BATTERIEN (BEGLEITEND)

(IT) MANIGLIA (48024X2): x2 1.5V AA (R6LR6) BATTERIE (NON INCLUSE)
SONIC ULTRA VELOCITÀ RC (48024X2): 6 PILAS AA (R6LR6) DE 1.5 V (INCLUIDAS)

(RU) УПРАВЛЕНИЕ (48024X2): 2 шт. 1.5 В АА-БАТТЕРИИ (R6LR6) (НЕ ВКЛЮЧЕНЫ)
SONIC SPEED RC (48024X2): 6 шт. 1.5 В АА-БАТТЕРИИ (R6LR6) (ВКЛЮЧЕНЫ)

(PL) STYKOWNIK (48024X2): x2 1.5V AA (R6LR6) BRUKER BATTERIER (IKKE INKLUDERT)
SONIC SPEED RC (48024X2): x1 1.5V AA (R6LR6) BRUKER BATTERIER (INKLUDERT)

(NL) STYRETOEG (48024X2): x2 1.5V AA (R6LR6) BATTERIEN (NIE INGESLOTEN)
SONIC SPEED RC (48024X2): x1 1.5V AA (R6LR6) BATTERIEN (INGESLOTEN)

(DK) FJERNSTYRING (48024X2): 2 ST. 1.5 V AA-BATTERIER (R6LR6) KRÆVES (MEDFØLGER INTE)
SONIC SPEED RC (48024X2): 6 ST. 1.5 V AA-BATTERIER (R6LR6) (MEDFØLGER)

(FR) MANETTE (48024X2): NÉCESSITE 2 PILES TYPE AA/R6LR6 (1.5 V) (NON COMPRIS)
MANETTE RADIOCOMMANDÉ VITESSE SONIC (48024X2): NÉCESSITE 6 PILES TYPE AA/R6LR6 (1.5 V) (COMPRIS)

(DE) FERNSTEUERUNG (48024X2): x2 1.5 V AA (R6LR6) BATTERIEN VERFORDERT NICHT MIT GELIEFERT
SONIC SPEED RADIOCOMMANDÉ VITESSE (48024X2): x6 1.5 V AA (R6LR6) BATTERIEN (BEGLEITEND)

(IT) RADIOCOMANDO (48024X2): INCHIEDI BATTERIE AA (R6LR6) DA 1.5 V (NON INCLUSE)
VEICULO RADIOCOMANDATO SONIC SPEED (48024X2): BATTERIE AA (R6LR6) DA 1.5 V (R6LR6) (INCLUSE)

(RU) СТИКОВИК (48024X2): x2 1.5V AA (R6LR6) БРАУКЕР БАТТЕРИИ (ИККЕ ИНКЛУДЕРТ)
СТИКОВИК СТИКОВИК (48024X2): x1 1.5V AA (R6LR6) БРАУКЕР БАТТЕРИИ (ИНКЛУДЕРТ)

(PL) DSIAM (48024X2): x2 WADTAA 1.5 V AA (R6LR6) (R6LR6) (R6LR6) (DE) MUKANA
SONIC SPEED RC (48024X2): x1 1.5 V AA (R6LR6) (R6LR6) (R6LR6) (DE) MUKANA

EN Contents:

- 1 Figure and RC
- 1 Remote

ES Contents:

- 1 Figura y vehículo teledirigido
- 1 Control remoto

NO Contents:

- 1 Figur og radiostyr til
- 1 Fjernkontrol

FR Contenu:

- 1 Figurine et véhicule radiocommandé
- 1 Manette

DE Content:

- 1 Personaggio e veicolo radiocomandato
- 1 Radiocomando

IT Contenu:

- 1 Figurina da Kaeko-ohjattava auto
- 1 Kauko-ohjain

RU Content:

- 1 Figur och RC
- 1 Fjärrkontroll