


CLEANING AND REPLACING THE FILTERS


CLEANING FILTERS

Regularly rinse and replace the filters to maintain your vacuum's suction power. To prevent damage from cleaning them only, insert them with cold water only. Allow all filters to dry for at least 24 hours before reinstalling them to prevent liquid from being drawn into electric parts.

IMPORTANT! DO NOT use soap when cleaning the filters.

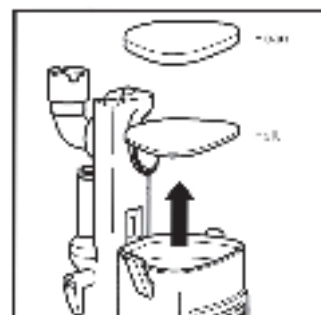

CLEAN PRE-MOTOR FILTERS EVERY 3 MONTHS
Remove the dust cup from the unit and the Pre-Motor Filter.

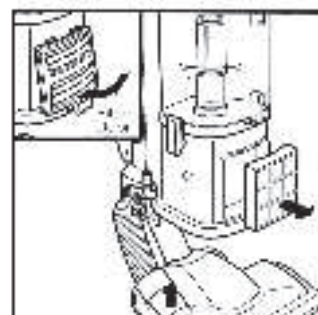


RINSE HEPA FILTER EVERY YEAR
To access the HEPA Filter, press the button on the bottom of the Filter Door and lift it off. Pull out the HEPA Filter. To reinstall, insert the HEPA Filter into the slot and replace the Filter Door.

REPLACING FILTERS

Follow the procedures instructions for removing filters. The Pre-Motor Filter should be replaced every 3 months. The HEPA Filter should be replaced every 3 years.




Replacement
Pre-Motor Foam &
Felt Filter Kit

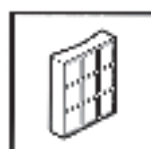


Replacement
HEPA Filter

CLEANING THE BRUSHROLL

When your brushroll needs cleaning or blocks up an object, it will automatically shut down. The indicator light will turn blue red, warning you to turn off the vacuum and clear the blockage. Immediately. The light will flash once the blockage has been cleared and the power has been reset or will blink if the vacuum has been blocked for a long time.

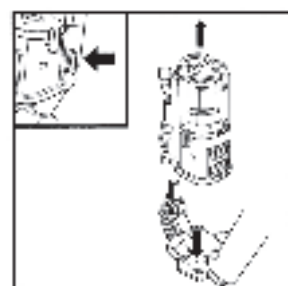


Detach the vacuum floor nozzle from the cord.

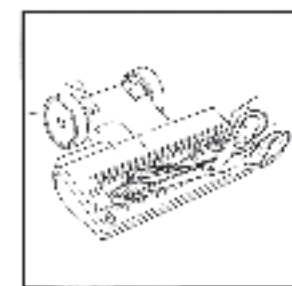

Remove the brushroll and the brushroll. Remove any debris build-up. With scissors, carefully cut away any fibers or hair wrapped around the brushroll. Avoid damaging or cutting the brushroll. Avoid damaging or cutting the brushroll.

CORD MAINTENANCE

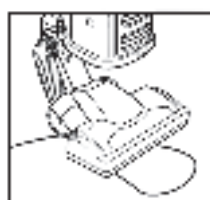

1. **DO NOT** pull or carry vacuum cleaner by the cord or use cord as a handle.
2. **DO NOT** trip by pulling on the cord. Grasp the plug, not the cord.
3. **DO NOT** close the door on the cord.
4. **DO NOT** pull the cord around sharp corners.
5. **DO NOT** leave the cord near heated surfaces.

To minimize the risk of power cord damage, **DO NOT** run the vacuum over the power cord. If this occurs, immediately shut off power to the vacuum and remove the cord from the brushroll or nozzle.

CHECKING FOR BLOCKAGES



WAND BLOCKAGES
Detach wand from floor nozzle and handle, and check each wand for blockages.




NOZZLE BLOCKAGES
Detach the hose. Pull the bottom of the neck out of the connecting, and release the top of the hose by squeezing the tabs together. Check the hose and the openings for blockages.



HANDLE/HOSE BLOCKAGES
Detach handle from wand and hose from the vacuum pod, and check openings for blockages.



DUST CUP BLOCKAGES
Detach dust cup from vacuum pod. Empty just the removable dust from the vacuum, and check for blockages in rear inlet.

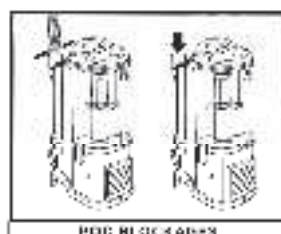

POD BLOCKAGES
Detach hose from the vacuum pod, and check openings for blockages.



POD BLOCKAGES
Detach dust cup from the vacuum pod, and check openings for blockages.

TROUBLESHOOTING

Power cord caught in brushroll or floor nozzle.

- To minimize the risk of power cord damage, **DO NOT** run the vacuum over the power cord. If this occurs, immediately shut off power to the vacuum and remove the cord from the brushroll or nozzle.
- Inspect power cord and plug for any damage before use. **DO NOT** use vacuum cleaner with a damaged cord or plug. Turn off all controls before unplugging or unplugging the vacuum cleaner. Stop vacuum cleaner with the power cord secured around the two cord hooks.

Vacuum is not picking up debris. No suction or light suction.

- Check the canister if they need cleaning. Follow instructions for rinsing and re-installing the filter before reinstalling.
- Dust cup may be full; empty dust cup.
- Check for blockages in the hose, hose connections, nozzle, wand, pod or accessories. See "Checking for blockages" section for more information.

Vacuum lifts area rugs.

- Make sure "New/Full" indicator is set to "Empty Full" indicator.
- Turn on to power. Take care when vacuuming area rugs or rug with a heavily worn edge.
- To minimize suction, set the suction control dial to "High". See the Suction Control section for more information.

Brushroll does not spin.

- If the Brushroll Indicator Light turns red, immediately turn off and unplug the vacuum. Remove pod from floor nozzle and clean any blockages. Reconnect pod to plug in vacuum and turn on power.
- With the power on, use the brushroll On/Off button to turn the handle, which will automatically turn on the brushroll.

Vacuum turns off on its own or Indicator Light flashes red.

If your vacuum overheats, the thermostat will automatically turn off the motor. Follow these steps to restart:

1. Turn vacuum off and unplug it.
2. Empty dust cup and clean filter (see Emptying the Dust Cup and Cleaning the Filter).
3. Check for blockages in hose, wand, nozzle, accessories, and inlet openings.
4. Allow unit to cool for a minimum of 30 minutes.
5. Plug in vacuum and turn it on.

For all other issues, please contact a service center.

Printed in Mexico

Sc: 27 - 10 - 2022

Pgs.:TAB

Obpn: CU520_IB_E_MP_Mv1_220207

Shmnd: CU520_BP

Elbrd: J.E.



8 0 4 1 0 6 9 4 7

 


Please be sure to read the enclosed Shark® Owner's Guide prior to using your unit.

QUICK START GUIDE

WHAT'S INSIDE:

- ⓐ Vacuum Pod
- ⓑ Motorized Floor Nozzle
- ⓒ Wand
- ⓓ Handle & Hose
- ⓔ Crevice Tool
- ⓕ Dusting Brush




ASSEMBLY

1. Place the Vacuum Pod onto the Floor Nozzle Post.
2. Insert the Wand into the pod.
3. Connect the Handle to the top of the wand.
4. Connect the Hose to the back of the pod.

For proper operation, ensure all parts are fully clicked into place.

"NOTE: Accessories may vary depending on the model. The images shown here are for illustration purposes only and not a replacement image."

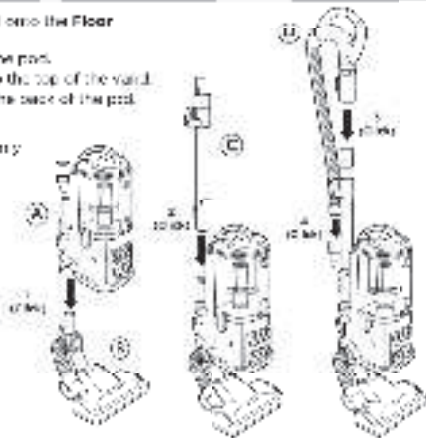

Printed in Mexico

Sc: 27-10-2022 / Elbrd: J.E.

Pgs.:0.5P / Obpn: N/A

Shmmdl: CU520_B

804006947

