

WARRANTY STATEMENT

Amkette EvoFox Katana X2 TKL Gaming Mechanical Keyboard is backed by a 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced at its discrete under the following conditions:

The warranty applies to the original purchaser. Proof of original purchase is required.

The warranty does not cover the damage caused by misuse, abuse or improper storage.

In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

CUSTOMER CARE CENTER

Amkette House, C-64/4, Okhla Phase – II, New Delhi – 110020

 
1800-11-9090 (Toll Free) (9:30 AM – 6:00 PM) +91 9312691448 (9:30 AM – 6:00 PM) techsupport@amkette.in

For Hassle Free Service Register Your Product

www.amkette.com/register



KNOW YOUR KEYBOARD

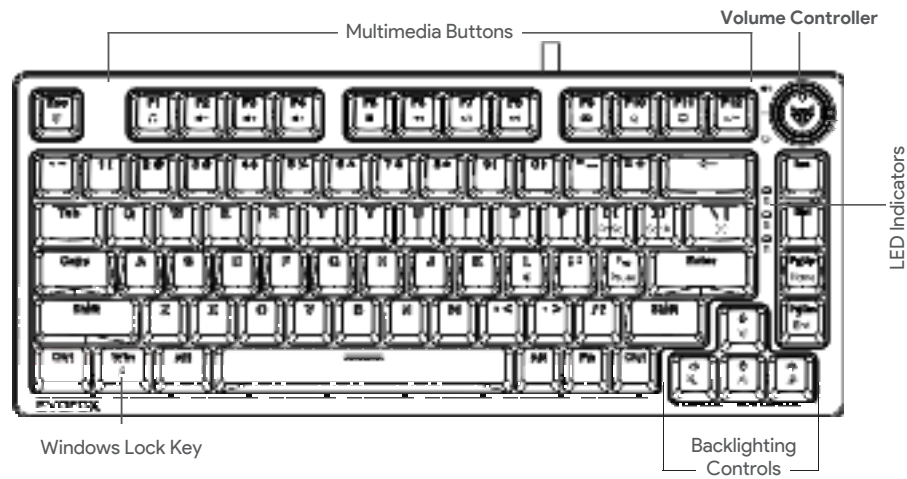

WHAT'S IN THE BOX

Katana X2 TKL Gaming Keyboard, 2x Outemu Switches, Key Puller, Quick Start Guide

-2-



-7-

SPECIFICATIONS

LONG LASTING OUTEMU BLUE SWITCHES

Key Life	50 Million
Actuation Distance	1.80 mm
Actuation Force	60 ±15gf
Total Travel Distance	4.0mm

Keyboard Type	Mechanical Keyboard (USB)	Volume Controller	For Adjusting Volume Levels
Switch Type	Swappable Outemu Blue Switch	Windows Lock	YES
No. of Keys	81 Keys	Cable Length	1.5m Braided Cable with EMI Ring
Backlighting	Rainbow	Keyboard Dimension	320 x 135 x 35 mm
Anti-Ghosting	26 Keys Anti-Ghosting	Weight	615g
Height	2 Level Adjustable		

SYSTEM REQUIREMENTS




Keyboard - Windows, MAC, Linux etc

-6-

BACKLIGHTING CONTROLS


LED Effects FN + [Icon]	To Reset Backlighting Controls FN + Esc	Knob Light Control FN + [Icon]
Increase LED Brightness FN + [Icon]	Decrease LED Brightness FN + [Icon]	Increase LED Effect Speed FN + [Icon]
		Decrease LED Effect Speed FN + [Icon]

 26 ANTI GHOSTING KEYS

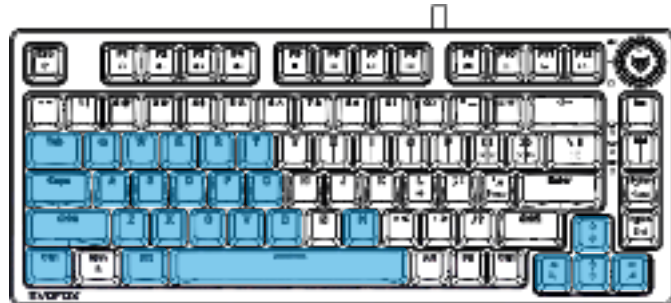

-3-

 MULTIFUNCTION VOLUME CONTROLLER

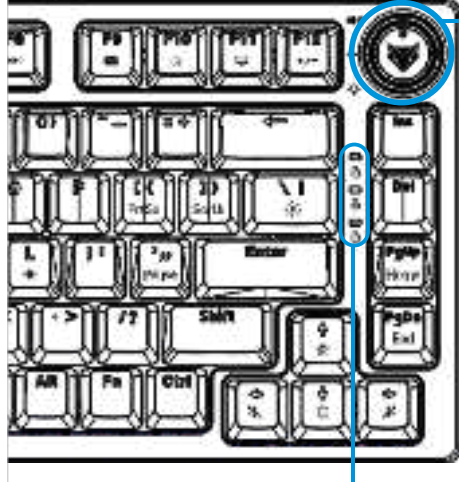

FOR VOLUME CONTROLS: Default Mode

Clockwise	Increase Volume
Anti-Clockwise	Decrease Volume
Single Press	Mute

FOR BRIGHTNESS LEVEL CONTROLS: Long Press to Activate

Clockwise	Increase Brightness
Anti-Clockwise	Decrease Brightness
Single Press	Change Modes

KEYBOARD LED INDICATION


[Icon]	CAPS LOCK - Caps Lock Key
[Icon]	WINDOWS LOCK - Fn+WIN Key
[Icon]	SCROLL LOCK - Fn+ScrLk Key

-4-

HOW TO SWAP KEYS & SWITCHES


STEP-1

 Use the Key Cap Puller to gently remove the desired Key Cap.

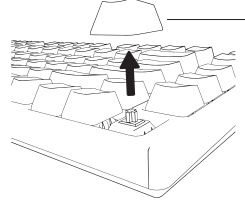

STEP-2

 
Remove the existing Switch using the Switch Puller. Ensure to orient the Switch Puller so as to engage the clips on the Switch.

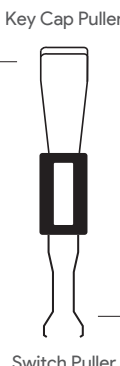

Scan this QR code to access the video manual on switch replacement.


STEP-3

 Place the Replacement Switch in the same orientation as the removed Switch, ensuring that the Legs are not being bent. Press down firmly.

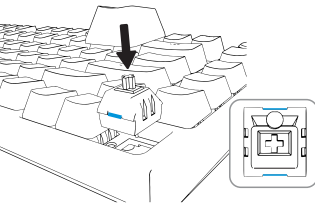

STEP-4

 Place the removed Key Cap back on to the replaced Switch and press down firmly.

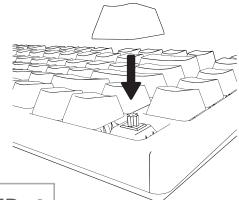

-5-