

# DIGITAL LOCK GUIDE

---

## Introduction

- 1-8 digit user code
- 87,380 possible codes
- User code is stored when battery power is lost or removed
- One year battery life
- Short warning tone for low battery

## Function

- **Resident Lock** - Enter user code and it remains until reset
- **Guest Lock** - Enter user code to lock and unlock only once

## Battery installation

1. Slide battery cover open and place battery in holder
2. Confirm proper battery installation
  - Press numbers on touch pad
  - Listen for beep
  - Look for LED indicator light

## Troubleshooting

---

### Lost or forgotten code

- Use a master key to reset your lock
- You may also contact Watson and provide the serial number found on the right side of the lock. You will receive a master code that is specific to your lock

### Low battery

- Three beeps indicate low battery, Replace with CR2032 lithium battery


### Dead Battery

- Replace battery with CR2032 lithium battery
- If you do not have a spare battery, you may temporarily power the lock by plugging in a powered Micro USB and enter your code

## Resident Lock

---


### To set a new code

1. Turn knob to 
2. Enter current code  
(factory default is 123123)
3. Press OK twice
4. Enter new code (1 to 8 digits)
5. Press OK  
(Beep confirms new code)

### To lock

1. Turn knob to 


### To unlock

1. Enter code
2. Push OK  
(Beep confirms entry)
3. Turn knob to 

## Guest Lock- Single Use

---

### To set a new code

1. Enter new 6 digit code
2. Turn knob to 

### To unlock

1. Enter code  
(Beep confirms new code)
2. Turn knob to 