 


# TONSTAD

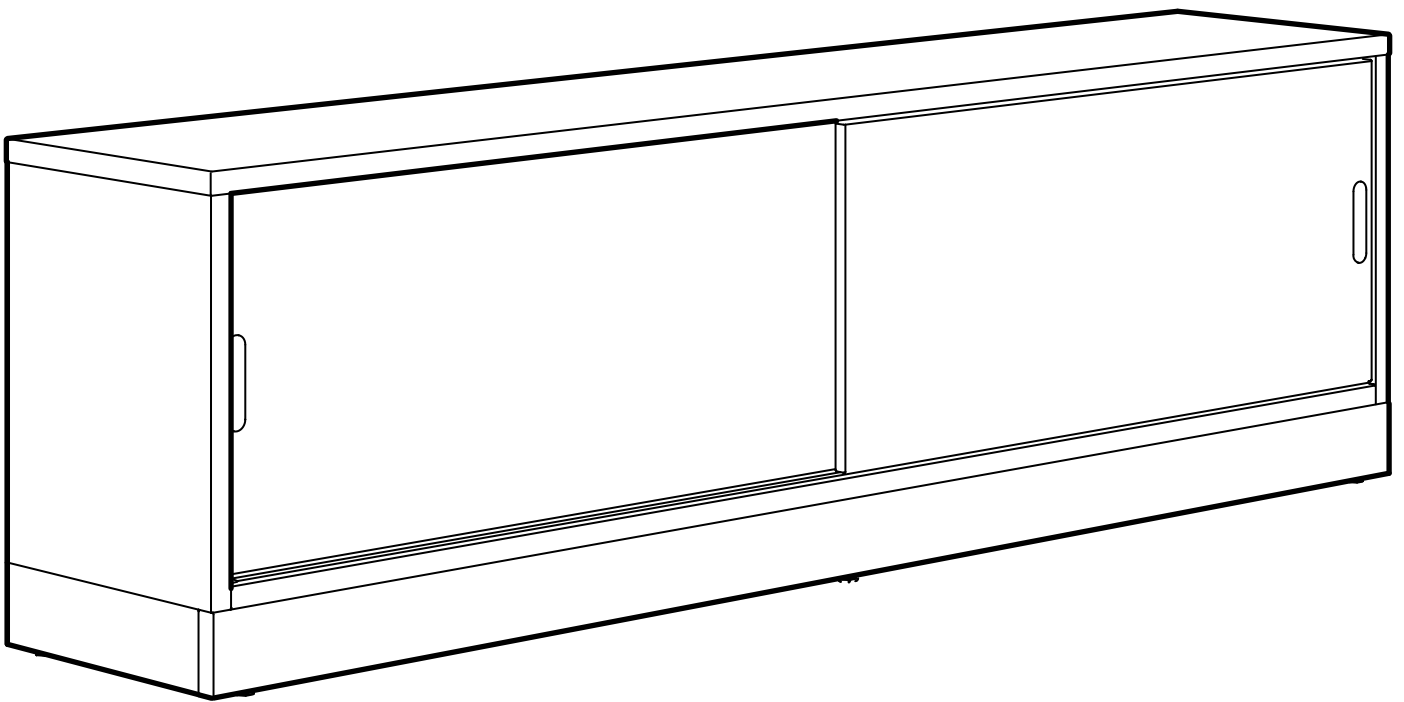

Design and Quality  
IKEA of Sweden



English

## WARNING

**Children have died from furniture tipover. To reduce the risk of furniture tipover:**

 
 
 
ALWAYS install anti-tip device provided.

 
 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

ALWAYS secure your television with an anchor device.


English

Read and follow each step of the instruction carefully.

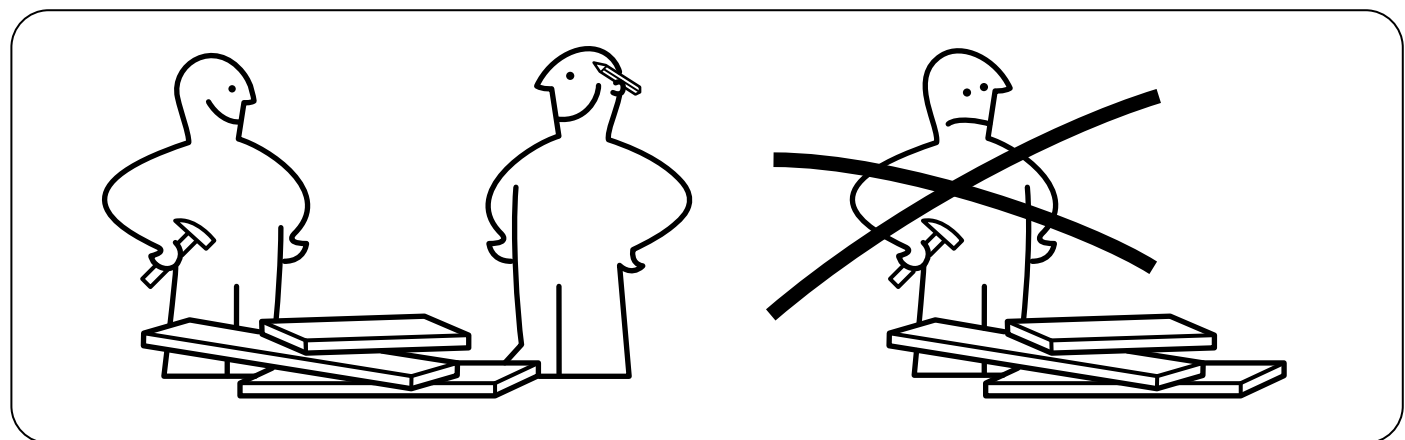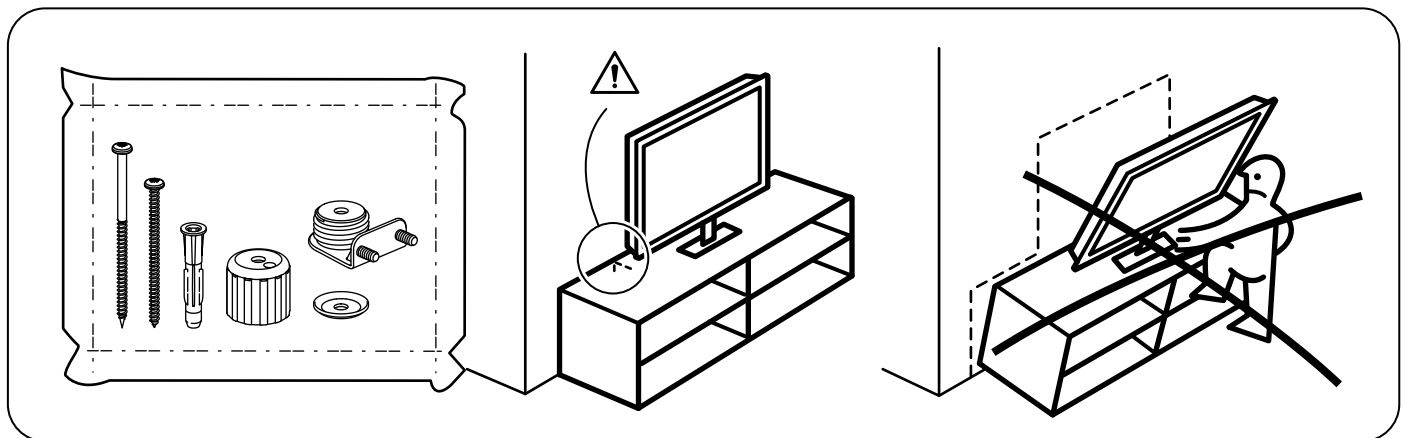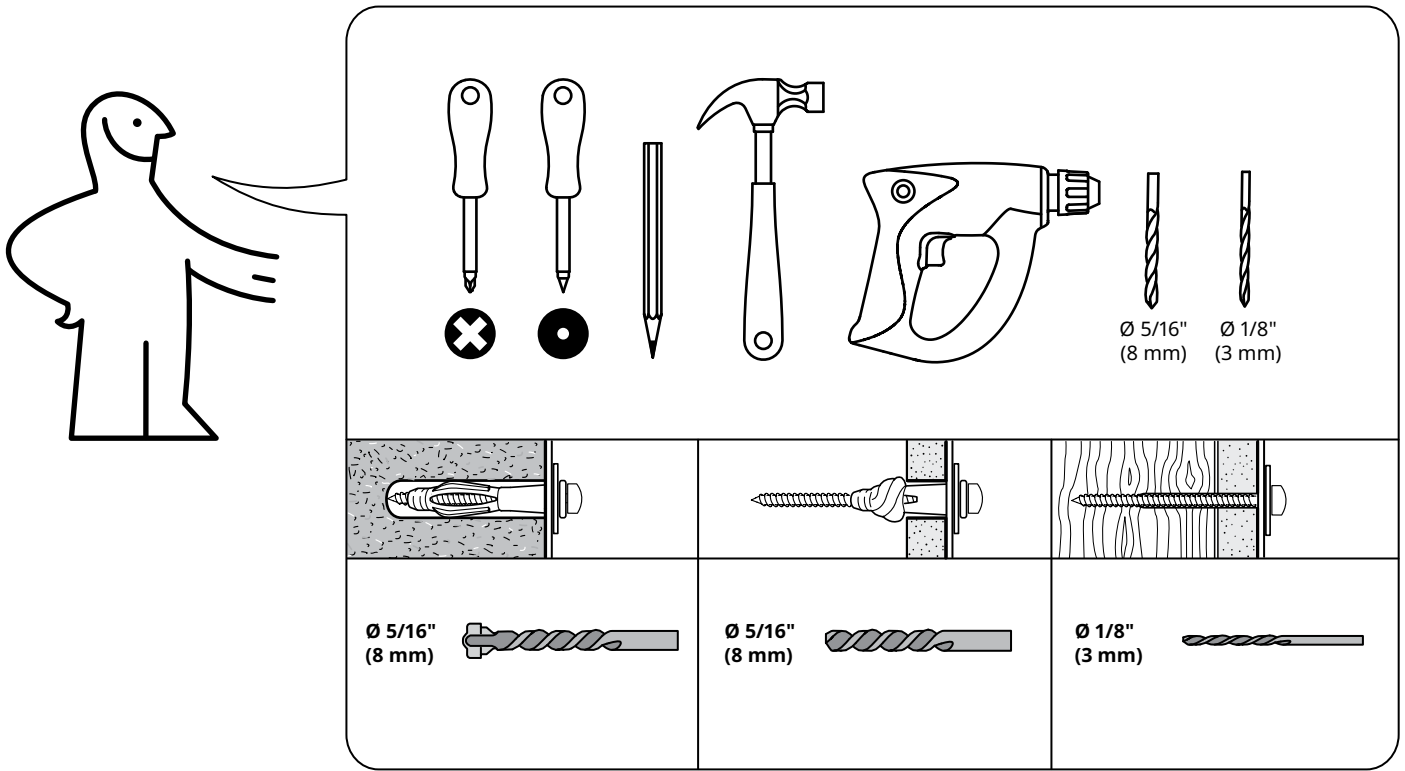

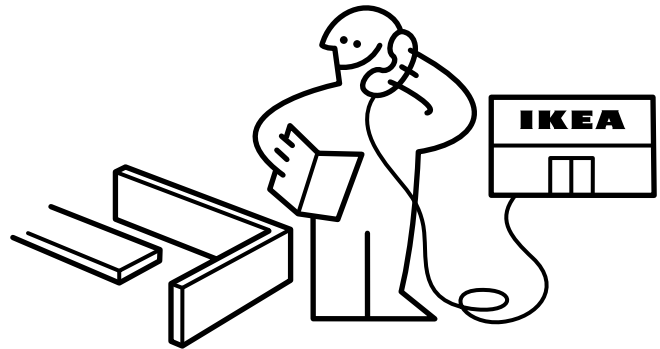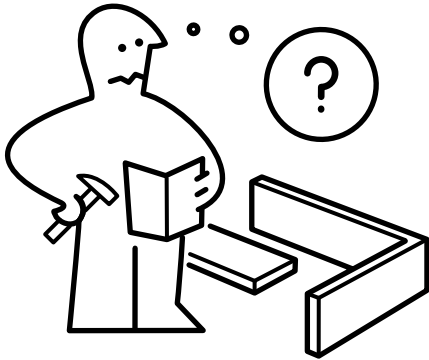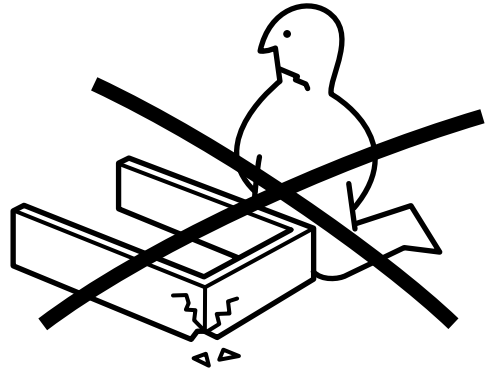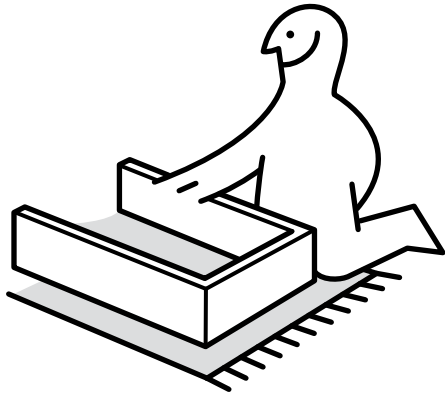


# 1

 

100211

 6x




109504

8x




146114

 4x




151707

 9x



151708

 9x

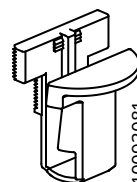


10093081

5x




10093082

 5x

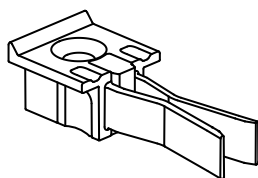


10094664  
10094662

 8x

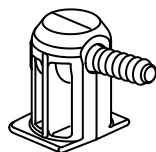


10092248  
10092282

 16x

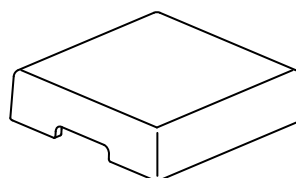


133194  
126918

 2x

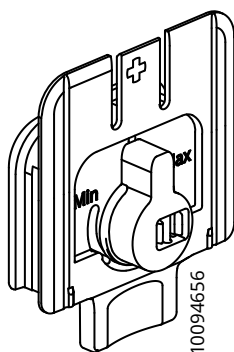


10094656

 4x

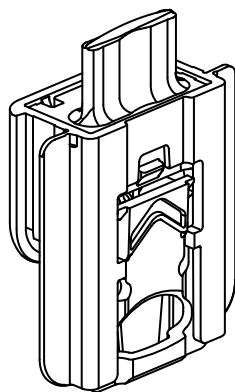

10094681

 
4x

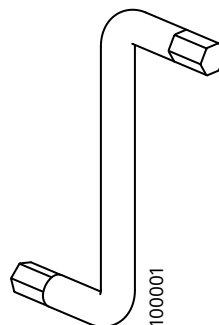


100001

1x


# 2

 


6x

 


8x

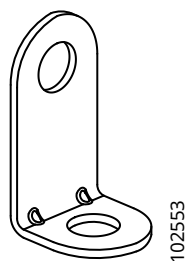 


5x

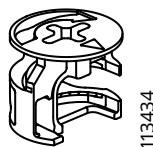 


6x

 


10x

 


10x

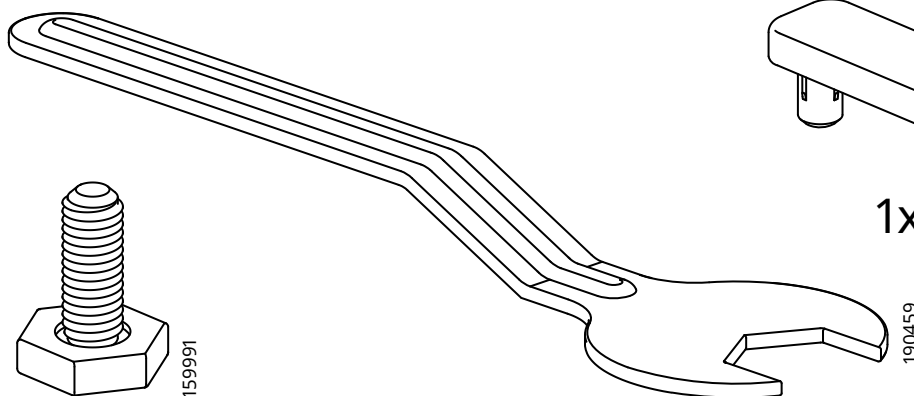 


1x

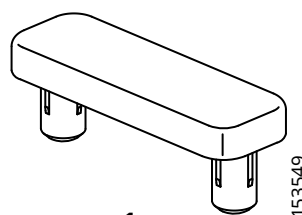 


1x

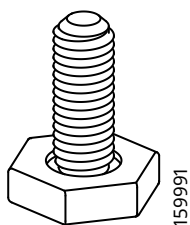 


5x

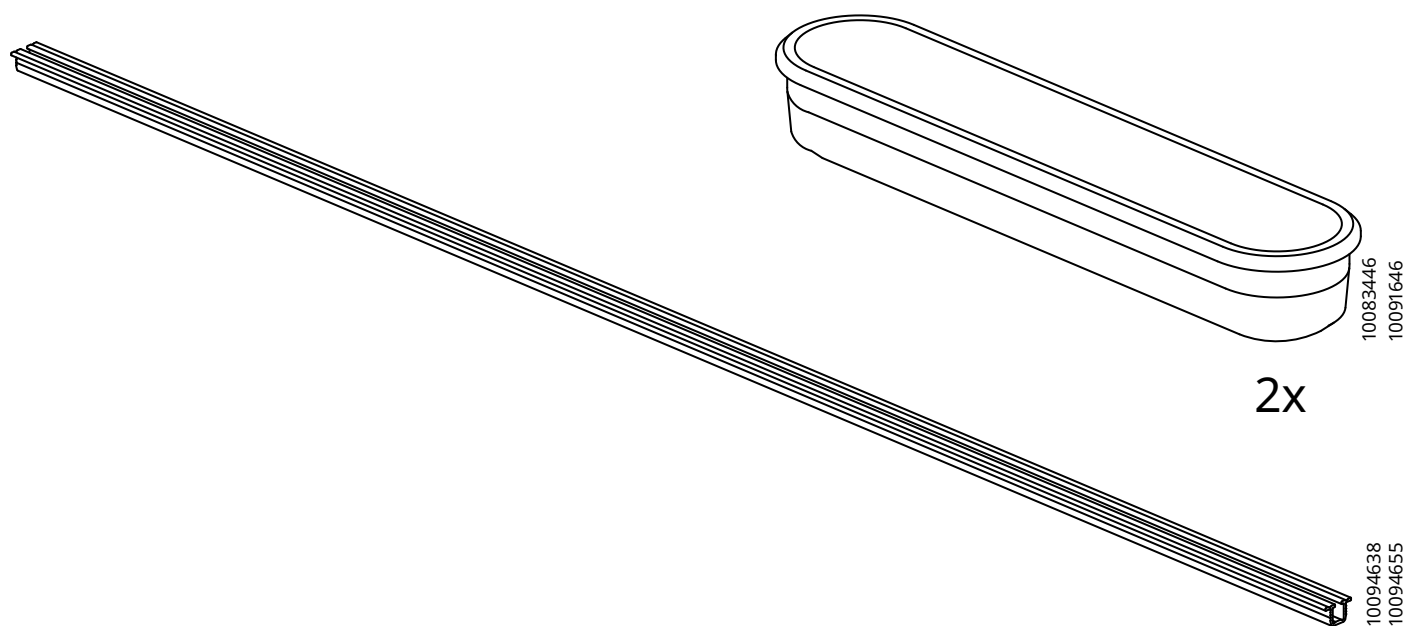 


4x

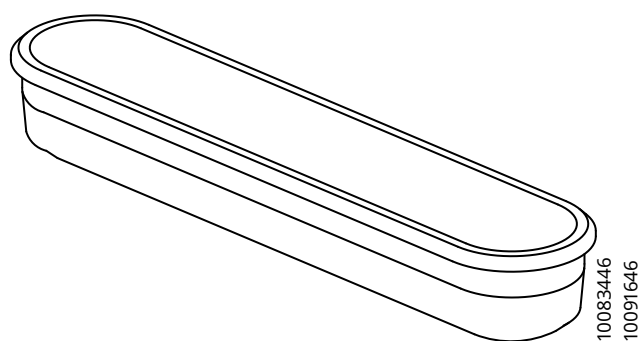 


2x

 


2x

 


2x

 


2x

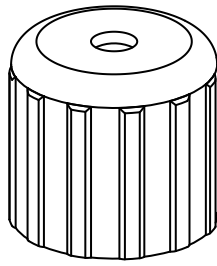 

2x

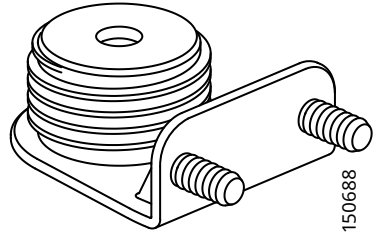 


2x

 


2x

 
1

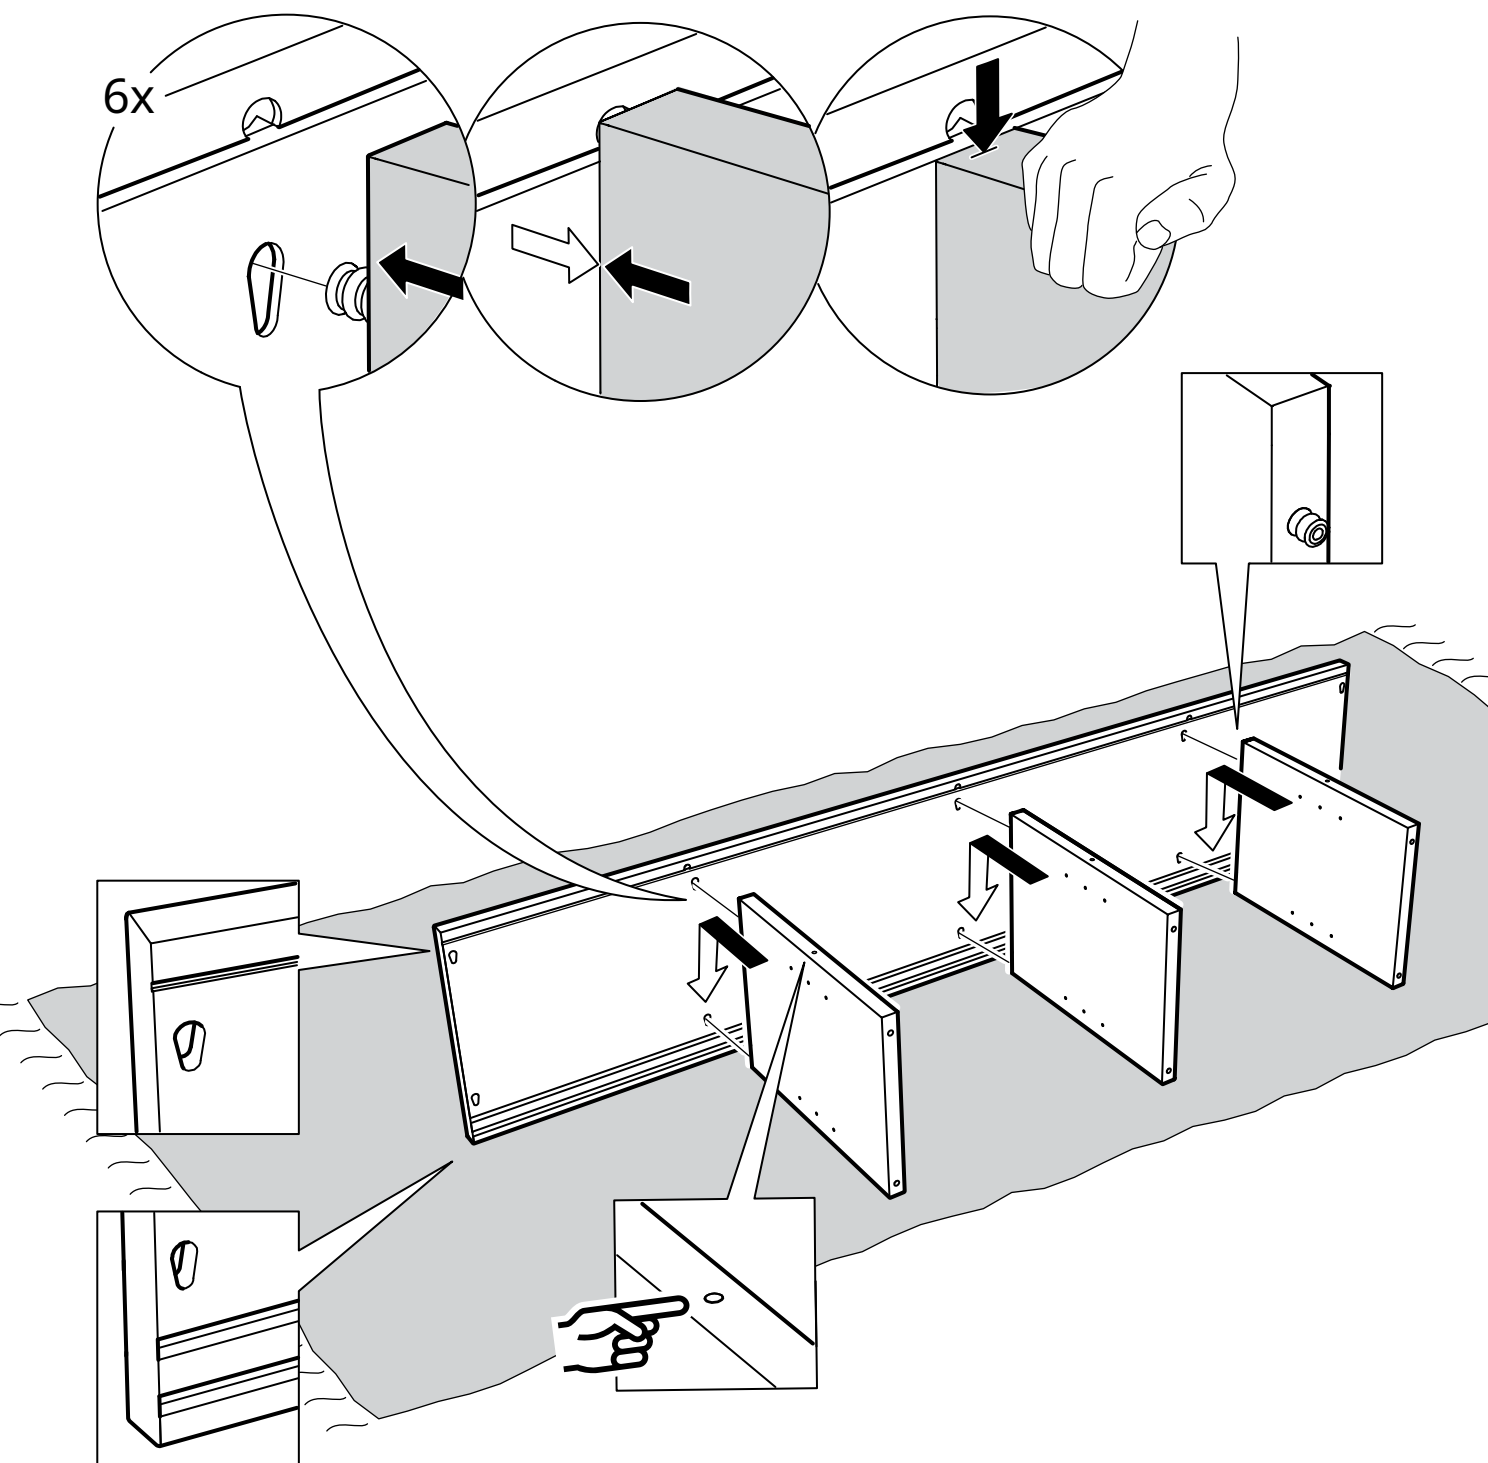


2

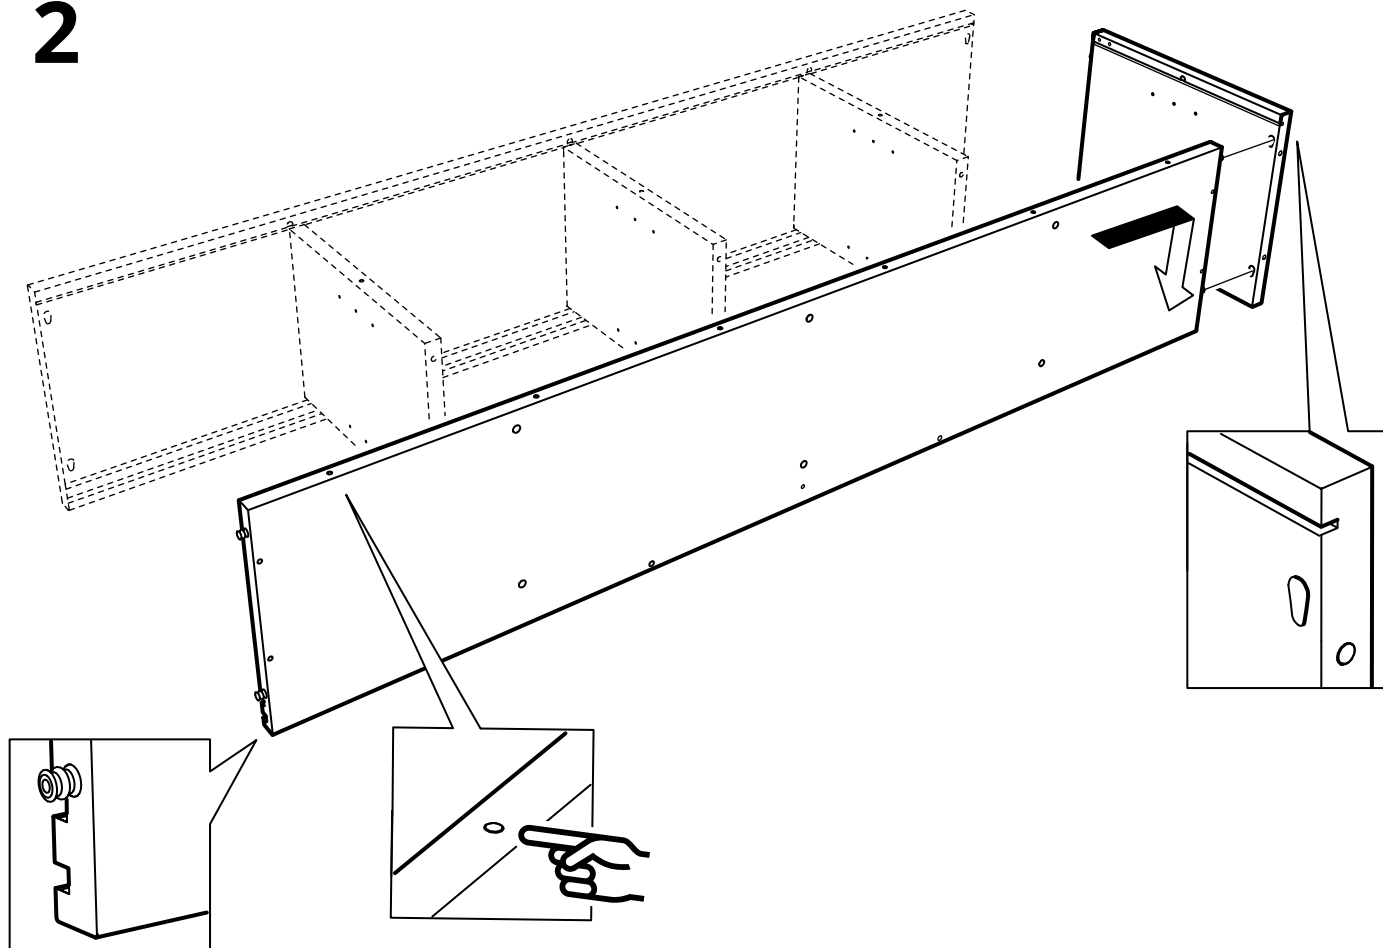 


3

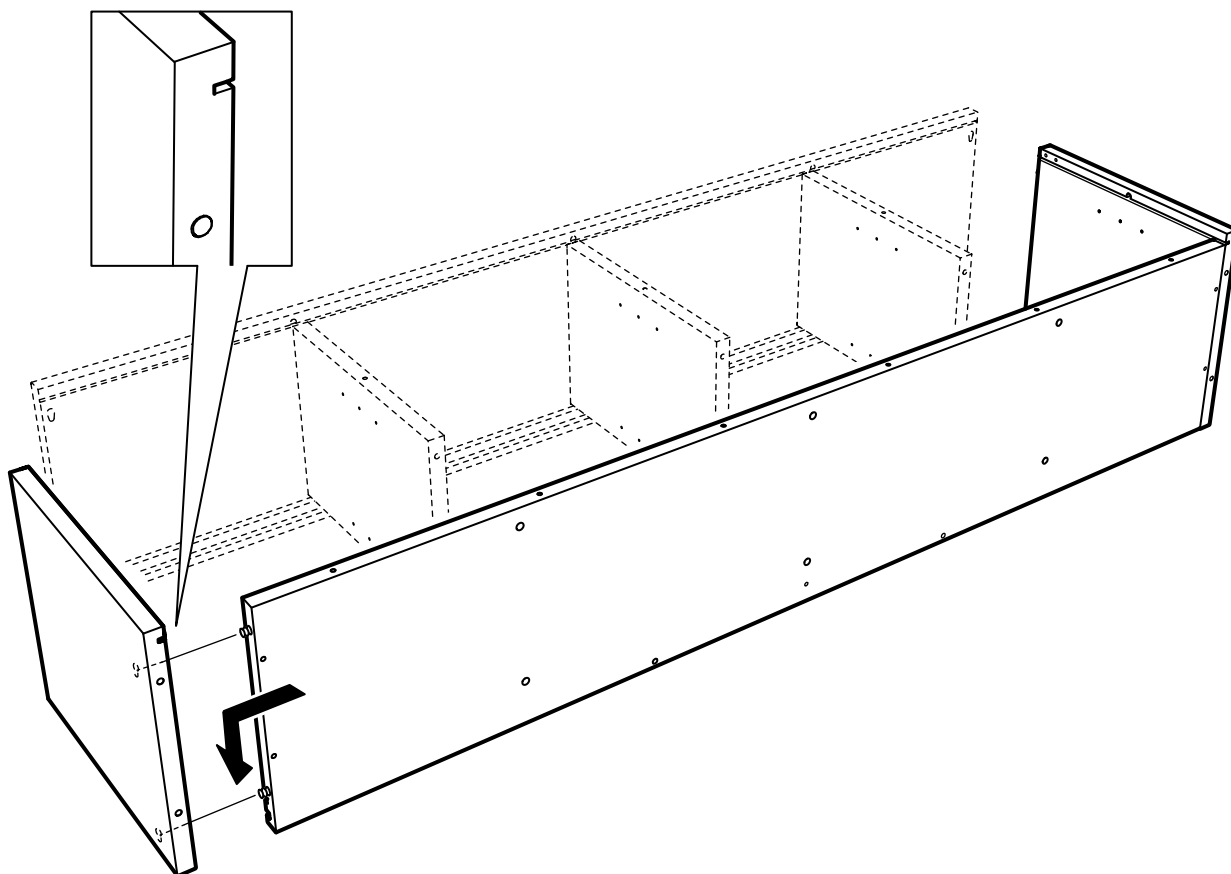 


# 4

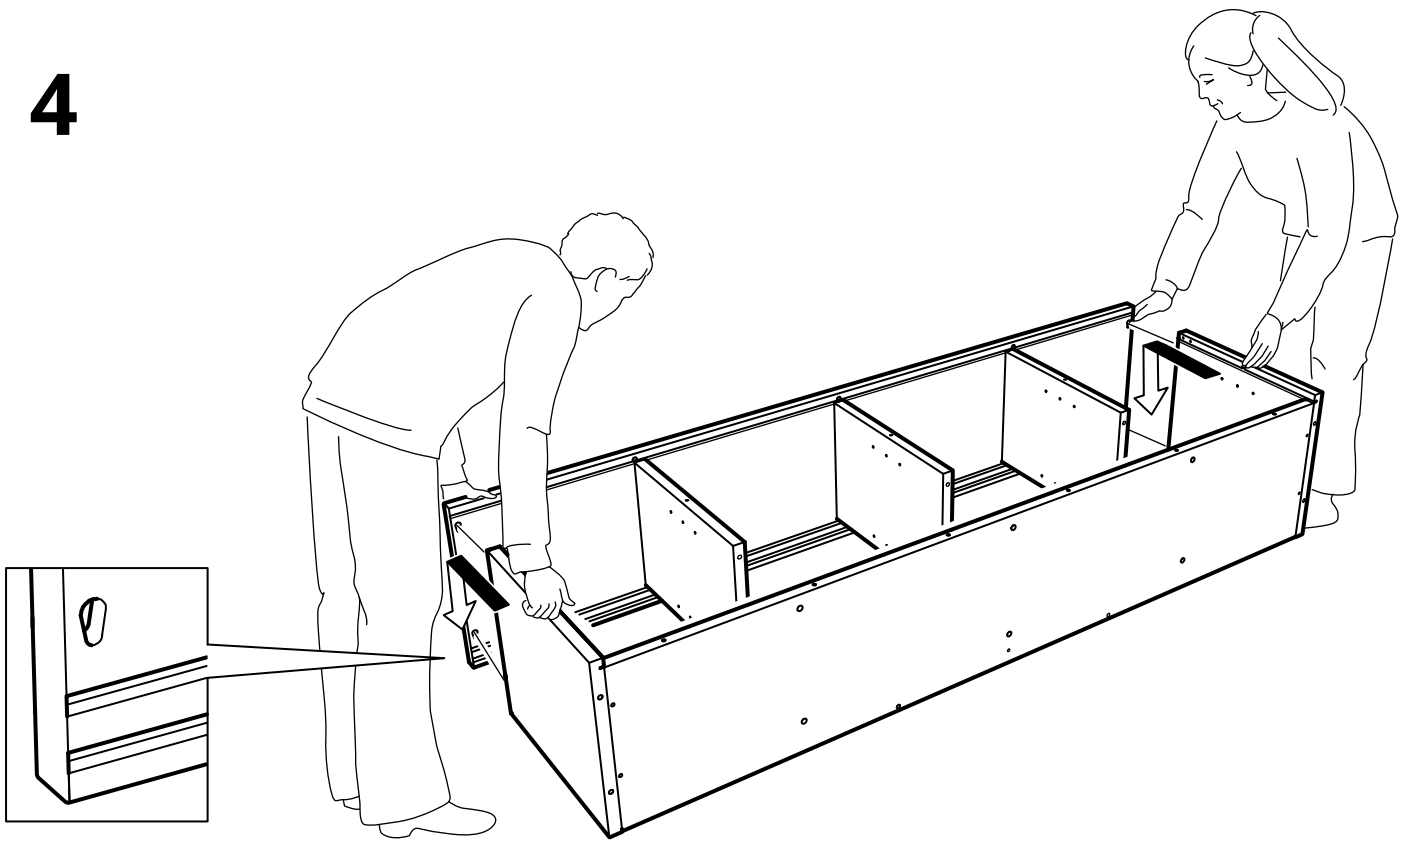 


# 5

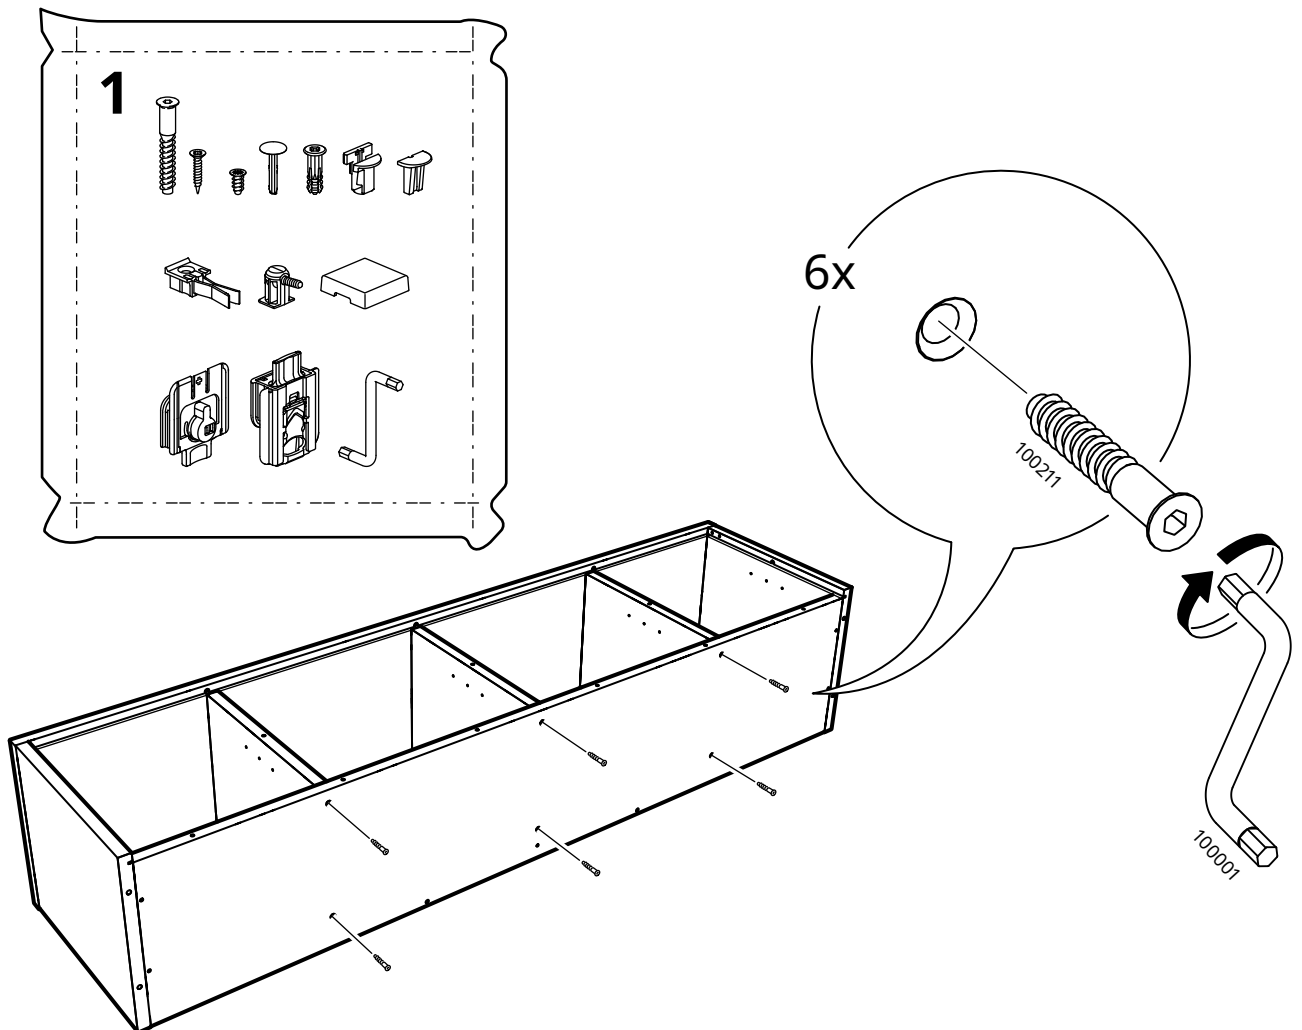 


6

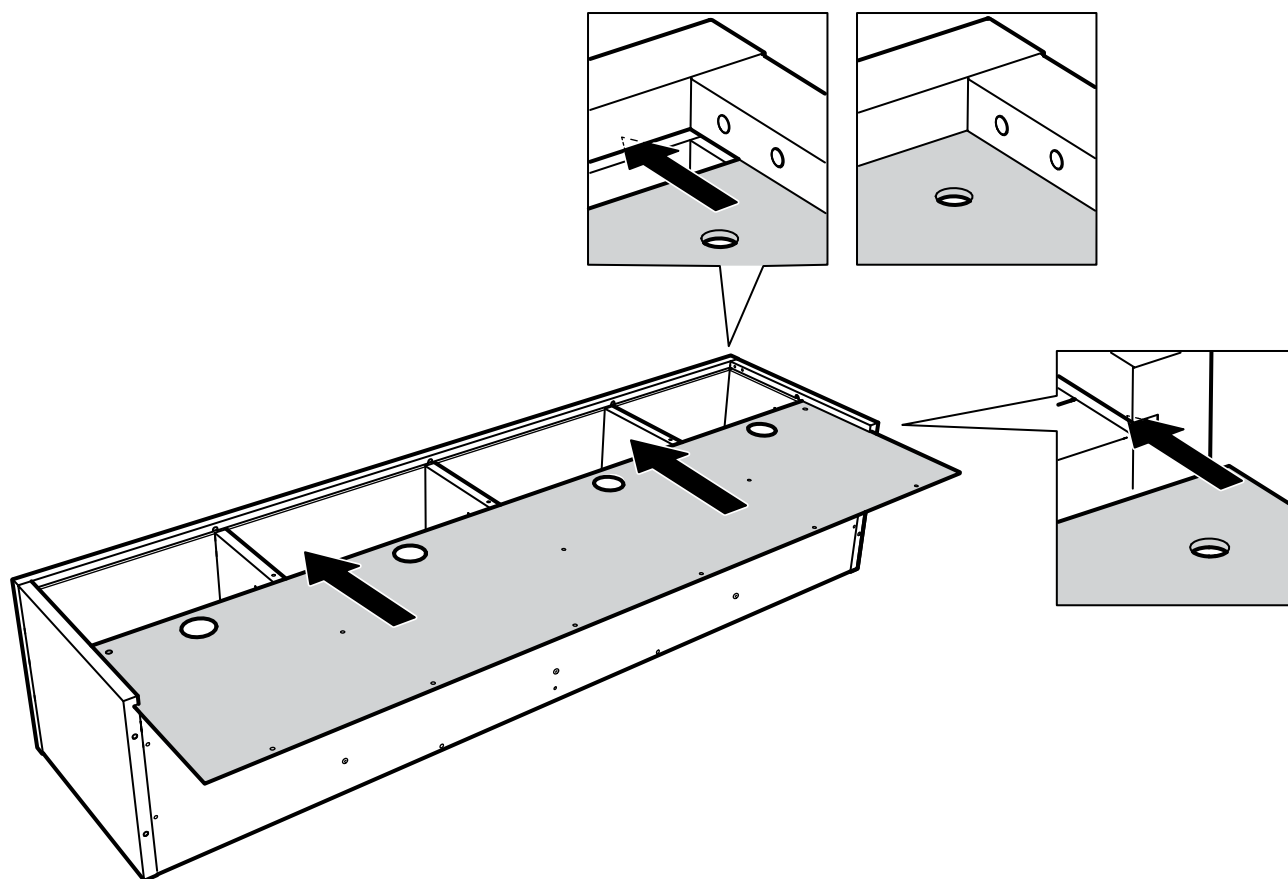 


7

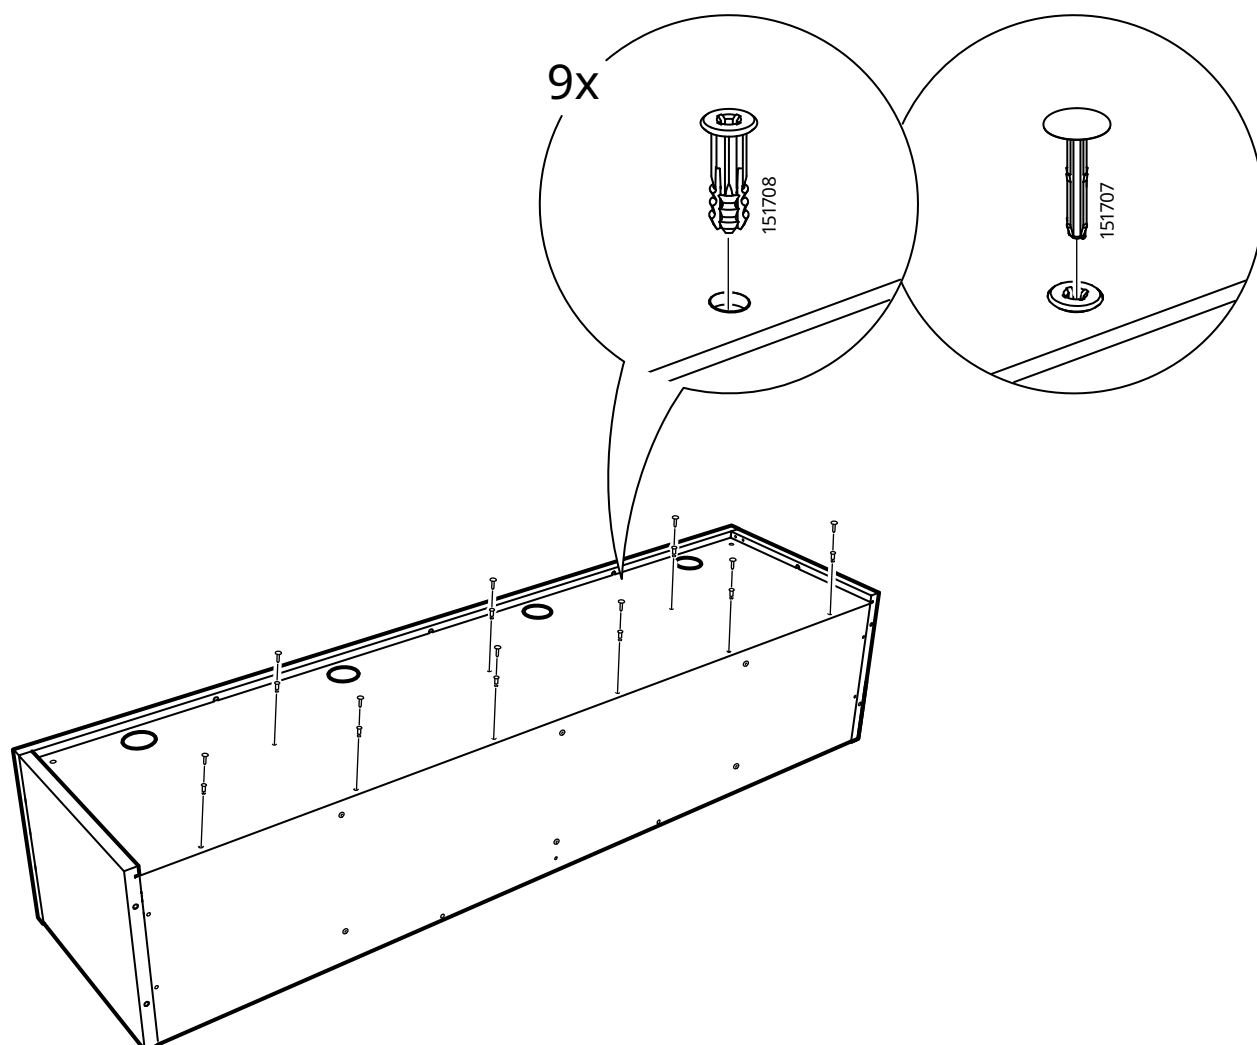 


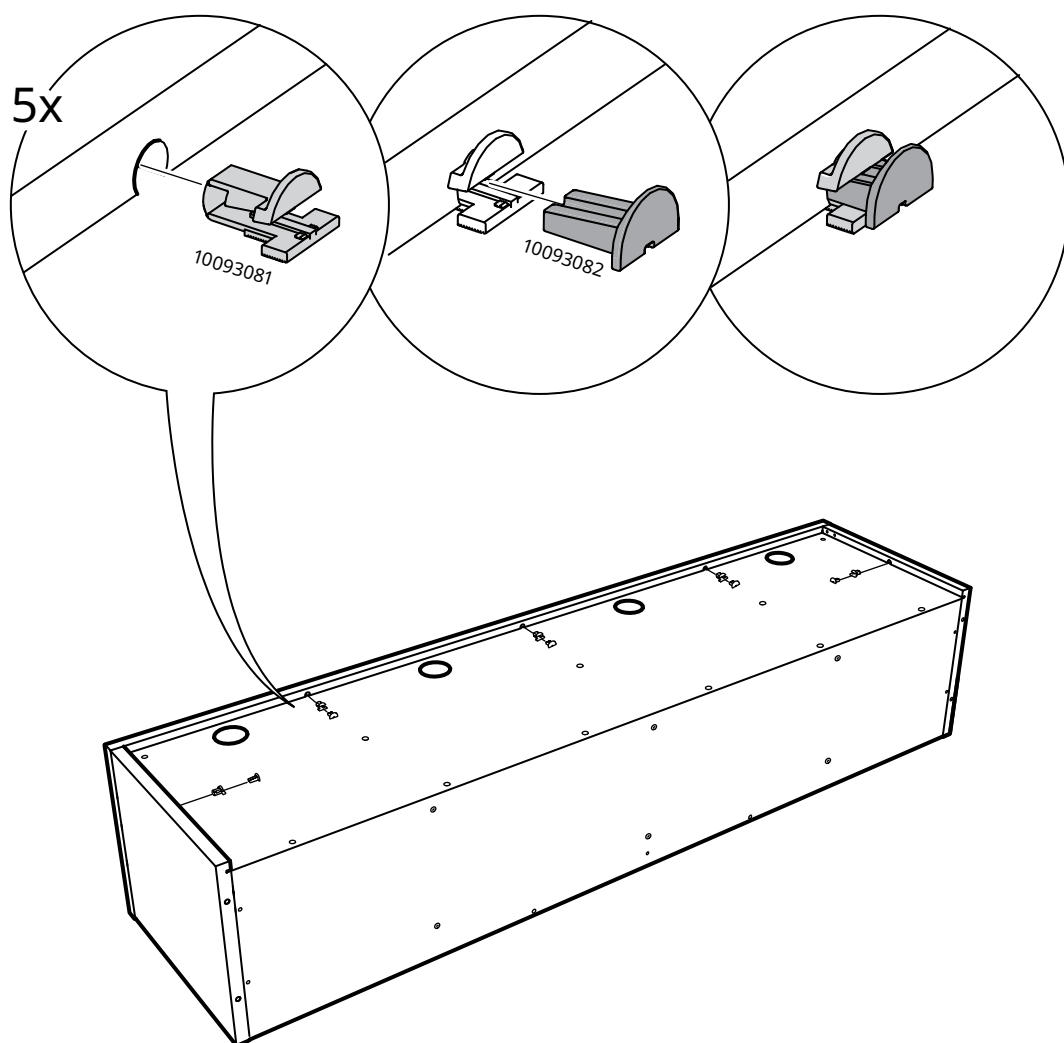 


9

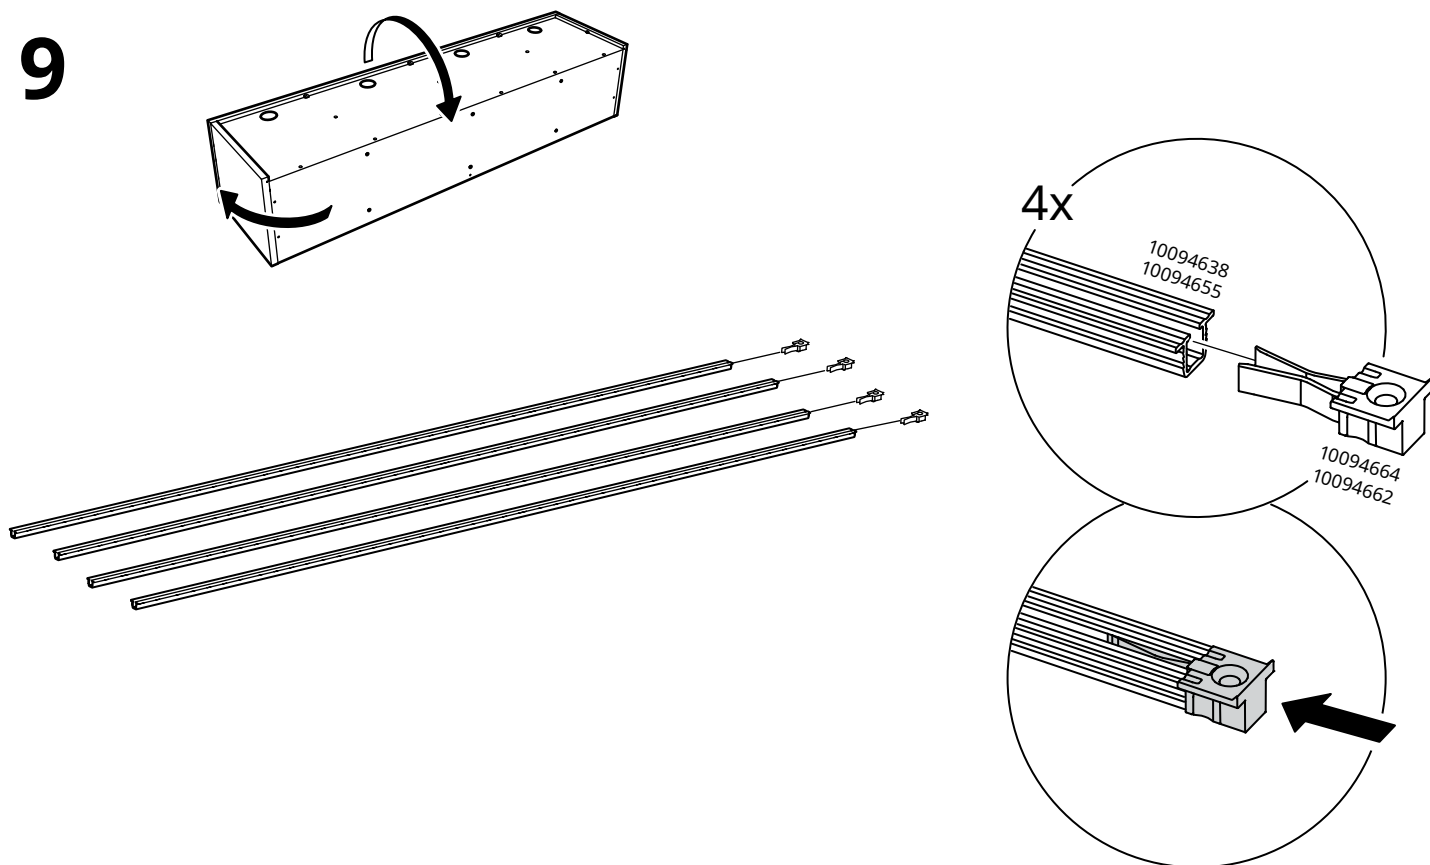 


10

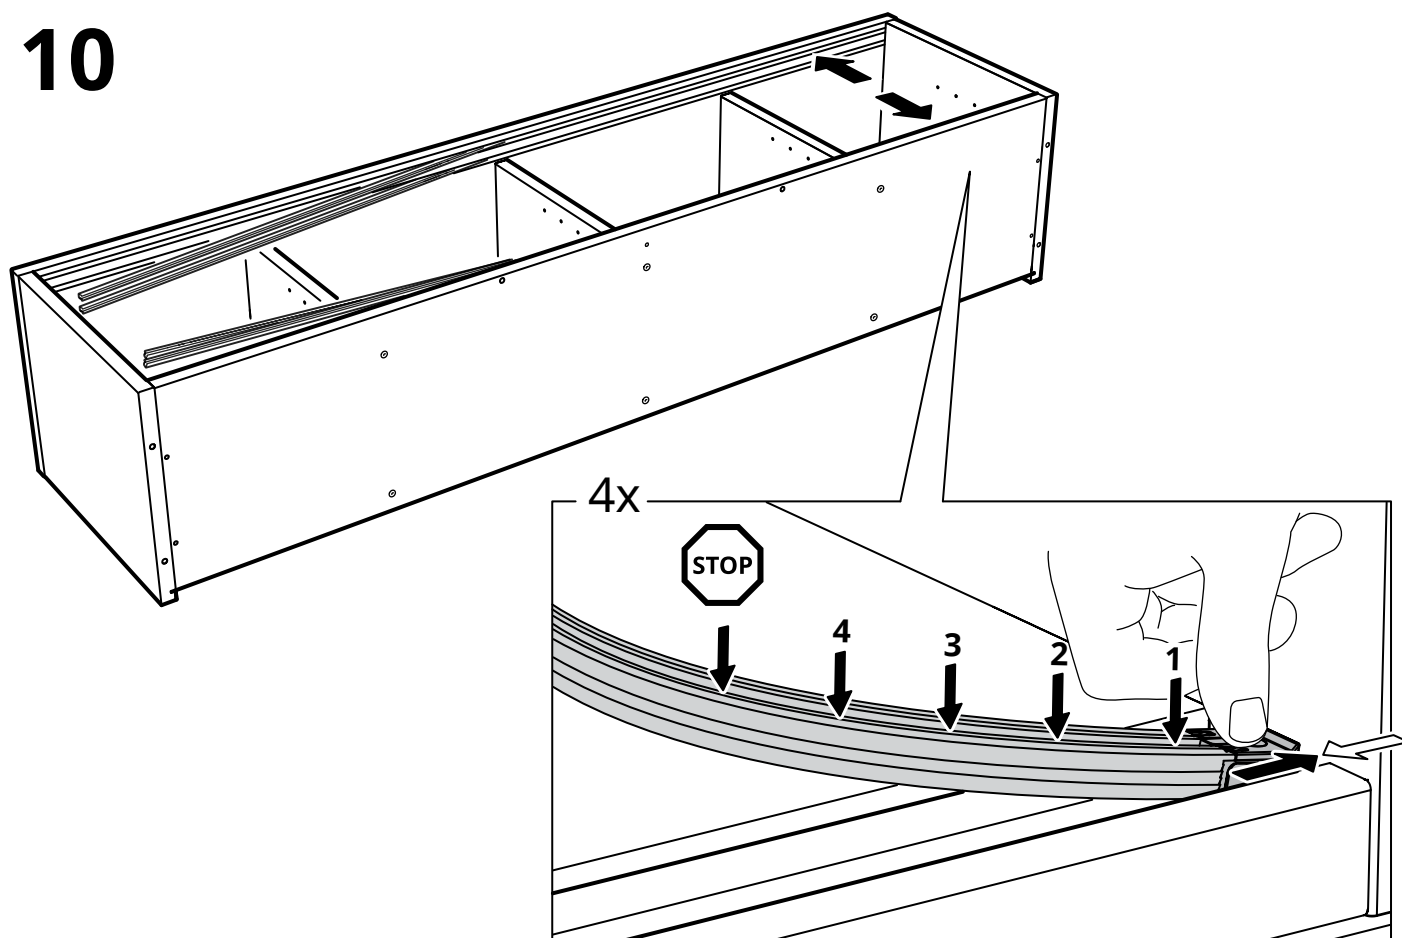 




# 11

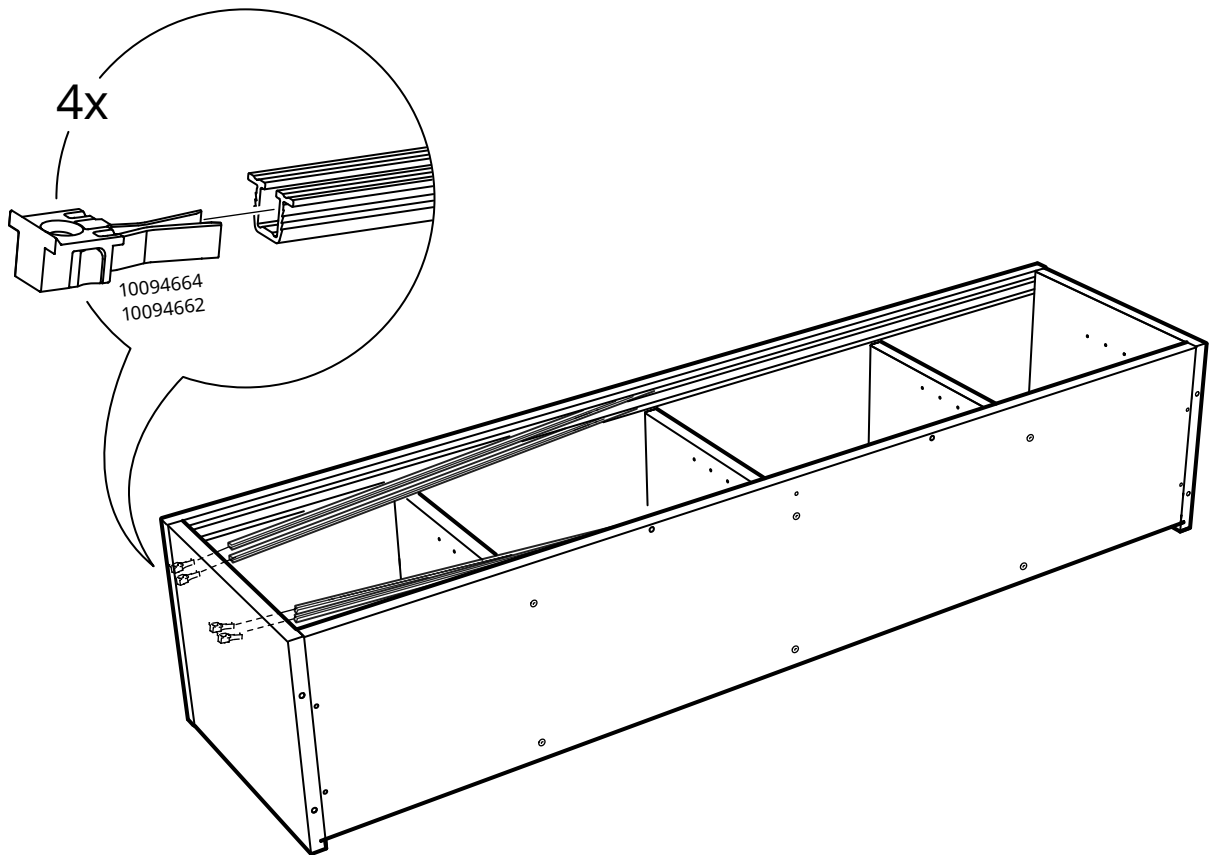 


# 12

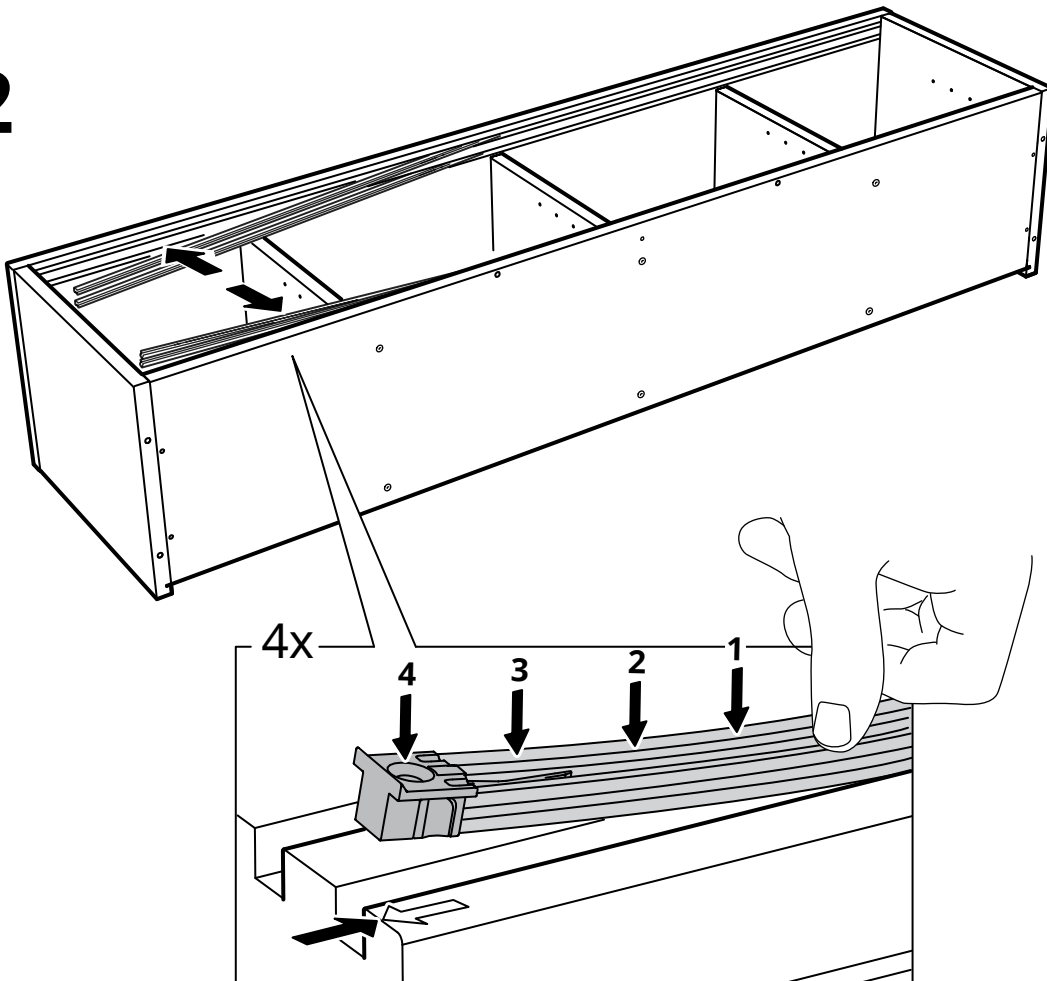 

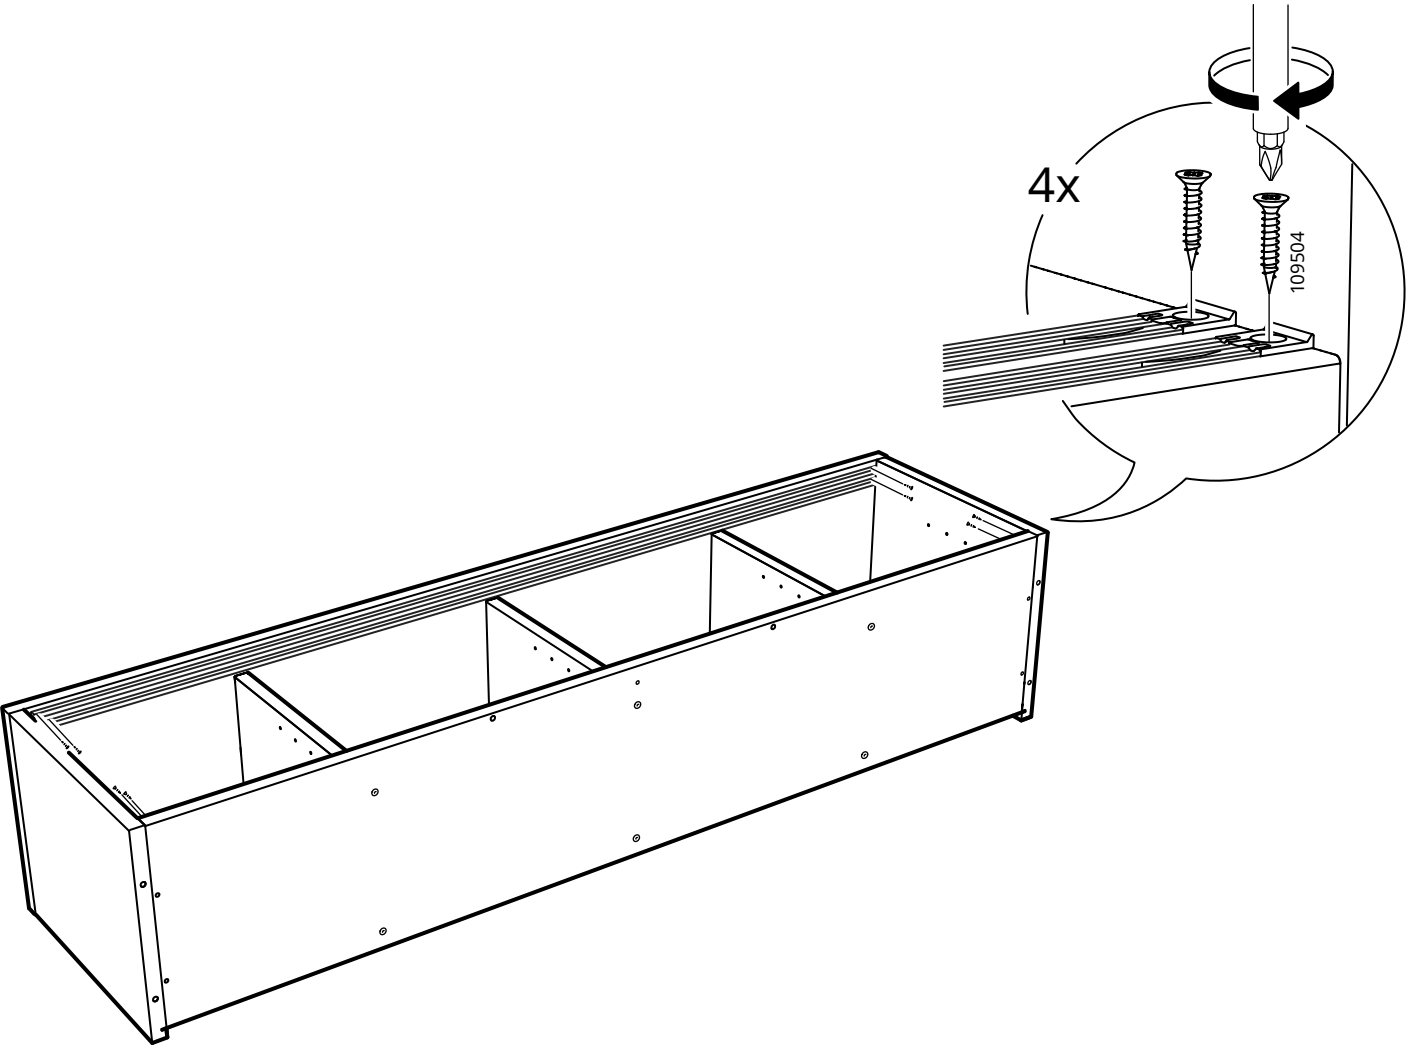 


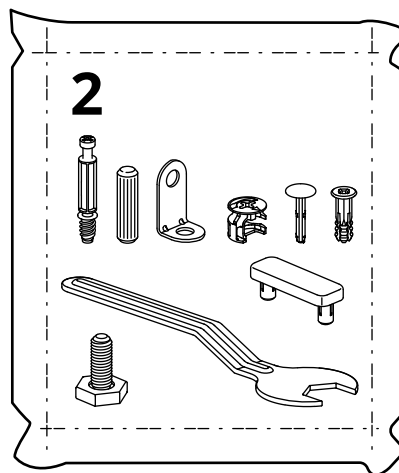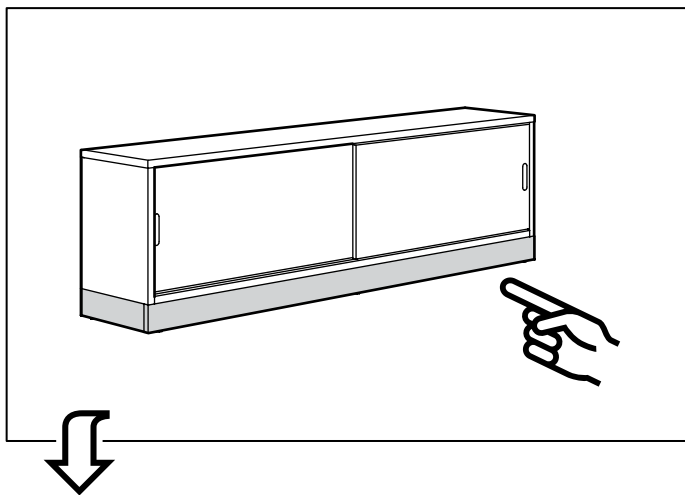  


14

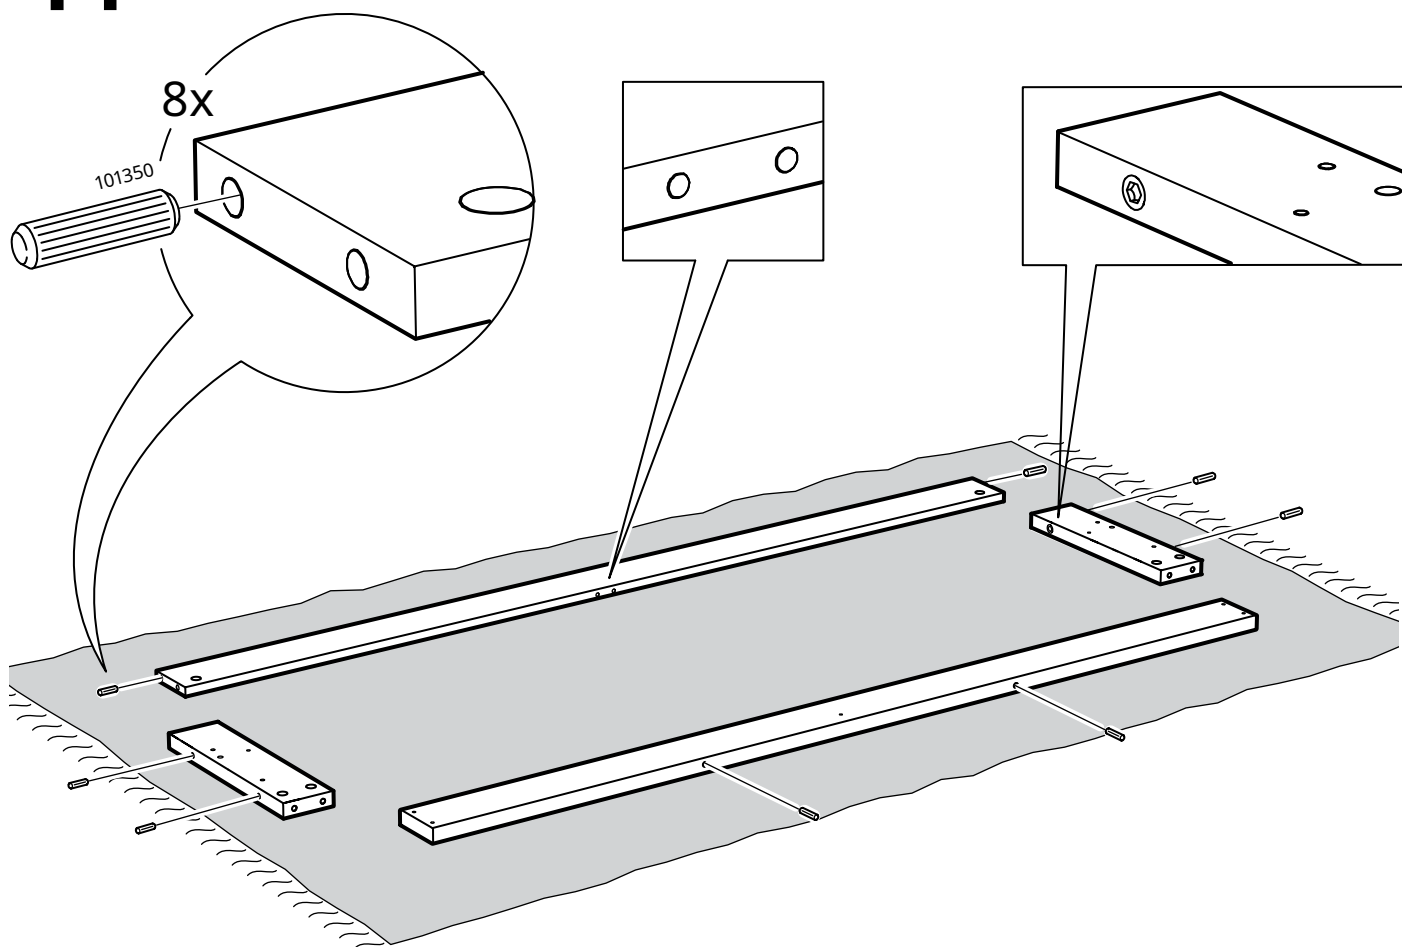 


15

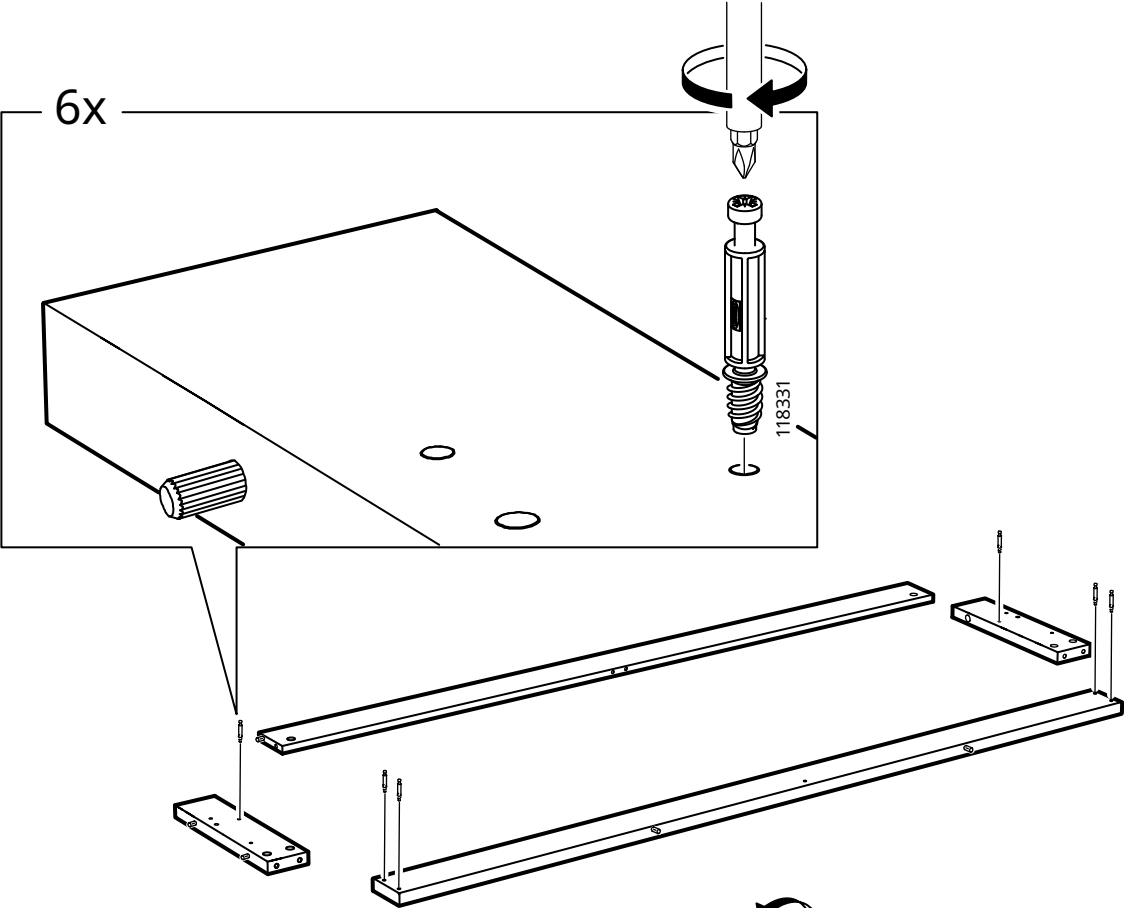 


16

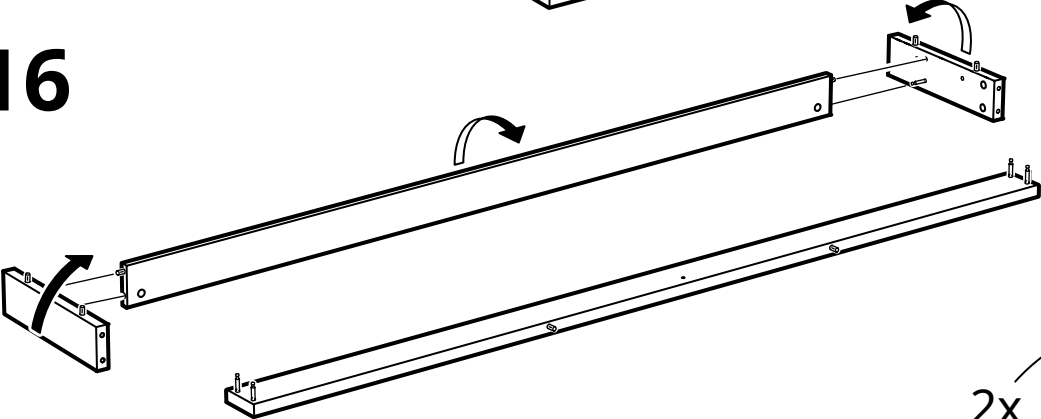 


17

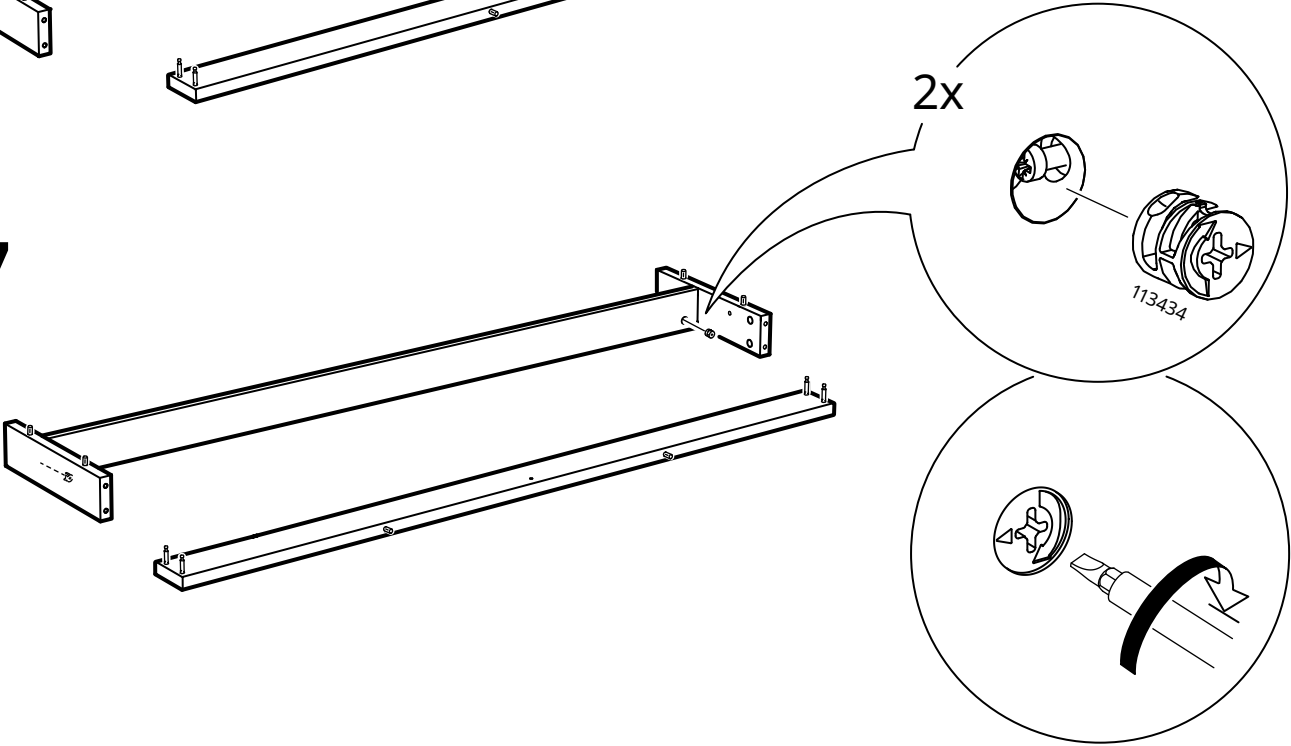 


18

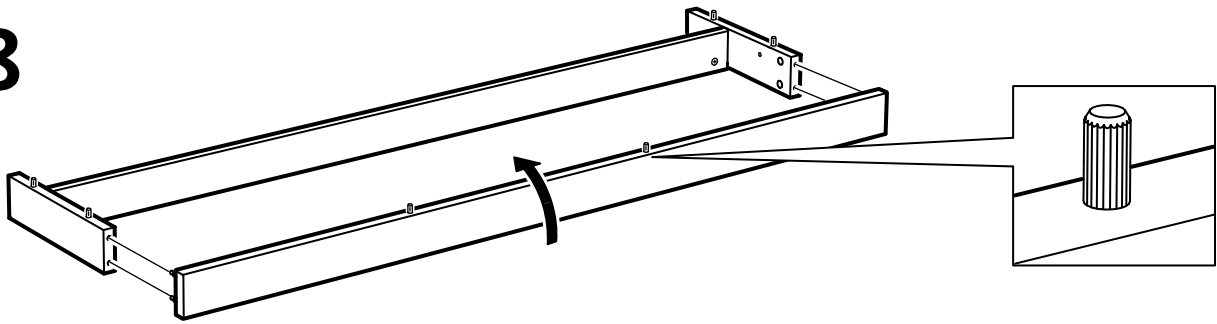 


19

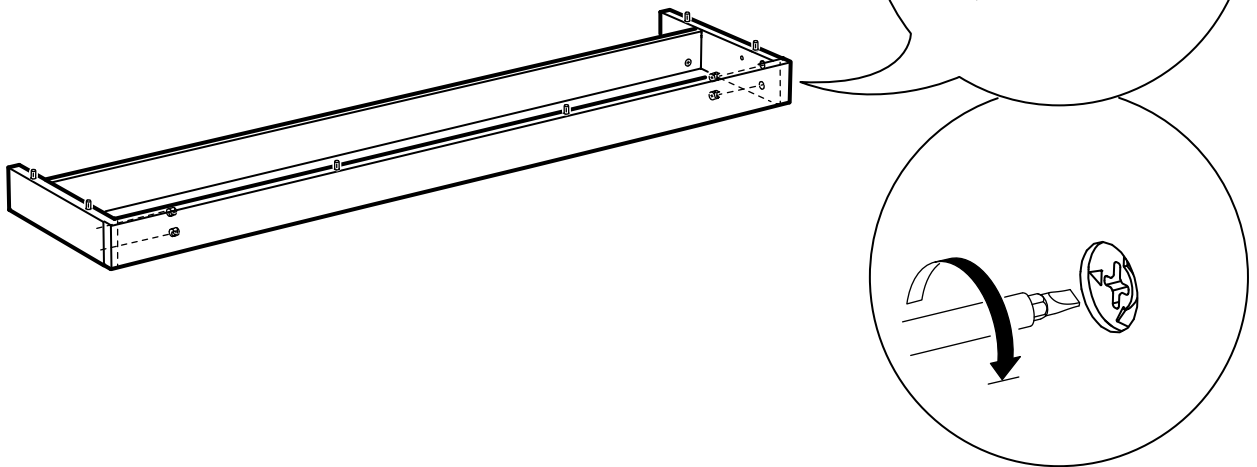 


20

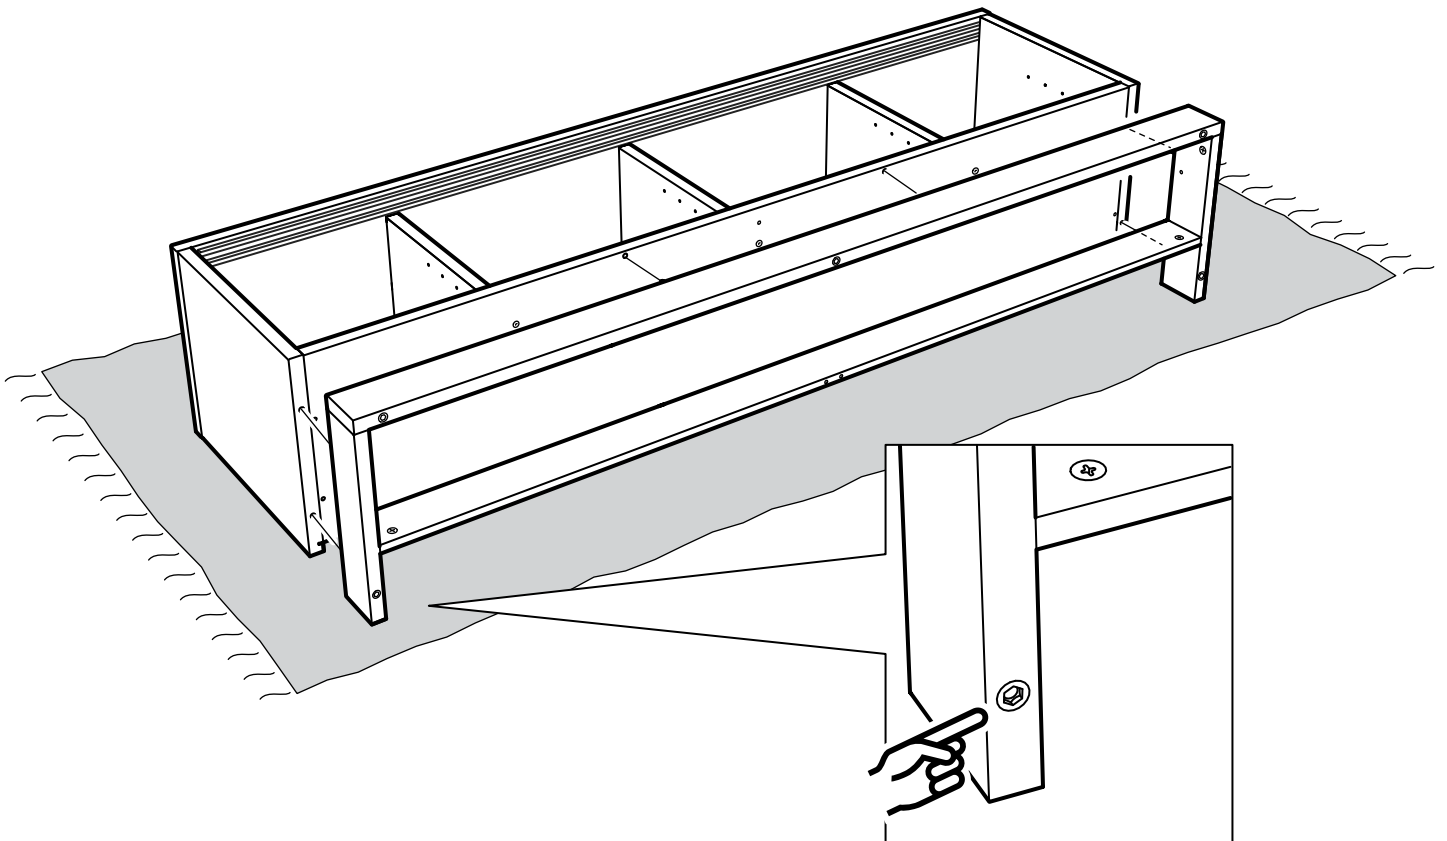 


# 21

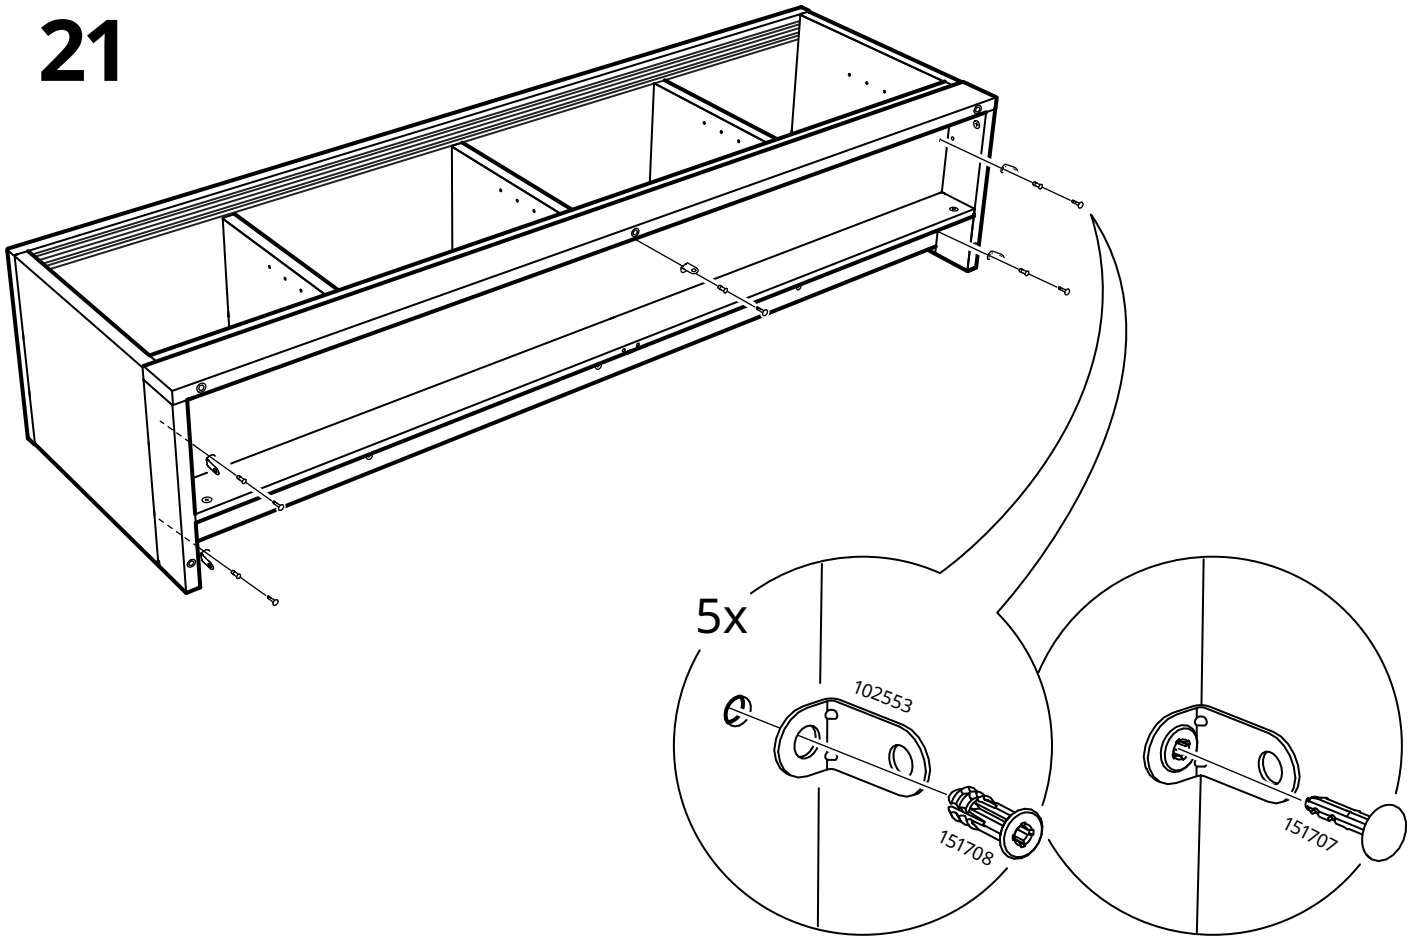 


# 22

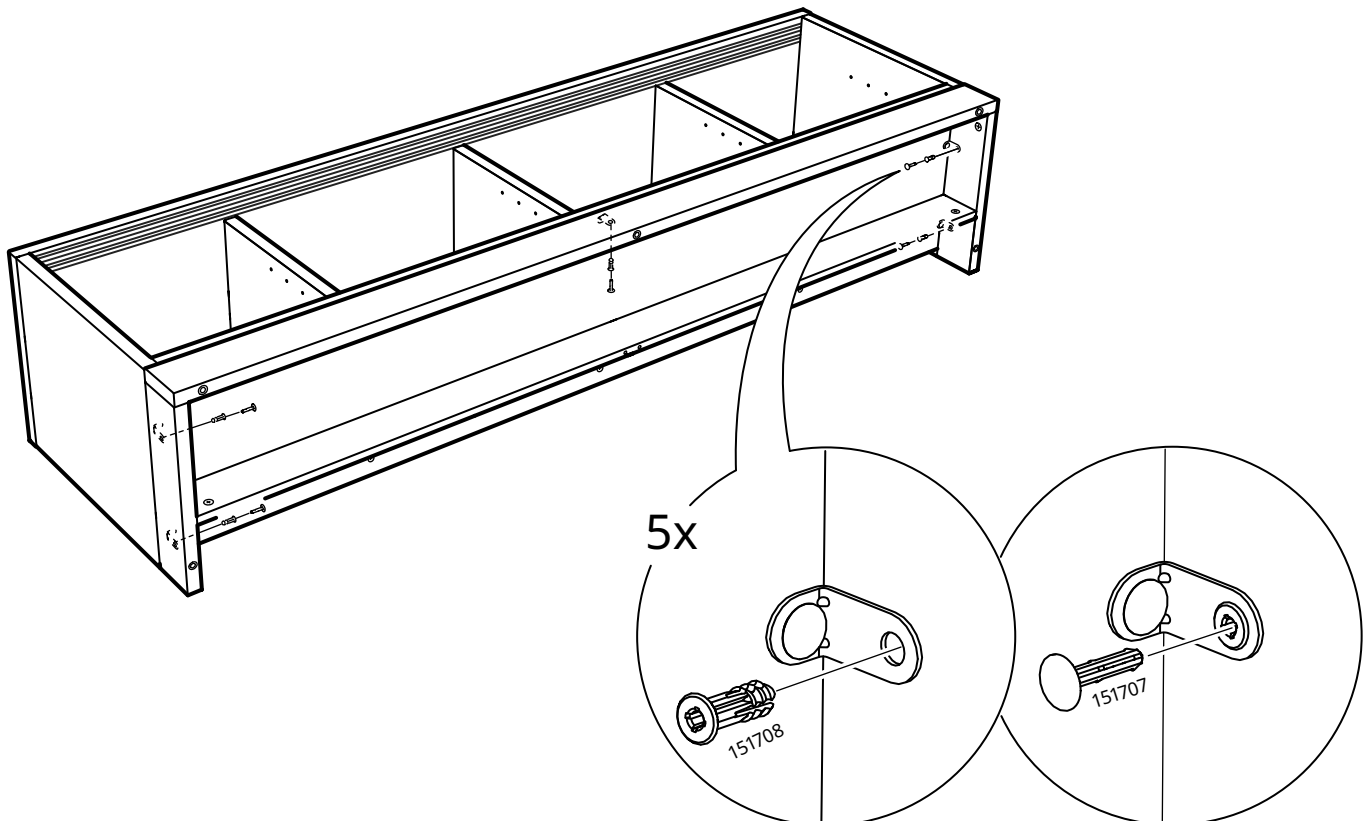 




23


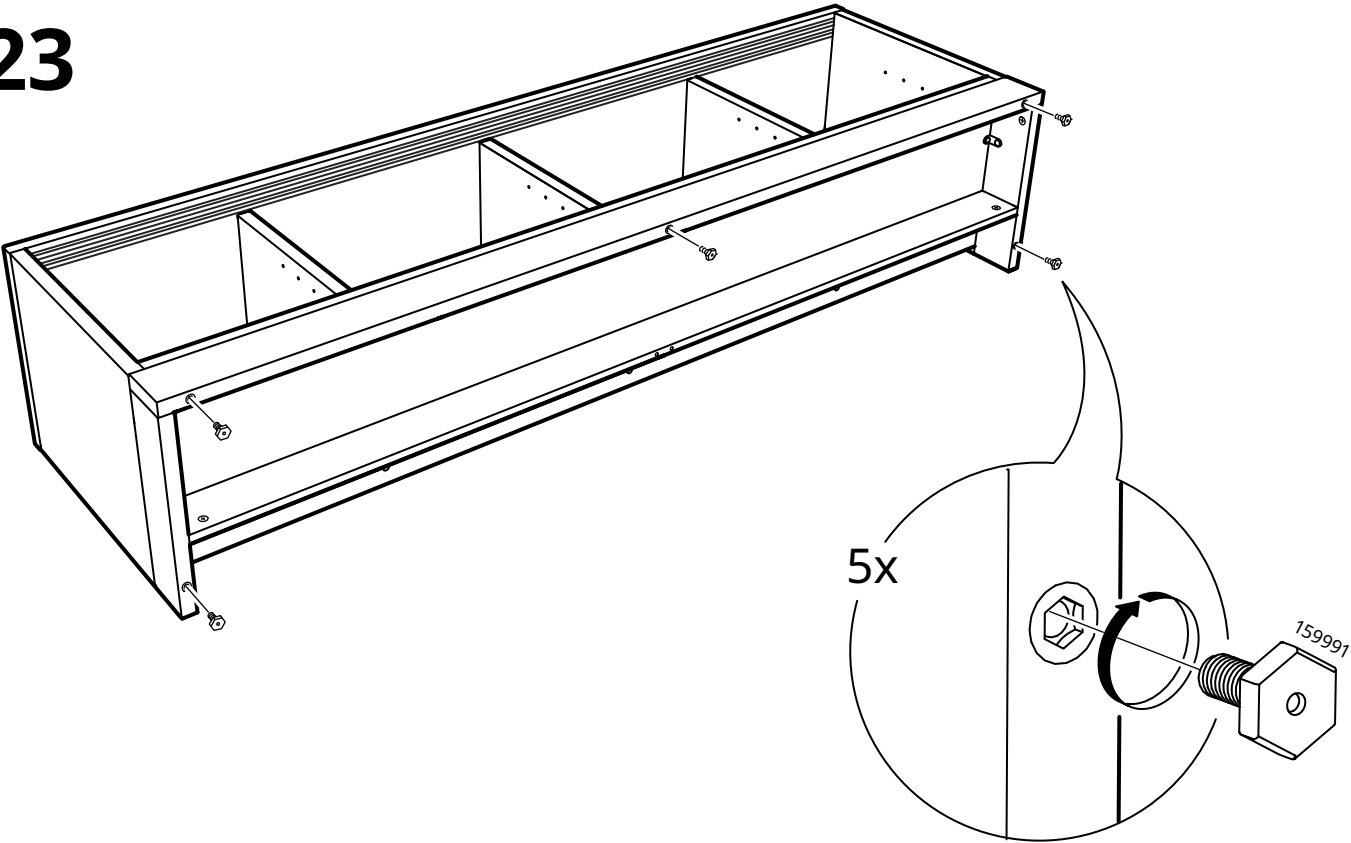 


24

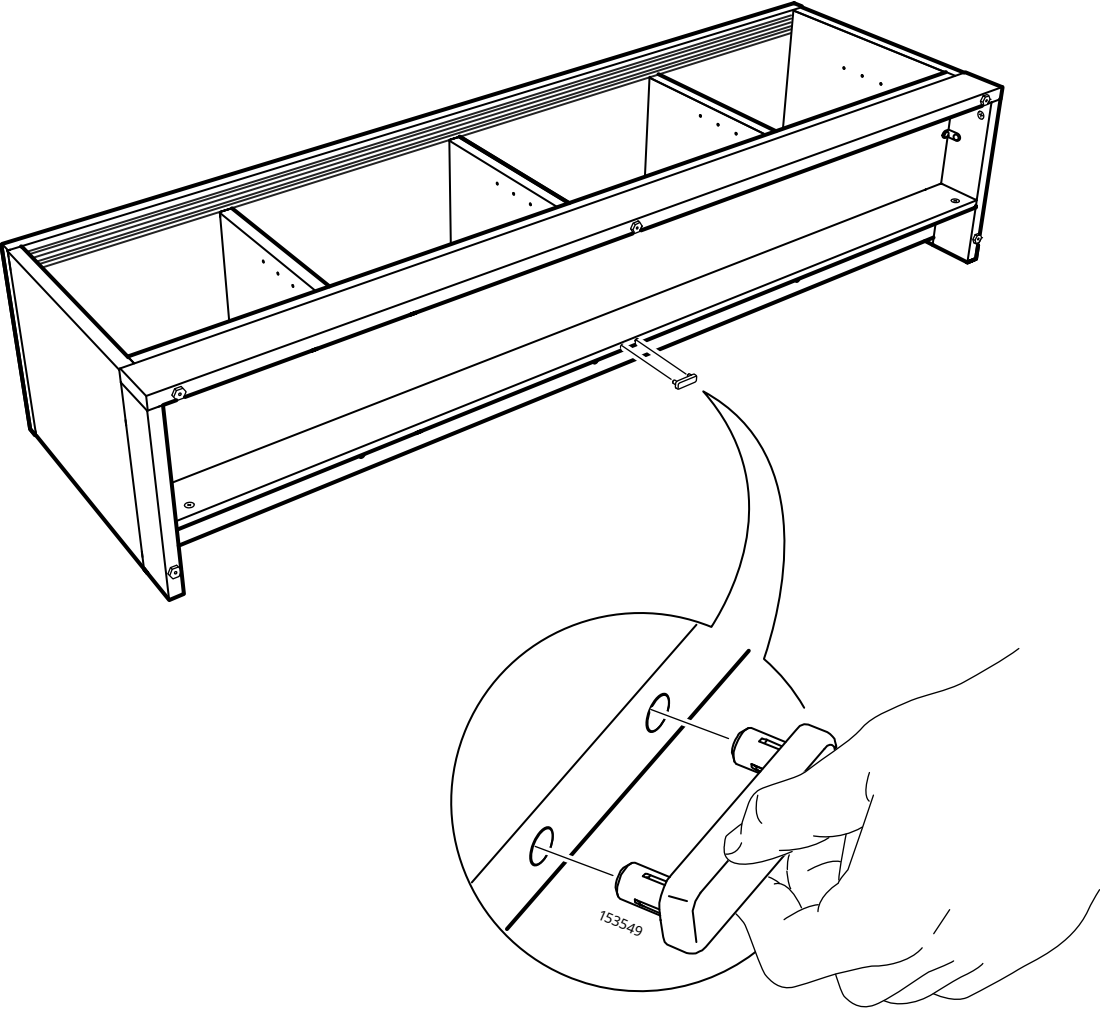 



25

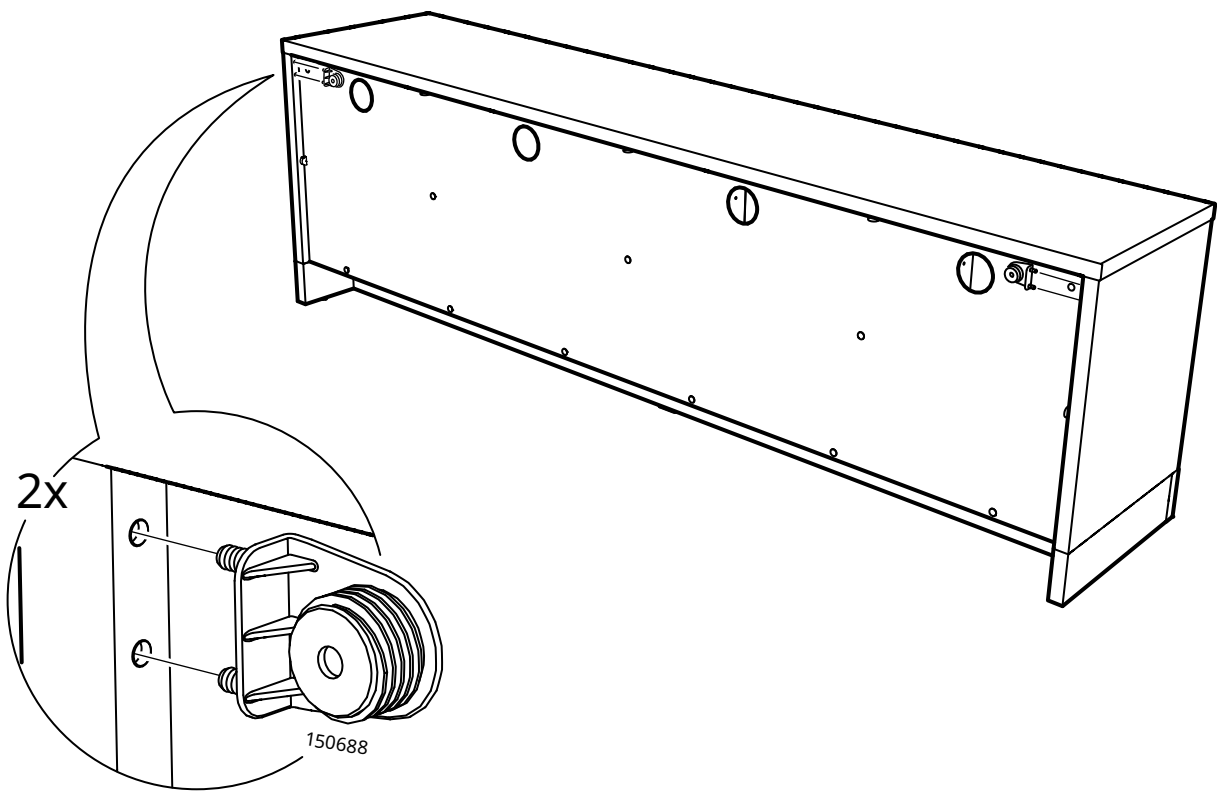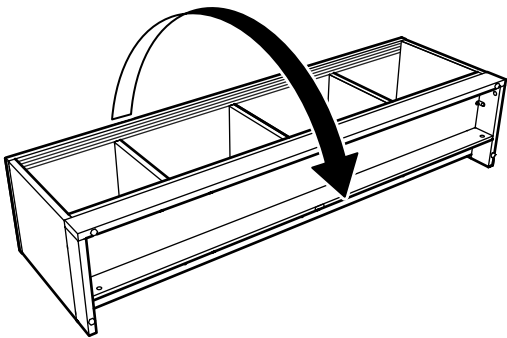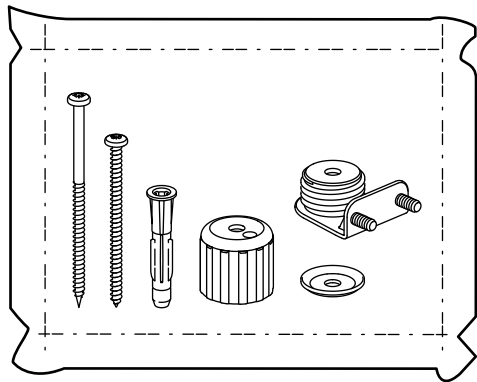   


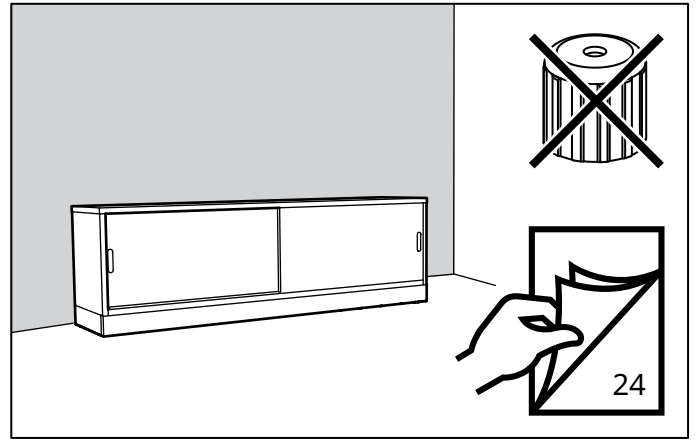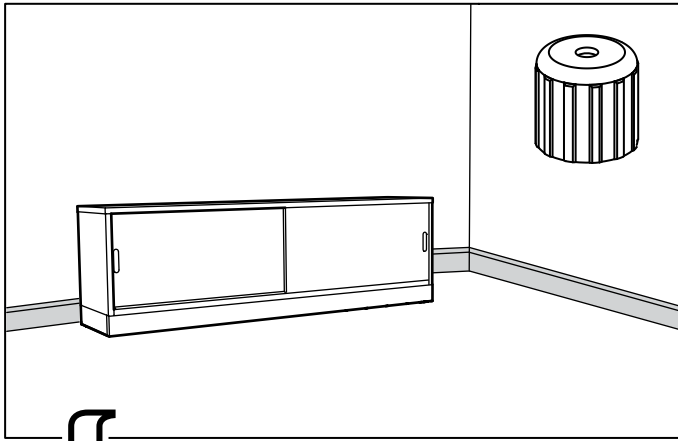  



↕  
**26**

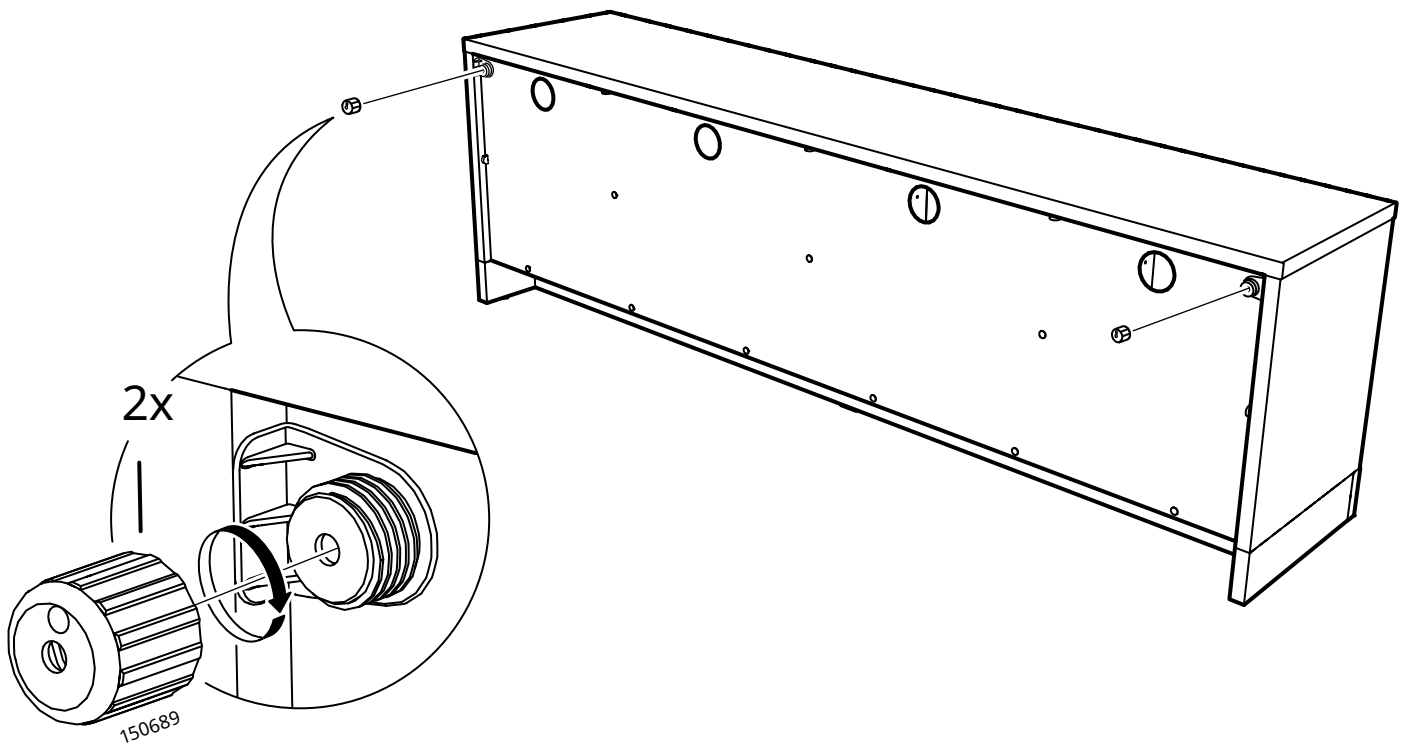 

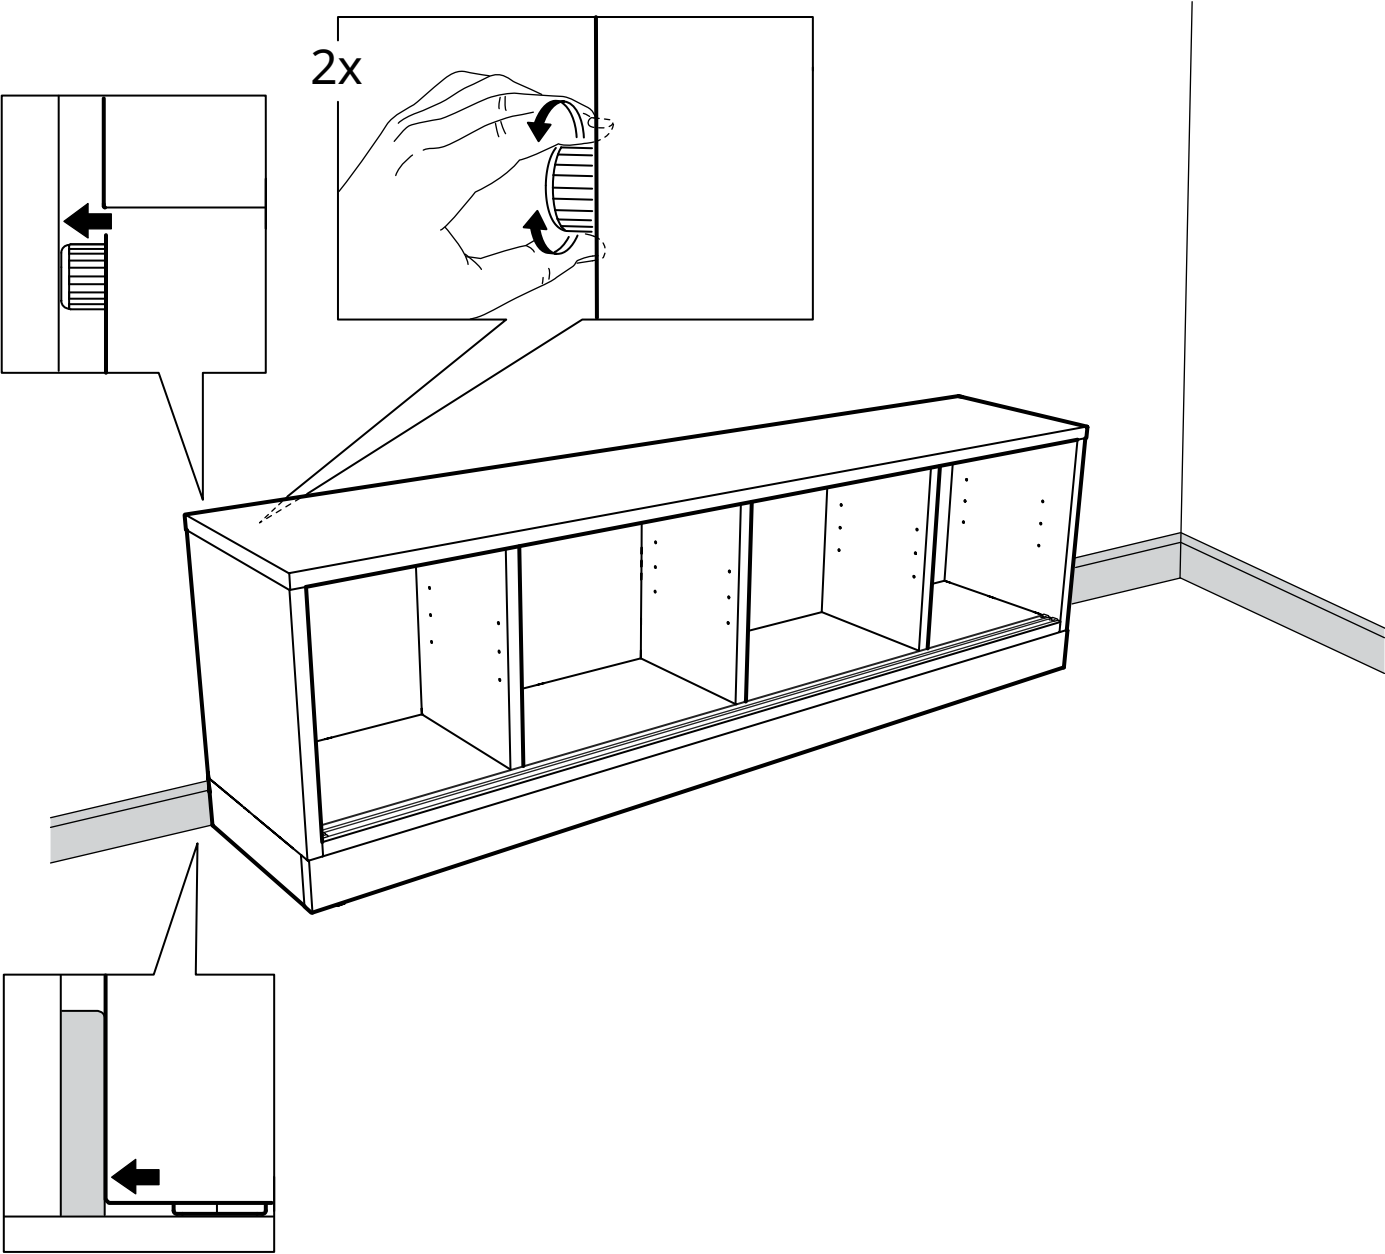 


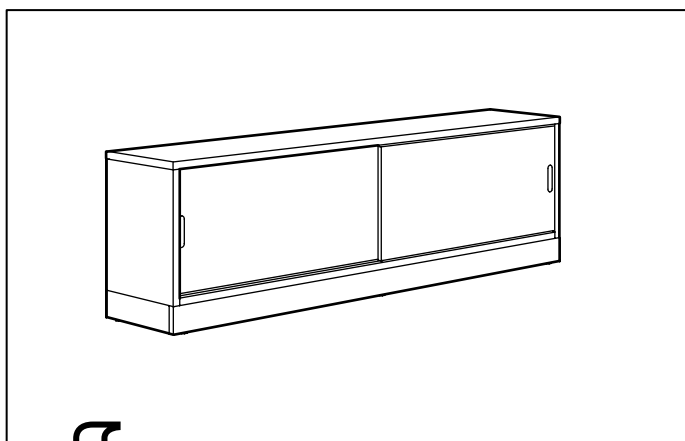 


**28**

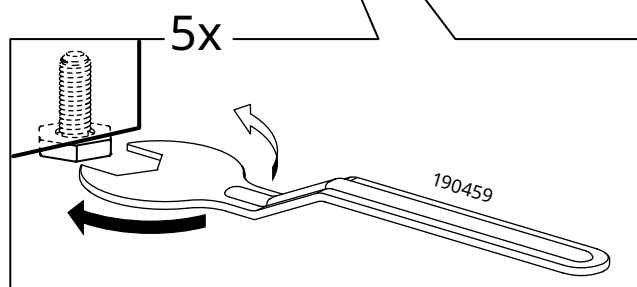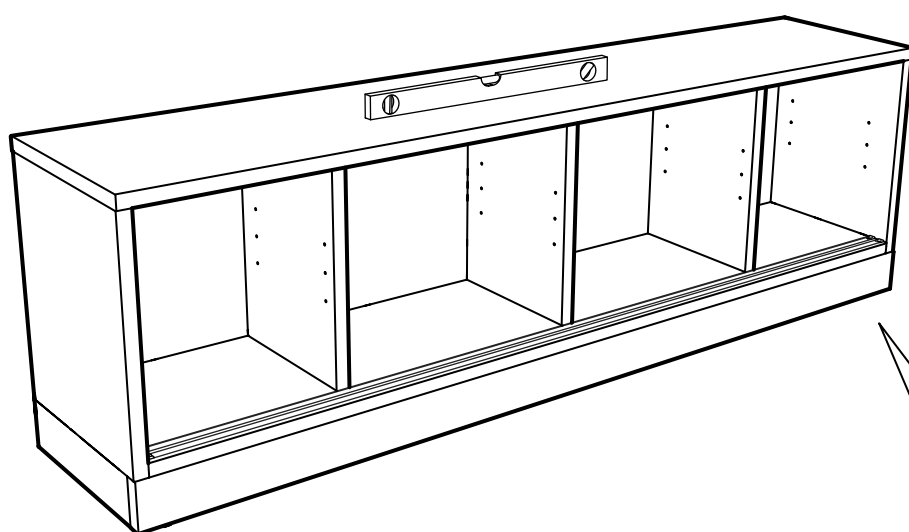  

29

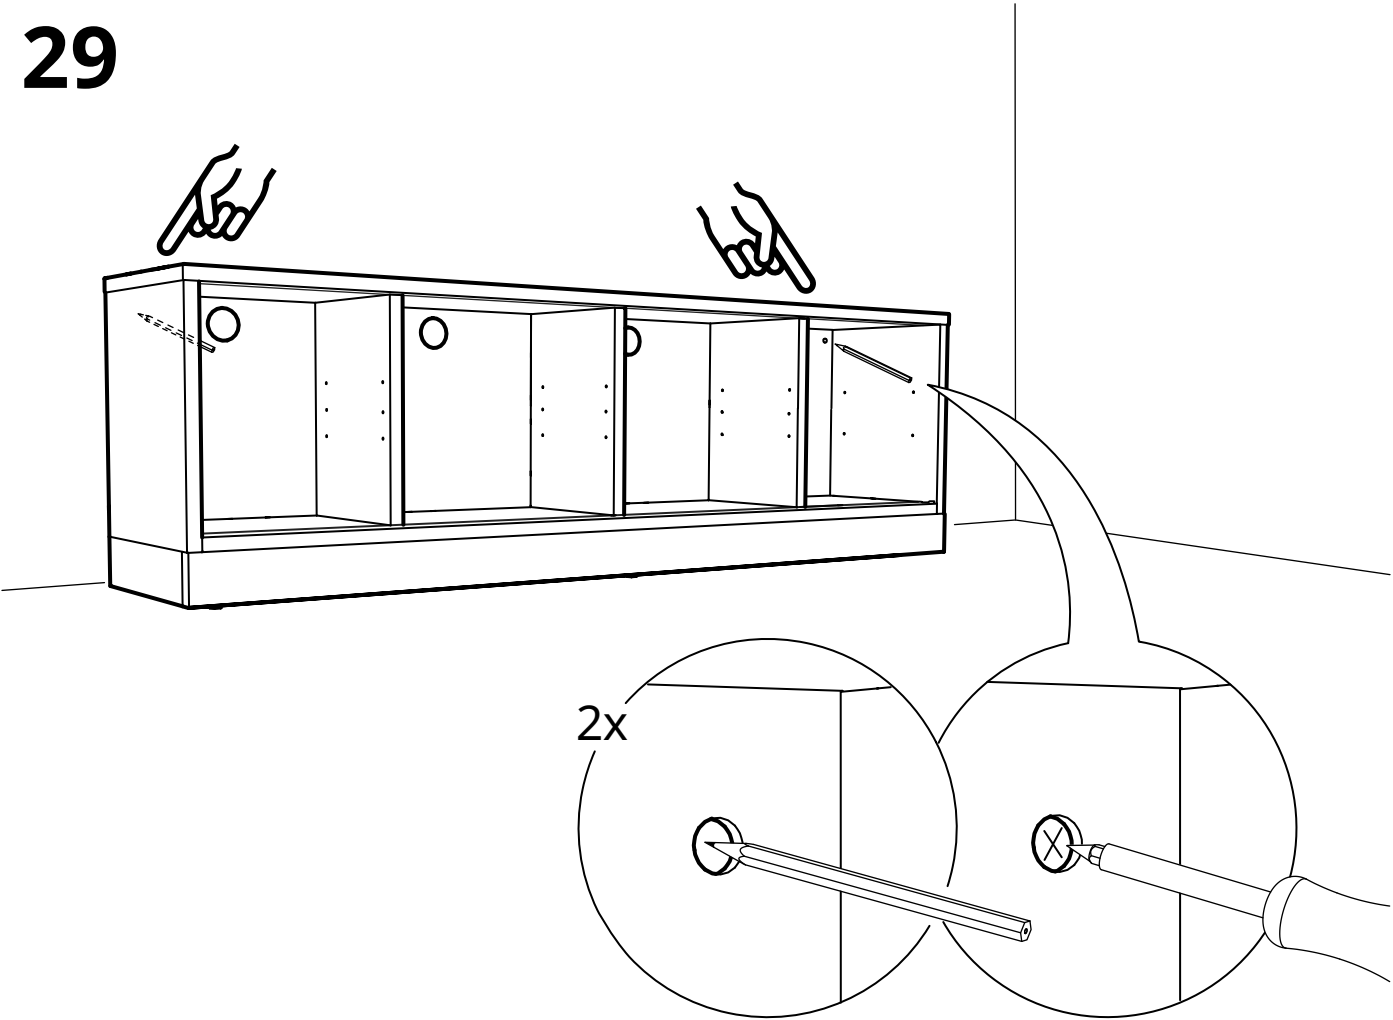 


30

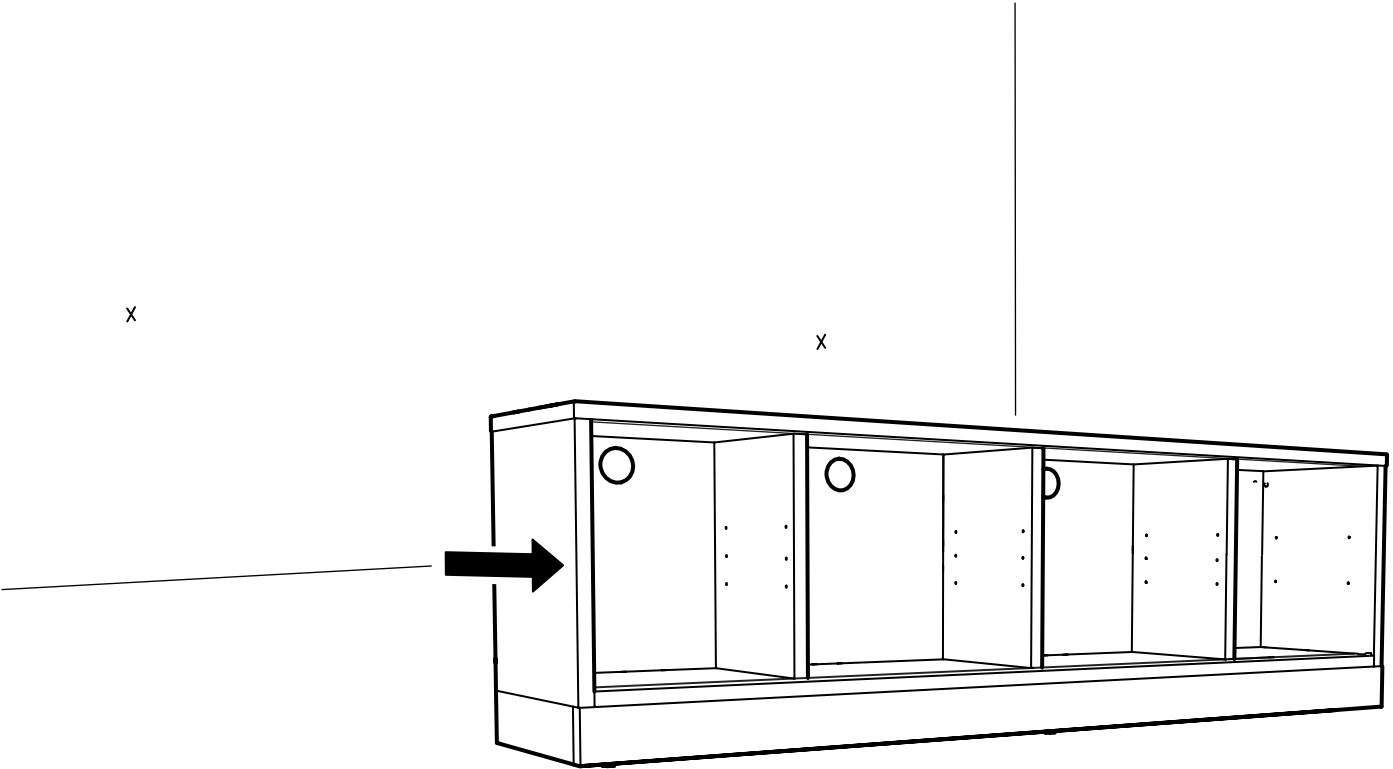 



 [www.IKEA.com/secure-it](http://www.IKEA.com/secure-it)

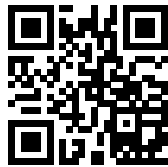


[www.IKEA.cn/secure-it](http://www.IKEA.cn/secure-it)


# 31
 
## English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

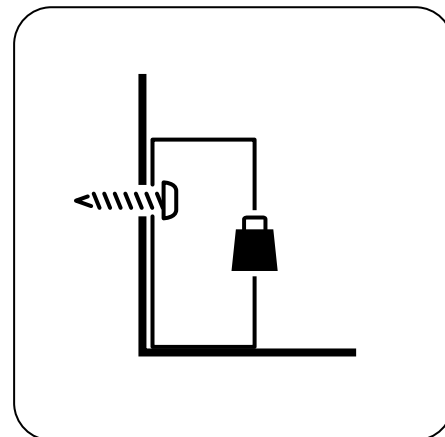


**A**

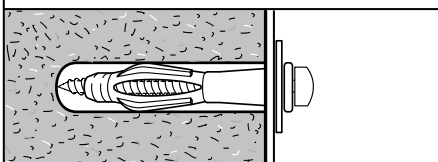 


Ø 8 mm  
(5/16")




**1**

 


**2**

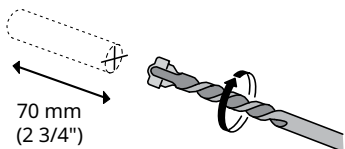 

**3**

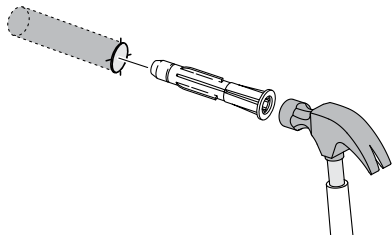 


**B**

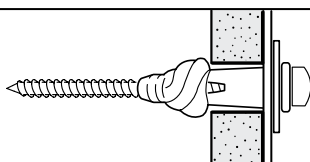 


Ø 8 mm  
(5/16")




**1**

 


**2**

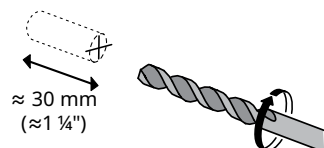 

**3**

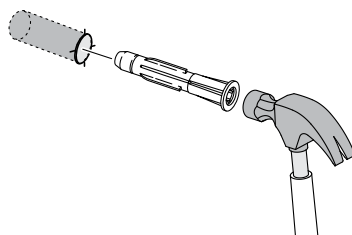 


**C**

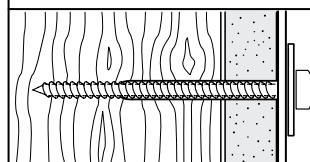 


Ø 3 mm  
(1/8")






**1**





 



**2**

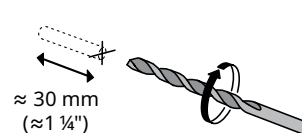 


 
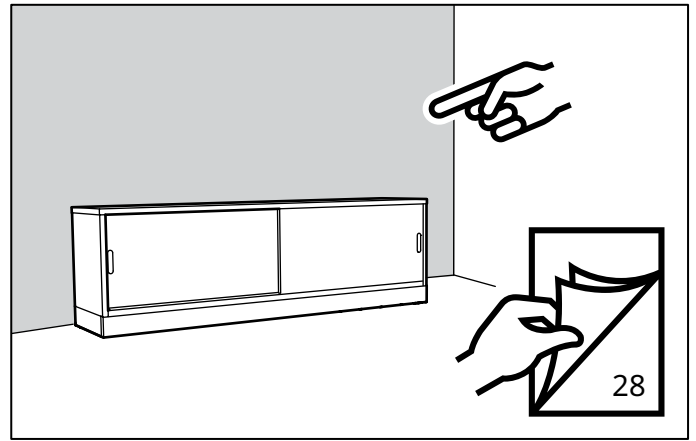 
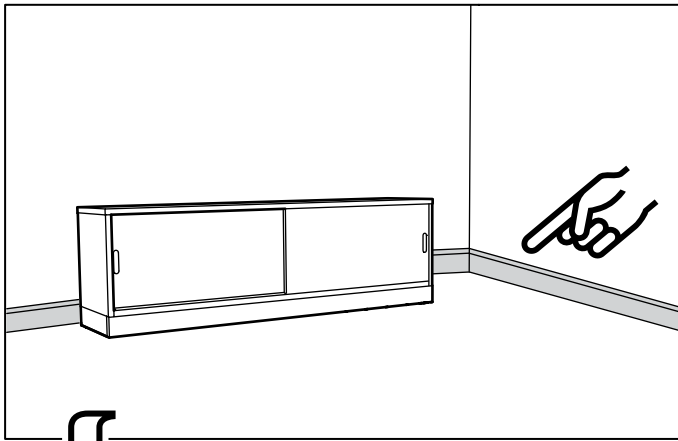 


**32**

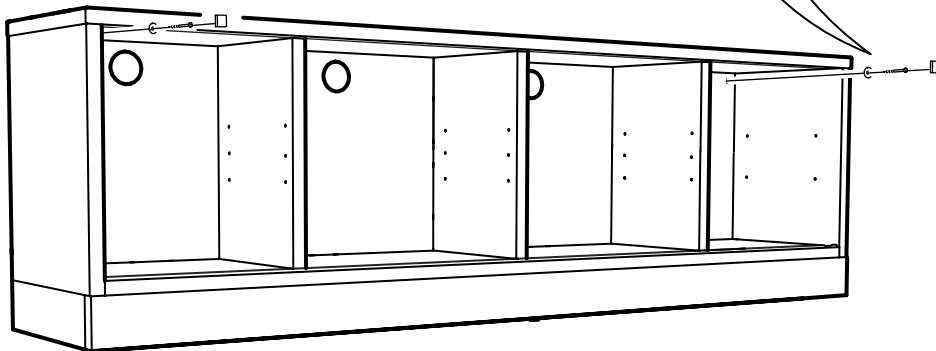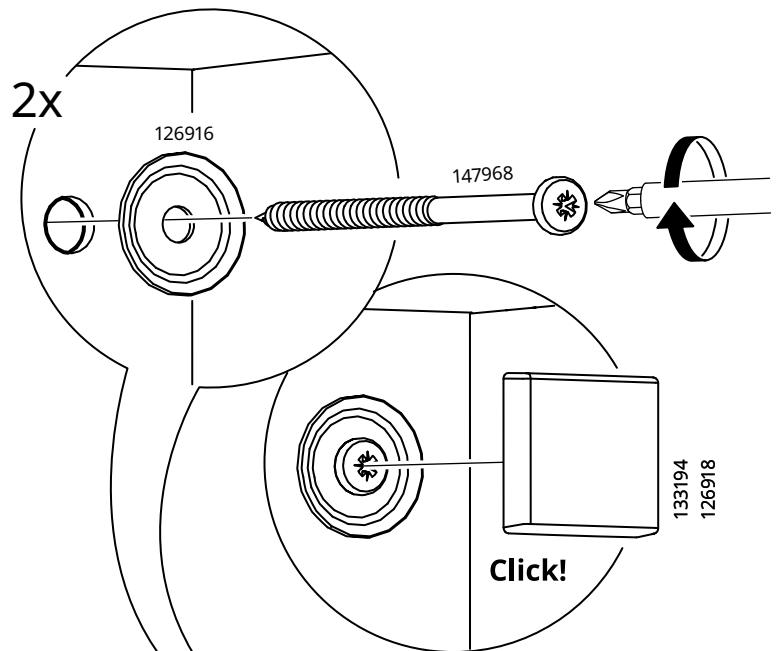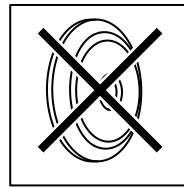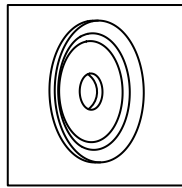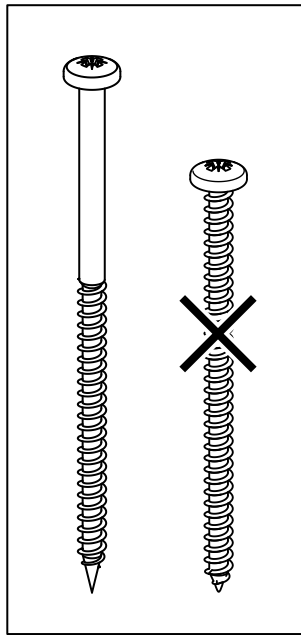     


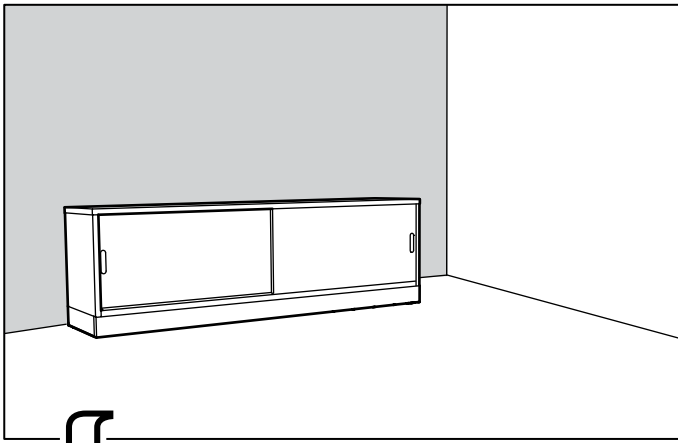 


**32**

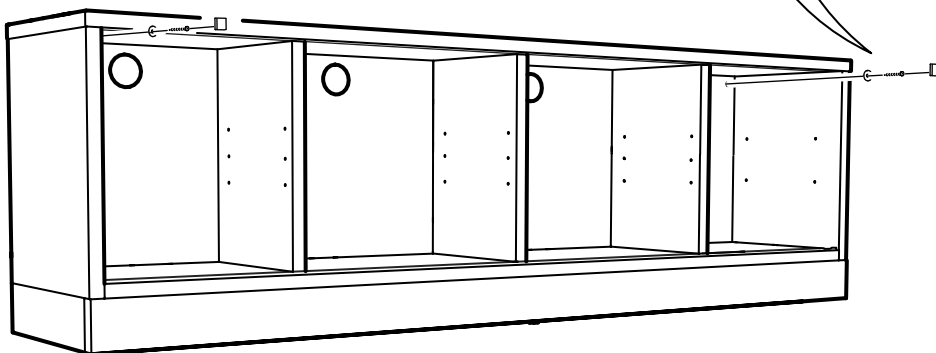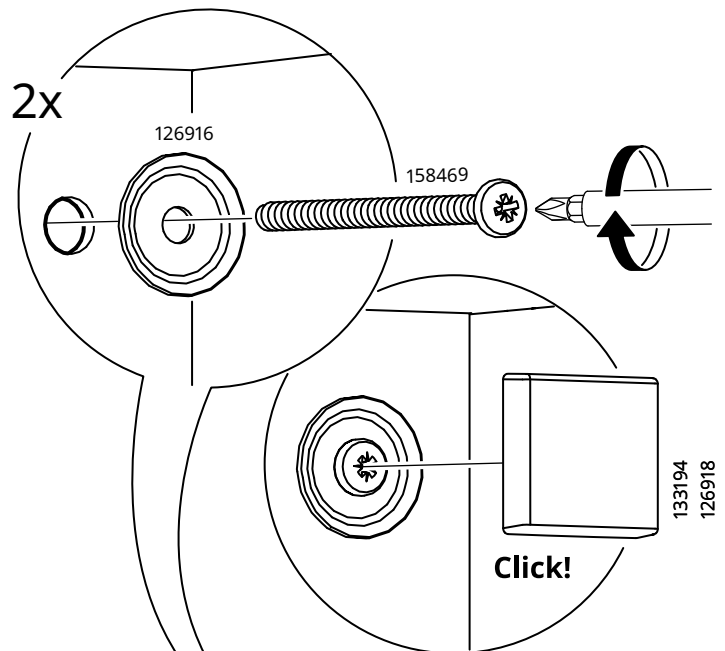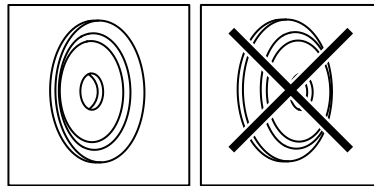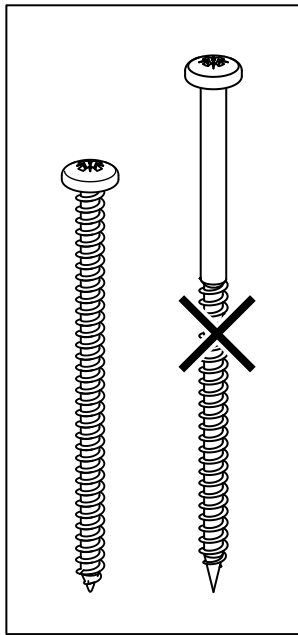    



33

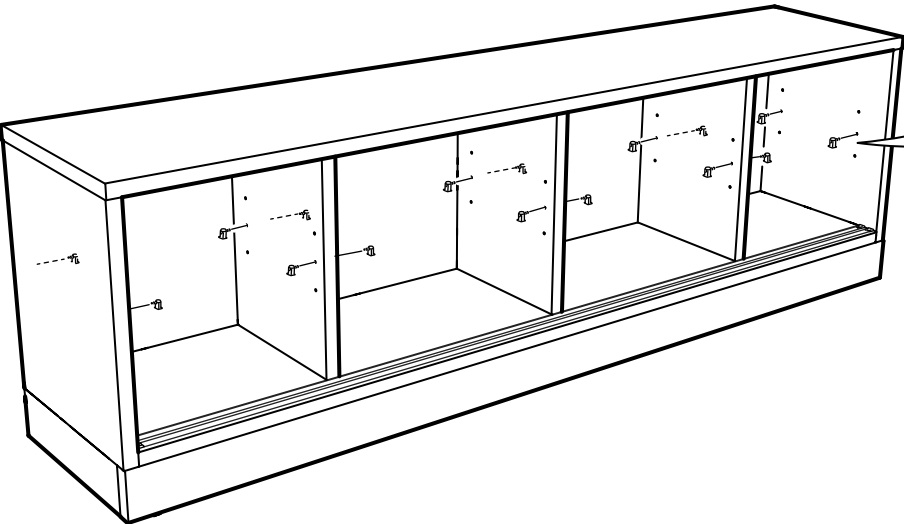 



16x

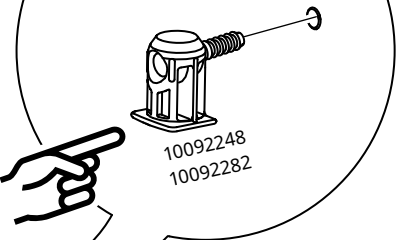 


34

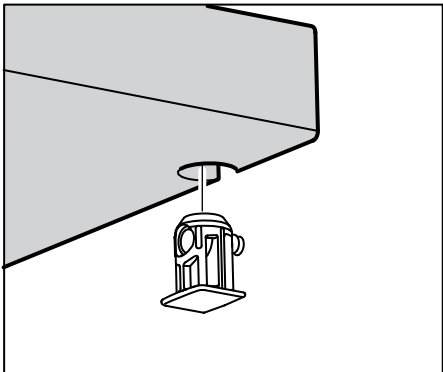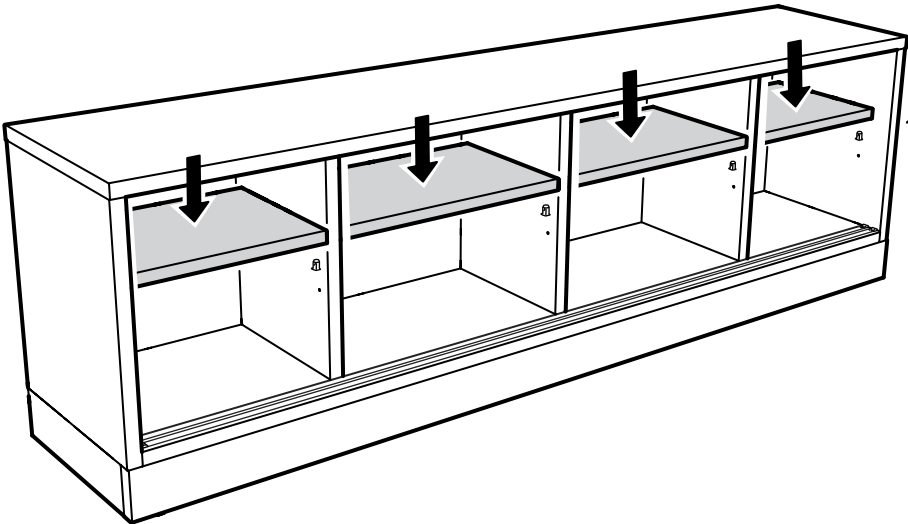  

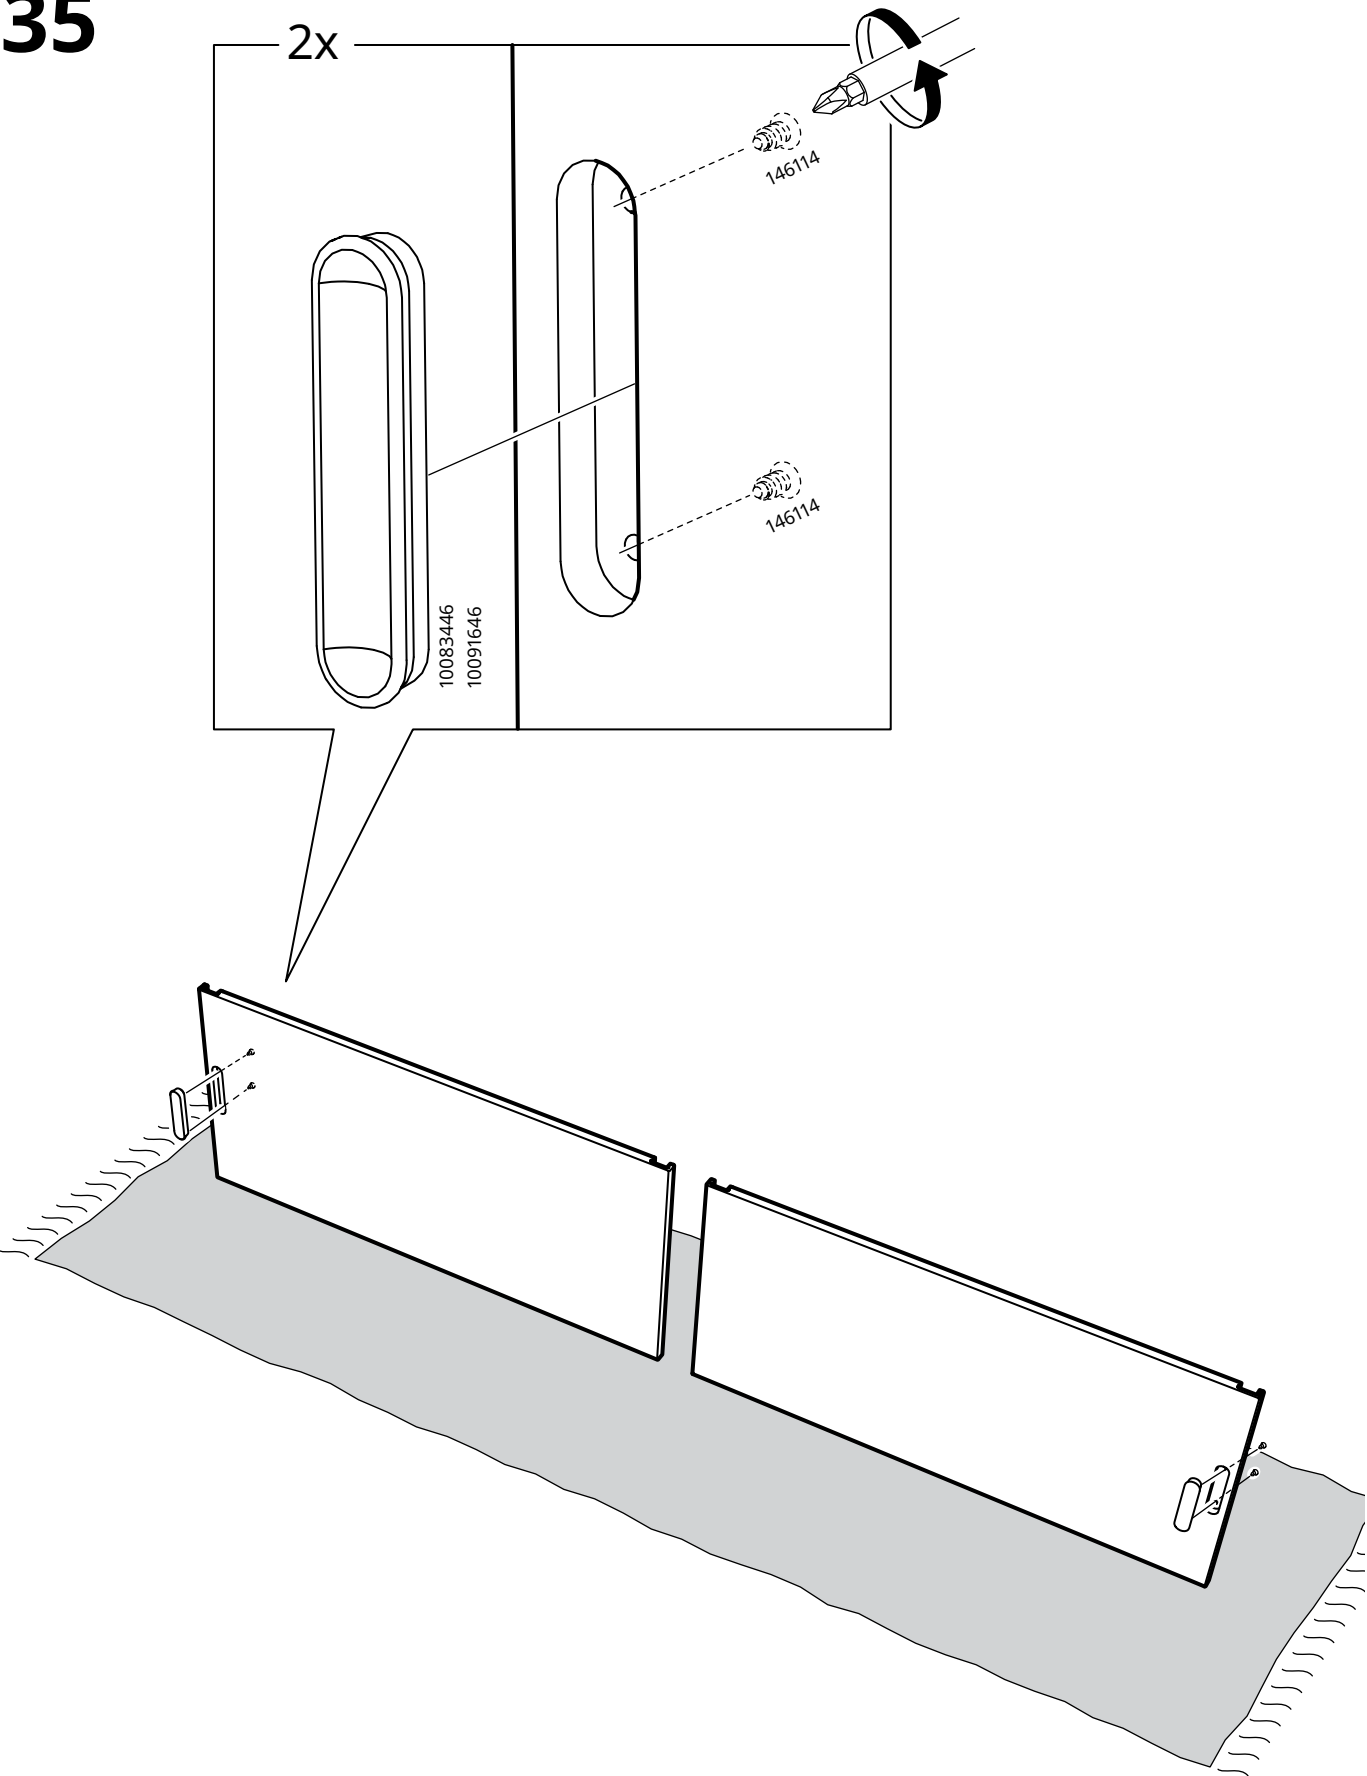 


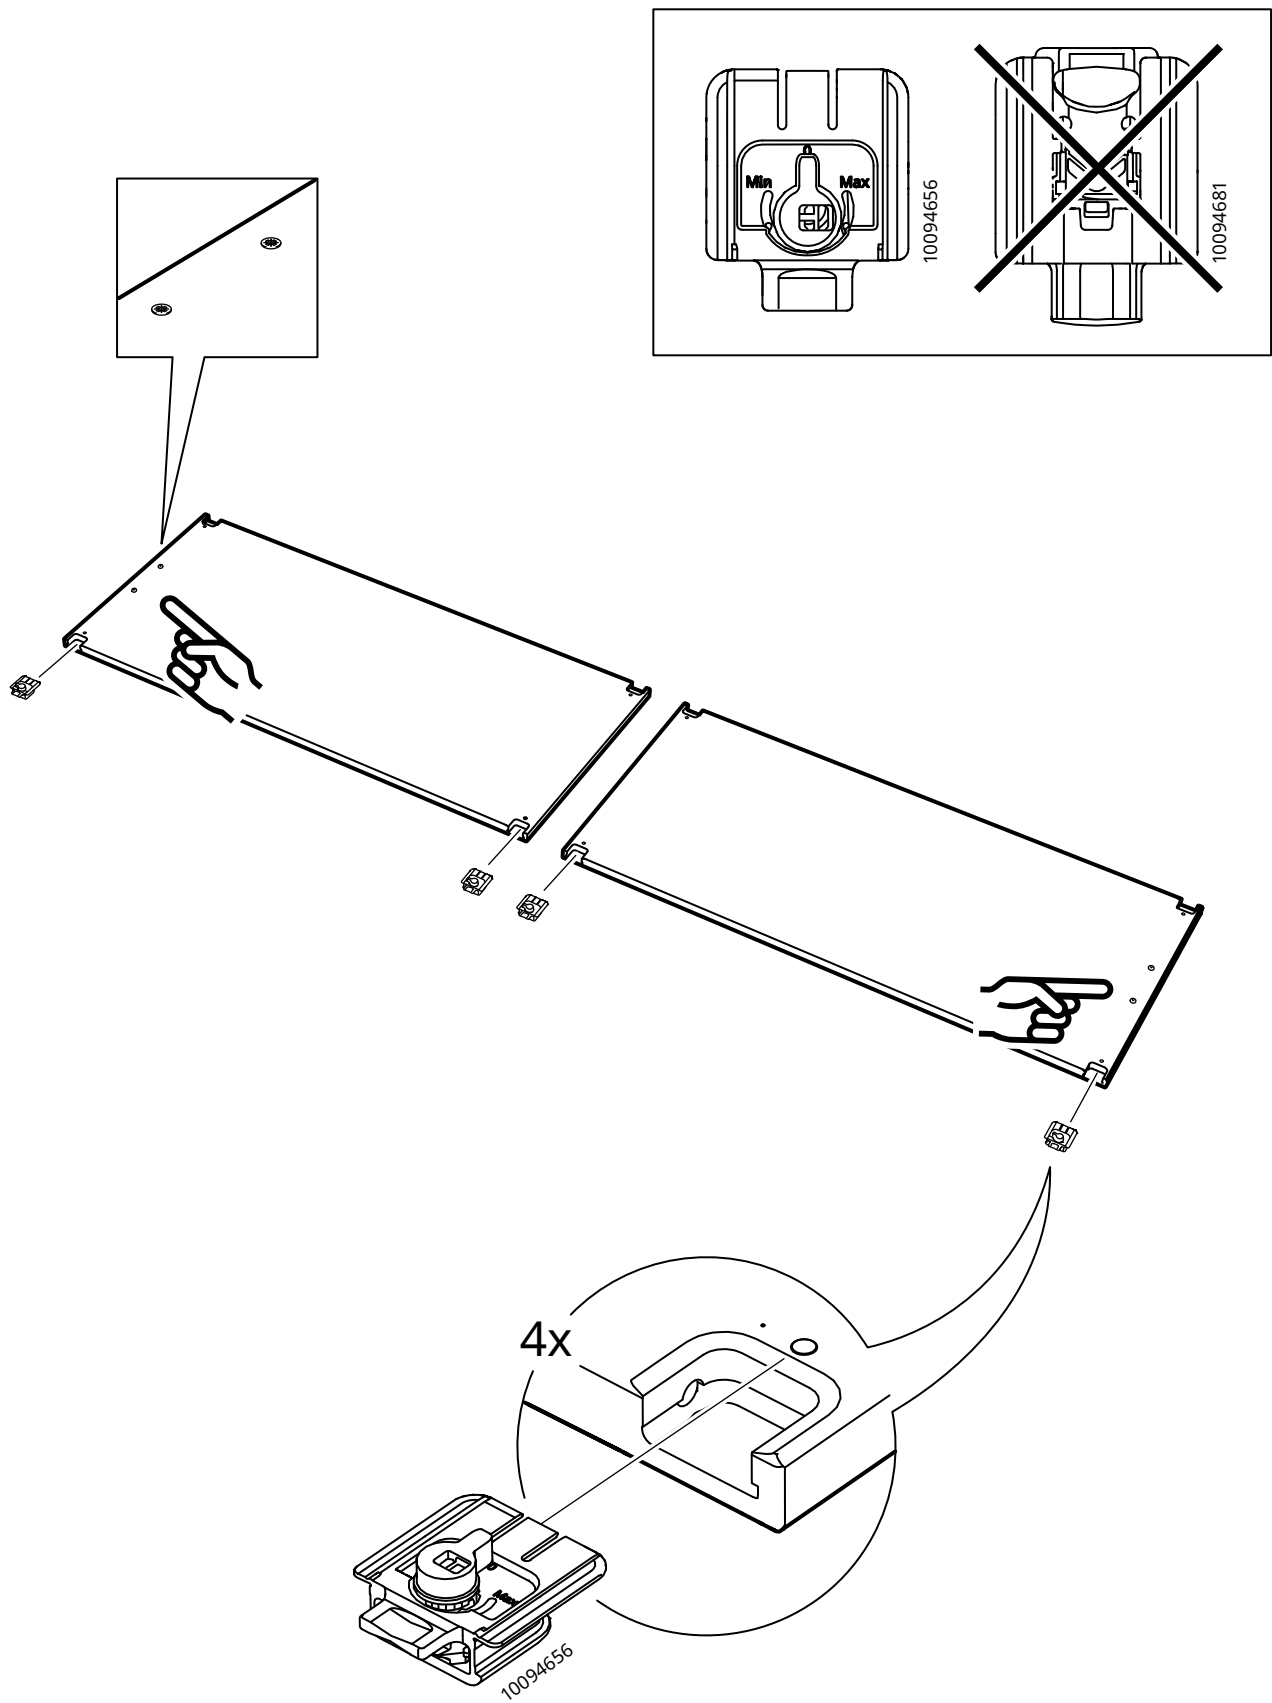 




# 37

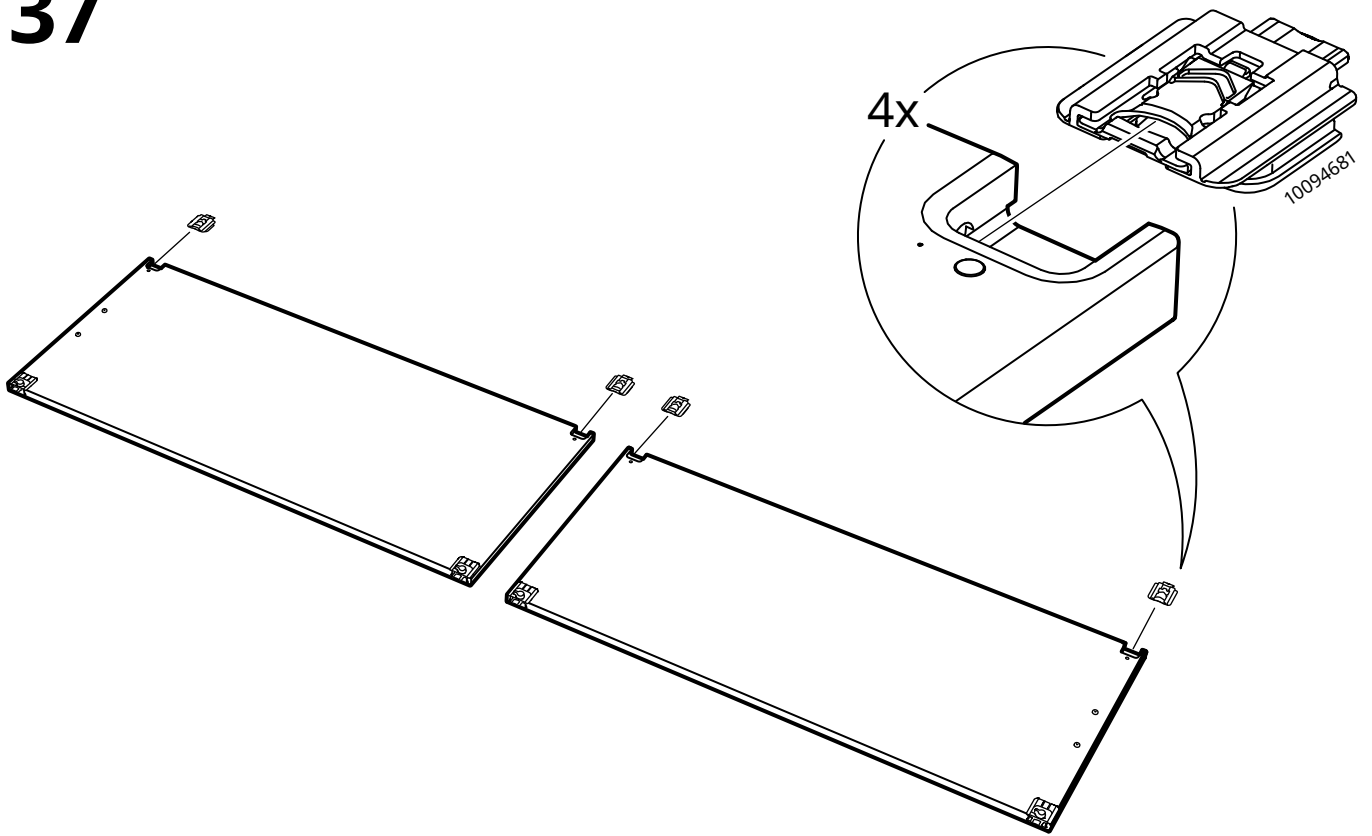 




# 38

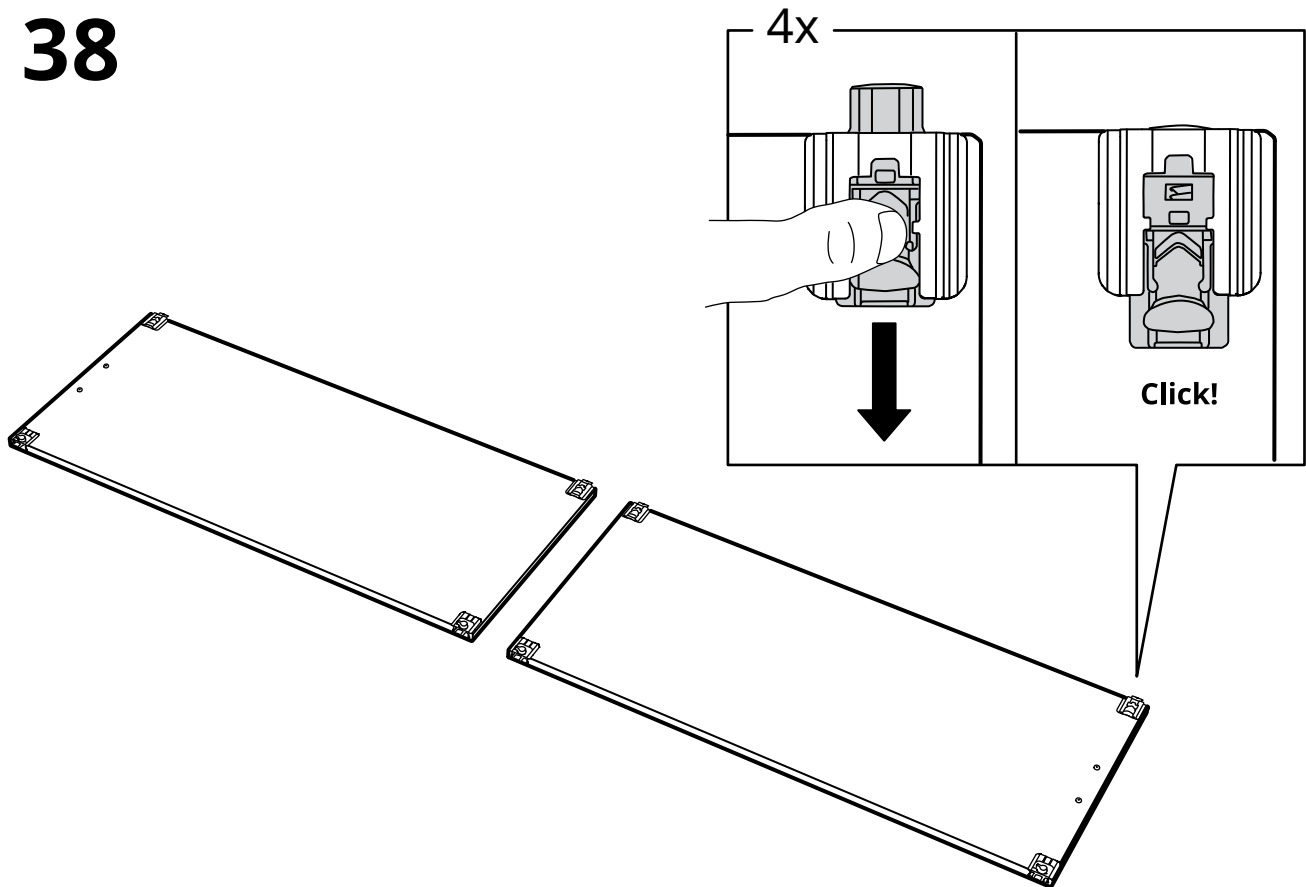 


39

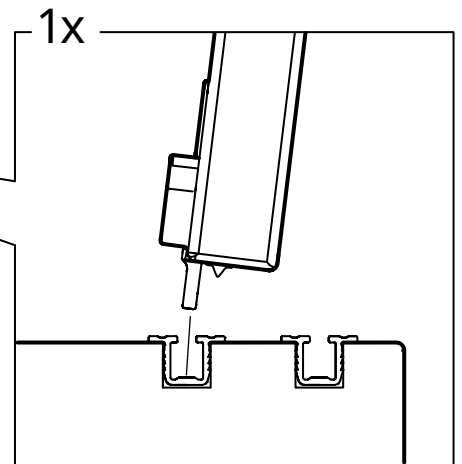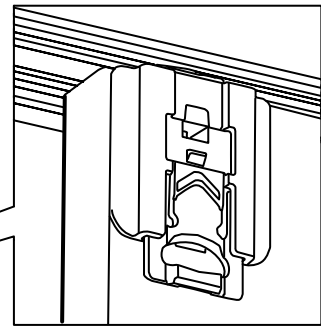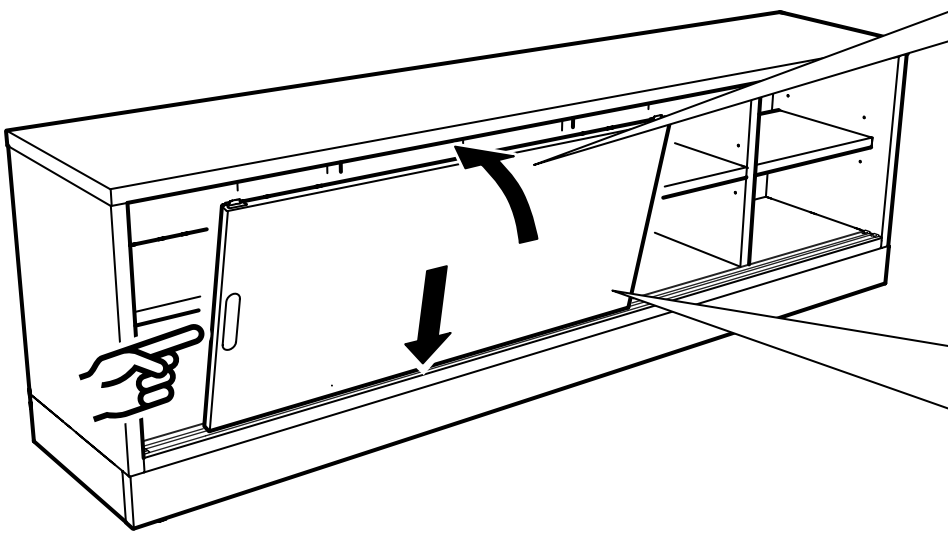   

40

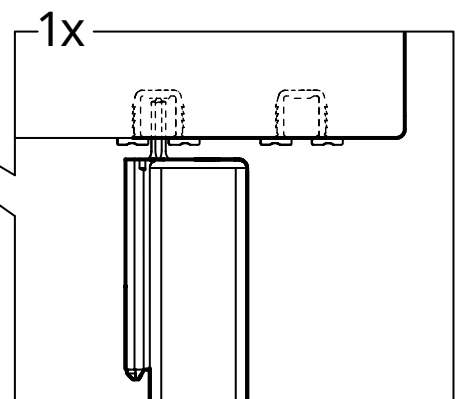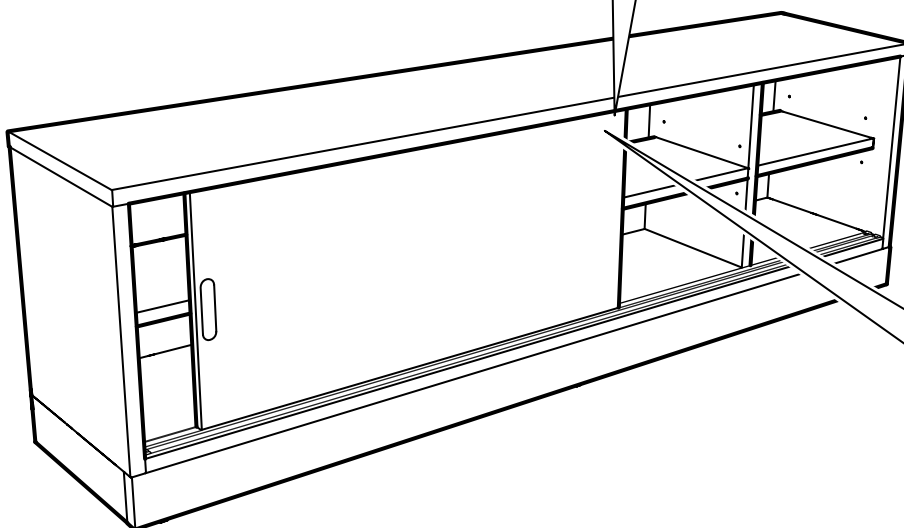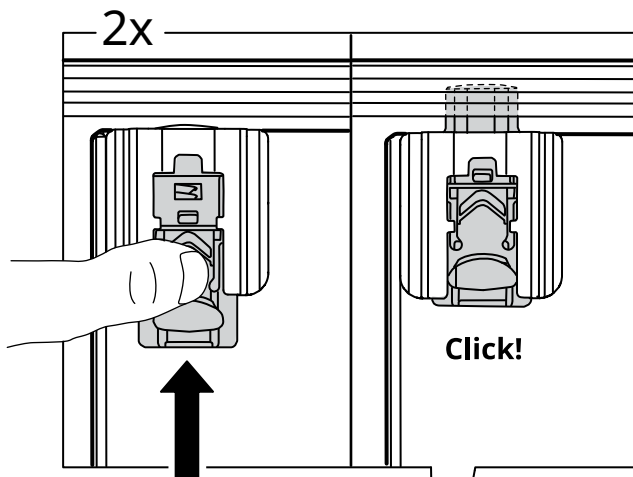   

41

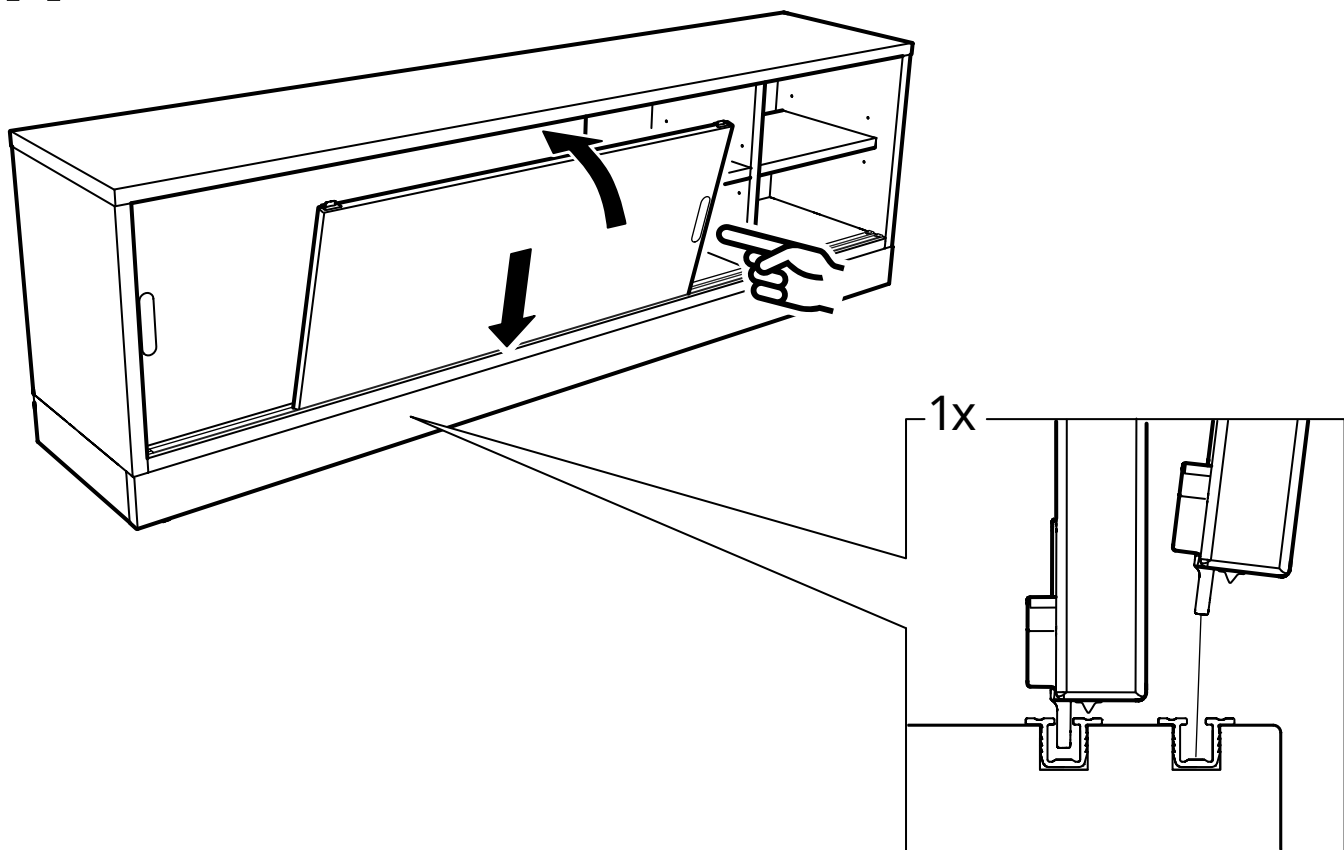 

42

