



BRAKE PIPE CUTTER

MODEL NO: **VS0350**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instruction
manual



Wear eye
protection

1. SAFETY

1.1. GENERAL SAFETY

- ☐ **WARNING!** Ensure Health & Safety, local authority and general workshop practice requirements are adhered to when using this equipment.
- ✓ Use the pipe cutter in a suitable work area. Keep the area clean and tidy and ensure there is adequate lighting.
- ☐ **WARNING!** Always wear approved eye or face protection when using the cutter.
- ✓ Keep children and unauthorised persons away from the work area.
- ✗ **DO NOT** use the cutter for any purpose other than for which it is designed.
- ✗ **DO NOT** use the cutter if any part of it is damaged or missing.
- ✗ **DO NOT** allow untrained persons to use the cutter.
- ✗ **DO NOT** attempt to cut piping when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- ✓ When not in use, clean the cutter and store in a safe, dry, childproof area.

1.2. SAFETY REGARDING BRAKE FLUID

- ✓ Always read and comply with the warnings on the brake fluid manufacturer's container.
- ✓ Wear eye protection and keep skin contact to a minimum. If brake fluid enters eyes rinse with plenty of water and seek medical advice. If swallowed seek medical advice immediately.
- ✓ Dispose of waste brake fluid in accordance with local authority regulations.
- ☐ **WARNING!** Brake fluid will damage paintwork. Any spillage should be flushed with water immediately.
- ☐ **WARNING!** Brake fluid is flammable - keep away from sources of ignition, including hot surfaces e.g. exhaust manifold.

2. INTRODUCTION

Patented design ensures that the spring mechanism maintains the correct cutting pressure on the pipe at all times. Features a smooth screw action and nickel plated blade for increased cutting performance.

3. SPECIFICATION

Model No: **VS0350**
Capacity: Ø4-22mm(1/8"-7/8")
Nett Weight: 0.17kg
Consumables: Pack of two spare cutting blades **VS0350B** ... (Sold Separately)

4. OPERATION

- ☐ **WARNING!** Before using the pipe cutter ensure that you have read and understood the Safety Instructions in Section 1.
- 4.1. Place the pipe to be cut against the two rollers and turn the hand wheel to bring the blade up against the other side of the pipe so that it is held in place under light pressure. Check that the cutter can rotate smoothly around the pipe.
- 4.2. If the pipe to be cut is of a soft formulation, increase the pressure until the mark on the side of the sprung roller mechanism lines up with the 'SOFT' marking on the main body as shown in (fig.1).
- 4.3. If the pipe to be cut is of a hard formulation, increase the pressure until the mark on the side of the sprung roller mechanism lines up with the 'HARD' marking on the main body as shown in (fig.2).
- 4.4. When the pressure is correctly set, begin to rotate the cutter slowly around the tube. Continue to carefully rotate the cutter until the pipe is cut.
- 4.5. If the cutter is cutting too slowly, increase the pressure by turning the handwheel by a quarter turn until the pipe is cut.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

SPRING PRESSURE MECHANISM



SOFT SETTINGS

fig.1



HARD SETTINGS

fig.2

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR

01284 757500

sales@sealey.co.uk

www.sealey.co.uk