



Now Hear Mpow.

Air 2.4G Wireless Gaming Headset

The Air 2.4 GHz Wireless Gaming Headset comes with a 50mm Dual Chamber, which satisfies your need for sound. You can move freely, react faster, communicate clearly, and lead your squad to victory. Born for every game fanatic, and engineered for winning.



Part Number: BH415AR/AS/AD






Product overview	01
Headset Power/ Mic button	03
Headset LED guide	05
Headset charging	06
Basic Setup	07
Headset connection (PC)	08
Headset connection (MAC)	10
Headset connection and configuration (PS4 /PS4 Slim/PS4 Pro/)	12
Headset connection(Nintendo)	14
Headset connection (wired)	15
Troubleshooting Tips	16
Technical Specifications	17



- A. Headband adjustment slider
- B. Detachable noise cancellation mic
- C. Mic mute button
- D. Microphone port

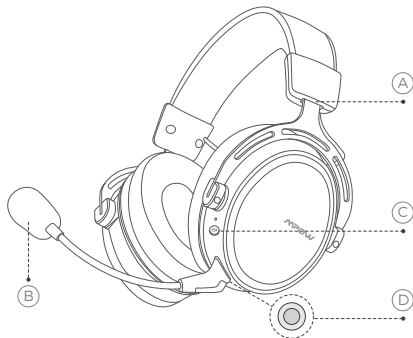



E. Volume wheel

F. Power Button

G. Power LED

H. USB charge port


I. 3.5mm Audio Port

J. USB charge cable

K. 3.5mm headphone cable

L. 2.4G Wireless adapter


M. Wireless status light

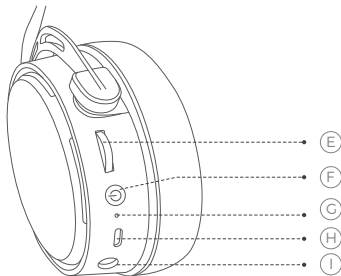

J



 
K



L




Power ON/OFF

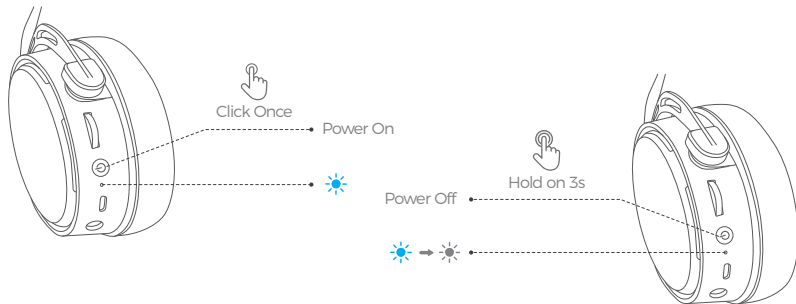






MIC ON/OFF

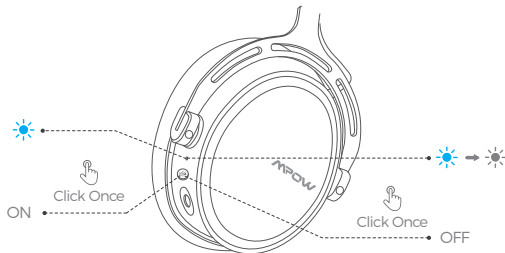




How to Connect

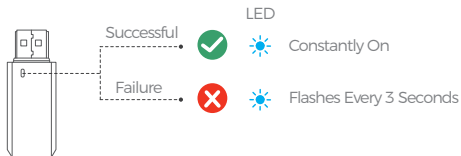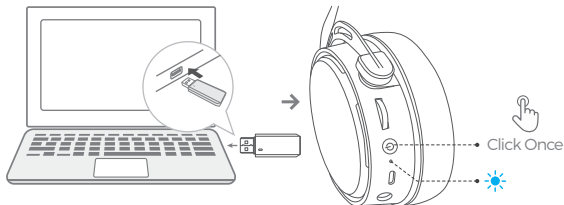

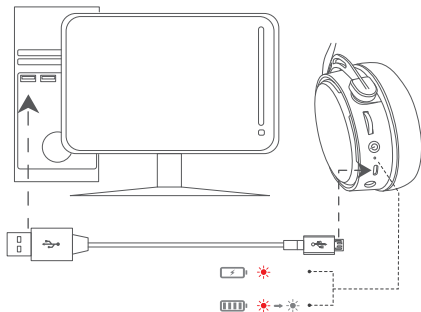

Power LED	Charge status
Breathing	Charging
Off	Charging complete


It is recommended to fully charge the headset before first use.

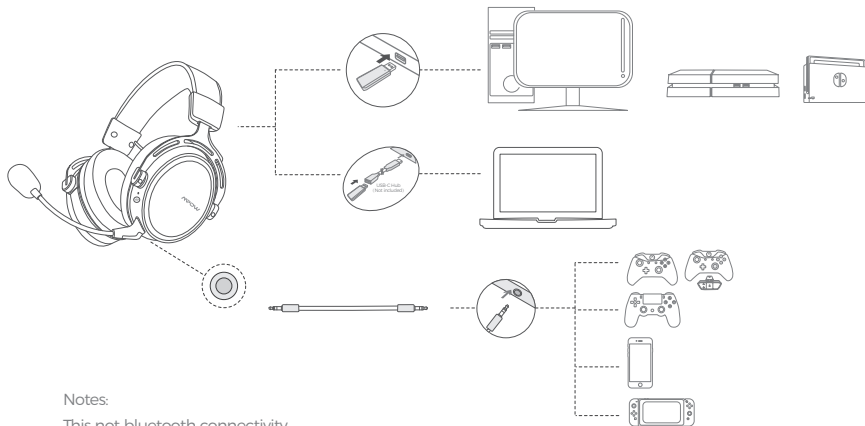

Notes:

This not bluetooth connectivity

2.4G wireless Mode - For PC/Mac/PS4/Nintendo

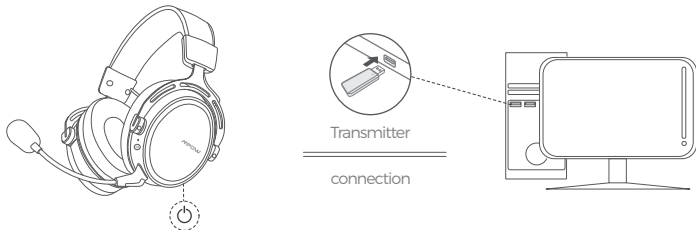

To use the headset wirelessly on your PC:

1. Connect the wireless adapter to a USB port on your PC.
2. Press the power button on the headset for 3 seconds to power on.
3. When the wireless adapter status light is solid and the headset ear cup LED is solid, the headset is connected.


Note: If it is your first time using the headset you may need to set the headset as the default input and output device.




Headset Windows configuration



1.open the 'Control Panel', click on 'All Control Panel Items', right-click on 'MPOW wireless gaming headset' and select 'Set as Default Device'.

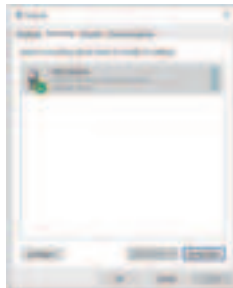

2.Click on the 'Recording' tab, then right-click 'MPOW wireless gaming headset' and select 'Set as Default Device'

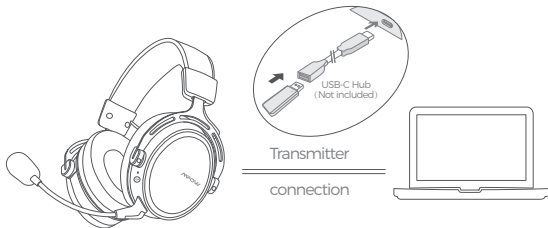

To use the headset wirelessly on your MAC:

1. Connect the wireless adapter to a USB port on your MAC.
2. Press the power button on the headset for 3 seconds to power on.
3. When the wireless adapter status light is solid and the headset ear cup LED is solid, the headset is connected.



Headset MAC configuration


1. Click on 'System Preference..'



3. Click on 'Output', right-click on 'MPOW wireless gaming headset' and select 'Set as Default Device'.




2. Click on the 'Sound', then go to the next step.
2. Click on the 'Sound', then go to the next step.

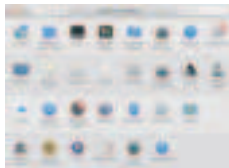

4. Click on 'Input', right-click on 'MPOW wireless gaming headset' and select 'Set as Default Device'.



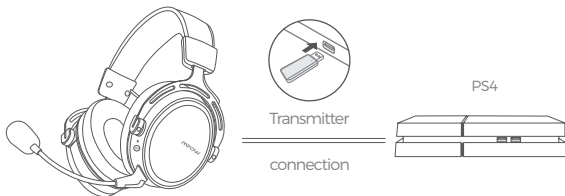

To use the headset wirelessly with PlayStation 4 (PS4)

1. Turn on your PS4 game console
2. Connect the wireless adapter to a USB port on your PS4.
3. Press the power button on the headset for 3 seconds to power on.
4. When the wireless adapter status light is solid and the headset ear cup LED is solid, the headset is connected.



Headset PlayStation 4 configuration

1.Click the 'settings' in the screen.



2.Click on the 'Devices' tab, then go to the next step.




3.Click on the 'Audio Devices' tab, then go to the next step.




4.Click on 'Input Device' and 'Output Device', right-click on 'MPOW wireless gaming headset' and select 'Set as Default Device', adjust the 'volume control (headphones)'.



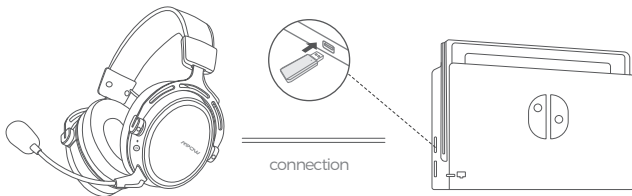

To use the headset wirelessly with Nintendo Switch

1. Turn on your Nintendo Switch Then plug the Switch into the docking station and connect the monitor.
2. Connect the wireless adapter to a USB port on your Nintendo docking station .
3. Press the power button on the headset for 3 seconds to power on.
4. When the wireless adapter status light is solid and the headset ear cup LED is solid, the headset is connected.

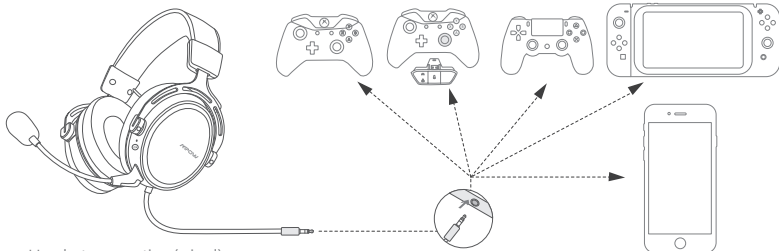

Headset connection (wired)

The headset can be used as a wired headphone with the included 3.5mm audio cable. To use the headset in wired headphone mode:

1. Connect the 3.5mm headphone cable to the headphone port on the headset
2. Plug the 3.5mm headphone cable into your device

Note: The microphone are not functional in this configuration.



TROUBLESHOOTING TIPS

No sound/low sound	
Possible cause	Solution
Volume control turned down	Press the Volume Up button on the Ear Force Headset Audio Controller. If necessary, press the Game button of the Chat/Game Mix.
Loose connector	Confirm that each plug is inserted firmly and fully.
App Problem	Close the active App and re-open it. Alternatively power on/off your Xbox One. At times the Audio Output in a particular Application may need to be reset.

Microphone not working	
Possible cause	Solution
Chat volume control turned down	Press the Chat Button on the Chat/Game Mix of the Ear Force Headset Audio Controller.
Loose connector	Confirm that each plug is inserted firmly and fully.

Voice interrupted	
Weak signal	Check the default sound device is selected for this headset.
	Check the network.

If your issue is not resolved by these steps, please visit: support@xmpow.com or email us through Amazon.



Speaker Sensitivity

99±3dB

MIC Sensitivity

-38±3dB

Standby Time

200H+

Playing Time

17H

Charging Time

3~4H

Battery Capacity

1100mAh

Charging Input

5V  1000mA

Connectivity

2.4GHz Wireless
3.5mm Audio Cable

Frequency

20-20kHz