

RECORD PLAYER

MANUAL INSTRUCTIONS

MODEL:R608



listenservice@outlook.com / www.turntables.vip

*Note: Please read this instruction manual carefully and familiarize yourself with your product
Before using the first time, please retain this manual for future reference*

Dear Customers,

Thank you for purchasing our turntable. Please read and follow these instructions to avoid damage. We do not guarantee any damage caused by improper use of this product, please treat the safety instructions correctly.

Safety Instructions:

This product has been fully tested and adjusted, strictly inspected, and entered the market after passing the quality test. Please use caution via following the instructions. We will not be responsible for the results of any negligence, misuse, abuse, accident, malfunction, software problem, unbranded authorization, and any loss or damage arising out of without our brand's control.

 


Important Safety Instructions Details:

1. Please must be followed the usage safety guidelines.
2. Please keep the instruction manual for future use.
3. Please read all instructions before starting the device.
4. Please do not use this device near water or contact with moisture.
5. Please make sure that no liquid is spilled on the device and the power line jacks are kept clean and dry.
6. Please be careful to move the device to avoid falling from a height, excessive vibration may cause damage to the internal structure.
7. Please do not block the output jack of the device.
8. Please do not place the device near heat sources such as radiators. Do not expose it to sunlight.
9. Please follow the instructions on this information sheet to plug in the device.
10. Please do not disassemble the internal structure which will cause damage and the internal circuit without permission. This device has the function of connecting overload protection (safety device). If you encounter any problems, please contact our manufacturer technicians first.
11. The power cord should be unplugged when it is not needed to use, and it cannot be connected to the power supply for a long time.
12. Equipment should be serviced by qualified personnel under the following conditions:
 - The power cord is missing or damaged.
 - The liquid splashed into the device or dropped into the device.
 - The device is exposed to rain.
 - Without obvious external changes, but the device does not work properly.
 - The device speakers is broken.
13. The user shall not attempt to maintain equipment beyond that described in this information sheet.

Product Structure and Component:

1. Dust cover
2. 45 RPM adapter
3. Tone arm lift-lever
4. Auto-stop switch control
5. Speed selection (33, 45, 78RPM)
6. Cartridge
7. Power LED light
8. Power switch&Volume control
9. Aux input&Headphone jack
10. Louder Speakers- R&L (behind the Speaker-cover)
11. DC power jack (5V 1000mA)
12. RCA line output (R&L)
13. Aux in 3. 5mm jack

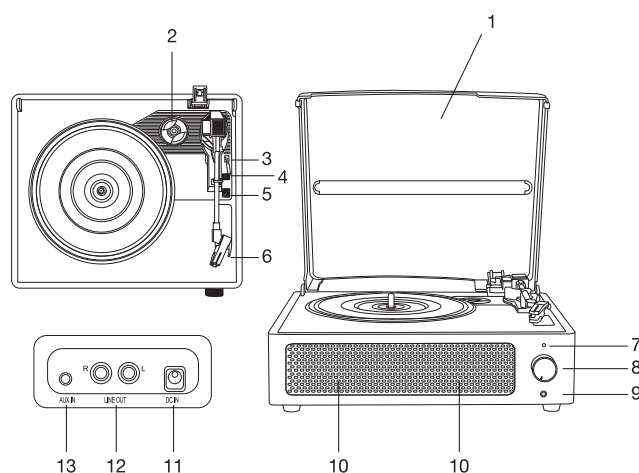

Turntable Specification:

Item	Specification
Item model	R608
Drive System	Belt Drive
Rated voltage(adaptor)	100-240V
Speed	33 1/3, 45 and 78 RPM
Bluetooth Input	Yes
Bluetooth Output	NO
Bluetooth version	V4.2
Bluetooth effective range	≤10m
Frequency response range	120Hz~16kHz
Speaker output power	3W*2
Speaker impedance	4Ω
Operating temperature range	-10°C~+40°C
Adaptor	5V 1A

Initial Set-up Connection:



Make sure that the mains voltage of your home corresponds to the operating voltage of the unit (support 200~240V). Your unit is ready to be connected to a mains voltage of 5V 1A DC adaptor.

Vinyl Record Playing:

NOTE:

Remove the stylus protector.

1. Place the record on the turntable, use the 45 rpm adaptor if required.
2. Set the speed selector to the correct position, depending on the record to be played.
3. Push the lift lever up to raise the tone arm from the arm rest, and then slowly move it to the record side. The turntable will start to rotate. (Turn off the automatic stop switch, the turntable will keep on rotating)
4. Put down the lift lever to drop the tone arm and touch the record gently. Record player playing starts now.
5. Adjust the volume to the desired level.
6. At the end of a record or if you need to stop manually, push the lift lever upward to raise the tone arm and move it to the arm rest, and then put down the lift lever.

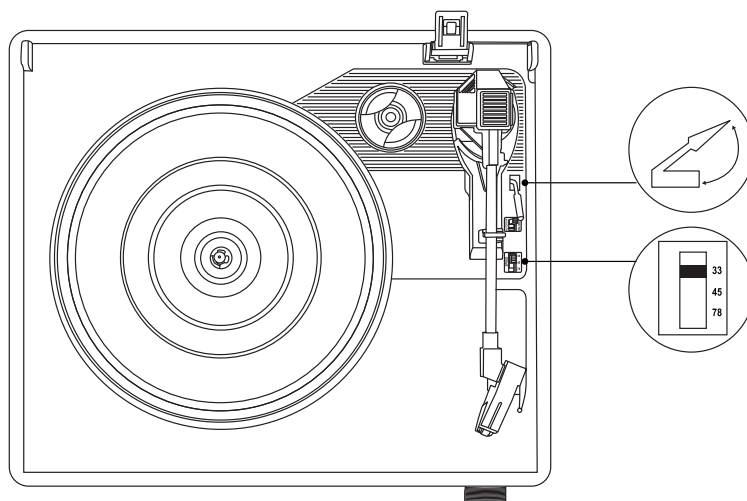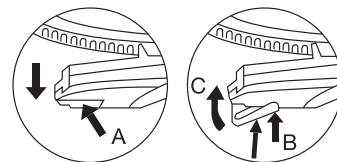

NOTE:

Do not manually lower the tone arm onto the LP turntable to avoid LP record and stylus damage!

Auto Stop Button:


- When the auto stop switch is turned ON, the turntable will continue to spin no matter LP playing or not.
- When the auto stop switch is turned OFF, the turntable will STOP to spin after playing ending.

Bluetooth Receiver Connect:

1. When the auto stop switch is on and the Tone arm is in arm holder, then you can activate the Bluetooth. In Bluetooth mode, the indicator light is blue and flashes quickly.
2. Put your other Bluetooth device (such as Mobile Phone or Personal Computer) into Bluetooth search mode.
3. Your device should show "Turntable" in the list, and then select it for pairing. And wait for some seconds when Bluetooth pairing is successful, the indicator light is blue and remains lit. The lovely songs on your Bluetooth device will be transferred to turntable to sound and control.

NOTE:

This record player only supports Bluetooth input, not Bluetooth output. If you want to connect an external speaker, please use the 2-male to 1-male RCA cable to connect it.

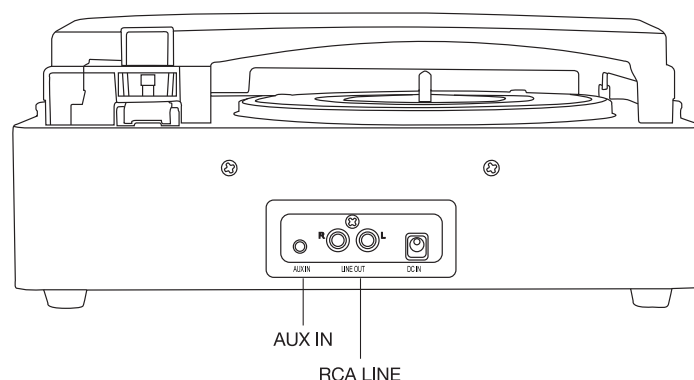

Audio Jack/Aux Input Playing:

Put the tone arm back to arm rest, then connect the external audio device (such as CD player) through the "AUX IN" jack on the back panel. Audio signal from the external audio device can be played through the system. The player will switch into "AUX IN" play mode automatically once insert the audio cable into the Aux in jack.

RCA Line Output to Amplifier Connection:

You can listen to your new turntable using the built-in speakers. If you may wish to connect it to your existing Hi-Fi system, you can connect your amplifier via RCA line (not supplied).


- Red plug into R/H channel input.
- White plug into L/H channel input.

Cleaning and Maintenance:


NOTE:

- Before deaning or maintenance, always switch off the device.
- Don't use cleaning solvents or abrasives.
- Don't clean the inside of the device.
- Don't attempt to repair the device. If the device does not operate correctly, replace it with a new device.
- Don't immerse the device in water or other liquids.


Replacing the Stylus Needle:

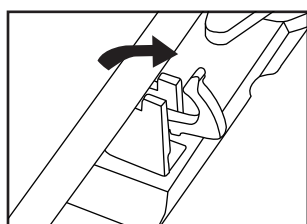


Push the arm lock to release the tone-arm

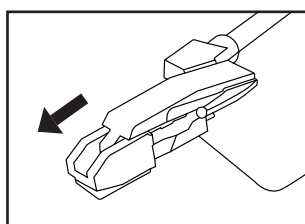

Take off cap of the cartridge to expose the needle out

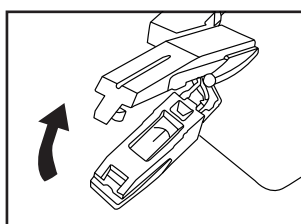

Separate the cartridge from the socket lightly

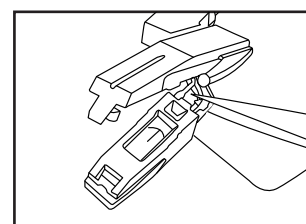

Take off the audio-line from the cartidges completely

To fit a new one just in opposite deals, insert the audio-line accordingly, and install the cartridge to the socket lightly.

NOTE:

- Please exercise extreme care while performing this operation. To avoid the tone arm and audio line wires damage.
- We would also point out that your stylus should be replaced periodically (approximately every 250 hours).
- We advise you to clean your records with an antistatic cloth to gain maximum enjoyment from them and to make them last.
- Dust the stylus from time to time using a very soft brush dipped in alcohol (brushing from back to front of the cartridge)

Environmentally friendly treatment:

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal recycle it responsibly to promote the sustainable reuse of material resources.

