

INSTRUCTION MANUAL



7 FINS OIL FILLED RADIATOR



MODEL 330000LCK

PLEASE READ THE MANUAL CAREFULLY BEFORE OPERATING
YOUR PRODUCT AND RETAIN IT FOR FUTURE USE

IMPORTANT SAFEGUARDS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including the following aspects:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burning, do not touch the hot surfaces when in use. If necessary, use handles when moving this heater. Combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains should be kept at least 3 feet (0.9m) away from the heater.
3. This heater must not be used or operated by children or persons with poor physical, sensory or mental abilities.
4. Always unplug the heater when it is not in use.
5. Do not operate the heater with a damaged cord or plug. Flat the equipment to avoid dropping or been damaged in any manner. Discard the heater or return heater to authorized service sites for examination, adjustment, or repairing
6. Do not use outdoors.
7. This heater is not suitable for indoor spaces, like bathrooms, laundry areas and similar places. Never locate the heater where it may

fall into bathtub or other water container.

8. Do not cover the cord with carpeting, scatter rugs, or similar coverings. Do not route cord under furniture or appliances. Do not keep the cord in busy areas or the appliance will be tripped over easily.
9. To disconnect the heater, pull out the plug after turning off the heater.
10. Do not insert or allow any objects to enter any ventilation or exhaust opening as this may damage the heater or cause electric shock or fire.
11. To avoid fire hazard, do not block air intakes or exhaust in any manner. Do not use it on soft surfaces, like a bed or where openings may be blocked.
12. The inside of the device heats up when using it. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
13. Please follow the instructions in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or personal injury.
14. **CAUTION:** Plug the heaters directly into a wall outlet/receptacle. Never use them with an extension cord or relocatable power tap (outlet/power strip).
15. This heater can reach 12.5 amps during operation. To prevent circuit overloaded, do not plug the heater into a circuit that already

has other appliances working.


16. It is normal for the plug to feel warm when the appliance is working; however, a loose fit between the AC outlet (receptacle) and the plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace the loose or worn outlet.
17. The output of this heater may change and its temperature may become intense enough to burn your skin. This heater is not recommended for persons with poor sensitivity to heat or poor reaction to avoid burns.
18. Don't leave the heater unattended.
19. Your warranty will be voided if you attempt to repair or adjust any electrical or mechanical functions of the heater. There are no user serviceable parts inside of the heater. Only qualified person can perform the repair or adjustment.
20. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

SAVE THESE INSTRUCTIONS

SPECIFICATION

Model No.	330000LCK
Voltage	120V~60Hz
Current	Maximum continuous draw: 12.5 Amps.
Output	5200 BTUs
Power	LOW = 600 Watts, MED = 900 Watts, HI = 1500 Watts Tolerances on all specifications: Approximately +5%, -10%

PRODUCT STRUCTURE DIAGRAM

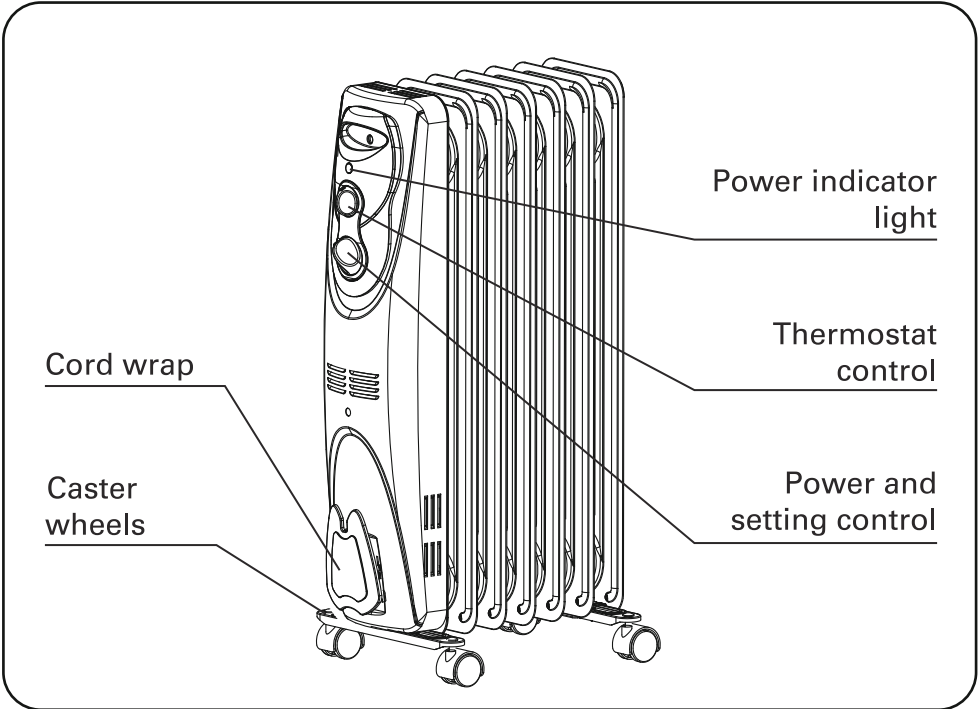


IMPORTANT! The heater is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way for safety. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your outlet. DO NOT defeat the purpose for safety of the polarized plug.

UNPACKING AND SET-UP INSTRUCTIONS

Unpack your heater and find the wheel holding plates and butterfly nuts between the fin assemblies.

1. Make sure the heater is unplugged the power and the setting control is in the "0" (OFF) position.
2. **TURN THE HEATER UPSIDE DOWN LIKE FIG.1.**
3. Attach the wheel holding plates onto the heater as Fig.1 shows. One is fixed between the last two fins and the other one is fixed next to metal control box.
4. Insert the butterfly nuts and tighten them securely.
5. **TURN THE HEATER UPRIGHT.**

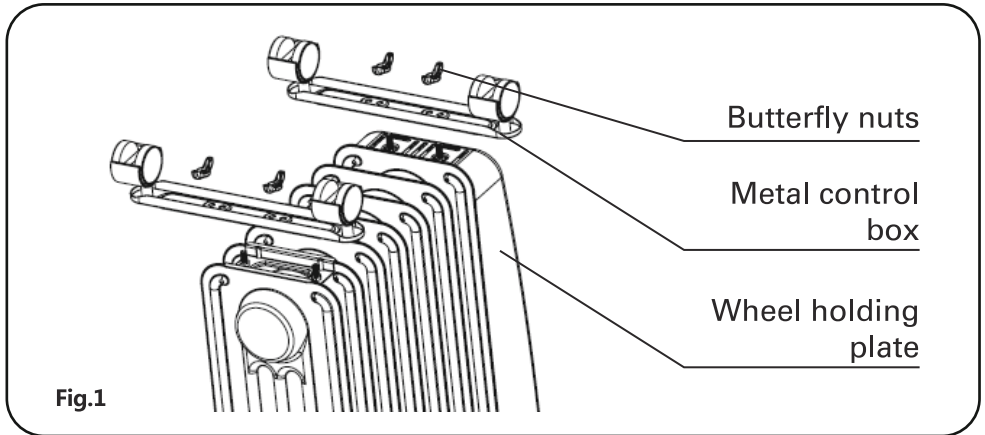

Your heater is now ready to be used.

CAUTION: Risk of fire – Do not operate the heater without wheel assemblies attached. Operate the heater in upright position only (wheels at the bottom, controls at the top). Any other positions may cause danger.

OPERATION INSTRUCTIONS

1. Keep the heater on a firm level surface free from obstacles and at least 3ft. away from any wall and any other objects such as furniture, curtains, plants and combustible material.
2. With the **Power and Setting Control** at the " OFF " position, plug the heater into a grounded 120V outlet.
3. Turn the heater "ON" by turning the **Power and Setting control** clockwise to your desired power setting (LOW, MED, HIGH). The Power Indicator Light will illuminate.
4. Turn the **Thermostat Control** to your desired setting from "MIN" to "MAX" .

Setting for Optimum Comfort: When the temperature of the room is right, turn the **Thermostat Control** counter-clockwise slowly until the heater is turned off. If the temperature of the room is the same with the point of the thermostat, at this setting, the thermostat will automatically turn on and off to maintain this selected temperature.

CAUTION: This heater includes an Overheat Protection System that shuts off automatically if it overheats due to abnormalities. If this occurs, turn the heater "OFF" and unplug it, then check and remove any objects on or near the heater. Let it cool for a few minutes, then plug in and resume normal operations.

NOTE: This heater includes an Overheat Protection System that shuts off automatically if it overheats due to abnormalities. If this occurs, turn the heater “OFF” and unplug it, then check and remove any objects on or near the heater. Let it cool for a few minutes, then plug in and resume normal operations.

To Reset the Heater

- Unplug the heater and wait the device to cool down for about 30 minutes.
- After 30minutes, plug in again and it will operate normally.
- Place the heater on firm level surface.

ADDITIONAL FEATURES

This heater has additional features:

1. The cord can be stored up for tidy.
2. Convenient Carry Handles and Heavy-Duty Caster Wheels allow for easy moving from room to room.

TROUBLESHOOTING

If your heater fails to operate, please follow these instructions:

1. Ensure that the circuit is smooth and the fuse is working properly.
2. Be sure that the heater is plugged in and the electrical outlet is working properly.
3. Check for obstacles. If you find any obstacle, turn the heater “OFF” . Unplug the heater and wait a few minutes to cool it down. Then, carefully remove the obstacles, plug in and turn it on again by referring to the **OPERATING INSTRUCTIONS**.

CLEANING AND STORAGE

It is recommended that the heater should be cleaned at least one time during the operating season in order to provide the optimum level of performance. **ALWAYS SWITCH OFF AND UNPLUG THE HEATER BEFORE CLEANING.** Be sure to save the box for storage.

1. Turn the heater “OFF” , unplug it and wait for the heater to cool down.
2. Use a dry cloth to clean only the external surfaces of the heater.
3. Do not use any cleaning agents or detergents.
4. Never immerse the heater in water.
5. Pack the heater in the original carton and store it in a cool and dry place.

DISPOSAL

YOU CAN HELP PROTECT THE ENVIRONMENT!



Please to respect the local regulations: place the wasted electrical appliances to a certain waste disposal center.

WARRANTY: 1 YEARS



AIGOSTAR INC
489 Yorbita Rd , City of Industry, CA 91744 (UNIT A)
82-4592385

[HTTP://WWW.AIGOSTAR.COM](http://www.aigostar.com)

MADE IN P.R.C