

单面尺寸210*297mm

8. Fuse Maintenance

This product is equipped with a self-resetting fuse. When the product is overloaded or improperly used, the self-resetting fuse will automatically cut off power for 15-20 seconds and then restart. The self-resetting fuse of this product is installed under the seat. In order to avoid the fuse to cut off the power supply:

- This product cannot be overloaded, the maximum load is 66 lb / 30kg.
- Do not drag anything behind the product.
- Do not allow any water or other liquids to immerse the circuit or any of the electrical components such as batteries.

Do not change the structure and circuit system of this product without authorization. Any inspection and repair work must be performed by professionals or under the guidance of technical personnel.

CAUTION

- Non-rechargeable batteries are not to be recharged;
- Rechargeable batteries are only to be charged under adult supervision;
- Rechargeable batteries are to be removed from the toy before being charged;
- Different types of batteries, new or used batteries are not to be mixed;
- Batteries are to be inserted with the correct polarity;
- Only batteries of the same or equivalent type as recommended are to be used;
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short-circuited;
- Do not mix old and new batteries;
- Do not mix alkaline batteries, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- Use alkaline batteries for the best performance and longer life.

WARNING:



1. Suitable for ages: 37-95 months.
2. Keep away from fire.
3. Maximum user weight is 30 kgs.
4. To reduce the risk of injury, adult supervision is required. Never use in roadways. Near motor vehicles. On or near steep inclines or steps, swimming pools or other bodies of water.
5. Always wear protective clothing and shoes.
6. Not to be used in traffic.

PRECAUTIONS

1. Read the assembly & operations manual before use.
2. Don't wash the vehicle with water, only clean with a dry cloth.
3. Assembly of this vehicle must be done by an adult.
4. Check the vehicle periodically for damages. The vehicle is not to be used until any damage has been repaired/replaced.

Conforms to / conforme aux normes / cumple con las normativas ASTM F963 & D4236.

Made in Ningbo, China / Fabriqué en Ningbo, Chine / Fabricado en Ningbo, China


Product: FR2006 Lot: 042021

IMPORTED BY FLAT RIVER GROUP LLC
306 REED STREET • BELDING MI 48809
UNITED STATES

Specifications, colours and contents may vary from illustrations / les spécifications, les couleurs et le contenu peuvent varier des illustrations / las especificaciones, colores y contenido pueden variar de las ilustraciones.

Ride On Bumper Car with 360 Rotation

Item number: FR2006

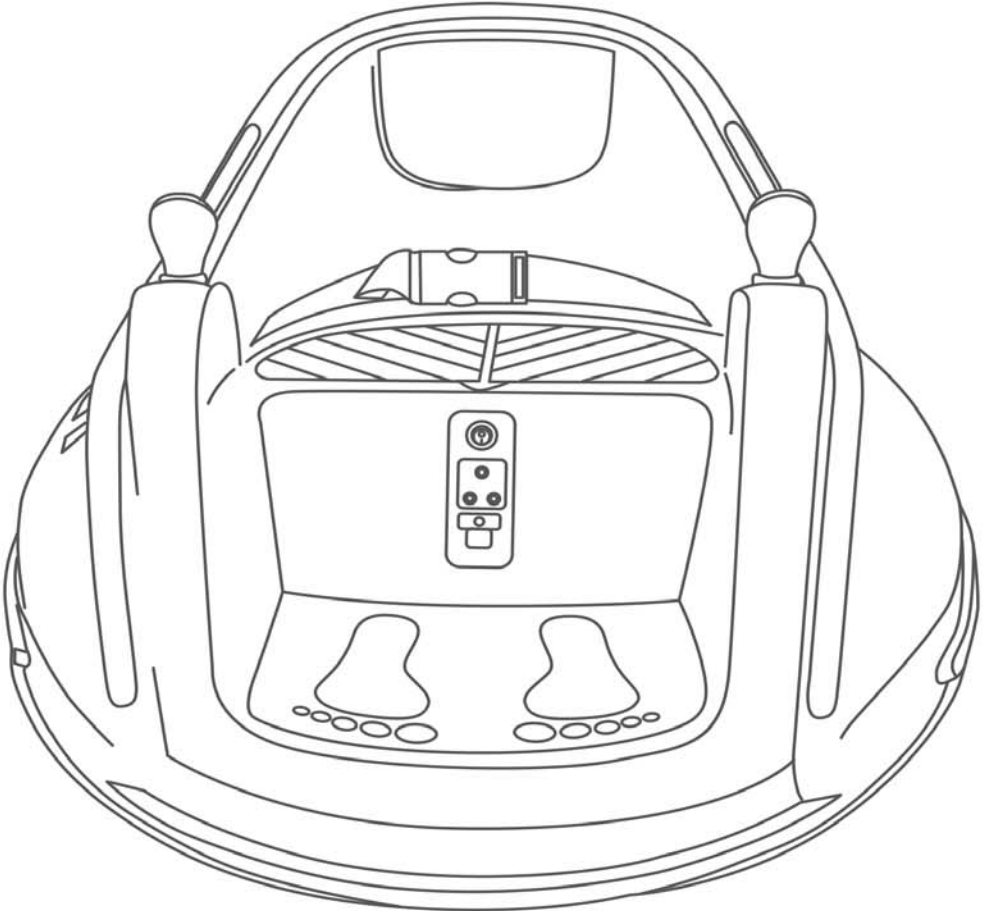

Instruction Manual

This product is packed with the battery disconnected. Connect the battery before use. This manual contains important safety, performance and maintenance information. Read the manual carefully before allowing your child to ride your new Ride On Bumper Car toy. Keep this manual because it contains important information.

**WARNING:**
CHOKING HAZARD. Small parts. Not for children under 3 years.

**AVERTISSEMENT:**
RISQUE D'ÉTOUFFEMENT. Petites pièces. Ne convient pas aux enfants de moins de 3 ans.

**ADVERTENCIA:**
PELIGRO DE ASFIXIA. Piezas pequeñas. No apta para niños menores de 3 años.

3+

Problem	Possible Reason	Solution
Vehicle does not move	Disconnected / Badly connected Battery	Reconnect the battery
	Fuse protection	Replace with a new fuse
	Low Battery	Fully charge the battery
Vehicle does not run very long	Low Battery	Fully charge the battery
	Old Battery	Replace battery if necessary
	Low Battery	Fully charge the battery
Vehicle runs very slow	Vehicle is being used in harsh environment	Avoid using the vehicle in harsh environment
	Vehicle is overloaded	Make sure user's weight is under 60 lb / 30 kg
	Old Battery	Replace battery if necessary
Battery does not charge	Disconnected / Badly connected Battery	Reconnect the battery
	Charger not working	Replace the charger
	Charger feels warm with charging	Normal

7. Troubleshooting

• Clean the product with a cloth. Use a non-wax furniture polish to restore shine to plastic parts. Do not use abrasive cleaner.
• Do not clean the product with water or immerse any parts in water or other liquid.
• Occasionally use lightweight oil to lubricate moving parts.

6. Care and Maintenance

2. Product Specification

Motor: 6V/25W*2
Battery: DC 6V 4.5AH
Charger: 6V 500mA / 6V 700mA
Speed: 3km/h
Recommended for ages: 3-8 years
Maximum user weight: 66 lb / 30 kg
Dimensions: 69*69*40 cm (L*W*H)

Power mode: rechargeable
Battery life: 300 times
Battery (temperature tolerance): 104°F
Max charging time: 10 hours
First charging time: 4-6 hours
Battery charge time: 8 - 12 hours

1. Safety Instruction

When using an electrical product, basic safety precautions should always be followed including the following.

Read all instructions carefully before use.

- To protect against electrical shock, do not immerse cord, charger, transformer, battery, or the product in water or other liquid.
- Only use charging devices, transformer, and battery provided or recommended by the manufacturer.
- For your child's safety, the product should be assembled by an adult.
- This toy is not intended for children below 37 months.
- Close supervision is necessary when your child is using the product.
- Unlatch the battery if not used for a long time.
- Do not use this product as a traffic tool.
- Do not use this product on a public road, raceway, by the swimming pool, or at any potentially dangerous places.
- Do not use this product on slippery surfaces.
- Maximum user weight for this product is 66 lb / 30 kg.
- Do not change, modify or add electrical wiring on this product.
- Avoid using this product in a tight environment to prevent damage to the product or injury to the user.
- Do not use this product in the dark. Only operate this product during daytime or in well lit areas.
- For your child's safety, please make sure to fasten the seat belt when using this product.
- A helmet and safety gear are recommended when using this product.
- To avoid accidents, do not stand on the product. Sitting is the only permissible position when riding in the product.
- When charging you must turn off the power switch.
- It is recommended to charge 4-6 hours before first use, but no more than 10 hours.
- When the speed of the vehicle is significantly slowed during normal driving, the battery power is insufficient. Please charge it in time.
- Please charge 8-12 hours after each use, but do not exceed 20 hours.

5. Remote Controller

Pairing Instruction

1. Turn on the power of the ride-on car, press and hold the pairing button until the speed indicator light switches on without flashing.
2. Release the pairing button, and the speed indicator light will switch off.
3. If the speed indicator light switches on again, then the pairing is successful; if not, please repeat steps 1 and 2.
4. One successful pairing is all you need, no more pairings are needed in later use.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

6. Care and Maintenance

- Check the product regularly and make sure there are no missing or loose parts. Re-tighten any loose parts if necessary.
- Make sure there are no cracked or broken plastic parts.
- When not using store the product away from any heat source, cover it with a tarp and away from wet weather.
- Turn off the product and disconnect the battery if the product is not in use for a long period of time.

4. User Instruction

Operating the vehicle

WARNING:

Constant close supervision by an adult is needed when your child is operating the vehicle.

Release the control sticks back to the center position to stop.

Push or pull the control sticks to move the vehicle.

Press the power switch to turn on the vehicle.

5. Remote Controller

Features

- Supply voltage: 2 x 1.5V
- Frequency: 2450 MHz

Button description

Forward
Backward
Left
Right
Speed
Brake
Pairing
Speed Indicator Light

3. Parts and Features

1. Vehicle Body

2. Seat Cover

3. Seat Belt


4. Control Stick
5. Power Button

6. Light Button

7. Horn Button

8. Music Button
9. Charging Port

10. Remote Control

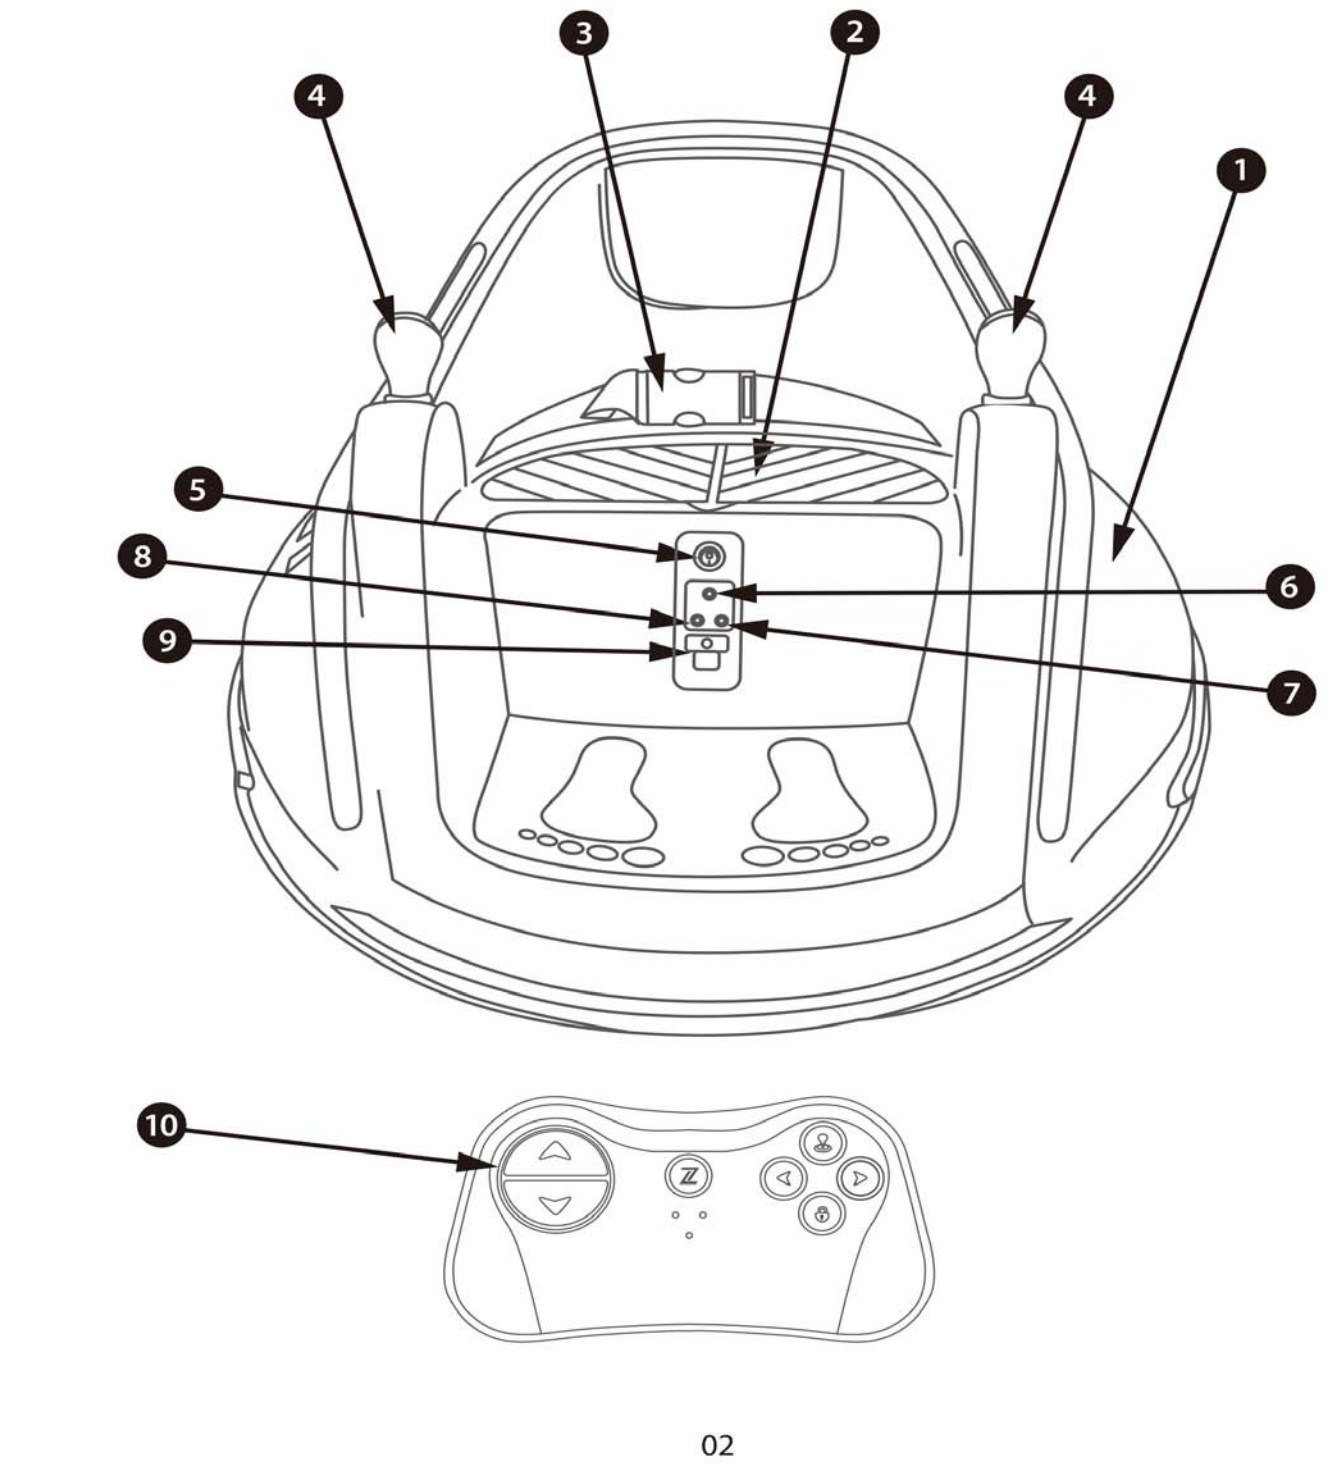

4. User Instruction

For first use, open the seat cover and insert the wires into the socket, red to red, black to black.

While connecting the connectors to the storage battery, make sure they are connected in correct polarity.

Unplug the battery terminal (red to red, black to black).

Unplug the battery terminal (red to red, black to black).

Replace the seat cover and tighten the screws.

Charging the battery

Plug the charger into the charging port.

Insert the charger's power plug into a stable matching AC power as shown above.

Make sure the battery and charger are not damaged. Do not charge if any sign of wear or damage is found.

Do not charge the battery for more than 10 hours.

Do not charge the battery for 4-6 hours.

Left: Direct the ride-on car to turn left.

Right: Direct the ride-on car to turn right.

Speed: Adjust the speed of the ride-on car's movement as low, moderate or high.

Brake: Immediately stop the ride-on car and render it immovable until unlocking.

07

06

01

05

02

04

03

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.