

⚠ CAUTION
PINCH POINT – Keep fingers clear of this area at all times. Failure to observe this warning may result in loss of fingers or other serious injury. Only adjust hinges under full adult supervision. Net is under tension which may cause a rapid and unexpected change in the angle of both the hinge and tubing.
KEEP FINGERS CLEAR AT ALL TIMES.



WARNING:

Use extreme caution when assembling the net to the frame. The bungees will be under extreme tension and must be attached carefully. Adult assembly is strongly recommended.

Franklin Sports Inc.
Stoughton, MA 02072
Made In China

Franklin®

Major League Baseball trademarks and copyrights are used with permission of Major League Baseball. Visit MLB.com.


Franklin®



68in x 48in (173cm x 122cm)

DELUXE LG RETURN

ITEM NUMBER: **24807X**

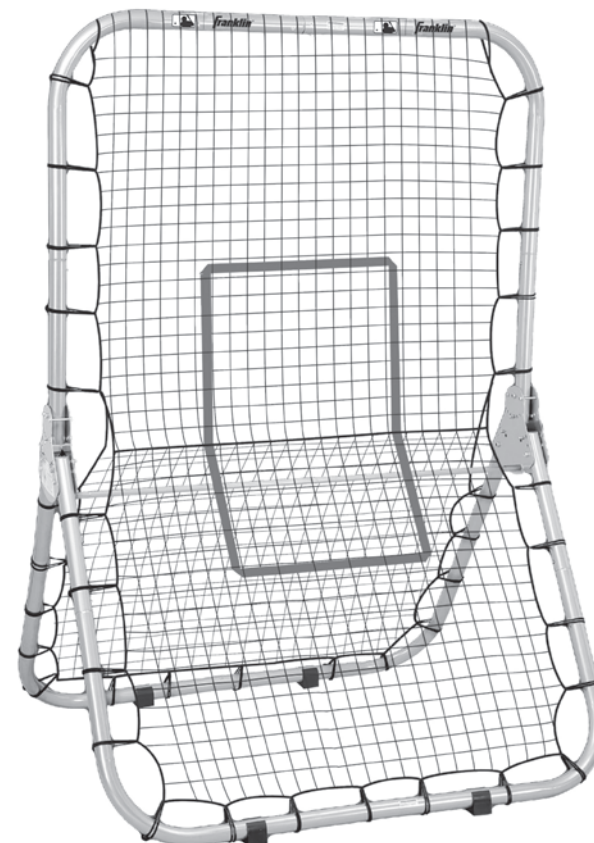

NOTE: PRINT FRONT TO BACK



CUSTOMER SERVICE COMMITMENT

Thank you for purchasing this Franklin® product! In the event that the product you've purchased has missing or damaged parts, please contact us at:

parts@franklinsports.com

or

Visit our website at: **franklinsports.com/instructions**


If possible, please include product part number and parts description so we can best assist you.

WE'RE HERE FOR YOU!

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE IT WAS PURCHASED FROM.

WE ARE COMMITTED TO FULFILLING ALL REPLACEMENT PART NEEDS IMMEDIATELY.

Thank you for your continued support, and welcome to the #FranklinFamily!

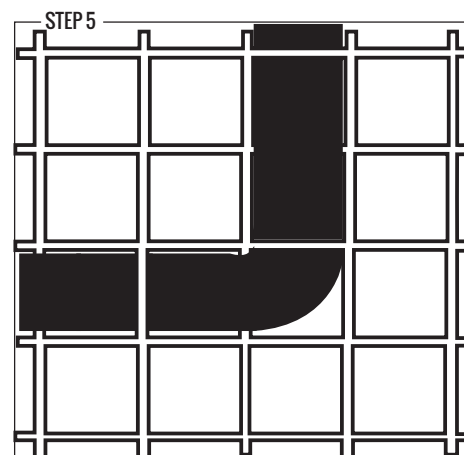

PARTS


6  x1

7  x1


NOTE

Attach **Strike Zone Ribbon (#7)** to **Net (#6)** by weaving as shown. **Strike Zone Ribbon (#7)** should be positioned in center of **Net (#6)** and should be 18 net squares high by 12 net squares wide.

STEP 6

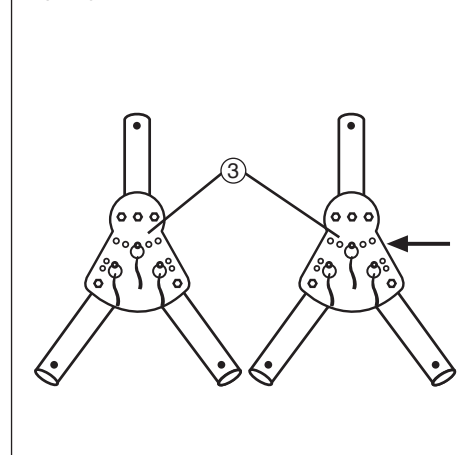

PARTS

 3  x2

NOTE

To adjust angle of rebounder remove pin from **Hinge Mechanism (#3)** on both sides of rebounder, place rebounder at desired angle and replace pins.





CAUTION:

Be careful when adjusting the angle, the tubes will move when pins are not in place.

YOU ARE NOW READY TO PLAY!

STEP 4

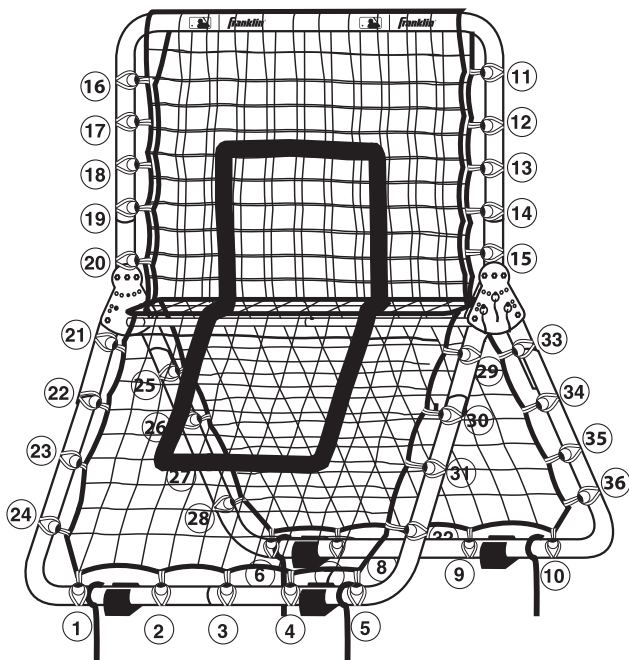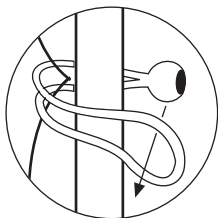

PARTS



4 x36



5 x4



6 x1

PARTS LIST

1	2	3	4
Left Corner Tube Rep. Part: 24807-R1	Right Corner Tube Rep. Part: 24807-R2	Hinge Mechanism Rep. Part: 24807-R3	Toothed Bungees Rep. Part: 24804-R23
5	6	7	8
Ground Stakes Rep. Part: 24804-R18	Net Rep. Part: 24807-R5	Strike Zone Ribbon Rep. Part: 24804-R16	Locking Pins 3pc Set Rep. Part: 2717F1Z8
9	10		
Blocks Rep. Part: 24807-R7	Support Tubes Rep. Part: 24807-R4		

ASSEMBLY INSTRUCTIONS

GENERAL NOTE


1. Find a clean, level place to begin the assembly of your Deluxe LG Return. We recommend that two adults work together to assemble this Deluxe LG Return.
2. Remove all components from the package and confirm all the parts are included. Please see Step 1 to begin assembly.

NOTE


To attach **Bungees** (#4) to **Net** (#6), hold plastic ball in place and wrap free end around net and side tube. Loop free Bungees end around plastic ball.

NOTE: Use **Ground Stakes** (#5) for extra stability when needed.

STEP 1

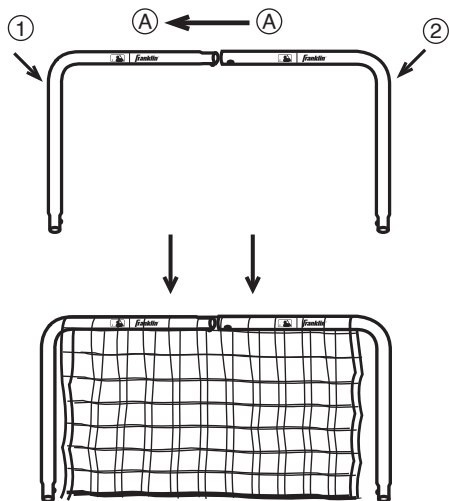


PARTS

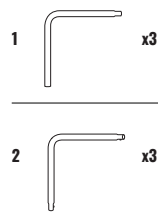


NOTE

Place **Left Corner Tube** (#1) into **Right Corner Tube** (#2) with Franklin logos. Slide net through corner tubes (#1 and #2).

STEP 2

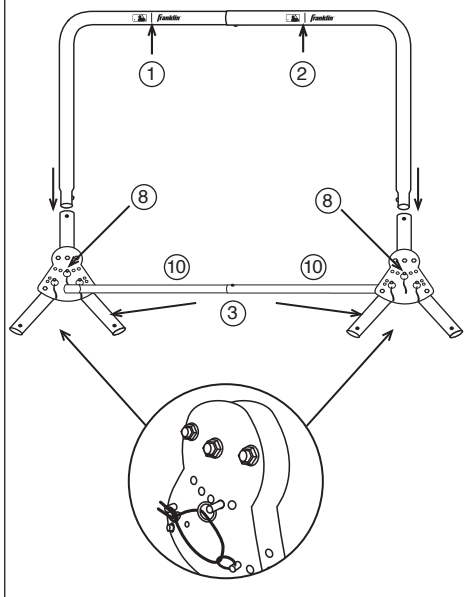


PARTS

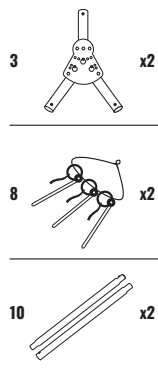

NOTE

Place **Locking Pins 3pc Set** (#8) into **Hinge Mechanism** (#3) to lock hinge into place. Then, connect left and right corner tubes (#1 and #2) to **Hinge Mechanism** (#3). Next, secure one **Support Tube** (#10) to other **Support Tube** (#10). Place **Support Tube** (#10) in both ends of **Hinge Mechanism** (#3) to secure the frame.

STEP 3

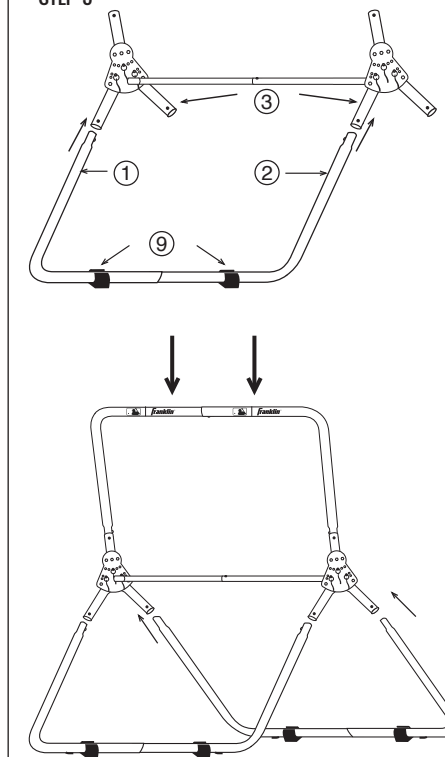

PARTS



NOTE

Take additional left and right corner tubes (#1 and #2) and attach to **Hinge Mechanisms** (#3) then attach corner tubes (#1 and #2) together. Using **Blocks** (#9) place onto corner tubes (#1 and #2). Repeat on other side to complete the frame.