

Goodrive27 Series Smart VFD User Manual





Preface

Overview

Thank you for purchasing INVT Goodrive27 series variable-frequency drive (VFD). If not otherwise specified, the VFD mentioned in this manual refers to Goodrive27 series VFD. The product is widely used in industries such as woodworking, textiles, food, printing bags, plastics, logistics and transportation equipment.

This manual mainly describes the methods of mechanical installation, electrical installation, operation methods, commissioning, maintenance and troubleshooting of the VFD. Read the manual carefully before installing and using the VFD.

Readers

Personnel with electrical professional knowledge (such as qualified electrical engineers or personnel with equivalent knowledge).

Change history

The manual is subject to change irregularly without prior notice due to product version upgrades or other reasons.

No.	Change description	Version	Release date
1	First release.	V1.0	May 2023
2	 Added the Y1 output wiring to Figure 4-9 Control circuit wiring diagram. Updated the active input high level range and active input low level range from 10– 30V and 0–5V to 16–30V and 0–2V in section 4.5.2 Control circuit terminals. Updated SIL to SIL2 and deleted PL related safety content from appendix E.1 Safety standards. Corrected minor errors. 	V1.1	September 2023

202508 (V1.4) i

No.	Change description	Version	Release date
3	 Added the PNP wiring to section 4.5.1 Control circuit wiring. Added a note about the 485+ and 485- terminals to section 4.5.2 Control circuit terminals. Added the PNP wiring diagram to section 4.5.3 Input/output signal wiring. Added section 4.5.3.3 Relay output wiring. Updated step 2 and step 3 in section 6.2 Motor parameter autotuning setting. Added function code P05.54. 	V1.2	April 2024
4	 Updated reactor models in appendix D.3.1 Reactor. Added content for the expanded power ranges (frames D and E). Modified content about faults from E4 to E9 in section 8.2.1 Common faults and solutions. Added appendix C.2 Flange mounting dimensions. Updated Appendix F Function parameter list. 	V1.3	March 2025
5	 Updated the fault code of to-ground short-circuit fault to E33 in section 8.2.1 Common faults and solutions. Modified Figure C-2 and Table C-2 in appendix C.1 VFD overall dimensions. Modified the bracket schematic diagram and model in appendix D.3.4.3 DIN rail mounting bracket. Added Figure E-2 and Figure E-3 in appendix E.4 STO wiring. 	V1.4	August 2025

202508 (V1.4) ii

Contents

1 Safety precautions	1
1.1 Safety declaration	1
1.2 Safety level definition	1
1.3 Personnel requirements	1
1.4 Safety guidelines	2
2 Product overview	5
2.1 Product nameplate and model	5
2.2 Product specifications	5
2.3 Product ratings	7
2.4 Product heat dissipation	9
2.5 Product dimensions and weight	10
2.6 Product structure	11
2.7 System configuration	12
2.8 Quick startup	
3 Mechanical installation	16
3.1 Unpacking inspection	16
3.2 Preparing	
3.2.1 Installation environment and site	17
3.2.2 Installation direction	18
3.2.3 Installation space	19
3.3 Installation and uninstallation	20
3.3.1 Installation	21
3.3.2 Dismounting	23
4 Electrical installation	
4.1 Insulation inspection	
4.2 Checking compatible grounding systems	25
4.2.1 EMC filter grounding capacitor	25
4.2.2 Ground-to-phase VDR	
4.2.3 When to disconnect the EMC filter or VDR: TN-S, IT, corner-grounded	
midpoint-grounded delta systems	
4.2.4 Guidelines for installing the VFD in TT systems	27
4.2.5 Identifying grid grounding systems	
4.3 Cable selection and routing	
4.3.1 Cable selection	
4.3.2 Cable arrangement	32
4.4 Main circuit wiring	
4.4.1 Main circuit wiring	33

	4.4.2 Main circuit terminals	
	4.4.3 Wiring procedure	35
	4.5 Control circuit wiring	37
	4.5.1 Control circuit wiring	37
	4.5.2 Control circuit terminals	38
	4.5.3 Input/output signal wiring	39
	4.6 Power distribution protection	42
5	Keypad operation guidelines	.44
	5.1 Keypad panel display	44
	5.1.1 Status indicator	44
	5.1.2 Display area	45
	5.1.3 Key	46
	5.2 Keypad display	47
	5.2.1 Displaying stopped-state parameters	47
	5.2.2 Displaying running-state parameters	47
	5.2.3 Fault display	48
	5.3 Operation procedure	48
	5.3.1 Modifying function parameters	
	5.3.2 Setting a password for the VFD	49
	5.3.3 Viewing function parameters	
6	Commissioning	.51
	6.1 Motor parameter setting	52
	6.1.1 Motor type selection	52
	6.1.2 Rated motor parameter setting	52
	6.2 Motor parameter autotuning setting	53
	6.3 Running command selection	54
	6.4 Frequency setting	58
	6.4.1 Combination of frequency setting source	60
	6.4.2 Frequency setting method	
	6.4.3 Frequency fine-tuning	
	6.5 Speed control mode selection	
	6.6 Torque setting method	
	6.6.1 Torque setting method selection	
	6.6.2 Switching between speed control and torque control	78
	6.7 Start/stop settings	79
	6.7.1 Start settings	
	6.7.2 Stop settings	81
	6.7.3 Power-off restart	85
	6.8 Control performance regulation	87
	6.8.1 Space vector control performance optimization	87

6.8.2 Vector control performance optimization	93
6.9 Input and output	100
6.9.1 Digital input and output	100
6.9.2 Analog input and output terminal functions	112
6.10 RS485 communication	117
6.11 Monitoring parameters	120
Group P07—Human-machine interface (HMI)	121
Group P17—Status viewing	125
6.12 Protection parameter setting	
6.12.1 Overvoltage stalling protection	130
6.12.2 Current-limit protection	131
6.12.3 Frequency decrease at sudden power failure	133
6.12.4 Cooling fan control	134
6.12.5 Dynamic braking	135
6.12.6 Safe torque off	136
6.13 Typical applications	136
6.13.1 Counting	136
6.13.2 Sleep and wakeup	137
6.13.3 Switchover between FWD run and REV run	139
6.13.4 Jump frequency	141
6.13.5 Wobbling frequency	142
7 Communication	
7.1 Standard communication interface	144
7.2 Communication data address	144
7.2.1 Function parameter address	144
7.2.2 Non-function parameter address	145
7.3 Modbus networking	148
7.3.1 Network topology	149
7.3.2 RTU mode	
7.3.3 RTU command code	153
7.3.4 Fieldbus scale	157
7.3.5 Error message response	158
7.3.6 Communication commissioning	159
8 Fault handling	
8.1 Fault indication and reset	
8.2 Faults and solutions	162
8.2.1 Common faults and solutions	
8.2.2 Other status	171
8.3 Analysis on common faults	172
8 3 1 Motor fails to work	172

0.2.2 Matanathan	170
8.3.2 Motor vibrates	
8.3.3 Overvoltage	
8.3.4 Undervoltage	
8.3.5 Overcurrent	
8.3.6 Motor overheating	
8.3.7 VFD overheating	
8.3.8 Motor stalls during ACC	
8.4 Countermeasures on common interference	
8.4.1 Interference problems of meter switch and sensors	
8.4.2 Interference on RS485 communication	
8.4.3 Failure to stop and indicator shimmering due to motor cable coupling	
8.4.4 Leakage current and interference on RCD	
8.4.5 Live device housing	
9 Inspection and maintenance	
9.1 Daily inspection and regular maintenance	
9.2 Cooling fan replacement	
9.3 Reforming	
Appendix A Technical data	
A.1 Derating due to temperature	
A.2 Derating due to altitude	
A.3 Derating due to carrier frequency	191
A.4 Grid specifications	192
A.5 Motor connection data	192
A.5.1 Motor cable length for normal operation	193
A.5.2 Motor cable length for EMC	193
Appendix B Application standards	195
B.1 List of application standards	195
B.2 CE/TUV/UL/CCS certification	195
B.3 EMC compliance declaration	196
B.4 EMC product standard	196
Appendix C Dimension drawings	197
C.1 VFD overall dimensions	197
C.2 Flange mounting dimensions	201
Appendix D Peripheral accessories	203
D.1 Cable	203
D.1.1 Power cable	203
D.1.2 Control cable	205
D.2 Breaker and electromagnetic contactor	206
D.3 Optional accessories	
D 2 1 Pagetor	207

D.3.2 Filter	208
D.3.3 Braking component	209
D.3.4 Mounting bracket	211
Appendix E STO function	214
E.1 Safety standards	214
E.2 Safety function description	215
E.3 Risk assessment	216
E.4 STO wiring	216
E.5 STO function terminal description	218
E.6 STO function logic table	218
E.7 STO channel delay description	219
E.8 Acceptance test	220
Appendix F Function parameter list	223
Group P00—Basic functions	
Group P01—Start and stop control	227
Group P02—Parameters of motor 1	
Group P03—Vector control of motor 1	238
Group P04—V/F control	245
Group P05—Input terminal functions	249
Group P06—Output terminal functions	255
Group P07—Human-machine interface	260
Group P08—Enhanced functions	268
Group P09—PID control	281
Group P10—Simple PLC and multi-step speed control	285
Group P11—Protection functions	289
Group P12—Parameters of motor 2	296
Group P13—SM control	301
Group P14—Serial communication	304
Group P15—User-defined read address functions	306
Group P16—User-defined write address functions	310
Group P17—Status viewing	313
Group P23—Vector control of motor 2	319

1 Safety precautions

1.1 Safety declaration

Read this manual carefully and follow all safety precautions before moving, installing, operating and servicing the VFD. Otherwise, equipment damage or physical injury or death may be caused.

We shall not be liable or responsible for any equipment damage or physical injury or death caused due to failure to follow the safety precautions.

1.2 Safety level definition

To ensure personal safety and avoid property damage, you must pay attention to the symbols and warnings in the manual.

Symbol	Name	Description
<u>A</u>	Danger	Severe personal injury or even death can result if related requirements are not followed.
<u></u>	Electric shock	Severe personal injury or even death can result if related requirements are not followed. As high voltage still presents in the bus capacitor after power off, wait for at least 5 minutes (depending on the warning symbols on the machine) after power off to prevent electric shock.
\triangle	Warning	Personal injury or equipment damage can result if related requirements are not followed.
Ž.	Electrostatic discharge	Equipment damage or internal component damage can result if related requirements are not followed.
	Hot sides	You may get burnt if related requirements are not followed.
Note	Note	Slight personal injury or equipment damage can result if related requirements are not followed.

1.3 Personnel requirements

Trained and qualified professionals: People operating the equipment must have received professional electrical and safety training and obtained the certificates, and must be familiar with all steps and requirements of equipment installing,

commissioning, running and maintaining and capable to prevent any emergencies according to experiences.

1.4 Safety guidelines

General principles

 Only trained and qualified professionals are allowed to carry out related operations.



 Do not perform wiring, inspection or component replacement when power supply is applied. Before performing these operations, ensure all the input power supplies have been disconnected, and wait for at least the time designated on the VFD. The minimum waiting time is listed in the following.

Model	Minimum waiting time
1PH 220V 0.4-2.2kW	5 minutes
3PH 220V 0.4-15kW	5 minutes
3PH 380V 0.75-22kW	5 minutes

 Do not modify the VFD unless authorized; otherwise fire, electric shock or other injury may result.



- The VFD cannot be used as an "emergency-stop device".
 - The VFD cannot act as an emergency brake for the motor; it is a must to install a mechanical braking device.
 - Prevent the screws, cables and other conductive parts from falling into the VFD.



The base may become hot when the VFD is running. Do not touch.
 Otherwise, you may get burnt.



 The electrical parts and components inside the VFD are electrostatic sensitive. Take measurements to prevent electrostatic discharge when performing related operations.

Delivery



- Select appropriate tools for VFD delivery to avoid damage to the VFD, and take protective measures like wearing safety shoes and working uniforms to avoid physical injury or death.
- Protect the VFD against physical shock or vibration.
- Do not carry the VFD only by its front cover as the cover may fall off.


Installation



- Do not install the VFD on inflammables. In addition, prevent the VFD from contacting or adhering to inflammables.
- Do not install the damaged or incomplete VFD.

Installation

- Do not contact the VFD with damp objects or body parts. Otherwise. electric shock may result.
- The installation site must be away from children and other public places (See section 3.2.1 Installation environment and site for details).
- Connect the optional braking parts (such as braking resistors, braking units or feedback units) according to the wiring diagrams.
- As VFD leakage current caused during running may exceed 3.5mA. ground properly and ensure the grounding resistance is less than 10Ω . The conductivity of PE grounding conductor is the same as that of the phase conductor.

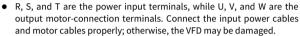

When the VFD is installed in a confined space (such as cabinet), it is necessary to provide protective devices (such as fireproof housing, electrical protective housing, mechanical protective housing, etc.) that meet the IP rating, and the IP rating shall comply with the relevant IEC standards and local regulations.

Commissioning



The VFD may start up by itself when power-off restart is enabled (P01.21=1). Do not get close to the VFD and motor.



Do not switch on or switch off the input power supplies of the VFD

If the VFD has been stored without use for a long time, perform capacitor reforming (described in section 9.3 Reforming), inspection and pilot run for the VFD before the reuse.

Running

 Close the VFD front cover before running; otherwise, electric shock may occur.



- High voltage presents inside the VFD during running. Do not carry out any operation on the VFD during running except for keypad setup. The control terminals of the VFD form extra-low voltage (ELV) circuits. Therefore, you need to prevent the control terminals from connecting to accessible terminals of other devices.
- During driving a synchronous motor, besides above-mentioned items, the following work must be done:
 - All input power supplies have been disconnected, including the

Running

main power and control power.

- The synchronous motor has been stopped, and the voltage on output end of the VFD is lower than 36V.
- After the synchronous motor has stopped, wait for at least the time designated on the VFD.
- During operation, it is a must to ensure the synchronous motor cannot run again by the action of external load; it is recommended to install an effective external braking device or cut off the direct electrical connection between the synchronous motor and the VFD.

Maintenance



- Do not perform VFD maintenance or component replacement when the power is on. Otherwise, electric shock may result.
 - Keep the VFD and its parts and components away from combustible materials and ensure they have no combustible materials adhered.



 During maintenance and component replacement, take proper anti-static measures on the VFD and its internal parts.



 Do not carry out insulation voltage-endurance test on the VFD, or measure the control circuits of the VFD with a megohmmeter.

Note

Use proper torque to tighten screws.

Disposal



 The VFD contains heavy metals. Dispose of a scrap VFD as industrial waste.

2 Product overview

2.1 Product nameplate and model

Each VFD is affixed with a nameplate containing the basic product information and, depending on the actual certification, certification marks such as the CE mark.

The product models can be divided into two types:

Standard models (GD27-1R5G-4-B): Neither STO nor EMC filter embedded

EU models (GD27-1R5G-4-B-EU): With embedded STO and EMC C2/C3 filter (C2 applicable to S2 models, while C3 applicable to -2 and -4 models)



2.2 Product specifications

Item		Specifications
	Input voltage (V)	AC 1PH 200V-240V AC 3PH 200V-240V AC 3PH 380V-480V
Input	Input current (A)	See section 2.3 Product ratings.
	Input frequency (Hz)	50Hz or 60Hz; Allowed range: 47–63Hz

Item		Specifications
	Output voltage (V)	0-Input voltage (V)
	Output current (A)	See section 2.3 Product ratings.
Output	Output power (kW)	See section 2.3 Product ratings.
	Output frequency (Hz)	0–599Hz
	Control mode	Space voltage vector control, and sensorless vector control (SVC)
	Motor	Motor type: Asynchronous motor (AM) and synchronous motor (SM)
	Speed ratio	For AMs: 1: 100 (SVC) For SMs: 1: 20 (SVC)
	Speed control accuracy	±0.2% (SVC)
Control performance	Speed fluctuation	±0.3% (SVC)
	Torque response	<10ms (SVC)
	Torque control accuracy	5% (SVC)
	Starting	For AMs: 0.25Hz/150% (SVC)
	torque Overload	For SMs: 2.5 Hz/150% (SVC) 150% of the rated current for 60s
	capacity	180% of the rated current for 10s
	Terminal analog input resolution	No more than 20mV
Peripheral interface	Terminal digital input resolution	No more than 2ms
	Analog input	Two inputs. Al1: 0-10V/0-20mA; Al2: 0-10V
	Analog output	One output. AO1: 0–10V/0–20mA

Item		Specifications
	Digital input	Four regular inputs. Max. frequency: 1kHz One high-speed input. Max. frequency: 50kHz
	Digital output	One Y terminal open collector output
Peripheral interface	Relay output	Two programmable relay outputs RO1A: NO; RO1B: NC; RO1C: common RO2A: NO; RO2B: NC; RO2C: common Contact capacity: 3A/AC250V, 1A/DC30V Note: Only output of relay 1 is available for EU models.
F	Temperature of running environment	-10–50°C, no need of derating Note: Derating is required when the ambient temperature exceeds 50°C. For details, see appendix A.1 Derating due to temperature.
Environment requirement	Ingress protection (IP) rating	IP20
	Pollution degree	Degree 2
Installation method		Wall mounting and DIN rail mounting Note: Only VFDs in frames A and B support DIN rail mounting and require corresponding accessories; only VFDs in frames C, D, and E support flange mounting and require corresponding accessories.
Cooling method		220V voltage class: natural cooling for 0.75kW and lower 380V voltage class: natural cooling for 1.5kW and lower Others: Forced air cooling
Product certification		CE certification requirements are met.

2.3 Product ratings

Model	Output power (kW)	Input current (A)	Output current (A)
AC 1PH 200V-240V			
GD27-0R4G-S2-B-XX	0.4	6.5	2.5
GD27-0R7G-S2-B-XX	0.75	11	4.2
GD27-1R5G-S2-B-XX	1.5	18	7.5

Model	Output power (kW)	Input current (A)	Output current (A)	
GD27-2R2G-S2-B-XX	2.2	24.3	10	
AC 3PH 200V-240V				
GD27-0R4G-2-B-EU	0.4	3.6	2.5	
GD27-0R7G-2-B-EU	0.75	7	4.2	
GD27-1R5G-2-B-EU	1.5	11.6	7.5	
GD27-2R2G-2-B-EU	2.2	16	10	
GD27-004G-2-B-EU	4	22.3	16	
GD27-5R5G-2-B-EU	5.5	25	20	
GD27-7R5G-2-B-EU	7.5	33	30	
GD27-011G-2-B-EU	11	44	42	
GD27-015G-2-B-EU	15	60	55	
AC 3PH 380V-480V				
GD27-0R7G-4-B-XX	0.75	4.5	2.5	
GD27-1R5G-4-B-XX	1.5	6.5	3.7	
GD27-2R2G-4-B-XX	2.2	8.8	5.5	
GD27-003G-4-B-XX	3	12.2	7.5	
GD27-004G-4-B-XX	4	15.6	9.5	
GD27-5R5G-4-B-XX	5.5	22.3	14	
GD27-7R5G-4-B-XX	7.5	28.7	18.5	
GD27-011G-4-B-XX	11	36	25	
GD27-015G-4-B-XX	15	46	32	
GD27-018G-4-B-XX	18.5	57	38	
GD27-022G-4-B-XX	22	62	45	

■Note:

- -XX indicates empty or -EU.
- The STO function for EU models meets Safety Integrity Level 2 (SIL2).
- The VFD input current is measured in cases where the input voltage is 220V/380V without additional reactors. If the input current exceeds the rated value due to low grid line impedance or other reasons, you must add input reactors.

2.4 Product heat dissipation

Model	Entire machine standby power consumption (W)	Entire machine full load power consumption (W)	Heat dissipation (BTU/hr)	Air flow rate (m^3/h)	Air flow rate (CFM) (ft^3/min)
AC 1PH 200V-240V					
GD27-0R4G-S2-B-XX	5	30	101	-	-
GD27-0R7G-S2-B-XX	5	46	155	1	-
GD27-1R5G-S2-B-XX	5	51	172	20	12
GD27-2R2G-S2-B-XX	5	77	264	20	12
AC 3PH 200V-240V					
GD27-0R4G-2-B-EU	5	26	88	-	-
GD27-0R7G-2-B-EU	5	42	142	-	-
GD27-1R5G-2-B-EU	5	47	159	20	12
GD27-2R2G-2-B-EU	5	68	232	20	12
GD27-004G-2-B-EU	9	125	426	50	30
GD27-5R5G-2-B-EU	9	186	635	30	30
GD27-7R5G-2-B-EU	12	253	863	122	72
GD27-011G-2-B-EU	14	341	1163	122	72
GD27-015G-2-B-EU	16	621	2119	153	90
AC 3PH 380V-480V					
GD27-0R7G-4-B-XX	7	37	125	-	-
GD27-1R5G-4-B-XX	7	48	162	-	-
GD27-2R2G-4-B-XX	8	61	209		
GD27-003G-4-B-XX	8	78	266	20	12
GD27-004G-4-B-XX	8	103	350		
GD27-5R5G-4-B-XX	9	168	573	50	30
GD27-7R5G-4-B-XX	9	243	829	50	30
GD27-011G-4-B-XX	16	258	880	122	72
GD27-015G-4-B-XX	17	443	1512	122	72
GD27-018G-4-B-XX	18	450	1535	153	90
GD27-022G-4-B-XX	19	556	1897	153	90

₽Note: -XX indicates empty or -EU.

2.5 Product dimensions and weight

Model	Frame	Outline dimensions WxHxD (mm)	Package outline dimensions WxHxD (mm)	Net weight (kg)
AC 1PH 200V-240V				
GD27-0R4G-S2-B-XX	Α	60×190×155	238×98×205	0.99
GD27-0R7G-S2-B-XX	A	60 × 190 × 155	238 × 98 × 205	0.99
GD27-1R5G-S2-B-XX	В	70×190×155	238×98×205	1.25
GD27-2R2G-S2-B-XX	Ь	10 \ 190 \ 155	230 ^ 90 ^ 203	1.25
AC 3PH 200V-240V				
GD27-0R4G-2-B-EU	Α	60×190×155	238×98×205	0.99
GD27-0R7G-2-B-EU	А	00 \ 190 \ 133	230 ^ 90 ^ 203	0.99
GD27-1R5G-2-B-EU	В	70×190×155	238×98×205	1.25
GD27-2R2G-2-B-EU	Ь	10 × 130 × 133	236 \ 36 \ 203	1.25
GD27-004G-2-B-EU	С	90×235×155	298×128×213	1.95
GD27-5R5G-2-B-EU	C	90 ^ 233 ^ 133	250 \ 120 \ 213	1.95
GD27-7R5G-2-B-EU	D	130×250×185	338×223×255	3.55
GD27-011G-2-B-EU	U	130 \ 230 \ 163	336 \ 223 \ 233	3.33
GD27-015G-2-B-EU	E	160×300×190	413×255×300	4.9
AC 3PH 380V-480V				
GD27-0R7G-4-B-XX	Α	60×190×155	238×98×205	0.99
GD27-1R5G-4-B-XX	A	00 × 130 × 133	236 \ 36 \ 203	0.55
GD27-2R2G-4-B-XX				
GD27-003G-4-B-XX	В	70×190×155	238×98×205	1.25
GD27-004G-4-B-XX				
GD27-5R5G-4-B-XX	С	90×235×155	298×128×213	1.95
GD27-7R5G-4-B-XX	·	30 \ 233 \ 133	230 ^ 120 ^ 213	1.55
GD27-011G-4-B-XX	D	130×250×185	338×223×255	3.55
GD27-015G-4-B-XX	U	130 \ 230 \ 103	330 ^ 223 ^ 233	3.33
GD27-018G-4-B-XX	Е	160×300×190	413×255×300	4.9
GD27-022G-4-B-XX		100 \ 200 \ 190	413 ^ 233 ^ 300	4.9

■Note:

- -XX indicates empty or -EU.
- The product exterior structures are divided into A, B, C, D, and E.
- The deviation between the listed weight and the actual weight is \leq 3%.


2.6 Product structure

Warning



- The Micro USB interface is a software upgrade interface, which requires the use of our company's dedicated burner and connection cable.
- Note: A universal USB cable cannot be used by this interface.
- After the VFD is powered on, high voltage is present at the Micro USB port on the drive board; do not touch or use this port.

Figure 2-1 Product components (taking the 380V 7.5kW VFD model as an example)

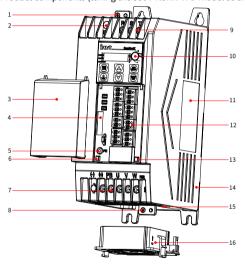

No.	Component	No.	Component
1	Input safety protection grounding terminal	9	Input terminal
2	EMC screw	10	Potentiometer knob
3	Cover	11	Nameplate
4	Model bar code	12	Control board terminal
5	Signal grounding terminal (PE)	13	RJ45 network port

No.	Component	No.	Component
6	Micro USB interface (on the control board)	14	Housing
7	Output terminal	15	Micro USB port (on the drive board)
8	Output safety protection grounding terminal	16	Cooling fan

Note: The EMC screws for VFDs in frame D and frame E include EMC AC and EMC DC. For details, see section 4.2 Checking compatible grounding systems.

2.7 System configuration

When using the VFD to drive a motor to form a control system, various electrical devices need to be installed on the input and output sides of the VFD to ensure stable system running.

Host controller software INVT Workshop Adanter (cable) nput filter 485+ External LED keypad nput reactor INVT VFD Breaker Ground utput filter supply Output reactor resistor

Figure 2-2 System composition

Table 2-1 System configuration

Component Position Description

Com	ponent	Position	Description
	Breaker	Between the power supply and the VFD input side	Device for electric shock prevention and protection against short-to-ground that may cause current leakage and fire. Select residual-current circuit breakers (RCCBs) that are applicable to VFDs and can restrict high-order harmonics, and of which the rated sensitive current for one VFD is larger than 30mA.
	Input reactor	At the VFD input side	Accessories used to improve the power factor on the input side of the VFD, and thus restrict high-order harmonic currents.
	Output reactor	Between the VFD output side and the motor, adjacent to the VFD	(Optional) Accessory used to lengthen the valid transmission distance of the VFD, which effectively restricts the transient high voltage generated during the switch-on and switch-off of the IGBT module of the VFD.
000	Input filter	At the VFD input side	(Optional) Input filter: Accessory that restricts the electromagnetic interference generated by the VFD and transmitted to
(200)	Output filter	Adjacent to the VFD output terminals	the public grid through the power cable. Try to install the input filter near the input terminal side of the VFD. (Optional) Output filter: Accessory used to restrict interference generated in the wiring area on the output side of the VFD. All the product series can meet the conductivity and transmission requirements of IEC/EN 61800-3 C3 electrical drive systems. Optional external filters can be used to meet the conductivity and transmission requirements of IEC/EN 61800-3 C2 electrical drive systems. Note: Please comply with the technical requirements specified in the appendix of the manual for the assembly of motors, motor cables, and filters.

Comp	ponent	Position	Description
	Braking resistor	Between the VFD main circuit terminals (+) and PB	Accessories used to consume the regenerative energy of the motor to reduce the DEC time. Braking unit: Already embedded (only external braking resistor required) Braking resistor: Optional and externally connected for all models
	Host controller software	Installed on the host controller for VFD management	 INVT Workshop is used to configure and monitor VFDs. It is mainly used to: Monitor multiple VFDs. Set and monitor function parameters; upload and download function parameters in batches. View modified function codes, compare default values, and follow up and query for function codes. Query for and follow up status parameters. View real-time and historic faults. Display function codes in configuration mode. Control device startup, stop, forward running, reverse running, and other operations. View oscillographic curves, save and replay waveform data, operate waveforms through cursor, and simulate waveform data. Please visit www.invt.com to obtain freely.

For details about option model selection, see Appendix D Peripheral accessories.

2.8 Quick startup

	Task	Reference
1.	Unpack the box for inspection.	See section 3.1 Unpacking inspection.
2.	Check whether the VFD connected load and power supply match.	See section 2.1 Product nameplate and model.
3.	Check the installation environment.	See section 3.2 Preparing.
4.	Install the VFD on the wall/in the cabinet.	See section 3.3 Installation.
5.	Perform wiring.	See chapter 4 Electrical installation.
6.	Commission the VFD.	See chapter 6 Commissioning.

3 Mechanical installation

3.1 Unpacking inspection

After receiving the product, perform the following steps to ensure the product use safety.

■ Check the package

Before unpacking, check whether the product package is intact-whether the package is damaged, dampened, soaked, or deformed. After unpacking, check whether the interior surface of the packing box is abnormal, for example, in wet condition

Check the machine and parts

After unpacking, check whether the equipment enclosure is damaged or cracked, whether the parts (including the VFD and manual) inside the packing box are complete, and whether the nameplate and label on the product body are consistent with the model ordered.

3.2 Preparing

Only trained and qualified professionals are allowed to carry out the operations mentioned in this chapter. Read the following installation preparation carefully before installation to ensure smooth installation and avoid personal injury or equipment damage.

Warning

 Carry out operations according to instructions presented in section 1.4 Safety guidelines. Ensure the VFD power has been disconnected before installation. If the VFD has been powered on, disconnect the VFD and wait for at least the time designated on the VFD, and ensure the POWER indicator is off.

 The VFD installation must be designed and done according to applicable local laws and regulations. INVT does not assume any liability whatsoever for any VFD installation which breaches local laws or regulations.

3.2.1 Installation environment and site

■ Environment requirement

Environment		Requirement
Temperature	Î	 -10-+50°C The temperature does not change rapidly. When the VFD is installed in a closed space, such as control cabinet, use a cooling fan or air conditioner for temperature adjustment if necessary. When the temperature is too low, if you want to use the VFD that has been idled for a long time, install an external heating device before the use to eliminate the freeze inside the VFD. Otherwise, the VFD may be damaged.
Relative humidity (RH)		 The relative humidity (RH) of the air is less than 90%, and there is no condensation. The max. RH cannot exceed 60% in the environment where there are corrosive gases.
Altitude	Δ	 Lower than 1000m When the altitude exceeds 1000m, derate by 1% for every increase of 100m. When the altitude exceeds 3000m, consult our local dealer or office for details.
Vibration	3	Max. vibration ACC: 5.8m/s²(0.6g)

Location requirement


Location		Requirement
Indoor	60	Without electromagnetic radiation sources and direct sunlight. Note: The VFD must be installed in a clean and well-ventilated environment based on the housing IP rating.
		Without foreign objects such as oil mist, metal powder, conductive dust, and water.

Location	Requirement		
Indoor	0.724	Without radioactive, corrosive, hazard, and combustible and explosive substances. Note: Do not install the VFD onto combustible objects.	
		With low salt content	

3.2.2 Installation direction

The VFD can be installed on the wall or in a cabinet, and it must be installed vertically. It cannot be installed in other directions such as horizontal (lying), horizontal (lateral), or inverted.


Figure 3-1 Installation direction diagram

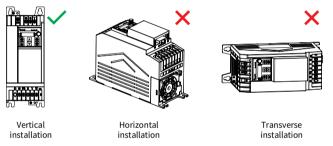

3.2.3 Installation space

3.2.3.1 Single VFD

Figure 3-2 Installation space diagram of a single VFD

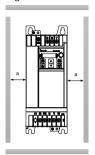

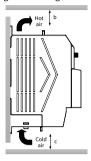


Table 3-1 Installation space dimensions of a single VFD

Frame	Dimensions (mm)		
Fraille	а	b	С
A, B, C, D, E	≥40	≥100	≥100

3.2.3.2 Multiple VFDs

When installing multiple VFDs, you can install them in parallel. When you install VFDs in different sizes, align the top of each VFD before installation for the convenience of future maintenance.

Figure 3-3 Installation space diagram of multiple VFDs

Note: The ambient temperature cannot exceed 40°C for installing multiple VFDs side by side.

Table 3-2 Installation space dimensions of multiple VFDs

Fuerra	Dimensions (mm)		
Frame	а	b	С
A, B, C, D, E	≥40	≥100	≥100

3.3 Installation and uninstallation

The VFD installation methods vary with the VFD external structures. Please choose the appropriate installation method from the following table based on the specific model and the applicable environment. (\checkmark indicates the installation method that can be selected.)

Table 3-3 Installation method selection


Frame	Installation method			
France	Wall mounting	DIN rail mounting	Flange mounting	
Α	✓	✓	-	
В	✓	✓	-	
С	✓	-	✓	
D	√	-	√	
E	√	-	√	


Note: When selecting the DIN rail mounting method for the models in structure frames A and B, you must select a rail mounting bracket. For details about the mounting bracket sizes and ordering codes, see D.3.4.3 DIN rail mounting bracket.

3.3.1 Installation


3.3.1.1 Wall mounting

The wall mounting procedure is as follows:

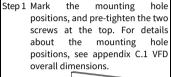


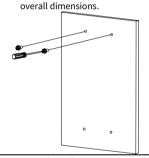


hole Step 2 Fasten the VFD end with the keyhole slots onto the two etails pre-installed screws.

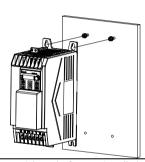

Step 3 Pre-tighten the two screws at the bottom.

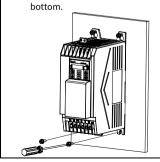

Step 4 Tighten the four pre-installed screws

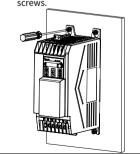


3.3.1.2 DIN rail mounting

The mounting procedure is as follows:

Step 1 Insert rail bracket 1 from the VFD top, and tighten the upper lugs.


Rail bracket 1

Step 3 Fasten rail brackets 1 and 2.
(Ensure that the snap clicks into place and the sheet metal lock is in the pull-down position.)

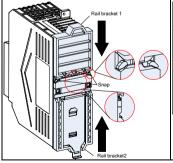

Step 2 Insert rail bracket 2 from the VFD bottom, and tighten the lower lugs.

Step 4 Place the VFD with brackets vertically on the DIN rail, and push the sheet metal lock latch upwards to make it tightly engage with the rail.

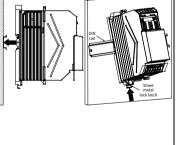


3.3.2 Dismounting

3.3.2.1 DIN rail dismounting

The dismounting procedure is as follows:

Step 1 Use a tool to pull out the sheet metal lock latch downwards until it is fixed, and take out the VFD with the rail bracket from the DIN rail.


lock latch

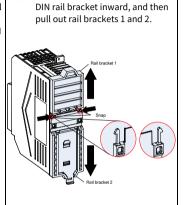

Step 2 Press the snap in the middle of the

3.3.2.2 Cover dismounting

You need to remove the VFD cover for main circuit and control circuit wiring. The dismounting procedure is as follows:

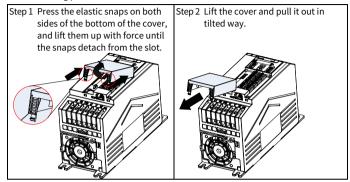

4 Electrical installation

4.1 Insulation inspection

Do not perform any voltage endurance or insulation resistance tests, such as high-voltage insulation tests or using a megohmmeter to measure the insulation resistance, on the VFD or its components. Insulation and voltage endurance tests have been performed between the main circuit and housing of each VFD before delivery. In addition, voltage limiting circuits that can automatically cut off the test voltage are configured inside the VFDs. If you need to conduct insulation resistance testing on the VFD, please contact us.

Note: Before conducting insulation resistance testing on input and output power cables, remove the cable connection terminals from the VFD.

Input power cable

Check the insulation conditions of the input power cable of a VFD according to the local regulations before connecting it.

■ Motor cable

Ensure that the motor cable is connected to the motor, and then remove the motor cable from the U, V, and W output terminals of the VFD. Use a megohmmeter of 500V DC to measure the insulation resistance between each phase conductor and the protection grounding conductor. For details about the insulation resistance of the motor, see the description provided by the manufacturer.

Note: If the motor inside is damp, the insulation resistance is reduced. If it may be damp, you need to dry the motor and then measure the insulation resistance again.

4.2 Checking compatible grounding systems

The VFD EU models have been equipped with the embedded EMC filter as standard and therefore they can be installed on symmetric grounding systems and asymmetric grounding systems. When the VFD is used in an asymmetric grounding system, the EMC screws (namely, the EMC AC screw and EMC DC screw) must be removed to avoid the connection between the VFD internal EMC filter capacitor and the grounding potential, which may cause the VFD tripping or damage. The VFD supports the TN-S, TT, and IT grounding systems.

4.2.1 EMC filter grounding capacitor

The VFD with an internal EMC filter can be installed on a TN-S system with a symmetrical earth ground. If the VFD is installed to another grounding system, it may be necessary to disconnect the EMC filter and the voltage dependent resistor (VDR). See sections 4.2.3 When to disconnect the EMC filter or VDR: TN-S, IT,

corner-grounded delta and midpoint-grounded delta systems and 4.2.4 Guidelines for installing the VFD in TT systems.

Warning



Do not install a VFD with an EMC filter on a system that is not suitable for the filter. This can cause a hazard or damage to the VFD.

Note: When the internal EMC filter is disconnected, the EMC compatibility of the VFD will be significantly reduced and will not meet the EMC compatibility motor cable length requirements in appendix A.5.2 Motor cable length for EMC.

4.2.2 Ground-to-phase VDR

Most VFDs are designed to operate on three-phase power supply systems with symmetric line voltages. To meet surge immunity requirements, these VFDs are equipped with VDRs, which provide voltage surge protection as well as phase-to-phase and phase-to-ground protection. The VDR circuit is designed only for surge suppression (transient line protection) and is not intended for continuous operation.

For ungrounded supply systems, the phase-to-ground VDR can provide a continuous current path to ground. Exceeding the published phase-to-phase, phase-to-ground voltage or energy ratings may damage the VDR.

Standard VFDs with VDRs can be installed in symmetrically grounded TN-S systems. If the VFD is installed to another grounding system, it may be necessary to disconnect the VDR. See sections 4.2.3 When to disconnect the EMC filter or VDR: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems and 4.2.4 Guidelines for installing the VFD in TT systems.

Warning




Do not connect the phase-to-ground VDR to a system that is not suitable for the VDR when installing the VFD. Otherwise, the VDR circuit may be damaged.

4.2.3 When to disconnect the EMC filter or VDR: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems

The requirements for disconnecting EMC filters and VDRs, as well as additional requirements for different power systems are shown in the following.

Frame	Symmetrical grounding TN-S system, also known as grounding Y system (A)	Corner-grounded delta (B1) and midpoint-grounded delta (B2) systems ≤ 600V	IT system (floating ground or high resistance grounding [>30Ω]) (C)
A, B, C	Do not disconnect the EMC screw.	Disconnect the EMC screw.	Disconnect the EMC screw.
D, E	Do not disconnect the EMC AC screw, EMC DC screw, or VDR screw.	Disconnect the EMC AC screw, EMC DC screw, and VDR screw.	Disconnect the EMC AC screw, EMC DC screw, and VDR screw.

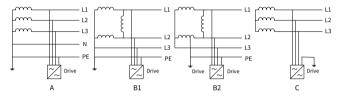

Note: These are the EMC filter and VDR screws in the VFDs in different outline dimensions

Frame	EMC filter screw	VDR screw
	EMC screw	
D, E	Two EMC screws (including EMC AC and EMC DC)	VDR

4.2.4 Guidelines for installing the VFD in TT systems

The VFD can be installed on the TT system under the following conditions:

- A residual current protection device has been installed in the power supply system.
- These screws have been disconnected. Otherwise, the leakage current from the EMC filter, VDR, and capacitor can cause the residual current protection device to trip.

Frame	EMC filter screw	VDR screw
A, B, C	EMC AC screw	VDR
D, E	Two EMC screws (including EMC AC and EMC DC)	VDR
	L1 L2 L3 N	

■ Note:

- If the EMC filter screw is disconnected, the VFD will not comply with the EMI requirements defined in the EMC classification.
- The VFD does not guarantee the proper operation of its internal ground leakage detector.
- In large systems, the leakage protection device may trip unexpectedly.

4.2.5 Identifying grid grounding systems

Warning



Only qualified professionals are allowed to carry out the operations mentioned in this section. Depending on the installation location, this work can even be classified as live work. Only electrical professionals certified for the job should proceed with the work. Comply with local regulations. Ignoring these instructions could result in injury or death.

To determine the grounding system, check the power transformer connections. See the applicable electrical drawings for the building. Otherwise, measure these voltages at the switchboard and see the table to identify the grounding system type.

- Input line phase-to-phase voltage (U_{L-L})
- Input line L1 to-ground voltage (U_{L1-G})
- Input line L2 to-ground voltage (U_{L2-G})
- Input line L3 to-ground voltage (U_{L3-G})

The following table shows the relationship between line-to-ground voltage and line-to-line voltage for each grounding system.

U _{L-L}	U _{L1-G}	U _{L2-G}	U _{L3-G}	Power system type
Х	0.58 X	0.58 X	0.58 X	Symmetric grounding system (TN-S system)
Х	1.0 X	1.0 X	0	Corner-grounded delta system (asymmetric)
Х	0.866 X	0.5 X	0.5 X	Neutral-grounded delta system (asymmetrical)
Х	Level changes over time	Level changes over time	Level changes over time	IT system (floating or high resistance grounding [>30Ω]) asymmetric
Х	Level changes over time	Level changes over time	Level changes over time	TT system (protective earth connection of electrical equipment is provided by local connection. A separate protective earth connection is installed at the generator.)

Figure 4-1 EMC screw position for VFDs in frames A, B, and C


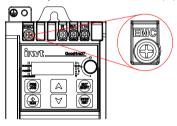


Figure 4-2 EMC screw positions for VFDs in frames D and E

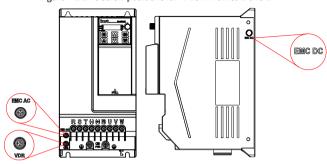

Note:

- Do not remove the EMC screw or the EMC AC/DC screws when the VFD is powered on.
- Disconnecting the EMC filter will reduce the VFD electromagnetic compatibility, which may cause the failure to meet the EMC specification requirements.
- For the models with embedded EMC filter, the common-mode capacitor circuit
 is grounded to the heat sink through EMC screws, forming a loop path for
 high-frequency noise and releasing high-frequency interference; if leakage
 protection is applied during startup when a leakage circuit breaker has been
 configured, disconnect the EMC screw or the EMC AC/DC screws.

4.3 Cable selection and routing

4.3.1 Cable selection

Power cable

Power cables mainly include input power cables and motor cables. Comply with local regulations to select cables.

To meet the EMC requirements stipulated in the CE standards, it is recommended to use symmetrical shielded cables as input motor cables and power cables, as shown in Figure 4-3. Compared with four-core cables, symmetrical shielded cables can reduce electromagnetic radiation as well as the current and loss of the motor cables.

Figure 4-3 Symmetrical shielded cable and four-core cable


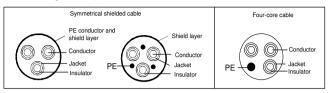


Figure 4-4 Cable cross section

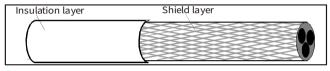

Note:

- The input power cables and motor cables must be able to carry the corresponding load currents.
- Figure 4-4 shows the minimum requirement on motor cables of VFD. The cable
 must consist of a layer of spiral-shaped copper strips. The denser the shield
 layer is, the more effectively the electromagnetic interference is restricted.
- The cable conductor temperature limit is 70°C. If you use a cable with the conductor temperature limit of 90°C, the cable must comply with relevant national standards and specifications.
- If the electrical conductivity of the motor cable shield layer does not meet the requirements, a separate PE conductor must be used.
- The cross-sectional area of the shielded cables must be the same as that of the phase conductors if the cable and conductor are made of materials of the same type.
- To effectively restrict the emission and conduction of radio frequency (RF) interference, the conductivity of the shielded cable must be at least 1/10 of the conductivity of the phase conductor.
- This requirement can be well met by a copper or aluminum shield layer.

Control cable

Control cables mainly include analog signal control cables and digital signal control cables. Analog signal control cables use twisted-pair double shielded cables, with a separate shielded twisted pair for each signal and different ground wires for

different analog signals. For digital signal control cables, double-shielded cables are preferred, but single-shielded or unshielded twisted pairs can also be used. For details, see appendix D.1.2 Control cable.

4.3.2 Cable arrangement

Figure 4-5 shows the cable routing and wiring distance.

Control cable

| Control cable | 200mm | Power cable | 200mm | Power cable | 200mm | Motor cable | 200mm | Motor cable | 200mm | Motor cable | 200mm |

Figure 4-5 Cable routing distance


₫ Note:

- Motor cables must be arranged away from other cables. The du/dt of the VFD output may increase electromagnetic interference on other cables.
- Motor cables cannot be routed with other cables in parallel for long distances.
- If the control cable and power cable must cross each other, ensure that the angle between them is 90°.
- The motor cables of several VFDs can be arranged in parallel. It is recommended that you arrange the motor cables, input power cables, and control cables separately in different trays.
- The cable trays must be connected properly and well grounded.
- Other cables cannot cross the VFD.

4.4 Main circuit wiring


4.4.1 Main circuit wiring

Figure 4-6 Main circuit wiring diagram

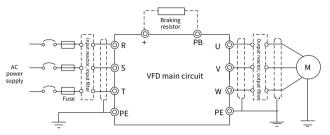

Note: The fuse, input reactor, input filter, output reactor, and output filter are optional parts. For details, see Appendix D Peripheral accessories.

4.4.2 Main circuit terminals

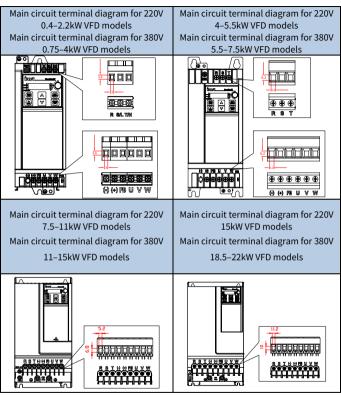

Terminal symbol Function description	
R, S/L, T/N	3PH (or 1PH) AC input terminals, connected to the grid.
U, V, W 3PH AC output terminals, connected to the motor usually.	
PB, (+)	Connected to the external braking resistor terminals.
(+), (-)	Busbar positive/negative terminal, used for sharing the DC

Terminal symbol	Function description
	busbar in VFD paralleling.
/ 1)	Grounding terminal for safe protection; each machine must carry two PE terminals and proper grounding is required.


■Note:

- It is recommended to use a symmetrical motor cable. Please ground the grounding conductor in the motor cable at the VFD end and the motor end.
- For frame A/B/C, the (-) terminal is optional for customization, unavailable for standard and EU models. For frame D/E, the (-) terminal is standard.

4.4.3 Wiring procedure


Step 1 Connect the yellow and green grounding line of the input power cable to the VFD grounding terminal, connect the 3PH input lines to the R, S, and T terminals, and tighten up.

Figure 4-7 Wiring diagram of input power cable

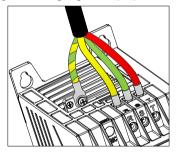

Step 2 Connect the yellow and green grounding line of the motor cable to the VFD PE terminal, connect the motor 3PH lines to the U, V, and W terminals, and tighten up.


Figure 4-8 Wiring diagram of motor cable

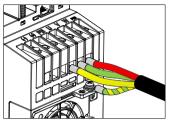

Step 3 Connect optional parts such as the braking resistor that carries cables to designated positions. See section 4.4.1 Main circuit wiring.

Step 4 Fasten all the cables outside the VFD mechanically if allowed.


Figure 4-9 Screw installation diagram

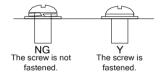

4.5 Control circuit wiring

4.5.1 Control circuit wiring


Figure 4-10 Control circuit wiring diagram

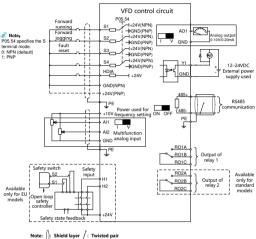

Note: : Shield layer : Twisted pair

4.5.2 Control circuit terminals

Figure 4-11 Control circuit terminal diagram

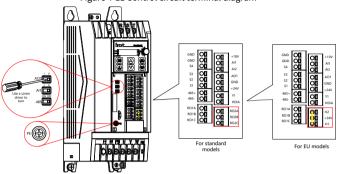

Terminal	Function				
+10V	Locally provided +10V power supply				
AI1	Analog input. Range: 0–10V/0–20mA. Whether voltage or current is used for input is set through the DIP switch.				
AI2	Analog input. Range: 0V–10V				
AO1	Analog output. Range: 0–10V/0–20mA. Whether voltage or current is used for output is set through the DIP switch.				
RO1A	Delevious DOIA, NO. DOID, NC. DOIC, common				
RO1B	Relay output. RO1A: NO; RO1B: NC; RO1C: common				
RO1C	Contact capacity: 3A/AC 250V, 1A/DC 30V				
RO2A	Relay output. RO2A: NO; RO2B: NC; RO2C: common				
RO2B					
RO2C	Contact capacity: 3A/AC 250V, 1A/DC 30V				
GND	Power reference ground				
Y1	Switch capacity: 50mA/30V. Output frequency range: 0–1kHz				
485+	RS485 differential signal communication port. The standard RS485				
485-	communication interface should use shielded twisted pair. Determine whether to connect the 120Ω terminal matching resistor of RS485 communication through the DIP switch. Note: If the VFD responds to the master, the master takes a delay t (unit: ms) before sending the next packet to the VFD. The delay t is				

Terminal	Function		
	calculated as follows:		
	<i>t</i> = 3150/Baud rate + 1.8		
	For example, if the baud rate is 19200, <i>t</i> is 1.964ms.		
+24V	User power supply provided by the VFD. Max. output current: 100mA		
	Active input high level range: 11–30V		
	Active input low level range: 0–3V		
S1-S4	Max. input frequency: 1kHz		
	Programmable digital input terminals, the functions of which can be set		
	through the related parameters.		
	Channel for both high-speed pulse input and digital input		
HDIA	Max. input frequency: 50kHz		
	Duty ratio: 30%–70%		
H1	Safe torque off (STO) inputs		
HI	STO redundant input, connected to the external NC contact. When the		
	contact opens, STO acts and the VFD stops output.		
112	Safety input signal wires use shielded wires whose length is within 25m.		
H2	The H1 and H2 terminals are short connected to +24V by default.		
	Remove the jumper from the terminals before using the STO function.		


4.5.3 Input/output signal wiring

4.5.3.1 Digital input/output signal wiring

The VFD supports both the NPN (sinking) and PNP (sourcing) wiring. The NPN (sinking) wiring is used by default.

■ Digital input signal wiring


Figure 4-12 NPN (sinking) wiring

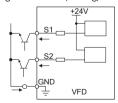


Internal +24V power supply

If you need to use the PNP (sourcing) wiring, set P05.54 to 1.

Figure 4-13 PNP (sourcing) wiring

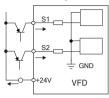

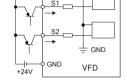


Internal +24V power supply

Internal +24V power supply

■ Digital output signal wiring

Figure 4-14 Y1 terminal wiring

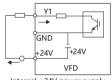

Internal +24V power supply

4.5.3.2 Analog input signal wiring

When the analog voltage signal connection is weak, it is prone to external noise interference. Therefore, shielded twisted pair cables are generally used, and the wiring distance should be within 20m. The lead line of the shield layer should be as short as possible and needs to be fixed to the VFD signal grounding \bigoplus with screws, as shown in Figure 4-15.


Figure 4-15 Analog input terminal wiring




Figure 4-16 PE shield layer wiring

■Note:

- When selecting current signal input for AI1, use a screwdriver to turn the AI1 switch to the "I" side.
- The method for AO1 current output type and RS485 matching resistor selection is similar to the preceding.

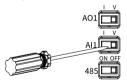


 In some cases where the analog signal is severely disturbed, a filtering capacitor or magnetic ring needs to be installed on the analog signal source side. At least 3 turns are required to pass through the same phase.

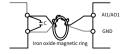

4.5.3.3 Relay output wiring

For protection purpose, you need to add a protective device such as varistor and diode near the inductive loads (including relays, contactors, and motors) that will cause voltage transients at power loss, but do not add any protective device to the relay output side.

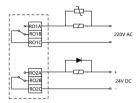

4.6 Power distribution protection

Warning



 Do not connect any power source to the VFD output terminals U, V and W. The voltage applied to the motor cable may cause permanent damage to the VFD.

Power cable and VFD protection

In case of short circuit, the fuse protects input power cables to avoid damage to the VFD; if internal short-circuit occurs to the VFD, it can protect neighboring equipment from being damaged. Figure 4-17 shows the wiring.

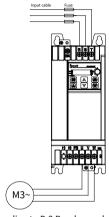


Figure 4-17 Fuse configuration

Note: Select the fuse according to D.2 Breaker and electromagnetic contactor.

Motor and motor cable short-circuit protection

If the motor cable is selected based on VFD rated current, the VFD is able to protect the motor cable and motor without other protective devices during short circuit.

Note: If the VFD is connected to multiple motors, use a separated thermal overload switch or breaker to protect the cable and motor, which may require the fuse to cut off the short circuit current.

Motor thermal overload protection

When overload is detected, the power must be cut off. The VFD is equipped with the motor thermal overload protection function, which can block output and cut off the current (if necessary) to protect the motor.

Bypass connection protection

In scenarios which require normal system operation in the event of VFD failure, the power/variable frequency conversion circuit needs to be configured.

In scenarios where the VFD is used only soft startup, power-frequency running is directly performed after the startup, which requires bypass connection.

If VFD status needs to be switched frequently, you can use the switch which carries mechanical interlock or a contactor to ensure motor terminals are not connected to input power cables and VFD output ends simultaneously.

5 Keypad operation guidelines

5.1 Keypad panel display

The VFD has been equipped with a LED film keypad as a standard configuration part. You can use the keypad to control the start and stop, read status data, and set parameters of the VFD.



Figure 5-1 Standard LED keypad

■Note:

- When mounting the keypad (including parameter copying keyboard and common keyboard) externally, use a standard RJ45 crystal head network cable as the keyboard extension cable, and mount it on the front door panel of the cabinet by using M3 screws or optional keyboard mounting bracket.
- When the external parameter copying keypad is valid, the local LED film keypad is not on; when the external common keypad is valid, both the external common keypad and the local LED film keypad are on.

5.1.1 Status indicator

Indicator	Status	Definition
	ON	The VFD is running.
RUN/TUNE	■ Blink	The VFD is in parameter autotuning.
	Off	The VFD is stopped.
EMD (DEM	ON	The VFD runs reversely.
FWD/REV	Off	The VFD runs forward.

Indicator	Status		Definition	
	ON	The VFD uses communication as the command running channel.		
LOCAL/REMOT	Blink	The VFD uses terminal as the comma running channel.		
	Off	The VFD ι running ch	uses keypad as the command annel.	
RUN/TUNE	On, displaying the fault code	The VFD is	in fault state.	
FWD/REV	Blinking			
LOCAL/REMOT	at the same	The VFD is in pre-alarm state.		
LOCAL/KEMOT	time			
	On: Unit displayed on	the keypad	currently	
	MZ A V	Hz	Frequency unit	
	RPM-N-V	RPM	Rotation speed unit	
Unit indicator	A V	Α	Current unit	
	RPM-N-N-	%	Percentage	
	RPM-A-%	V	Voltage unit	

Note: The unit indicator blinking and turning-on are generally used to distinguish different stop and running parameter display.

5.1.2 Display area

The display area displays a 5-digit value, including fault alarm code, set frequency, output frequency, and functional status data.

Display	Means	Display	Means	Display	Means	Display	Means
8	0	8	1	8	2	8	3
8	4	8	5	8	6	8	7
8	8	9	9	8	А	8	b
8	С	8	d	8	Е	8	F
8	Н	8	ı	8	L	8	N
8	n	8	0	8	Р	8	r
S	S	8	t	8	U	8	V
	•	8	-				

5.1.3 Key

l	Key		Function
	200	Programming/ Multifunction shortcut key	Press it to enter or exit level-1 menus or delete a parameter. Press and hold it (at least 1s) to implement the function defined by the ones place of P07.02, which is jogging by default.
	12	Confirmation/ Shifting key	Press it to enter menus in cascading mode or confirm the setting of a parameter. Press it to select display parameters in the interface for the VFD in stopped or running state. Press and hold it (at least 1s) for cyclic shifting during parameter setting.
	>	Up key	Press it to increase data or move upward.
	4	Down key	Press it to decrease data or move downward.
		Run key	Press it to run or perform autotuning under keypad operation mode.
	STDP NOT	Stop/Reset key	P07.04 specifies the validity of the key function.

Key		Function
		Press it to stop running or autotuning in running state. Press it to reset in fault alarm state.
Potentiomete (Al3)		When mounting the parameter copying keypad externally, the input source of AI3 is the potentiometer of this external keypad. When using the local LED film keypad or mounting a common keypad externally, the input source of AI3 is specified by P05.53.

5.2 Keypad display

The keypad display content varies under different states. The following describes the keypad display content under different states.

Figure 5-2 Status interface display







Stopped-state homepage

Running-state homepage

5.2.1 Displaying stopped-state parameters

When the VFD is in stopped state, and the keypad is not in the function code viewing or editing state, the keypad displays stopped-state parameters. By setting P07.07, you can select different stopped-state parameters. Press ENT/SHIFT to switch the parameters.

5.2.2 Displaying running-state parameters

When the VFD is in running state, and the keypad is not in the function code viewing or editing state, the keypad displays running-state parameters. By setting P07.05 and P07.06, you can select different running-state parameters. Press ENT/SHIFT to switch the parameters.

5.2.3 Fault display

When the VFD is in fault state, and the keypad is not in the function code viewing or editing state, the keypad displays the fault code in blinking way. You can perform fault reset by using the STOP/RST key, control terminals, or communication commands. If the fault persists, the fault state and fault code display are kept.

When the VFD is in fault display state, and the keypad is in the function code viewing or editing state, the keypad automatically returns to the fault state display if there is no operation within 20s. When there is no fault with the VFD, after entering the third-level menu of changing a function code with the attribute "•", the value of the function code will be displayed continuously. In other cases, if there is no operation on the keypad within 1 minute, the keypad will automatically return to the stopped-state or running-state parameter display from the function code viewing or editing state.

5.3 Operation procedure

5.3.1 Modifying function parameters

The keypad contains three levels of menus according to operation editing settings.



When the VFD is in stopped, running, or fault display state:

Press PRG/JOG to enter the level-one menu (if a user password has been set, see the description of P07.00).

Under the level-two menu, press ENT/SHIFT to enter the next-level menu.

Under the level-three menu, press **ENT/SHIFT** to save the current function code value and enter the level-two menu of the next function code.

Note: Under various levels of menus, press PRG/JOG to return to the previous

level of menu, press or to increase or decrease the value of the current blinking bit, and press and hold ENT/SHIFT to switch blinking bits rightward in circular mode.

The following takes P03.20 as an example to describe how to modify a function parameter in the stopped-state parameter display interface:

Scopped date parameter display

RATION PRODUCT OF THE PARAMETER OF THE PAR

Figure 5-3 Modifying a parameter

Note: When P00.18 is set to 3, any function code value does not blink, and any function code value cannot be modified.


5.3.2 Setting a password for the VFD

The VFD provides the user password protection function. When P07.00 is set to a non-zero value, the function code editing state is exited, and password protection will take effect within one minute. After the password takes effect, when the VFD is in the stopped, running, or fault display state, you need to type the user password after pressing the PRG/JOG key so as to enter the function code viewing and editing state.

The following takes setting the user password 10001 as an example to describe how

to set a password for the VFD in the stopped-state parameter display interface:


Figure 5-4 Setting a password

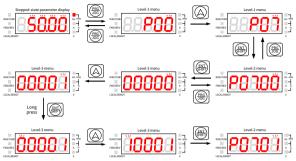

5.3.3 Viewing function parameters


The VFD provides the status viewing function. The following describes how to view function parameters in the stopped-state parameter display interface when the password is 10001:

Figure 5-5 Viewing a function code

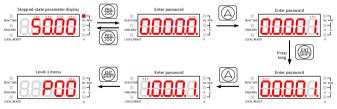

6 Commissioning

The simplified VFD commissioning flowchart is as follows:

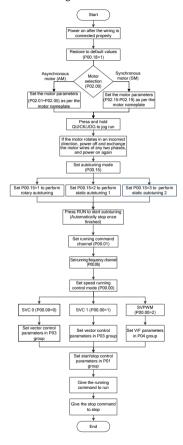

6.1 Motor parameter setting

The VFD supports the control of three-phase AC asynchronous motors and permanent magnet synchronous motors. The VFD uses a set of motor parameters, namely P02 group parameters, for motor control.

6.1.1 Motor type selection

You can select the motor type by setting P02.00.

Function code	Name	Default	Setting range	Description
P02.00	Type of motor 1	0	0-1	0: Asynchronous motor (AM) 1: Synchronous motor (SM)

[■]Note: The types of motors that are driven at the same type must be the same.

6.1.2 Rated motor parameter setting

 Set the rated parameters of three-phase AC asynchronous motors according to the motor nameplate.

Parameters P02.01-P02.05 are the parameters of asynchronous motor 1.

Function code	Name	Default	Setting range	Description
P02.01	Rated power of AM 1	Model depended	0.1-3000.0kW	-
P02.02	Rated frequency of AM 1	50.00Hz	0.01Hz-P00.03	P00.03 specifies the max. output frequency.
P02.03	Rated speed of AM 1	Model depended	1–60000rpm	-
P02.04	Rated voltage of AM 1	Model depended	0-1200V	-
P02.05	Rated current of AM 1	Model depended	0.08-600.00A	-

 Set the rated parameters of three-phase permanent magnetic synchronous motors according to the motor nameplate.

Parameters P02.15-P02.19 are the parameters of synchronous motor 1.

Function code	Name	Default	Setting range	Description
P02.15	Rated power of SM 1	Model depended	0.1-3000.0kW	-
P02.16	Rated frequency of SM 1	50.00Hz	0.01Hz-P00.03	P00.03 specifies the max. output frequency.
P02.17	Number of pole pairs of SM 1	2	1–128	-
P02.18	Rated voltage of SM 1	Model depended	0-1200V	-
P02.19	Rated current of SM 1	Model depended	0.08-600.00A	-

6.2 Motor parameter autotuning setting

To improve motor control effect, you are recommended to set motor rated parameters according to the motor nameplate after the first power on, and then conduct parameter autotuning. You can select an autotuning mode based on actual conditions.

Motor parameters have a significant impact on the calculation of the control model, especially in the case of vector control, which requires motor parameter autotuning first.

After setting motor parameters, you can set P00.15 to select the autotuning method. The setting procedure is as follows:

- Step 1 Set P00.01 to 0 to select the keypad.
- Step 2 Set P00.15 to select one method from three autotuning methods.

The keypad displays "-TUN-".

Step 3 Press RUN to give the start command. The motor enters autotuning.

During autotuning, the keypad displays the actual autotuning step such as "TUN-1"; when the autotuning is completed, the keypad displays "-End-".

	ction ode	Name	Default	Setting range	Description
P00	0.15	Motor parameter autotuning	0	0-3	0: No operation 1: Rotary autotuning 1 2: Static autotuning 1 (Full autotuning)

Function code	Name	Default	Setting range	Description
				3: Static autotuning 2 (Partial autotuning)

■Note:

- When P00.15 is set to 1, disconnect the motor from the load to put the motor in static and no-load state.
- When P00.15 is set to 2 or 3, there is no need to disconnect the motor from the load.

Table 6-1 Obtained motor parameters in different autotuning methods

Set value of	Autotuning parameters				
P00.15	AM 1	SM 1			
1	P02.06-P02.14	P02.20-P02.23			
2	P02.06-P02.10	D02 20 D02 22			
3	P02.06-P02.08	P02.20-P02.22			

Note: The synchronous motor back-EMF constant P02.23 can also be calculated based on the parameters on the motor nameplate, and there are three calculation methods

Method 1: If the back-EMF coefficient K_e is marked on the nameplate, the calculation is as follows:

$$E = (K_e * n_N * 2\pi) / 60$$

Method 2 : If the back-EMF E' (unit: V/1000r/min) is marked on the nameplate, the calculation is as follows:

$$E = E' * n_N / 1000$$

Method 3: If none of the two preceding parameters is marked on the nameplate, the calculation is as follows:

$$E = P / (\sqrt{3} * I)$$

In the preceding formulas, $n_{\text{\tiny N}}$ indicates the rated rotation speed, P indicates the rated power, and I indicates the rated current.

6.3 Running command selection

Running commands are used to control the start, stop, forward running, reverse running, and jogging of the VFD. The channels of running commands include keypad, terminal, and communication. Set P00.01 to select a channel of running commands.

Function code	Name	Default	Setting range	Description
	Channel of			0: Keypad
P00.01	running	0	0–2	1: Terminal
	commands			2: Communication

Keypad

When P00.01 is set to 0, you can control the VFD start or stop through the keypad key RUN or STOP/RST. After pressing the RUN key, the VFD starts running, and the RUN indicator turns on. In running state, if you press the STOP/RST key, the VFD stops running, and the RUN indicator turns off. For details about keypad operations, see chapter 5 Keypad operation guidelines.

Terminal

When P00.01 is set to 1, you can control the VFD start or stop through terminals. The setting procedure is as follows:

Step 1 Set P05.01–P05.09 to the required running commands. For example, to set S2 to reverse running, set P05.02 to 2.

Function code	Name	Default	Setting range	Description
P05.01- P05.09	Function selection of multifunction digital input terminals (S1–S8, and HDIA)	1 4 7 0 0 0 0 0	0-95	1: Run forward (FWD) 2: Run reversely (REV) 3: Three-wire running control (S _{in}) 4: Jog forward 5: Jog reversely 6: Coast to stop 7: Reset faults


Step 2 Set P05.13 (Terminal control mode).

Function code	Name	Default	Setting range	Description
P05.13	Terminal control mode	0	0-3	0: Two-wire control mode 1 1: Two-wire control mode 2 2: Three-wire control mode 1

Function code	Name	Default	Setting range	Description
				3: Three-wire control mode 2

Two-wire control mode 1: P05.13=0


The enabling is integrated with the direction. This mode is widely used. The defined FWD/REV terminal command determines the motor rotation direction.

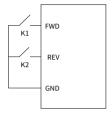

FWD	REV	Running command
OFF	OFF	Stop
ON	OFF	Forward running
OFF	ON	Reverse running
ON	ON	Hold

Two-wire control mode 2: P05.13=1


The enabling separated from the direction. In this mode, FWD is the enabling terminal. The direction depends on the defined REV state.

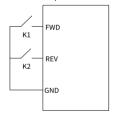

FWD	REV	Running command
OFF	OFF	Stop
ON	OFF	Forward running
OFF	ON	Stop
ON	ON	Reverse running

Three-wire control mode 1: P05.13=2

This mode defines S_{in} as the enabling terminal, and the running command is generated by FWD, while the direction is controlled by REV. During running, the S_{in} terminal needs to be closed, and terminal FWD generates a rising edge signal, then the VFD starts to run in the direction set by the state of terminal REV; the VFD needs to disconnect the S_{in} terminal for stop.

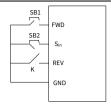


The direction control is as follows during running:

Sin	REV	Previous direction	Present direction
ON	OFF YON	Forward running	Reverse running
ON	OFF→ON	Reverse running	Forward running
ON	ON . OFF	Reverse running	Forward running
ON	ON→OFF	Forward running	Reverse running
ON→OFF	ON	Decelerate to stop	
UN→UFF	OFF	Deceleral	te to stop

Three-wire control mode 2: P05.13= 3

This mode defines S_{in} as the enabling terminal, and the running command is generated by FWD or REV, but the direction is controlled by both FWD and REV. During running, the S_{in} terminal needs to be closed, and terminal FWD or REV generates a rising edge signal to control the running and direction of the VFD; the VFD needs to disconnect the S_{in} terminal for stop.

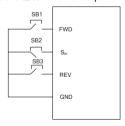

The direction control is as follows during running:

Sin	FWD	REV	Running direction
011	OFF .ON	ON	Forward running
ON	OFF→ON	OFF	Forward running

S _{in}	FWD	REV	Running direction
ON	ON	OFF→ON	Reverse running
ON	OFF	OFF→ON	Reverse running
ON→OFF			Decelerate to stop

Note: For two-wire controlled running mode, when the FWD/REV terminal is valid, if the VFD stops due to a stop command given by another source, the VFD does not run again after the stop command disappears even if the control terminal FWD/REV is still valid. To make the VFD run, you need to trigger FWD/REV again, for example, PLC single-cycle stop, fixed-length stop, and valid STOP/RST stop during terminal control. (See P07.04.)

Communication

When P00.01 is set to 2, you can control the VFD start or stop by setting commands through Modbus communication. For details, see chapter 7 Communication.


6.4 Frequency setting

The VFD supports multiple kinds of frequency reference modes, which can be categorized into two types: main reference channel and auxiliary reference channel.


There are two main reference channels, namely frequency reference channel A and frequency reference channel B. These two channels support simple arithmetical operation between each other, and they can be switched dynamically.

There is one auxiliary reference channel, namely the UP/DOWN terminal. You can set P08.44 to set related functions of the UP/DOWN terminal.

The actual VFD reference is comprised of the main reference channel and auxiliary reference channel. The schematic diagram is as follows:

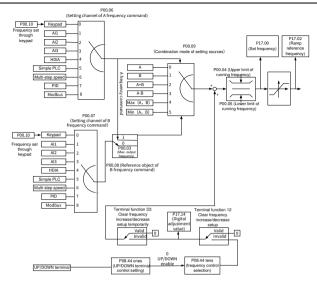

For example, when selecting function 10 or 11 for function code P05.01 or P05.02, S1 or S2 is the Up or Down terminal. When S1 or S2 is closed, the reference frequency increases or decreases quickly. The increase or decrease change rate is determined by P08.45 or P08.46, as shown in the following figure.

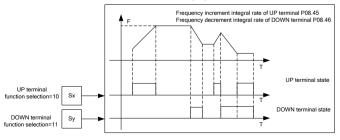

6.4.1 Combination of frequency setting source

6.4.1.1 Combination mode of setting source

Set P00.09 to select the combination mode of setting source.

Function code	Name	Default	Setting range	Description
P00.09	Combination mode of setting source	0	0–5	0: A 1: B 2: (A+B) 3: (A-B) 4: Max(A, B) 5: Min(A, B)

6.4.1.2 Frequency channel switchover

You can set any of function codes P05.01–P05.09 to any of functions 13–15 to switch frequency channels. The setting procedure is as follows:

Step 1 Select any of multifunction digital input terminals S1–S8 and HDIA as an external input terminal.

Step 2 Set P05.01-P05.09 to any of functions 13-15.

Function code	Name	Default	Setting range	Description
		1		
	Function selection of multifunction digital input terminals (S1–S8, and HDIA)	4	0–95	13: Switch between A setting and B setting 14: Switch between combination setting and A setting 15: Switch between combination setting and B
		7		
P05.01- P05.09		0		
		0		
P05.09		0		
		0		
		0		setting
		0		

The combinations are described in the following table.

Present reference channel P00.09	Multifunction digital input terminal function 13 (Switch from channel A to channel B)	Multifunction digital input terminal function 14 (Switch from combined setting to channel A)	Multifunction digital input terminal function 15 (Switch from combined setting to channel B)	
Α	В	-	-	
В	А	-	-	
A+B	•	Α	В	
A-B	-	Α	В	
Max(A, B)	=	Α	В	
Min(A, B)	-	Α	В	

6.4.2 Frequency setting method

The VFD provides multiple frequency setting methods, including setting P00.06 (Setting channel of A frequency command) and setting P00.07 (Setting channel of B frequency command).

Function code	Name	Default	Setting range	Description
P00.06	Setting channel of A frequency command	0		0: Keypad digital 1: Al1 2: Al2 3: Al3
P00.07	Setting channel of B frequency command	1		4: High-speed pulse HDIA 5: Simple PLC program 6: Multi-step speed running 7: PID control 8: Modbus communication

6.4.2.1 Setting frequency through the keypad

When P00.06/P00.07 (Setting channel of A/B frequency command) is set to 0 (keypad digital as the setting channel), and P00.10 specifies the original value of the digital setting based VFD frequency.

Function code	Name	Default	Setting range	Description
P00.10	Setting frequency through the keypad	50.00Hz	0.00Hz- P00 03	P00.03 specifies the max. output frequency. When the setting channel of A and B frequency commands is keypad, P00.10 specifies the original value of the digital setting based VFD frequency.

6.4.2.2 Setting frequency through analog

You can set P00.06 or P00.07 to 1, 2, or 3 (setting frequency through analog). For details, see section 6.9.2 Analog input and output terminal functions.


6.4.2.3 Setting frequency through high-speed pulse

You can set P00.06 or P00.07 to 4 (setting frequency through high-speed pulse).


6.4.2.4 Setting frequency through simple PLC

You can set P00.06 or P00.07 to 5 (setting frequency through simple PLC).

Simple PLC is a multi-step speed generator, and the VFD can change the running frequency and direction automatically based on the running time to fulfill process requirements. The VFD can realize 16-step speed control, and provide four groups of acceleration/deceleration time for selection. After the set PLC completes one cycle (or one step), one ON signal can be output by the multifunction relay. See the following figure.

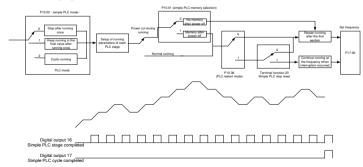

When simple PLC is selected for frequency giving, you need to set P10.02–P10.33 to determine the running frequency and running time of each step. The schematic diagram is as follows:

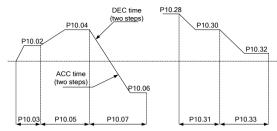

Note: The sign of multi-step speed determines the running direction of simple PLC, and a negative value means reverse running. ACC time means the time needed if the VFD speeds up from 0Hz to the max. output frequency (P00.03). DEC time means the time needed if the VFD speeds down from the max. output frequency (P00.03) to 0Hz. Select corresponding ACC/DEC time, and then convert 16-bit binary number into hexadecimal number, finally, and then set corresponding function codes.

Function code	Name	Default	Setting range	Description
P00.11	ACC time 1	Model depended		
P00.12	DEC time 1	Model depended		
P08.00	ACC time 2	Model depended		The VFD has four groups of ACC/DEC time, which can be selected by P05. The factory default ACC/DEC time of the VFD is the first group.
P08.01	DEC time 2	Model depended	O.0–3600.0s sel de VF	
P08.02	ACC time 3	Model depended		
P08.03	DEC time 3	Model depended		
P08.04	ACC time 4	Model depended		
P08.05	DEC time 4	Model depended		

Function code	Name	Default	Setting range	Description
P10.34	ACC/DEC time of steps 0–7 of simple PLC	0x0000	0x0000-	Select corresponding acceleration/deceleration time, and then convert 16-bit binary number into
P10.35	ACC/DEC time of steps 8–15 of simple PLC	0x0000	0xFFFF	hexadecimal number, finally, and then set corresponding function codes. For details, see the following table.

The description is as follows:

Function code	Binary		Step	ACC/DEC time 1	ACC/DEC time 2	ACC/DEC time 3	ACC/DEC time 4
	Bit1	Bit0	0	00	01	10	11
	Bit3	Bit2	1	00	01	10	11
	Bit5	Bit4	2	00	01	10	11
P10.34	Bit7	Bit6	3	00	01	10	11
P10.34	Bit9	Bit8	4	00	01	10	11
	Bit11	Bit10	5	00	01	10	11
	Bit13	Bit12	6	00	01	10	11
	Bit15	Bit14	7	00	01	10	11
	Bit1	Bit0	8	00	01	10	11
	Bit3	Bit2	9	00	01	10	11
	Bit5	Bit4	10	00	01	10	11
P10.35	Bit7	Bit6	11	00	01	10	11
P10.35	Bit9	Bit8	12	00	01	10	11
	Bit11	Bit10	13	00	01	10	11
	Bit13	Bit12	14	00	01	10	11
	Bit15	Bit14	15	00	01	10	11


6.4.2.5 Setting frequency through multi-step speed commands

You can set P00.06 or P00.07 to 6 (setting frequency through multi-step speed commands). It is applicable to scenarios where the VFD running frequency does not need to be adjusted continuously and only a number of frequency values are needed.

The VFD supports the setting of 16-step speed, which are set by combined codes of multi-step terminals 1–4 set by S terminals, corresponding to function code P05.01–P05.09) and correspond to multi-step speed 0 to multi-step speed 15.

When terminal 1, terminal 2, terminal 3, and terminal 4 are off, the frequency input method is specified by P00.06 or P00.07. When terminal 1, terminal 2, terminal 3, and terminal 4 are not all off, setting frequency through multi-step speed commands will prevail. That is, the priority of setting frequency through multi-step commands is higher than that of setting frequency through the keypad, analog, high-speed pulse, PID, and communication.

Note: The symbol of multi-step speed determines the running direction of simple PLC, and the negative value means reverse running. For details, see section 6.4.2.4 Setting frequency through simple PLC.

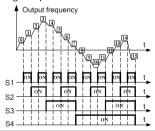


T1	OFF	ON	OFF	ON	OFF	ON	OFF	ON
T2	OFF	OFF	ON	ON	OFF	OFF	ON	ON
T3	OFF	OFF	OFF	OFF	ON	ON	ON	ON
T4	OFF							
Step	0	1	2	3	4	5	6	7
T1	OFF	ON	OFF	ON	OFF	ON	OFF	ON
T2	OFF	OFF	ON	ON	OFF	OFF	ON	ON
T3	OFF	OFF	OFF	OFF	ON	ON	ON	ON
T4	ON							
Step	8	9	10	11	12	13	14	15

Function code	Name	Default	Setting range	Description
P05.01- P05.09	Function selection of multifunction digital input terminals (S1– S8, and HDIA)	1 4 7 0 0 0 0 0	0–95	16: Multi-step speed terminal 1 17: Multi-step speed terminal 2 18: Multi-step speed terminal 3 19: Multi-step speed terminal 4 20: Pause multi-step speed running
P10.02-	P10.02- P10.32 Multi-step speeds 0-15 and running time	0.0%	Frequency: -300.0–300.0%	The setting 100.0% corresponds to the max. output frequency (P00.03).
P10.32		0.0s(min)	Time: 0.0-6553.5s(min)	The time unit is specified by P10.37.

6.4.2.6 Setting frequency through PID control

You can set P00.06 or P00.07 to 7 (setting frequency through PID control).

PID control, a common mode for process control, is mainly used to adjust the VFD output frequency or output voltage, thus forming a negative feedback system to keep the controlled variables above the target. It is applicable to flow control, pressure control, temperature control, and so on. The following is the basic schematic block diagram for output frequency regulation.

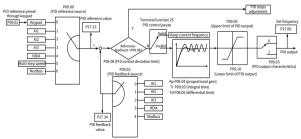

Function code	Name	Default	Setting range	Description
P09.00	PID reference source selection	0	0-6	When P00.06 or P00.07 (Setting channel of A/B frequency command) is 7 or P04.27 (Voltage setting channel) is 6, the VFD is process PID controlled. The function code determines the target given channel during the PID process. 0: Setting through P09.01 1: Al1 2: Al2 3: Al3 4: High-speed pulse HDIA 5: Multi-step running 6: Modbus communication The set target of process PID is a relative value, for which 100% equals 100% of the feedback signal of the controlled system. The system always calculates a related value (0–100.0%).
P09.01	PID digital setting	0.0%	-100.0%- 100.0%	The function code is mandatory when P09.00=0. The base value of P09.01 is the feedback of the system.
P09.02	PID feedback source selection	0	0-4	0: Al1 1: Al2 2: Al3 3: High-speed pulse HDIA 4: Modbus communication **Note: The reference channel and feedback channel cannot be duplicate. Otherwise, effective PID

Function code	Name	Default	Setting range	Description
P09.03	PID output characteristics selection	0	0-1	control cannot be achieved. 0: PID output is positive. When the feedback signal is greater than the PID reference value, the output frequency of the VFD will decrease to balance the PID. Example: PID control on strain during unwinding. 1: PID output is negative. When the feedback signal is greater than the PID reference value, the output frequency of the VFD will increase to balance the PID. Example: PID control on strain during unwinding.
P09.07	Sampling cycle (T)	0.001s	0.000-1.000s	Used to indicate the sampling cycle of feedback. The regulator calculates in each sampling cycle. A longer sampling cycle indicates slower response.
P09.08	PID control deviation limit	0.0%	0.0-100.0%	Used to adjust the accuracy and stability of the PID system. The output value of the PID system is relative to the max. deviation of the closed loop reference. As shown in the following figure, the PID regulator stops regulating in the range of deviation limit.

Function code	Name	Default	Setting range	Description
				Peditorio Devisito Emi
P09.09	PID output upper limit	100.0%	P09.10–100.0% (Max. frequency or voltage)	Specifies the upper limit of PID regulator output values.
P09.10	PID output lower limit	0.0%	-100.0%– P09.09 (Max. frequency or voltage)	Specifies the lower limit of PID regulator output values.
P09.11	Feedback offline detection value	0.0%	0.0–100.0%	When the feedback value is smaller than or equal to the feedback offline detection value, and the duration
P09.12	Feedback offline detection time	1.0s	0.0-3600.0s	exceeds the value specified by P09.12, the VFD reports "PID feedback offline fault" the keypad displays "E22". **Output frequency full relations to the VFD continues running
P09.13	PID control selection	0x0001	0x0000-0x1111	Ones place: 0: Continue integral control after the frequency reaches upper/lower limit 1: Stop integral control after the frequency reaches upper/lower limit Tens place: 0: Same as the main reference direction

Function code	Name	Default	Setting range	Description
				1: Contrary to the main reference direction Hundreds place: 0: Limit as per the max. frequency 1: Limit as per A frequency Thousands place: 0: A+B frequency. ACC/DEC of main reference A frequency source buffering is invalid. 1: A+B frequency. ACC/DEC of main reference A frequency source buffering is valid. ACC/DEC is determined by P08.04 (ACC time 4).
P09.14	Low frequency proportional gain (Kp)	1.00	0.00-100.00	Low-frequency switching point: 5.00Hz; high-frequency switching point: 10.00Hz (P09.04 corresponds to high-frequency parameter), and the middle is the linear interpolation between two points.
P09.15	ACC/DEC time of PID command	0.0s	0.0-1000.0s	-
P09.16	PID output filter time	0.000s	0.000-10.000s	-
P09.18	Low frequency integral time (Ti)	0.90s	0.00-10.00s	-
P09.19	Low frequency differential time (Td)	0.00s	0.00-10.00s	-
P09.20	Low frequency point for PID	5.00Hz	0.00Hz-P09.21	-

Function code	Name	Default	Setting range	Description
	parameter switching			
P09.21	High frequency point for PID parameter switching	10.00Hz	P09.20-P00.03	-
P17.00	Set frequency	0.00Hz	0.00Hz-P00.03 (Max. output frequency)	-
P17.23	PID reference value	0.0%	-100.0-100.0%	-
P17.24	PID feedback value	0.0%	-100.0-100.0%	-

Introduction to the working principles and control methods for PID control Proportional regulation (Kp)

Proportional control can respond to feedback changes rapidly, however, it cannot eliminate the static difference by itself. A larger proportional gain indicates a faster regulating speed, but a too large gain will result in oscillation. To solve this problem, set the integral time to a large value and the differential time to 0 to run the system, and then change the reference to observe the difference (that is, static difference) between the feedback signal and reference. If the static difference occurs in the direction of reference change (such as reference increase, where the feedback is always less than the reference after system stabilizes), continue increasing the proportional gain; otherwise, decrease the proportional gain. Repeat this process until the static difference becomes small.

Function code	Name	Default	Setting range	Description
P09.04	Proportional gain (Kp)	1.80	0.00-100.00	The function is applied to the proportional gain P of PID input. P determines the strength of the whole PID regulator. The larger the value of P, the stronger the adjustment intensity. The value 100 indicates that when

Function code	Name	Default	Setting range	Description
				the difference between the PID feedback value and given value is 100%, the range within which the PID regulator can regulate the output frequency command is the max. frequency (ignoring integral function and differential function).

Integral time (Ti)

The integral adjuster can be used to eliminate static difference. Too large regulation may lead to system oscillation. The integral time parameter is generally regulated gradually from large to small until the stabilized system speed fulfills the requirement.

Function code	Name	Default	Setting range	Description
P09.05	Integral time (Ti)	0.90s	0.01-10.00s	Used to determine the speed of integral adjustment on the deviation of PID feedback and reference from the PID regulator. When the deviation is 100%, the integral regulator works continuously during the time to achieve the max. output frequency (P00.03) or the max. voltage (P04.31). Shorter integral time indicates stronger adjustment.

Differential time (Td)

Differential control is used to control the feedback signal variation based on the change trend. Exercise caution before using the differential regulator since it may enlarge the system interferences, especially those with high change frequency.

When P00.06 or P00.07 (Setting channel of A/B frequency command) is 7 or P04.27 (Voltage setting channel) is 6, the VFD is process PID controlled.


Function code	Name	Default	Setting range	Description
P09.06	Differential time (Td)	0.00s	0.00-10.00s	Used to determine the strength of the change ratio adjustment on the deviation of PID feedback and reference from the PID regulator. If the PID feedback changes 100% during the time, the adjustment of the differential regulator is the max. output frequency (P00.03) or the max. voltage (P04.31). Longer differential time indicates stronger adjustment.

How to fine-tune PID

After setting the parameters controlled by PID, you can adjust these parameters by the following means.


Control overshoot

When overshoot occurred, shorten the derivative time (Td) and prolong integral time (Ti).

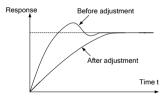


Stabilize the feedback value as fast as possible

When overshoot occurred, shorten integral time (Ti) and prolong derivative time (Td) to stabilize control as fast as possible.

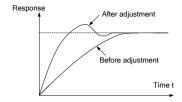


Control long-term oscillation

If the cycle of periodic oscillation is longer than the set value of integral time (Ti), it indicates the integral action is too strong, prolong the integral time (Ti) to control oscillation.

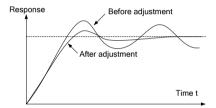

Control short-term oscillation

If the oscillation cycle is as short almost the same as the set value of differential time (Td), it indicates the differential action is too strong. Shorten the differential time (Td) to control oscillation. When the differential time (Td) is set to 0.00 (namely no differential control), and there is no way to control oscillation, decrease the proportional gain.

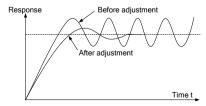

6.4.2.7 Frequency set through communication

You can set P00.06 or P00.07 to 8 (Setting frequency through communication). For details, see chapter 7 Communication.

6.4.3 Frequency fine-tuning

The VFD supports frequency fine-tuning based on the set frequency. In some special scenarios, the set frequency can be set to 0, and the frequency fine-tuning function can be used for frequency setting during the whole process.

Step 1 Select any of multifunction digital input terminals S1–S8 and HDIA as an external input terminal.

Step 2 Set P05.01-P05.09 to 10 or 11.

Function code	Name	Default	Setting range	Description
P05.01- P05.09	Function selection of multifunctio n digital input terminals (S1–S8, and HDIA)	1 4 7 0 0 0 0 0	0–95	10: Increase frequency setting (UP) 11: Decrease frequency setting (DOWN)
P08.44	UP/DOWN terminal control setting	0x000	0x000-0x221	Ones place: Frequency setting selection 0: The setting made through UP/DOWN is valid. 1: The setting made through UP/DOWN is invalid. Tens place: Frequency control selection 0: Valid only when P00.06=0 or P00.07=0 1: Valid for all frequency setting methods 2: Invalid for multi-step speed running when multi-step speed running has the priority

Function code	Name	Default	Setting range	Description
				Hundreds place: Action selection for stop 0: Setting is valid. 1: Valid during running, cleared after stop 2: Valid during running, cleared after a stop command is received
P08.45	Frequency integral rate of the UP terminal	0.50Hz/s	0.01-50.00	-
P08.46	Frequency integral rate of the DOWN terminal	0.50Hz/s	0.01–50.00	-

6.5 Speed control mode selection

The VFD supports three speed control modes. You can set P00.00 to select a speed control mode based on actual conditions. Before using a vector control mode (0 or 1), set the motor nameplate parameters and perform motor parameter autotuning first. For details, see sections 6.1.2 Rated motor parameter setting and 6.2 Motor parameter autotuning setting.

Function code	Name	Default	Setting range	Description
P00.00	Speed control mode	2	0_2	0: SVC 0 1: SVC 1 2: Space voltage vector control mode

SVC mode 0: P00.00 = 0

In this case, there is no need to install encoders. It is applicable to scenarios with requirements for low frequency, great torque, and high speed control accuracy. It implements precise control of speed and torque. Relative to SVC mode 1, this mode is more applicable to the scenarios requiring small power. For details, see Group P03—Vector control of motor 1.

Note: The SM in this mode is applicable to large-power low frequency running

rather than ultra-high speed running.

SVC mode 1: P00.00 = 1

In this case, there is no need to install encoders. It is applicable to scenarios that require high speed control accuracy. It can be used across all power ranges, enabling precise control of speed and torque. For details, see Group P03—Vector control of motor 1.

Space voltage vector control mod: P00.00 = 2

In this case, there is no need to install encoders. It can improve the control accuracy with the advantages of stable operation, valid low-frequency torque boost and current vibration suppression and the functions of slip compensation and voltage adjustment. For details, see Group P04—V/F control.

6.6 Torque setting method

The VFD supports torque control and speed control. Speed control aims to stabilize the speed to keep the set speed consistent with the actual running speed, meanwhile, the max. load-carrying capacity is restricted by the torque limit. Torque control aims to stabilize the torque to keep the set torque consistent with the actual output torque, meanwhile, the output frequency is restricted by the upper and lower limits.

6.6.1 Torque setting method selection

You can set P03.11 to select a torque setting method. The torque setting adopts a relative value, 100% corresponds to the motor rated current, and the setting range is -300.0%–300.0%. After giving the start command to the VFD, the VFD runs in the forward direction when the torque reference value is positive and in the reverse direction when the torque reference value is negative.

Function code	Name	Default	Setting range	Description
P03.11	Torque setting method	0	0-7	0-1: Keypad (P03.12) 2: Al1 3: Al2 4: Al3 5: Pulse frequency HDIA 6: Multi-step torque 7: Modbus communication Note: For AMs, 100% corresponds to the motor rated torque current (when the value 0 or 1 is selected)

Function code	Name	Default	Setting range	Description
				and 100% corresponds to triple the motor rated torque current (when the value from 2 to 7 is selected). For SMs, 100% corresponds to the motor rated current (when the value 0 or 1 is selected) and 100% corresponds to triple the motor rated current (when the value from 2 to 7 is selected).
P03.12	Torque set through keypad	20.0%	-300.0%- 300.0%	The torque setting adopts a relative value. For AMs, 100% corresponds to the motor rated torque current; for SMs, 100% corresponds to the motor rated current.
P03.13	Torque reference filter time	0.010s	0.000-10.000s	-

6.6.2 Switching between speed control and torque control

There are two switching methods for speed control and torque control.

Method 1 Enable control switching

Set P03.32 to 0 for speed control or 1 for torque control.

Method 2 Switch through multifunction digital input terminal signal function selection

The multifunction digital input terminal signal switching procedure is as follows:

Step 1 Select any of multifunction digital input terminals S1–S8 and HDIA as an external input terminal.

Step 2 Set P05.01-P05.09 to 29.

When function 29 is valid, set P03.32 to 0 for torque control or 1 for speed control.

▶Note: When the terminal for switching speed control and torque control is valid, the control enabling selection is the opposite of that selected in P03.32.

Function code	Name	Default	Setting range	Description
P03.32	Enabling torque control	0	0-1	0: Disable 1: Enable
		1		
	Function	4	0–95	29: Switch between speed
		7		
P05.01-	selection of multifunction	0		
	P05.01 multifunction digital input terminals (S1-	0		control and torque control
1 05.05		0		control and torque control
	S8, and HDIA)	0		
	So, and HDIA)	0		
		0		

6.7 Start/stop settings

6.7.1 Start settings

For a specific motor type and application scenario, you can select a start mode by setting P01.00.

Function code	Name	Default	Setting range	Description
P01.00	Start mode	0	0-2	0: Direct start 1: Start after DC braking

Direct start: P01.00= 0


If the braking time before start is 0, the VFD runs at the starting frequency of direct start P01.01. This is often applicable to start from a still state. See the following figure.



Start after DC braking: P01.00=1

If the DC braking time is not 0, enable the motor to keep at a position by means of DC braking, and then perform ACC start. This is applicable to the scenarios with the

motor in slight rotation before start. See the following figure.

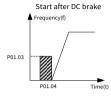

Function code	Name	Default	Setting range	Description
P01.01	Starting frequency of direct start	0.50Hz	0.00-50.00Hz	The function code indicates the initial frequency during VFD start. See P01.02 (Starting frequency hold time) for detailed information.
P01.02	Starting frequency hold time	0.0s	0.0–50.0s	Setting a proper starting frequency can increase the torque during VFD start. During the hold time of the starting frequency, the output frequency of the VFD is the starting frequency. And then, the VFD runs from the starting frequency to the set frequency. If the set frequency is lower than the starting frequency, the VFD stops running and keeps in the standby state. The starting frequency is not limited in the lower limit frequency.

Function code	Name	Default	Setting range	Description
				Output frequency f fit Time t It is specified by P01.01 t1 at is specified by P01.02
P01.03	Braking current before start	0.0%	0.0-100.0%	The VFD performs DC braking with the braking current before start and it speeds up after the DC braking time. If the set DC braking time is 0,
P01.04	Braking time before start	0.00s	0.00-50.00s	DC braking is invalid. Stronger braking current indicates larger braking power. The DC braking current before start is a percentage of the VFD rated output current.
P01.23	Start delay	0.0s	0.0-600.0s	After a VFD running command is given, the VFD is in standby state and restarts with the start delay to implement brake release.
P01.30	Hold time of short-circuit braking for start	0.00s	0.0-50.0s	When the VFD starts in direct start mode (P01.00=0), set P01.30 to a non-zero value to enter short-circuit braking.


6.7.2 Stop settings

You can select a stop mode by setting P01.08.

Function code	Name	Default	Setting range	Description
P01.08	Stop mode	0	10-1	0: Decelerate to stop 1: Coast to stop

Decelerate to stop: P01.08=0

After a stop command takes effect, the VFD lowers output frequency based on the DEC mode and the defined DEC time; after the frequency drops to the stop speed (P01.15), the VFD stops.

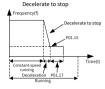

Coast to stop: P01.08= 1

After a stop command takes effect, the VFD stops output immediately, and the load coasts to stop according to mechanical inertia.




Note: If the set frequency is changed from higher than the frequency lower limit to lower than the frequency lower limit, the VFD takes the action specified by P01.19.

Function code	Name	Default	Setting range	Description
P01.19	Action selected when running frequency less than frequency lower limit (valid when frequency lower limit greater than 0)	0x00	()x()()=()x17	Ones place: Action selection 0: Run at the frequency lower limit 1: Stop 2: Sleep Tens place: Stop mode 0: Coast to stop 1: Decelerate to stop

Function code	Name	Default	Setting range	Description
P01.09	Starting frequency of DC braking for stop	0.00Hz	0.00Hz–P00.03	P00.03 specifies the max. output frequency. During the deceleration to stop, the VFD starts DC braking for stop when the running frequency reaches the frequency specified by P01.09.


P01.09 = Non-zero value

Short-circuit braking for stop and DC braking can be valid only with this setting. During decelerating to stop, if the running frequency of VFD is lower than the starting frequency of brake for stop (P01.09), the VFD waits for the demagnetization time P01.10 and checks the value of P01.31. If the value is a non-zero value, the VFD enters short-circuit braking for stop. Then the VFD checks the value of P01.12. If the value is a non-zero value, the VFD performs DC braking with the time specified by P01.12. When the DC braking time is reached, the VFD coasts to stop. If the value of P01.31 is zero, short-circuit braking for stop is invalid. Similarly, if the value of P01.12 is zero. DC braking for stop is invalid.

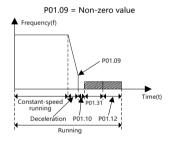

P01.09 = Zero

The VFD decelerates to stop according to the normal process. When the ramp frequency is less than P01.15, the VFD performs stop determination with a delay specified by P01.24 according to the mode specified by P01.16. If P01.16 = 0, the VFD coasts to stop. If P01.16 = 1, the VFD needs to check whether the motor output frequency is less than P01.15. If yes, the VFD coasts to stop. If no, the VFD coasts to stop with a delay specified by P01.17.

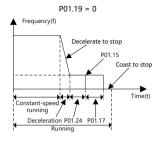

The methods for fast decelerating to stop are as follows:

Method 1 Increase the VFD power to improve the VFD max. braking capability.

Method 2 Decelerate to the lower speed specified by P01.09 to enable short-circuit braking or DC braking.

Method 3 Set P08.50 to enable magnetic flux braking.

Method 4 Add braking resistors.

Method 5 Set the S-curve deceleration method.


Function code	Name	Default	Setting range	Description
P01.10	Demagnetiza tion time	0.00s	0.00-30.00s	The VFD blocks the output before starting DC braking for stop. The VFD starts DC braking after this time so as to prevent overcurrent caused by DC braking at high speed.
P01.11	DC braking current for stop	0.0%	0.0-100.0%	Percentage of the VFD rated output current. Stronger current indicates greater DC braking effect.
P01.12	DC braking time for stop	0.00s	0.0-50.0s	DC braking duration. If the time is 0, DC braking is invalid, and the VFD decelerates to stop within the specified time.

Function code	Name	Default	Setting range	Description
P01.15	Stop speed	0.50Hz	0.00- 100.00Hz	-
P01.16	Stop speed detection mode	0	0-1	0: Detect by the set speed (unique in space voltage vector control mode) 1: Detect by the feedback speed
P01.17	Stop speed detection time	0.50s	0.00-100.00s	-
P01.24	Stop speed delay	0.0s	0.0-600.0s	-
P01.29	Short-circuit braking current	0.0%	0.0-150.0%	Relative to the VFD rated current
P01.31	Hold time of short-circuit braking for stop	0.00s	0.0-50.0s	-


6.7.3 Power-off restart

For any command running channels, if P01.21 = 1, the VFD memorizes the running status at power-off. If the VFD is running before power-off, the VFD automatically runs with a wait time specified by P01.22 at the next power-on when start conditions are met.

When terminals are uses as the command running channel, you need to set P01.18 to 1. The following figure shows the wait time for restart after power-off.

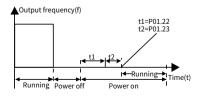

The following figure shows the logic diagram for restart after power-off:

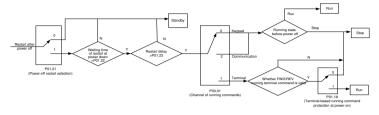

Function code	Name	Default	Setting range	Description
P01.21	Restart after power off	0	0-1	0: Disable 1: Enable
P01.22	Wait time for restart after power-off	1.0s	0.0-3600.0s	Valid when P01.21 is 1. The function code indicates the wait time before the automatic running of the VFD that is re-powered on.
P01.23	Start delay	0.0s	0.0-600.0s	After a VFD running command is given, the VFD restarts running output with the delay defined by P01.23 from the standby state, to implement brake release.
P01.18	Terminal- based running command protection at power-on	0	0-1	0: The terminal running command is invalid at power-on. 1: The terminal running command is valid at power-on. Note: Exercise caution before using this function. Otherwise, serious consequences may result.

Terminal-based running command is invalid at power-on: P01.18 = 0

Though the command running terminal is considered as valid during power-on, the VFD does not run and it keeps the protection state until the terminal is disabled and then enabled

Terminal-based running command is valid at power-on: P01.18 = 1

If the command running terminal is considered as valid during power-on, the VFD is started automatically after the initialization.

6.8 Control performance regulation


6.8.1 Space vector control performance optimization

6.8.1.1 V/F curve setting

The VFD provides multiple V/F curve modes to meet different requirements. You can select V/F curves or set V/F curves as required.

For the load featuring constant torque, such as conveyor belt which runs in straight line, as the whole running process requires constant torque, it is recommended to adopt the straight line V/F curve.


For the load featuring decreasing torque, such as fan and water pumps, as there is a power (square or cube) relationship between its actual torque and speed, it is recommended to adopt the V/F curve corresponding to the power of 1.3, 1.7 or 2.0.

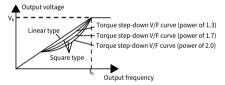

»Note: In the figure, V_b indicates the motor rated voltage and f_b indicates the motor rated frequency.

Function code	Name	Default	Setting range	Description
P04.00	V/F curve setting of motor 1	0	0–5	0: Straight-line V/F curve, applicable to constant torque loads 1: Multi-point V/F curve 2: Torque-down V/F curve (power of 1.3) 3: Torque-down V/F curve (power of 1.7)

Function code	Name	Default	Setting range	Description
				4: Torque-down V/F curve (power of 2.0) 5: Customized V/F (V/F separation); in this mode, V can be separated from F and F can be adjusted through the frequency setting channel set by P00.06 or the voltage setting channel set by P04.27 to change the characteristics of the curve.

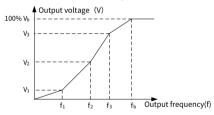

Function code	Name	Default	Setting range	Description
P04.03	V/F frequency point 1 of motor 1	0.00Hz	0.00Hz-P04.05	-


Function code	Name	Default	Setting range	Description
P04.04	V/F voltage point 1 of motor 1	0.0%	0.0%-110.0%	Rated voltage of motor 1
P04.05	V/F frequency point 2 of motor 1	0.00Hz	P04.03-P04.07	-
P04.06	V/F voltage point 2 of motor 1	0.0%	0.0%-110.0%	Rated voltage of motor 1
P04.07	V/F frequency point 3 of motor 1	0.00Hz	P04.05–P02.02 (Rated frequency of AM 1) or P04.05–P02.16 (Rated frequency of SM 1)	-
P04.08	V/F voltage point 3 of motor 1	0.0%	0.0%-110.0%	Rated voltage of motor 1

6.8.1.2 Torque boost

Boost compensation to output voltage can effectively improve the low-speed torque performance in the V/F control. The cut-off frequency of manual torque boost is a percentage of the rated motor frequency f_b . Torque boost can improve the low-frequency torque characteristics in the V/F control.

You need to select torque boost based on the load. The load is proportional to the boost, but the boost cannot be too large. If the torque boost is too large, the motor will run at over-excitation, which may cause increased output current and motor overheating, thus decreasing the efficiency. The default torque boost is 0.0%, which indicates automatic torque boost so that the VFD can regulate the torque boost based on the actual load.

Set P04.01 to determine the torque boost of motor 1. Set P04.02 to determine the torque boost cut-off frequency of motor 1. Below this frequency threshold, torque boost is valid; exceeding this threshold will invalidate torque boost. See the following figure.

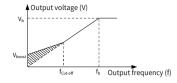

Function code	Name	Default	Setting range	Description
P04.01	Torque boost of motor 1	0.0%	0.0%-10.0%	0.0% (automatic torque boost); 0.1%–10.0% (manual torque boost) Note: V₀ indicates the max. output voltage.
P04.02	Torque boost cut-off of motor 1	20.0%	0.0%-50.0%	The cut-off frequency of manual torque boost is a percentage of the rated motor frequency f _b . Torque boost can improve the low-frequency torque characteristics in the V/F control.

6.8.1.3 V/F slip compensation gain

The V/F control is an open-loop mode, while a sudden motor load change will cause motor rotation speed fluctuation. In cases where strict speed requirements must be met, you can set the slip compensation gain through P04.09 to change the VFD internal output adjustment method and therefore compensate for the speed change caused by load fluctuation, improving the motor mechanical rigidity.

The formula used to calculate the motor rated slip frequency is as follows: $\triangle f = f_b - n^* p / 60$

Of which, f_b indicates the rated frequency of motor 1, corresponding to function code P02.02; n indicates the rated rotation speed of motor 1, corresponding to function code P02.03; p indicates the number of motor pole pairs. 100.0% corresponds to the rated slip frequency $\triangle f$ of motor 1.

Function code	Name	Default	Setting range	Description
P04.09	V/F slip compensati on gain of motor 1	100.0%	0.0–200.0%	100% corresponds to the rated slip frequency.

Note: Rated slip frequency = (Rated synchronous rotation speed of motor – Rated rotation speed of motor) x (Number of motor pole pairs) \div 60

6.8.1.4 Oscillation control

In large-power driving scenarios, using the space voltage vector control mode will cause motor oscillation, which can be eliminated by setting P04.10 and P04.11, while the oscillation control threshold of motor 1 is specified by P04.12.

Function code	Name	Default	Setting range	Description
P04.10	Low- frequency oscillation control factor of motor 1	10	0-100	
P04.11	High- frequency oscillation control factor of motor 1	10	0-100	Setting a greater value indicates better control effect. However, if the value is too large, the VFD output current may be too large.
P04.12	Oscillation control threshold of motor 1	30.00Hz	0.00Hz-P00.03	

6.8.1.5 Reactive current regulation in SM V/F control

When the SM V/F control mode is enabled, you can set P04.36 to specify the frequency threshold for the switching between pull-in current 1 and pull-in current 2. When the output frequency is less than P04.36, the motor reactive current is specified by P04.34; when the output frequency is greater than P04.36, the motor reactive current is specified by P04.35.

Function code	Name	Default	Setting range	Description
P04.34	Pull-in current 1 in SM V/F control	20.0%	-100.0%– 100.0%	-
P04.35	Pull-in current 2 in SM V/F control	10.0%	-100.0%- 100.0%	-
P04.36	Frequency threshold for pull-in current switching in SM V/F control	20.0%	0.0%-200.0%	-
P04.37	Reactive current closed-loop proportional coefficient in SM V/F control	50	0–3000	When the SM V/F control mode is enabled, the function code is used to set the proportional coefficient of reactive current closed-loop control.
P04.38	Reactive current closed-loop integral time in SM V/F control	30	0–3000	When the SM V/F control mode is enabled, the function code is used to set the integral coefficient of reactive current closed-loop control.

6.8.1.6 V/F flux weakening performance optimization

When the AM needs to run with flux weakened, set P04.33 in the V/F control mode to increase the output voltage and maximize the bus voltage utilization, improving the motor acceleration time.

Function code	Name	Default	Setting range	Description
P04.33	Weakening coefficient in constant power zone	1.00	1.00-1.30	-

6.8.2 Vector control performance optimization

6.8.2.1 Torque upper limit

Speed control and torque control in the vector control mode are restricted by torque upper limits. When you set P03.18 (Setting source of electromotive torque upper limit) to keypad, the torque upper limit is specified by P03.20. When you set P03.19 (Setting source of braking torque upper limit) to keypad, the torque upper limit is specified by P03.21.

Function code	Name	Default	Setting range	Description
P03.18	Setting source of electromotive torque upper limit	0	0–5	0: Keypad (P03.20) 1: Al1 2: Al2 3: Al3 4: Pulse frequency HDIA 5: Modbus communication Note: For AMS, 100% corresponds to the motor rated torque current (when the value 0 is selected) and 100% corresponds to triple the motor rated torque current (when the value from 1 to 5 is selected). For SMS, 100% corresponds to the motor rated current (when the value 0 or 1 is selected) and 100% corresponds to triple the motor rated current (when the value 0 or 1 is selected) and 100% corresponds to triple the motor rated current (when the value from 2 to 5 is selected).

Function code	Name	Default	Setting range	Description
P03.19	Setting source of braking torque upper limit	0	0–5	0: Keypad (P03.21) 1: Al1 2: Al2 3: Al3 4: Pulse frequency HDIA 5: Modbus communication Note: For AMs, 100% corresponds to the motor rated torque current (when the value 0 is selected) and 100% corresponds to triple the motor rated torque current (when the value from 1 to 5 is selected). For SMs, 100% corresponds to the motor rated current (when the value 0 is selected) and 100% corresponds to triple the motor rated current (when the value 10 is selected) and 100% corresponds to triple the motor rated current (when the value from 1 to 5 is selected).
P03.20	Electromoti ve torque upper limit set through keypad	180.0%	0.0-300.0%	Specifies torque limits. For AMs, 100% corresponds to the motor rated torque
P03.21	Braking torque upper limit set through keypad	180.0%	0.0-300.0%	current; for SMs, 100% corresponds to the motor rated current.

6.8.2.2 Frequency upper limit settings in torque control

In torque control, the VFD outputs torque according to the set torque command. When the set torque is greater than the load torque, the VFD output frequency increases to the frequency upper limit; when the set torque is less than the load

torque, the VFD output frequency decreases to the frequency lower limit; when the VFD output frequency is restricted, the output torque will no longer be the same as the set torque. When you set P03.14 to set the setting source of forward rotation upper-limit frequency in torque control, the torque limit is specified by P03.16. When you set P03.15 to set the setting source of reverse rotation upper-limit frequency in torque control, the torque limit is specified by P03.17.

Function code	Name	Default	Setting range	Description
P03.14	Setting source of forward rotation upper-limit frequency in torque control	0	0–6	0: Keypad (P03.16) 1: Al1 2: Al2 3: Al3 4: Pulse frequency HDIA 5: Multi-step setting 6: Modbus communication Note: For setting sources 1–11, 100% corresponds to the max. frequency.
P03.15	Setting source of reverse rotation upper-limit frequency in torque control	0	0–6	0: Keypad (P03.17) 1: Al1 2: Al2 3: Al3 4: Pulse frequency HDIA 5: Multi-step setting 6: Modbus communication Specifies frequency upper limits. 100% corresponds to the max. frequency. P03.16 specifies the value when P03.14 = 1, while P03.17 specifies the value when P03.15 = 1.
P03.16	Forward rotation frequency upper limit set through keypad in torque control	50.00Hz	0.00Hz– P00.03 (Max. output frequency)	Specifies frequency upper limits. 100% corresponds to the max. frequency. P03.16 specifies the value when P03.14 = 1, while P03.17 specifies the value when P03.15 = 1.

Function code	Name	Default	Setting range	Description
P03.17	Reverse rotation upper-limit frequency set through keypad in torque control			

6.8.2.3 Speed loop


The speed loop dynamic response characteristics in vector control can be adjusted by setting the proportional coefficient and integral time of speed regulator.

The dynamic response of speed regulator can be accelerated by increasing the proportional gain or decreasing the integral time. However, too quick dynamic response of speed regulator can cause oscillations.

Recommended adjustment method: If the default settings cannot meet the requirements, adjust the settings slightly. First, increase the proportional gain to ensure that the system does not oscillate; and then reduce the integration time, so that the system responds fast with small overshoot.

Improper PI parameter settings will cause large speed overshoot.

The switchover between the low-point frequency for switching and the high-point frequency for switching indicates the linear switchover between two groups of PI parameters. See the following figure.

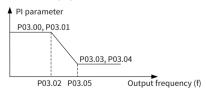

Function code	Name	Default	Setting range	Description
P03.00	Speed-loop proportional gain 1	20.0	0.0-200.0	Speed regulator PI parameters are divided into the low-speed group and

Function code	Name	Default	Setting range	Description
P03.01	Speed-loop integral time 1	0.200s	0.000-10.000s	high-speed group. When the running frequency is less
P03.02	Low-point frequency for switching	5.00Hz	0.00Hz- P03.05	than P03.02, the speed regulator PI parameters are P03.00 and P03.01. When the
P03.03	Speed-loop proportional gain 2	20.0	0.0-200.0	running frequency is greater than P03.05 (High-point frequency for switching), the speed regulator PI parameters are P03.03 and P03.04.
P03.04	Speed-loop integral time 2	0.200s	0.000-10.000s	-
P03.05	High-point frequency for switching	10.00Hz	P03.02- P00.03	-
P03.06	Speed-loop output filter	0	0-8	-
P03.36	Speed-loop differential gain	0.00s	0.00-10.00s	-

6.8.2.4 Current loop

Generally, there is no need to adjust it. If the current waveform is not sinusoidal, the current loop band width can be reduced.


Function code	Name	Default	Setting range	Description
P03.10	Current-loop band width	400	0–2000	-

6.8.2.5 Vector control flux weakening performance optimization

When running at a speed higher than the rated speed, the AM enters the flux weakening state. You can set P03.22 to change the flux-weakening curvature. A great flux-weakening control coefficient indicates a steep curve. The weakening coefficient in constant power zone is used in AM flux-weakening control, while the

flux-weakening proportional gain and flux-weakening integral gain are specified by P03.26 and P03.33. The max. VFD output voltage is specified by P03.24.

If pre-exciting is performed for the motor when the VFD starts up, a magnetic field is built up inside the motor to improve the torque performance during the start process. The pre-exciting time is specified by P03.25.

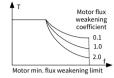

Function code	Name	Default	Setting range	Description
P03.23	Lowest weakening point in constant power zone	5%	10%-100%	Used when the AM is in flux-weakening control; the lowest weakening point in constant power zone is specified by P03.23.
P03.24	Max. voltage limit	100.0%	0.0-120.0%	Specifies the max. VFD output voltage, which is a percentage of the motor rated voltage. Set the value according to onsite conditions.
P03.25	Pre-exciting time	0.300s	0.000-10.000s	Pre-exciting is performed for the motor when the VFD starts up. A magnetic field is built up inside the motor to improve the torque performance during the start process.
P03.26	Flux- weakening proportional gain	1000	0-8000	_
P03.33	Flux- weakening integral gain	30.0%	0.0–300.0%	_

6.8.2.6 SM start control optimization

In the open-loop control mode, you can select a start control method by setting P13.01.

Function code	Name	Default	Setting range	Description
	Detection			0: No detection
P13.01	mode of	2	0–2	1: Reserved
	initial pole			2: Pulse superposition

No detection: P13.01 = 0

The VFD startup command given is a direct startup command. In this mode, set P13.02 to a great value to increase the starting torque, which causes a start reversal phenomenon with an average load carrying capacity.

Reserved: P13.01 = 1

Pulse superimposition: P13.01 = 2

This method is similar to that when P13.01 = 1. The difference is that the initial pole angle autotuning method is different. This method has higher identification accuracy with shorter time but sharper noise, but you can adjust the pulse current value by setting P13.06.

Function code	Name	Default	Setting range	Description
P13.02	Pull-in current 1	30.0%	0.0%–100.0% (of the motor rated current)	Pull-in current is the pole position orientation current; pull-in current 1 is valid within the lower limit of pull-in current switch-over frequency threshold. If you need to increase the start torque, increase the value of this function parameter properly.
P13.03	Pull-in current 2	0.0%	-100.0%– 100.0% (of the motor rated current)	Specifies the pole position orientation current. It is valid within the upper limit of pull-in current switch-over frequency threshold. You do not need to change the value in most cases.


Function code	Name	Default	Setting range	Description
P13.04	Switch-over frequency of pull-in current	20.0%	0.0–200.0%	of the motor rated frequency
P13.06	Pulse current setting	80.0%	0.0–300.0% (of the motor rated voltage)	Specifies the pulse current threshold when the initial magnetic pole position is detected in the pulse mode.

6.9 Input and output

6.9.1 Digital input and output

6.9.1.1 Digital input

The VFD carries four programmable digital input terminals and one HDI input terminal. The functions of all the digital input terminals can be programmed through function codes. The HDI input terminal can be set to act as a high-speed pulse input terminal or common digital input terminal; if it is set to act as a high-speed pulse input terminal, you can also set HDIA high-speed pulse input to serve as the frequency reference input.

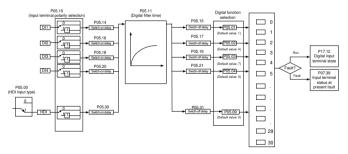

Note: Two different multifunction input terminals cannot be configured with a same function.

P05.01–P05.09 are used to set the functions of digital multifunction input terminals. Terminal functions are set as follows.

Setting	Function	Description
0	No function	The VFD does not act even if there is signal input. Set unused terminals to "no function" to avoid misaction.
1	Run forward (FWD)	External terminals are used to control the
2	Run reversely (REV)	forward/reverse running of the VFD.
3	Three-wire running control (SIN)	The terminal is used to determine the three-wire running control of the VFD. For details, see the description for P05.13.
4	Jog forward	For details about frequency of jogging running and
5	Jog reversely	ACC/DEC time of jogging running, see the description for P08.06, P08.07, and P08.08.
6	Coast to stop	The VFD blocks output, and the stop process of motor is uncontrolled by the VFD. This mode is applied in the scenarios with large-inertia loads and without stop time requirements. Its definition is the same as P01.08, and it is mainly used in remote control.
7	Fault reset	External fault reset function, same as the reset function of the STOP/RST key on the keypad. You can use this function to reset faults remotely.
8	Pause running	The VFD decelerates to stop, however, all the run parameters are in memory state, such as PLC parameter, wobbling frequency, and PID parameter. After this signal disappears, the VFD will revert to the state before stop.
9	External fault input	When external fault signal is transmitted to the VFD, the VFD releases fault alarm and stops.
10	Increase frequency setting (UP)	Used to change the frequency increase/decrease command when the frequency is given by external terminals.
11	Decrease frequency setting (DOWN)	UP terminal K2 DOWN terminal
12	Clear the frequency increase/decrease setting	LSJ UP/DOWN zeroing terminal GND

Setting	Function			Descr	iption		
		frequence frequence UP/DOW	cy-incre cy value /N, thus uency g	of auxiliar restoring ven by ma	y channel : the referer	can clear the set by nce frequency to ce frequency	
13	Switch between A setting and B setting	The fur	nction	is used		between the	
14	Switch between combination setting and A setting	A freque	ency re e chani	ference c nel; functi	hannel ar on 14 can	chover between nd B frequency implement the	
15	Switch between combination setting and B setting	P00.09 function the com	and th 15 can binatio	e A frequ implemer	iency refe it the swit set by P0	n channel set by erence channel; chover between 00.09 and the B	
16	Multi-step speed terminal 1	A total of 16-step speeds can be set by combining digital states of these four terminals.					
17	Multi-step speed terminal 2	_	Multi-st	ep speed 1		3, and multi-step	
18	Multi-step speed terminal 3	Multi-s	tep	Multi-step speed 3	Multi-ste speed 2	•	
19	Multi-step speed terminal 4	Bit3		Bit2	Bit1	Bit0	
20	Pause multi-step speed running					unction can be present state.	
21	ACC/DEC time selection 1	select fo	ur grou	os of ACC/I	DEC time.	be combined to	
		T1	T2	ACC/DI		Parameter	
22	ACC/DEC time selection 2	OFF ON OFF	OFF OFF ON	ACC/DE	C time 1 C time 2 C time 3	P00.11/P00.12 P08.00/P08.01 P08.02/P08.03	
23	Simple PLC stop reset	Used to clear the previous PLC state memory information and restart the simple PLC process.					
24	Pause simple PLC	Used to pause the simple PLC. When the function is revoked, the simple PLC resumes the running.					
25	Pause PID control					e VFD maintains	

Setting	Function	Description				
		current frequency output.				
	Pause wobbling	The VFD pauses at current output. After this function				
26	frequency (stop at	is canceled, it continues wobbling-frequency				
	current frequency)	operation at current frequency.				
	Reset wobbling					
27	frequency (back to	The set frequency of VFD reverts to center frequency.				
	center frequency)					
28	Reset the counter	The counter is cleared.				
	Switch between	The VFD switches from torque control mode to speed				
29	speed control and	control mode, or vice versa.				
	torque control	·				
20	Disable ACC/DEC	Used to ensure the VFD is not impacted by external				
30	Disable ACC/DEC	signals (except for stop command), and maintains the present output frequency.				
31	Trigger the counter	Used to enable the counter to count pulses.				
31	rrigger the counter	'				
		When the terminal is closed, the frequency value set				
	Clear the frequency increase/decrease setting temporarily	by UP/DOWN can be cleared to restore the reference				
		frequency to the frequency given by frequency				
33		command channel; when the terminal is opened, it				
		· · · · ·				
		restores to the frequency value after frequency				
		increase/decrease setting.				
34	DC braking	The VFD starts DC brake immediately after the				
34	DC DI akilig	command becomes valid.				
	Switch the running	When the function is enabled, the running command				
36	command channel	channel is switched to keypad. When the function is				
	to keypad	disabled, the running command channel is restored to the previous setting.				
		When the function is enabled, the running command				
	Switch the running	channel is switched to terminal. When the function is				
37	command channel	disabled, the running command channel is restored				
	to terminal	to the previous setting.				
		When the function is enabled, the running command				
	Switch the running	channel is switched to communication. When the				
38	command channel	function is disabled, the running command channel				
	to communication	is restored to the previous setting.				
		·				

Setting	Function	Description
39	Pre-exciting	When the function is enabled, motor pre-exciting is
33	command	started until the function becomes invalid.
	Clear power	After this command becomes valid, the power
40	consumption	consumption quantity of the VFD will be zeroed out.
	quantity	consumption quantity of the 11 2 thin 20 20 oct out
	Keep power	When the function is enabled, the present operation
41	consumption	of the VFD does not impact the power consumption
	quantity	quantity.
	Switch the setting	
42	source of braking	The torque upper limit is set through the keypad
42	torque upper limit	when the command is valid.
	to keypad	
61	Switch PID	Used to switch the PID output polarity. It is used
61	polarities	together with P09.03.

Related parameters are listed in the following.

Function code	Name	Default	Setting range	Description
P05.00	HDI input type	0	0-1	0: HDIA is high-speed pulse input 1: HDIA is digital input
P05.01	S1 function selection	1		
P05.02	S2 function selection	4		
P05.03	S3 function selection	7		
P05.04	S4 function selection	0		For details, see the preceding table. S1–S4 and HDIA are the terminals
P05.05	S5 function selection	0	0–95	on the control board, while S5–S8 are achieved through the virtual
P05.06	S6 function selection	0		terminal functions set by P05.12.
P05.07	S7 function selection	0		
P05.08	S8 function selection	0		
P05.09	Function of HDIA	0		

Function code	Name	Default	Setting range	Description
P05.10	Input terminal polarity	0x000	0x000- 0x1FF	Specifies the input terminal polarity. When a bit is 0, the input terminal is positive. When a bit is 1, the input terminal is negative.
P05.11	Digital filter time	0.010s	0.000- 50.000s	Used to specify the sampling filter time of the S1–S8 and HDIA terminals. In strong interference cases, increase the value to avoid maloperation.
P05.12	Virtual terminal setting	0x000	0x000- 0x1FF	Bit 0: S1 virtual terminal Bit 1: S2 virtual terminal Bit 2: S3 virtual terminal Bit 3: S4 virtual terminal Bit 4: S5 virtual terminal Bit 5: S6 virtual terminal Bit 6: S7 virtual terminal Bit 7: S8 virtual terminal Bit 7: S8 virtual terminal Bit 8: HDIA virtual terminal
P05.13	Terminal control mode	0	0-3	P05.13 specifies the terminal
P05.14	S1 switch-on delay	0.000s		control mode. 0: Two-wire control 1, the enabling
P05.15	S1 switch-off delay	0.000s		consistent with the direction. This mode is widely used. The defined
P05.16	S2 switch-on delay	0.000s		FWD/REV terminal command determines the motor rotation
P05.17	S2 switch-off delay	0.000s	0.000-	direction. FWD REV Running command
P05.18	S3 switch-on delay	0.000s	50.000s	K1 OFF OFF Stop ON OFF Forward running
P05.19	S3 switch-off delay	0.000s		GND ON ON Hold
P05.20	S4 switch-on delay	0.000s		1: Two-wire control 2, the enabling separated from the direction. In
P05.21	S4 switch-off delay	0.000s		this mode, FWD is the enabling


Function code	Name	Default	Setting range	Description
P05.22	S5 switch-on delay	0.000s	runge	terminal. The direction depends on the defined REV state.
P05.23	S5 switch-off delay	0.000s		FWD REV Running command OFF OFF Stop
P05.24	S6 switch-on delay	0.000s		REV ON OFF Forward running OFF ON Stop
P05.25	S6 switch-off delay	0.000s		GND ON ON Reverse running 2: Three-wire control 1. This mode
P05.26	S7 switch-on delay	0.000s		defines S _{in} as the enabling terminal, and the running command is
P05.27	S7 switch-off delay	0.000s		generated by FWD, while the direction is controlled by REV.
P05.28	S8 switch-on delay	0.000s		During running, the S _{in} terminal needs to be closed, and terminal
P05.29	S8 switch-off delay	0.000s		FWD generates a rising edge signal, then the VFD starts to run in the
P05.30	HDIA switch-on delay	0.000s		direction set by the state of terminal REV; the VFD needs to
P05.31	HDIA switch-off delay	0.000s		disconnect the S _{in} terminal for stop. Signarrow FWD

Ī	Function code	Name	Default	Setting range		D	escript	ion	
	couc			runge	Sin: The	ee-wire	e contr	ol; FWD:	
								V: Reverse	9
					runnin		0,		
					3: Thre	e-wire	contro	l 2. This m	ode
					define	s S _{in} as	the ena	abling terr	ninal
								nmand is	
								r REV, but	
								d by both	
							_	ning, the S	
								closed, a	
								generate	
								control the VI	
						_		connect th	
						al for s		connect ti	iic J _{in}
					SB		cop.	\neg	
						FWD			
					SB	.			
					SB	S _{in}			
					l	- REV			
						GND			
						GND			
					Sin	FWD	REV	Running direction	
							ON	FWD	
					ON	OFF→	ON	running	
					UN	ON	ON OFF	FWD	
							011	running	
						ON		REV	
					ON		OFF→	running	
						OFF	OFF ON	REV	
					l			running	
					ON→			Decelerate	
					OFF			to stop	J

Function	Name	Default	Setting	Description.
code	Name	Default	range	Description
code			Tange	Sin: Three-wire control; FWD: Forward running; REV: Reverse running Note: For two-wire controlled running mode, when the FWD/REV terminal is valid, if the VFD stops due to a stop command given by another source, the VFD does not run again after the stop command disappears even if the control terminal FWD/REV is still valid. To make the VFD run, you need to trigger FWD/REV again, for example, PLC single-cycle stop, fixed-length stop, and valid STOP/RST stop during terminal control. (See P07.04.) P05.14—P05.31 specify the delay time corresponding to the electrical level changes when the programmable input terminals switch on or switch off. Siedectrical level Sivulid invalid inva
				address is 0x200A.
P07.39	Input terminal status at present fault	0x0000	0x0000- 0xFFFF	-
P17.12	Digital input terminal state	0x000	0x000- 0x1FF	-

6.9.1.2 Digital output

The VFD carries two groups of relay output terminals and one open collector Y output terminal. All the digital output terminal functions can be specified by function codes

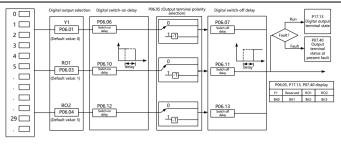

The following table lists the options of function parameters P06.01–P06.04. A same output terminal function can be repeatedly selected.

Setting	Function	Description			
	Invalid				
0	Invalid	The output terminal does not have any function.			
1	Running	The ON signal is output when there is frequency			
	. 8	output during running.			
2	Running forward	The ON signal is output when there is frequency			
	raming forward	output during forward running.			
3	Running reversely	The ON signal is output when there is frequency			
3	Kullilling Teversety	output during reverse running.			
4	la main m	The ON signal is output when there is frequency			
4	Jogging	output during jogging.			
_	VED: ():	The ON signal is output when a VFD fault			
5	VFD in fault	occurred.			
_	Frequency level				
6	detection FDT1	Refer to the descriptions for P08.32 and P08.33.			
	Frequency level				
7	detection FDT2	Refer to the descriptions for P08.34 and P08.35.			
8	Frequency reached	Refer to the description for P08.36.			
	Running in zero	The ON signal is output when the VFD output			
9	speed	frequency and reference frequency are both zero.			
	Upper limit	The ON signal is output when the running			
10	frequency reached	frequency reaches the upper limit frequency.			
	. ,				
11	Lower limit	The ON signal is output when the running			
	frequency reached	frequency reaches the lower limit frequency.			
12	Ready to run	The ON signal is output when main circuit and			
	, to run	control circuit powers are established, the			

Setting	Function	Description
		protection functions do not act, and the VFD is
		ready to run.
13	Pre-exciting	The ON signal is output when the VFD is in
	The exercing	pre-exciting.
		The ON signal is output when the pre-alarm time
14	Overload pre-alarm	elapsed based on the pre-alarm threshold; for
		details, see descriptions for P11.08–P11.10.
		The ON signal is output after the pre-alarm time
15	Underload pre-alarm	elapsed based on the pre-alarm threshold. For
		details, see the descriptions for P11.11–P11.12.
16	Simple PLC stage	When the present state of the simple PLC is
	completed	completed, it outputs a signal.
17	Simple PLC cycle	When a single cycle of the simple PLC is
	completed	completed, it outputs a signal.
	Set counting value reached	The ON signal is output when the counting value
18		reaches the value specified by P08.25 if the
		counting function is enabled.
10	Designated counting	The ON signal is output when the counting value
19	value reached	reaches the value specified by P08.26 if the
		counting function is enabled.
20	External fault is valid	The ON signal is output when the fault is an external fault (E17).
	Running time	The ON is output when the single operation time
22	reached	of VFD reaches the time specified by P08.27.
	reactieu	A signal is output based on the virtual output
	Modbus	terminal of Modbus communication
23	communication	(communication address 0x200B). When the
25	virtual terminal	value is 1, the ON signal is output; when the value
	output	is 0, the OFF signal is output.
	DC bus voltage	When the bus voltage is above the inverter
26	established	undervoltage, the output is valid.
29	STO action	When an STO fault occurs, the output is valid.
		The ON signal is output when the ramp reference
27	Any frequency	frequency is greater than the value specified by
37	reached	P06.33 and this situation lasts the time specified
		by P06.34.

Related parameters are listed in the following.


Function code	Name	Default	Setting range	Description		
P06.01	Y1 output selection	0				
P06.03	RO1 output selection	1	0-63	For details, see the preceding table.		
P06.04	RO2 output selection	5				
P06.05	Output terminal polarity selection	0x00	0x00-0x0F	Specifies the output terminal polarity. When a bit is 0, the output terminal is positive. When a bit is 1, the output terminal is negative. Bit3 Bit2 Bit1 Bit0 RO2 RO1 Reserved Y1		
P06.06	Y switch-on delay	0.000s	0.000-50.000s	-		
P06.07	Y switch-off delay			Used to specify the delay time corresponding to the		
P06.10	RO1 switch-on delay			electrical level changes when the programmable		
P06.11	RO1 switch-off delay	0.000s	0.000-50.000s	output terminals switch on or switch off.		
P06.12	RO2 switch-on delay			Y electric level Y valid Invalid		
P06.13	RO2 switch-off delay			Setting range: 0.000–50.000s		
P06.33	Detection value for frequency being reached	1.00Hz	0.00Hz–P00.03	The "Any frequency reached" signal is output when the ramp reference frequency is greater than the value specified by P06.33 and this situation lasts the time specified by P06.34.		
P06.34	Frequency reaching detection time	0.5s	0-3600.0s	-		

Function code	Name	Default	Setting range	Description
P07.40	Output terminal status at present fault	0x0000	0x0000- 0xFFFF	-
P17.13	Digital output terminal status	0x00	0x00-0x0F	Displays the present digital output terminal state of the VFD. The bits correspond to RO2, RO1, and Y1 respectively.

6.9.2 Analog input and output terminal functions

6.9.2.1 Analog input

The VFD carries two analog input terminals Al1 and Al2. The input range of Al1 is 0–10V/20mA, and whether Al1 uses voltage input or current input can be specified by P05.52. The input range of Al2 is 0–10V. The input source of Al3 is the keypad potentiometer. Each input can be filtered separately, and the corresponding reference curve can be set by adjusting the reference values that correspond to the max, value and min, value.

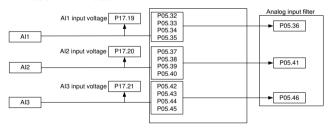

Function code	Name	Default	Setting range	Description
P00.06	Setting channel of A frequency command	0		1: Al1 2: Al2
P00.07	Setting channel of B frequency command	1	0-6	2. AI2 3: AI3


Function code	Name	Default	Setting range	Description
P03.11	Torque setting method	0	0-7	2: Al1 3: Al2 4: Al3
P03.14	Setting source of forward rotation upper-limit frequency in torque control	0	0–6	1: AI1 2: AI2 3: AI3
P03.15	Setting source of reverse rotation upper-limit frequency in torque control	0	0-6	1: AI1 2: AI2 3: AI3
P03.18	Setting source of electromotive torque upper limit	0	0–5	1: Al1 2: Al2 3: Al3
P03.19	Setting source of braking torque upper limit	0	0–5	1: Al1 2: Al2 3: Al3
P04.27	Voltage setting channel	0	0–7	1: Al1 2: Al2 3: Al3
P05.32	AI1 lower limit	0.00V	0.00V-P05.34	Used to define the
P05.33	Corresponding setting of AI1 lower limit	0.0%	-300.0– 300.0%	relationship between the analog input voltage and its corresponding setting. When
P05.34	Al1 upper limit	10.00V	P05.32-10.00V	1 0 0
P05.35	Corresponding setting of AI1 upper limit	100.0%	-300.0– 300.0%	exceeds the range from the upper limit to the lower limit, the upper limit or lower limit is used.

Function code	Name	Default	Setting range	Description
P05.36	Al1 input filter time	0.030s	0.000-10.000s	When the analog input is current input, 0mA–20mA
P05.37	AI2 lower limit	0.00V	0.00V-P05.39	current corresponds to 0V-
P05.38	Corresponding setting of AI2 lower limit	0.0%	-300.0– 300.0%	10V voltage. In different applications, 100.0% of the analog setting
P05.39	AI2 upper limit	10.00V	P05.37-10.00V	corresponds to different
P05.40	Corresponding setting of AI2 upper limit	100.0%	-300.0– 300.0%	nominal values. See the descriptions of each application section for
P05.41	AI2 input filter time	0.030s	0.000-10.000s	details. The following figure
P05.42	AI3 lower limit	0.00V	0.00V-P05.44	illustrates the cases of several
P05.43	Corresponding setting of AI3 lower limit	0.0%	-300.0– 300.0%	Settings: Corresponding setting
P05.44	AI3 upper limit	10.00V	P05.42-10.00V	All
P05.45	Corresponding setting of AI3 upper limit	100.0%	-300.0– 300.0%	0 Al 10V 20mA
P05.46	Al3 input filter time	0.030s	0.000–10.000s	Input filter time: to adjust the sensitivity of analog input. Increasing the value properly can enhance analog input anti-interference but may reduce the sensitivity of analog input. Note: Al1 supports the 0–10V/0–20mA input. When Al1 selects the 0–20mA input, the corresponding voltage of 20mA is 10V. Al2 supports the 0–10V input.

Function code	Name	Default	Setting range	Description
P05.52	AI1 input signal type	0	0-1	0: Voltage 1: Current
P05.53	AI3 input signal source selection	0	0-1	0: Local potentiometer 1: External potentiometer
P09.00	PID reference source selection	0	0–6	1: Al1 2: Al2 3: Al3
P09.02	PID feedback source selection	0	0–4	0: Al1 1: Al2 2: Al3

6.9.2.2 Analog output

The VFD carries one analog output terminal (supporting the output of 0–10V/0–20mA). Analog output signal can be filtered separately, and the proportional relationship can be adjusted by setting the max. value, min. value, and the percentage of their corresponding output. Analog output signal can output motor speed, output frequency, output current, motor torque and motor power at a certain proportion.

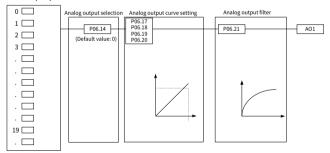

AO output relationship description:

(The min. value and max. value of the output correspond to 0.% and 100.00% of the analog default output. The actual output voltage corresponds to the actual percentage, which can be set through function codes.) Output functions are as follows.

Setting	Function	Description
0	Running frequency	0–Max. output frequency
1	Set frequency	0–Max. output frequency
2	Ramp reference frequency	0–Max. output frequency
3	Rotational speed	0–Synchronous speed corresponding to max. output frequency
4	Output current (relative to the VFD)	0–Twice the VFD rated current
5	Output current (relative to motor)	0–Twice the motor rated current
6	Output voltage	0–1.5 times the VFD rated voltage
7	Output power	0–Twice the motor rated power
8	Set torque value (bipolar)	0–Twice the motor rated current. A negative value corresponds to 0.0% by default.
9	Output torque (absolute	0–Twice the motor rated torque
9	value)	or -(Twice the motor rated torque)–0
10	Al1 input	0-10V/0-20mA
11	Al2 input	0V–10V. A negative value corresponds to 0.0% by default.
12	AI3 input	0-10V
13	High-speed pulse HDIA input	0.00-50.00Hz
14	Value 1 set through Modbus communication	0-1000
15	Value 2 set through Modbus communication	0-1000
22	Torque current (bipolar)	0–Three times the motor rated current. A negative value corresponds to 0.0% by default.
23	Exciting current	0–Three times the motor rated current. A negative value corresponds to 0.0% by default.
24	Set frequency (bipolar)	0–Max. output frequency. A negative value corresponds to 0.0% by default.
25	Ramp reference frequency (bipolar)	0–Max. output frequency. A negative value corresponds to 0.0% by default.
26	Rotational speed (bipolar)	0–Synchronous rotation speed corresponding to max. output frequency. A negative value

Setting	Function Description	
		corresponds to 0.0% by default.
30	Rotational speed	0–Twice the motor rated synchronous rotation speed
31	()utput torque (bipolar)	0–Twice the motor rated torque. A negative value corresponds to 0.0% by default.

Related parameters are listed in the following.

Function code	Name	Default	Setting range	Description
P06.14	AO1 output selection	0	0-63	0–31: For details, see the preceding table. 32–63: Reserved
P06.17	AO1 output lower limit	0.0%	-300.0%- P06.19	Used to define the relationship between the
P06.18	AO1 output corresponding to lower limit	0.00V	0.00V-10.00V	output value and analog output. When the output value exceeds the allowed
P06.19	AO1 output upper limit	100.0%	P06.17- 300.0%	range, the output uses the lower limit or upper limit.
P06.20	AO1 output corresponding to upper limit	10.00V	0.00V-10.00V	When the analog output is current output, 1mA equals 0.5V.
P06.21	AO1 output filter time	0.000s	0.000s- 10.000s	In different cases, the corresponding analog outpu of 100% of the output value i different.

6.10 RS485 communication

The communication addresses on the communication network are unique, which is the basis of the point-to-point communication between the host controller and VFD. When the master writes the slave communication address to 0 indicating a broadcast address in a frame, all the salves on the Modbus bus receive the frame but do not respond to it. The local communication address is specified by P14.00. The

communication response delay is specified by P14.03, and the RS485 communication timeout time is specified by P14.04.

There are four transmission error processing methods, which can be selected through P14.05. Option 2 (Stop in enabled stop mode without reporting an alarm) is applicable only to the communication mode.

Function code	Name	Default	Setting range	Description
P14.00	Local communication address	1	1–247	The communication address of a slave cannot be set to 0.
P14.01	Communication baud rate setting	4	0–7	Specifies the rate of data transmission between the host controller and the VFD. 0: 1200bps 1: 2400bps 2: 4800bps 3: 9600bps 4: 19200bps 5: 38400bps 6: 57600bps 7: 115200bps Note: The baud rate set on the VFD must be consistent with that on the host controller. Otherwise, the communication fails. A greater baud rate indicates faster communication.
P14.02	Data bit check setting	1	0–5	The data format set on the VFD must be consistent with that on the host controller. Otherwise, the communication fails. 0: No check (N, 8, 1) for RTU 1: Even check (E, 8, 1) for RTU 2: Odd check (O, 8, 1) for RTU 3: No check (N, 8, 2) for RTU 4: Even check (E, 8, 2) for RTU 5: Odd check (O, 8, 2) for RTU

Function code	Name	Default	Setting range	Description
P14.03	Communication response delay	5ms	0–200ms	The function code indicates the communication response delay, that is, the interval from when the VFD completes receiving data to when it sends response data to the host controller. If the response delay is shorter than the rectifier processing time, the rectifier sends response data to the host controller after processing data. If the delay is longer than the rectifier processing data. If the delay is longer than the rectifier does not send response data to the host controller until the delay is reached although data has been processed.
P14.04	RS485 communication timeout period	0.0s	0.0 (invalid)– 60.0s	When P14.04 is set to 0.0, the communication timeout time is invalid. When P14.04 is set to a non-zero value, the system reports the "Modbus communication fault" (E18) if the communication interval exceeds the value. In general, the function code is set to 0.0. When continuous communication is required, you can set the function code to monitor communication status.
P14.05	Transmission fault processing	0	0-3	0: Report an alarm and coast to stop 1: Keep running without reporting an alarm

F	unction code	Name	Default	Setting range	Description
					2: Stop in enabled stop mode without reporting an alarm (applicable only to communication mode) 3: Stop in enabled stop mode without reporting an alarm (applicable to any mode)
	P14.06	Modbus communication processing action selection	0x000	0x000-0x111	Ones place: 0: Respond to write operations 1: Not respond to write operations Tens place: 0: Communication password protection is invalid. 1: Communication password protection is valid. Hundreds place: User-defined address (valid only for RS485 communication) 0: User-defined addresses specified by P14.07 and P14.08 are invalid. 1: User-defined addresses specified by P14.07 and
	P14.07	User-defined running command address	0x2000	0x0000- 0xFFFF	-
	P14.08	User-defined frequency setting address	0x2001	0x0000- 0xFFFF	-

6.11 Monitoring parameters

Monitoring parameters mainly fall in groups P07 and P17, which are used to view

and analyze the VFD control and use status. The monitored content is listed in the following.

Group	Туре	Monitored content
Group P07	НМІ	VFD information, module temperature, run time, power usage, fault history, and software version.
Group P17	Basic status viewing	Frequency information Current information Voltage information Torque and power information Input terminal information Output terminal information PID regulator information Control word and status word information

Group P07—Human-machine interface (HMI)

Function code	Name	Default	Setting range	Description
P07.11	Control board software version	Version depended	1.00-655.35	-
P07.12	Inverter temperature	0.0°C	-20.0-120.0°C	-
P07.13	Drive board software version	Version depended	1.00-655.35	-
P07.14	Local accumulative running time	0h	0-65535h	-
P07.15	VFD electricity consumption high bit	0kWh	0-65535kWh (*1000)	Displays the electricity consumption of the VFD.
P07.16	VFD electricity consumption low bit	0kWh	0.0-999.9kWh	VFD electricity consumption = P07.15*1000 + P07.16
P07.18	VFD rated power	Model depended	0.4-3000.0kW	-
P07.19	VFD rated voltage	Model depended	50-520V	-

Function code	Name	Default	Setting range	Description
P07.20	VFD rated current	Model depended	0.01-600.00A	-
P07.27	Present-fault type	0		0: No fault 1–3: Reserved
P07.28	Last-fault type	0		4: Overcurrent during ACC
P07.29	2nd-last fault type	0		(E4) 5: Overcurrent during DEC
P07.30	3rd-last fault type	0	constant speed run 7: Overvoltage durir (E7)	6: Overcurrent during constant speed running (E6) 7: Overvoltage during ACC (E7) 8: Overvoltage during DEC (E8)
P07.31	4th-last fault type	0	0-94	9: Overvoltage during constant speed running (E9) 10: DC bus undervoltage fault (E10) 11: Motor overload (E11) 12: VFD overload (E12) 13: Phase loss on input side (E13) 14: Phase loss on output side (E14)
P07.32	5th-last fault type	0	15: Reserved 16: Inverter module (E16) 17: External fault (E 18: Modbus commu fault (E18) 19: Current detecti (E19) 20: Motor autotunii (E20) For full fault inform Appendix F Functic	16: Inverter module overheat (E16) 17: External fault (E17) 18: Modbus communication fault (E18) 19: Current detection fault (E19) 20: Motor autotuning fault

Function code	Name	Default	Setting range	Description
P07.33	Running frequency at present fault	0.00Hz	0.00Hz-P00.03	-
P07.34	Ramp reference frequency at present fault	0.00Hz	0.00Hz-P00.03	-
P07.35	Output voltage at present fault	0V	0-1200V	-
P07.36	Output current at present fault	0.00A	0.00-630.00A	-
P07.37	Bus voltage at present fault	0.0V	0.0-2000.0V	-
P07.38	Max. temperature at present fault	0.0°C	-20.0-120.0°C	-
P07.39	Input terminal status at present fault	0x0000	0x0000-0xFFFF	-
P07.40	Output terminal status at present fault	0x0000	0x0000-0xFFFF	-
P07.41	Running frequency at last fault	0.00Hz	0.00Hz-P00.03	-
P07.42	Ramp reference frequency at last fault	0.00Hz	0.00Hz-P00.03	-
P07.43	Output voltage at last fault	0V	0-1200V	-

Function code	Name	Default	Setting range	Description
P07.44	Output current at last fault	0.00A	0.00-630.00A	-
P07.45	Bus voltage at last fault	0.0V	0.0-2000.0V	-
P07.46	Temperature at last fault	0.0°C	-20.0-120.0°C	-
P07.47	Input terminal status at last fault	0	0x0000-0xFFFF	-
P07.48	Output terminal status at last fault	0	0x0000-0xFFFF	-
P07.49	Running frequency at 2nd-last fault	0.00Hz	0.00Hz-P00.03	-
P07.50	Ramp reference frequency at 2nd-last fault	0.00Hz	0.00Hz-P00.03	-
P07.51	Output voltage at 2nd-last fault	0V	0-1200V	-
P07.52	Output current at 2nd-last fault	0.00A	0.00-630.00A	-
P07.53	Bus voltage at 2nd-last fault	0.0V	0.0-2000.0V	-
P07.54	Temperature at 2nd-last fault	0.0°C	-20.0-120.0°C	-
P07.55	Input terminal status at 2nd-last fault	0	0x0000-0xFFFF	-
P07.56	Output terminal status at 2nd-last fault	0	0x0000-0xFFFF	-

Group P17—Status viewing

Basic status viewing

Function code	Name	Default	Setting range	Description
P17.40	Motor control mode	0x000	0x000-0x122	0x000-0x122 Ones place: Control mode 0: Open-loop vector control 1: Reserved 2: V/F control Tens place: Open-loop vector control mode 0: SVC0 1: SVC1 2: Reserved Hundreds place: Motor type 0: Asynchronous motor (AM) 1: Synchronous motor (SM)
P17.12	Digital input terminal status	0x000	0x000-0x1FF	Displays the present digital input terminal state of the VFD. The bits correspond to HDIA, S8, S7, S6, S5, S4, S3, S2, and S1 respectively.
P17.13	Digital output terminal status	0x00	0x00-0x0F	Displays the present digital output terminal state of the VFD. The bits correspond to RO2, RO1, Reserved, and Y1 respectively.

Frequency related information

Function code	Name	Default	Setting range	Description
P17.00	Set frequency	0.00Hz		Displays the present set frequency of the VFD.
P17.01	Output frequency	0.00Hz		Displays the present output frequency of the VFD.

Function code	Name	Default	Setting range	Description
P17.02	Ramp reference frequency	0.00Hz	0.00Hz-P00.03	Displays the present ramp reference frequency of the VFD.
P17.05	Motor rotation speed	0RPM	0-65535RPM	Displays the current motor speed.
P17.10	Estimated motor frequency	0.00Hz	0.00Hz-P00.03	Displays the estimated motor rotor frequency under the open-loop vector condition.
P17.14	Digital adjustment value	0.00Hz	0.00Hz-P00.03	Displays the adjustment on the VFD through the UP/DOWN terminal.
P17.16	Linear speed	0	0-65535	-
P17.22	HDIA input frequency	0.000kHz	0.000-50.000 kHz	Displays HDIA input frequency.
P17.43	Forward rotation upper-limit frequency in torque control	50.00Hz	0.00Hz–P00.03	-
P17.44	Reverse rotation upper-limit frequency in torque control	50.00Hz	0.00Hz–P00.03	-
P17.49	Frequency set by A source	0.00Hz	0.00-P00.03	-
P17.50	Frequency set by B source	0.00Hz	0.00-P00.03	-

Voltage related information

Function code	Name	Default	Setting range	Description
P17.03	Output voltage	0V	0-1200V	Displays the present output voltage of the VFD.
P17.11	DC bus voltage	0.0V	0.0-2000.0V	Displays the present DC bus voltage of the VFD.
P17.19	AI1 input voltage	0.00V	0.00-10.00V	Displays the Al1 input signal.
P17.20	AI2 input voltage	0.00V	0.00V-10.00V	Displays the AI2 input signal.
P17.21	AI3 input voltage	0.00V	0.00V-10.00V	Displays the AI3 input signal.

Current related information

Function code	Name	Default	Setting range	Description
P17.04	Output current	0.00A	0.00-500.00A	Displays the valid value of current output current of the VFD.
P17.06	Torque current	0.00A	-300.00- 300.00A	Displays the present torque current of the VFD.
P17.07	Exciting current	0.00A	-300.00- 300.00A	Displays the present exciting current of the VFD.
P17.33	Exciting current reference	0.00A	-300.00- 300.00A	Displays the exciting current reference value under the vector control mode.
P17.34	Torque current reference	0.00A	-300.00- 300.00A	Displays the torque current reference value under the vector control mode.

Torque and power related information

	ction ode	Name	Default	Setting range	Description
P11	7.08	Motor power	0.0%	-300.0-300.0%	Displays the present motor power; 100% is relative to the rated motor power. A positive value indicates the

Function code	Name	Default	Setting range	Description
				motoring state while a negative value indicates the generating state.
P17.09	Motor output torque	0.0%	-250.0-250.0%	Displays the present output torque of the VFD; 100% is relative to the rated motor torque. During forward running, a positive value indicates the motoring state while a negative value indicates the generating state. During reverse running, the positive value indicates the generating state while the negative value indicates the motoring state.
P17.15	Torque reference value	0.0%	-300.0%– 300.0%	Relative to the percentage of the rated torque of the present motor, displaying the torque reference.
P17.25	Motor power factor	1.00	-1.00-1.00	Displays the power factor of the current motor.
P17.36	Output torque	0.0 N • m	-3000.0-3000.0 N•m	Displays the output torque value. During forward running, a positive value indicates the motoring state while a negative value indicates the generating state. During reverse running, a positive value indicates the generating state while a negative value indicates the motoring state.
P17.41	Electromotive torque upper limit	0.0%	0.0%–300.0% (of the motor rated current)	-

Function code	Name	Default	Setting range	Description
P17.42	Braking torque upper limit	0.0%		-
P17.45	Inertia compensation torque	0.0%	-100.0-100.0%	-
P17.46	Friction compensation torque	0.0%	-100.0-100.0%	-

PID regulator information


Function code	Name	Default	Setting range	Description
P17.23	PID reference value	0.0%	-100.0-100.0%	Displays the PID reference value.
P17.24	PID feedback value	0.0%	-100.0-100.0%	Displays the PID feedback value.
P17.51	PID proportional output	0.00%	-100.0-100.0%	-
P17.52	PID integral output	0.00%	-100.0-100.0%	-
P17.53	PID differential output	0.00%	-100.0-100.0%	-
P17.54	PID present proportional gain	0.00%	0.00-100.00%	-
P17.55	PID present integral time	0.00s	0.00-10.00s	-
P17.56	PID present differential time	0.00s	0.00-10.00s	-
P17.38	Process PID output	0.00%	-100.0-100.0%	-

6.12 Protection parameter setting

6.12.1 Overvoltage stalling protection

When the motor is in power generation state (the motor speed is greater than the output frequency), the VFD bus voltage will increase continuously. When the detected bus voltage exceeds the value of P11.04 (Overvoltage stalling protection voltage), the overvoltage stalling protection function adjusts the output frequency based on the VFD ACC/DEC status (to be specific, if the VFD is in the ACC or constant speed state, the VFD will increase the output frequency; if the VFD is in the DEC state, the VFD will increase the DEC time). In this way, the regenerative energy on the bus can be consumed, preventing against VFD overvoltage. If the function does not meet requirements in the actual application, you can adjust parameters related to the current loop and voltage loop.

Figure 6-1 Actions taken for protection against overvoltage stalling

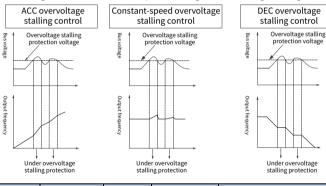

	unction code	Name	Default	Setting range	Description
ļ	P11.03	Overvoltage stalling protection	1	0-1	0: Disable 1: Enable Note: If the braking resistor or dynamic braking unit is used, disable the overvoltage stalling control function, that is, set P11.03 to 0.


Function code	Name	Default	Setting range	Description
P11.04	Overvoltage stalling	136%	120–150% (standard bus voltage)	For 380V models, it is 136% by default.
P11.04	protection voltage	120%	120–150% (standard bus voltage)	For 220V models, it is 120% by default.
P11.21	Proportional coefficient of voltage regulator during overvoltage stall	60	0-127	Specifies the proportional coefficient of the bus voltage regulator during overvoltage stalling.
P11.22	Integral coefficient of voltage regulator during overvoltage stall	5	0-1000	Specifies the integral coefficient of the bus voltage regulator during overvoltage stalling.
P11.23	Proportional coefficient of current regulator during overvoltage stall	60	0-1000	Specifies the proportional coefficient of the active current regulator during overvoltage stalling.
P11.24	Integral coefficient of current regulator during overvoltage stall	250	0–2000	Specifies the integral coefficient of the active current regulator during overvoltage stalling.

6.12.2 Current-limit protection

During accelerated running, as the load is too large, the actual acceleration rate of

motor is lower than that of output frequency, if no measures are taken, the VFD may trip due to overcurrent during acceleration.

The current-limit protection function detects output current during running, and compares it with the current-limit level specified by P11.06. If it exceeds the current-limit level, the VFD will run at stable frequency during accelerated running, or the VFD will run at decreased frequency during constant-speed running; if it exceeds the current-limit level continuously, the VFD output frequency will drop continuously until reaching the lower limit frequency. When the output current is detected to be lower than the current-limit level again, it will continue accelerated running. In some heavy load scenarios, you can increase the value of P11.06 to improve the VFD output torque.

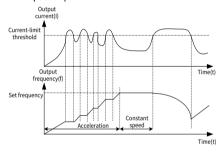


Function code	Name	Default	Setting range	Description
P11.05	Current limit mode	0x01	0x00-0x11	Ones place: Current limit action selection 0: Invalid 1: Always valid Tens place: Hardware current limit overload alarm 0: Valid 1: Invalid
P11.06	Automatic current limit threshold	160.0%	50.0-200.0%	Percentage relative to the VFD rated output current

Function code	Name	Default	Setting range	Description
P11.07	Frequency drop rate during current limit	,	0.00-50.00Hz/s	-

6.12.3 Frequency decrease at sudden power failure

This function enables the system to keep running at sudden short-period power failure. When power failure occurs, the motor is in the power generation state, the bus voltage is kept at the action determination voltage for frequency decrease at sudden power failure, preventing the VFD from stop due to undervoltage.

If this function does not meet actual requirements, you can set parameters P11.17–P11.20. The speed loop dynamic response characteristics of vector control can be adjusted by setting the proportional coefficient and integral coefficient of speed regulator. Increasing proportional gain or reducing integral time can accelerate dynamic response of speed loop; however, if the proportional gain is too large or integral time is too small, system oscillation and overshoot may occur; if proportional gain is too small, stable oscillation or speed offset may occur.

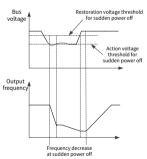

Function code	Name	Default	Setting range	Description
P11.01	Frequency drop at transient power-off	0	0_1	0: Disable 1: Enable

Function code	Name	Default	Setting range	Description
P11.17	Proportional coefficient of voltage regulator during undervoltage stall	20	0-127	Specifies the integral coefficient of the bus voltage regulator during undervoltage stalling.
P11.18	Integral coefficient of voltage regulator during undervoltage stall	5	0-1000	Specifies the integral coefficient of the bus voltage regulator during undervoltage stalling.
P11.19	Proportional coefficient of current regulator during undervoltage stall	20	0-1000	Specifies the proportional coefficient of the active current regulator during undervoltage stalling.
P11.20	Integral coefficient of current regulator during undervoltage stall	20	0-2000	Specifies the integral coefficient of the active current regulator during undervoltage stalling.

6.12.4 Cooling fan control

There are three cooling fan control modes, which can be specified by P08.39.

Function code	Name	Default	Setting range	Description
P08.39	Cooling-fan running mode	0	0–2	0: Normal mode 1: Permanent running after power-on 2: Run mode 2

Note: The fan automatically runs in any mode if the VFD detects that the rectifier bridge or inverter module temperature reaches 50℃.

Normal mode: P08.39 = 0

The cooling fan runs when the VFD runs. The cooling fan stops 30s after the VFD stops.

Permanent running after power-on: P08.39 = 1

The cooling fan can run only after the VFD is powered on.

Run mode 2: P08.39 = 2

The cooling fan runs only when the VFD runs and the ramp frequency is greater than 0. The cooling fan stops 30s after the VFD stops.

6.12.5 Dynamic braking

When the VFD driving a high-inertia load decelerates or needs to decelerate abruptly, the motor runs in the power generation state and transmits the load-carrying energy to the DC circuit of the VFD, causing the bus voltage of the VFD to rise. If the bus voltage exceeds a specific value, the VFD reports an overvoltage fault. To prevent this from happening, you need to configure braking components.

You can set the following parameters for the VFD with a built-in dynamic braking unit:

When P08.37 = 1 and P11.02 = 1, and the bus voltage exceeds the dynamic braking voltage threshold, the braking pipe is opened regardless of whether the VFD is running or stopped. If the bus voltage is less than dynamic braking voltage threshold minus 10V, the braking pipe is closed.

When P08.37 = 1 and P11.02 = 0, and the bus voltage exceeds the dynamic braking voltage threshold, the braking pipe is opened only when the VFD is running. If the bus voltage is less than dynamic braking voltage threshold minus 10V, the braking pipe is closed.

Function code	Name	Default	Setting range	Description
P08.37	Enabling dynamic braking	0	0-1	0: Disable 1: Enable
P08.38	Dynamic braking threshold voltage	Model depended	200.0-2000.0V	Specifies the starting bus voltage of dynamic braking. Adjust this value properly to achieve effective braking for the load. The default value varies depending on the

Function code	Name	Default	Setting range	Description
				voltage class. For 220V: 380.0V For 380V: 700.0V For 660V: 1120.0V
P11.02	Enabling energy-cons umption braking for stop	0	0-1	0: Disable 1: Enable

6.12.6 Safe torque off

You can enable the safe torque off (STO) function to prevent unexpected startups when the VFD main power supply is not switched off. The STO function switches off the VFD output by turning off the drive signals to prevent unexpected startups of the motor. For the VFD with the STO function, set P08.64 to 1. For the VFD without the STO function, set P08.64 to 0. For details, see Appendix E STO function.

Function code	Name	Default	Setting range	Description
P08.52	STO lock selection	0	0-1	0: Lock upon STO alarm Lock upon STO alarm: indicates resetting is required after state restoration if STO occurs. 1: No lock on STO alarm No lock on STO alarm: indicates STO alarm disappears automatically after state restoration if STO occurs.
P08.64	STO function	0	0-1	0: Disable 1: Enable

6.13 Typical applications

6.13.1 Counting

When photoelectric switch pulse signals need to be collected, you can use multifunction digital input terminals to collect signals. That is, set P05.01–P05.04 or

P05.09 to 31 (to trigger the counter). To use the HDI counting function, set P05.00 to 1 first.


When P17.18 (Accumulative value) reaches P08.25 (Set counting value), counting restarts. Once the value of P17.18 equals that of P08.25, set the digital output function to 18 to output the ON signal. Similarly, once the value of P17.18 equals that of P08.26, set the digital output function to 19 to output the ON signal.

Function code	Name	Default	Setting range	Description	
P05.00	HDI input type	0	0-1	0: HDIA is high-speed pulse input 1: HDIA is digital input	
P05.01	S1 function selection	1			
P05.02	S2 function selection	4		28: Reset the counter, that is,	
P05.03	S3 function selection	7	0–95	the counting value is cleared 31: Trigger the counter, that	
P05.04	S4 function selection	0		is, the counting value is accumulated	
P05.09	Function of HDIA	0			
P06.01	Y1 output selection	0		0: Disable	
P06.03	RO1 output selection	1	0-63	18: Set counting value reached 19: Designated counting	
P06.04	RO2 output selection	5		value reached	
P08.25	Set counting value	0	P08.26-65535	-	
P08.26	Designated counting value	0	0-P08.25	-	
P17.18	Accumulativ e counting value	0	0-65535	-	

6.13.2 Sleep and wakeup

According to energy saving requirements, the sleep function can be used in water

supply scenarios. When the motor needs to run effectively, you can adjust the set frequency to wake up it. The timing diagram is as follows.

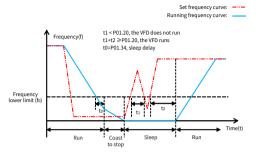


When the set frequency is lower than the frequency lower limit, and the ones place of P01.19 is set to sleep, the VFD stops according to the tens place of P01.19 and sleeps once running at the lower limit for the time specified by P01.34. If the set frequency exceeds the lower limit again and it lasts for the time specified by P01.20, the VFD restores to the running state automatically and increases to the set frequency.

Function code	Name	Default	Setting range	Description
P01.19	Action selected when running frequency less than frequency lower limit (valid when frequency lower limit greater than 0)	0	0x00-0x12	The function code determines the running state of the VFD when the set frequency is lower than the lower-limit one. Ones place: Action selection 0: Run at the frequency lower limit 1: Stop 2: Sleep Tens place: Stop mode 0: Coast to stop 1: Decelerate to stop
P01.20	Wake-up- from-sleep delay	0.0s	0.0-3600.0s	Valid when the ones place of P01.19 is 2.

Function code	Name	Default	Setting range	Description
P01.34	Sleep delay	0.0s	0.0-3600.0s	-

6.13.3 Switchover between FWD run and REV run

In scenarios with the needs of frequent switchover between FWD run and REV run, you can set P01.14 to increase the torque and stability in the process to decrease the current impact. When P01.14 = 0, the switching frequency point is zero (P01.15). When P01.14 = 1, the switching frequency point is starting frequency (P01.01). Refer to the following figure.

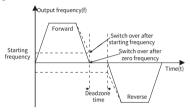

Function code	Name	Default	Setting range	Description
P01.14	FWD/REV running switching mode	1	0–2	0: Switch at zero frequency 1: Switch at the starting frequency 2: Switch after the speed reaches the stop speed with a delay

Switch at the zero or starting frequency: P01.14 = 0 or 1

When P01.14 = 0 or 1, and the switchover between FWD run and REV run is valid, the VFD decelerates to the switching frequency point. If P01.16 = 1, check whether the motor output frequency is less than the switching frequency point. If yes, wait the time specified by P01.13, and then control the motor to run in the reverse direction. If no, wait the time specified by P01.17 and then the time specified by P01.13, and then control the motor to run in the reverse direction.

Switch after the speed reaches the stop speed with a delay: P01.14 = 2

When P01.14 = 2, the DEC process for the switchover between FWD run and REV run is similar to the process of deceleration to stop. In the DEC process for the

switchover, you can set related parameters to determine whether to enable short-circuit braking for stop and DC braking based on the work conditions. The difference between the two processes is as follows: When the running frequency reaches the stop speed specified by P01.15 or DC braking ends, the deadzone time specified by P01.13 needs to be waited, and then the motor can be controlled to run in the reverse direction.


Function code	Name	Default	Setting range	Description
P01.01	Starting frequency of direct start	0.50Hz	0.00-50.00Hz	The function code indicates the initial frequency during VFD start. For details, see the description for P01.02.
P01.02	Hold time of starting frequency	0.0s	0.0-50.0s	Setting a proper starting frequency can increase the torque during VFD start. During the hold time of the starting frequency, the output frequency of the VFD is the starting frequency. And then, the VFD runs from the starting frequency to the set frequency. If the set frequency is lower than the starting frequency, the VFD stops running and keeps in the standby state. The starting frequency is not limited in the lower limit frequency. Output frequency f it it is specified by FOLO2.
P01.13	FWD/REV running deadzone time	0.0s	0.0-3600.0s	Specifies the transition time specified in P01.14 during switchover between FWD run and REV run.

Function code	Name	Default	Setting range	Description
P01.15	Stop speed	0.50Hz	0.00-100.00Hz	-
P01.16	Stop speed detection mode	0	0-1	0: Detect by the set speed (unique in space voltage vector control mode) 1: Detect by the feedback speed
P01.17	Stop speed detection time	0.50s	0.00-100.00s	-

6.13.4 Jump frequency

The VFD can avoid mechanical resonance points by setting jump frequencies. The VFD has three jump frequency parameters P08.09, P08.11, and P08.13. If all jump frequencies are set to 0, this function is invalid. When the set frequency is within the jump frequency range (Jump frequency \pm 1/2 * Jump amplitude), if the VFD is in the ACC phase, the VFD runs at the lower bound (Jump frequency - 1/2 * Jump amplitude); if the VFD is in the DEC phase, the VFD runs at the upper bound (Jump frequency + 1/2 * Jump amplitude).

See the following figure.

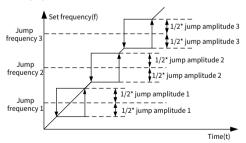


Function code	Name	Default	Setting range	Description
P08.09	Jump frequency 1	0.00Hz		P00.03 specifies the max. output frequency.

Function code	Name	Default	Setting range	Description
P08.10	Jump frequency amplitude 1	0.00Hz	0.00Hz- P00.03	P00.03 specifies the max. output frequency. Refer to P08.09 to set it.
P08.11	Jump frequency 2	0.00Hz	0.00Hz- P00.03	P00.03 specifies the max. output frequency.
P08.12	Jump frequency amplitude 2	0.00Hz	0.00Hz- P00.03	P00.03 specifies the max. output frequency. Refer to P08.11 to set it.
P08.13	Jump frequency 3	0.00Hz	0.00Hz- P00.03	P00.03 specifies the max. output frequency.
P08.14	Jump frequency amplitude 3	0.00Hz	0.00Hz- P00.03	P00.03 specifies the max. output frequency. Refer to P08.13 to set it.

6.13.5 Wobbling frequency

Wobbling frequency is mainly applied in the scenarios where transverse movement and winding functions are needed such as textile and chemical fiber industries. The wobbling frequency function indicates that the VFD output frequency wobbles up or down with the set frequency as the center, and the output frequency with the wobbling frequency is impacted by the frequency upper and lower limits.

The time axis tracking is as shown in the following figure.

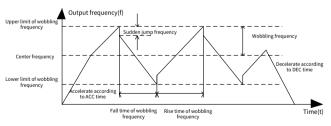

Wobbling frequency = Central frequency (Set frequency) x P08.15 (Amplitude of wobbling frequency)

Sudden jump frequency = Wobbling frequency x P08.16 (Amplitude of sudden jump frequency)

Function code	Name	Default	Setting range	Description
P08.15	Amplitude of wobbling frequency	0.0%	0.0-100.0%	Relative to the set frequency
P08.16	Amplitude of sudden jump frequency	0.0%	0.0-50.0%	Relative to the wobbling frequency
P08.17	Rise time of wobbling frequency	5.0s	0.1–3600.0s	Time taken to run from the lowest point of wobbling frequency to the highest point.
P08.18	Fall time of wobbling frequency	5.0s	0.1–3600.0s	Time taken to run from the highest point of wobbling frequency to the lowest point.
P05.00	HDI input type	0	0-1	0: HDIA is high-speed pulse input 1: HDIA is digital input
P05.01	S1 function selection	1		O No formation
P05.02	S2 function selection	4		0: No function 26: Pause wobbling frequency
P05.03	S3 function selection	7	0–95	(stopped at the present frequency)
P05.04	S4 function selection	0		27: Reset wobbling frequency (returned to the center frequency)
P05.09	HDIA function selection	0		irequericy)

7 Communication

7.1 Standard communication interface

The VFD provides RS485 communication as a standard configuration. The following table defines the communication terminal function.

rable i Totaliaa a communication terminat						
Interface	Network signal	Signal description	Description			
IO terminal	485+ 485-	RS485 communication	Terminal for external RS485 communication, supporting the Modbus communication protocol			

Table 7-1 Standard communication terminal

7.2 Communication data address

The communication data includes VFD-related function parameter data, VFD status parameter data, and VFD control parameter data.

7.2.1 Function parameter address

The address of a function code consists of two bytes, with the MSB on the left and LSB on the right. Both the MSB and LSB also range from 00 to ffH. The MSB is the hexadecimal form of the group number on the left of the dot mark, and LSB is that of the number on the right of the dot mark. Take P05.06 as an example. The group number is 05, that is, the MSB of the parameter address is the hexadecimal form of 05; and the number on the right of the dot mark is 06, that is, the LSB is the hexadecimal form of 05. Therefore, the function code address is 0506H in the hexadecimal form. For P10.01, the parameter address is 0A01H.

-Note

- The parameters in the P29 group are set by the manufacturer and cannot be read or modified. Some parameters cannot be modified when the VFD is running; some cannot be modified regardless of the VFD status. Pay attention to the setting range, unit, and description of a parameter when modifying it.
- Frequently writing to EEPROM will reduce its life time. Some function codes do
 not need to be stored during communication. The application requirements
 can be met by modifying the value of the on-chip RAM, that is, modifying the
 highest-order bit of the corresponding function code address from 0 to 1.
- For example, if P00.07 is not to be stored in the EEPROM, you need only to
 modify the value in the RAM, that is, set the address to 8007H. The address can

be used only for writing data to the on-chip RAM, and it is invalid when used for reading data.

7.2.2 Non-function parameter address

In addition to modifying the parameters of the VFD, the master can also control the VFD, such as starting and stopping it, and monitoring the operation status of the VFD. The following describes status parameter data addresses and control parameter data addresses.

1. Status parameter

■Note: Status parameters are read only.

Parameter	Address	Description
. a. a.neter		0001H: Forward running
		0002H: Reverse running
VFD status word		0003H: Stopped
1	2100H	0004H: Faulty
_		0005H: In POFF state
		0006H: In pre-exciting state
		Bit0=0: Not ready to run =1: Ready to run
		Bit2-Bit1: =00: Motor 1 =01: Motor 2
		Bit3: =0: AM =1: SM
		Bit4: = 0: No pre-alarm upon overload
	2101H	=1: Overload pre-alarm
VFD status word		Bit6–Bit5=00: Keypad-based control
2		=01: Terminal-based control
2		=10: Communication-based control
		Bit7: Reserved
		Bit8: =0: Speed control =1: Torque control
		Bit9: Reserved
		Bit11–Bit10: =00: Vector 0 =01: Vector 1
		=10: Space voltage vector
VFD fault code	2102H	See the description of fault types.
VFD		
identification	2103H	0x1200
code		
Running	3000H	0–Fmax (Unit: 0.01Hz)
frequency		, ,
Set frequency	3001H	0–Fmax (Unit: 0.01Hz)
Bus voltage	3002H	0.0–2000.0V (Unit: 0.1V)

Parameter	Address	Description
Output voltage	3003H	0–1200V (Unit: 1V)
Output current	3004H	0.00-300.0A (Unit: 0.01A)
Rotational speed	3005H	0–65535 (Unit: 1 RPM)
Output power	3006H	-300.0–300.0% (Unit: 0.1%)
Output torque	3007H	-250.0–250.0% (Unit: 0.1%)
Closed-loop setting	3008H	-100.0–100.0% (Unit: 0.1%)
Closed-loop feedback	3009H	-100.0–100.0% (Unit: 0.1%)
Input IO status	300AH	0x000–0x1FF (corresponding to HDIA, S8, S7, S6, S5, S4, S3, S2, and S1 in sequence)
Output IO	200011	0x00-0x0F
status	300BH	(corresponding to local RO2/RO1/Reserved/Y1)
Analog input 1	300CH	0.00-10.00V (Unit: 0.01V)
Analog input 2	300DH	0.00-10.00V (Unit: 0.01V)
Analog input 3	300EH	0.00-10.00V (Unit: 0.01V)
Read input of HDIA high-speed pulse	3010H	0.00–50.00kHz (Unit: 0.01Hz)
Read the actual step of multi-step speed	3012H	0–15
External length value	3013H	0–65535
External counting value	3014H	0–65535
Torque setting	3015H	-300.0–300.0% (Unit: 0.1%)
VFD identification code	3016H	-
Fault code	5000H	-

2. Control parameter

孝Note: VFD control parameters can be read and written.

Parameter	Address	Description
		0001H: Forward running
	2000Н	0002H: Reverse running
		0003H: Forward jogging
Communication-based		0004: Reverse jogging
control command		0005H: Stop
		0006H: Coast to stop
		0007H: Fault reset
		0008H: Jogging to stop
	2001H	Communication-based frequency setting (0–
	200111	Fmax; unit: 0.01 Hz)
	2002H	PID reference (0–1000, in which 1000
	200211	corresponds to 100.0%)
	2003H	PID feedback (0–1000, in which 1000
	200311	corresponds to 100.0%)
		Torque setting (-3000–3000, in which 1000
	2004H	corresponds to 100.0% of the motor rated
		current)
	2005H	Upper limit setting of forward running
		frequency (0–Fmax; unit: 0.01 Hz)
	2006H	Upper limit setting of reverse running
Communication-based		frequency (0–Fmax; unit: 0.01 Hz)
setting address	2007H	Upper limit of the electromotive torque (0–3000, in which 1000 corresponds to 100.0% of
	2007日	the motor rated current)
		Braking torque upper limit (0–3000, in which
	2008H	1000 corresponds to 100.0% of the motor
	200011	rated current)
	2009Н	Special CW
		Bit1-Bit0: = 00: Motor 1 =01: Motor 2
		Bit2: =1 Enable speed/torque control
		switchover
		=0: Disable speed/torque control
		switchover
		Bit3: =1 Clear electricity consumption data
		=0: Keep electricity consumption data

Parameter	Address	Description
		Bit4: =1 Enable pre-excitation =0: Disable
		pre-excitation
		Bit5: =1 Enable DC braking
		=0: Disable DC braking
		Virtual input terminal command. Range:
	200AH	0x000-0x1FF
	200AH	(corresponding to
		HDIA/S8/S7/S6/S5/S4/S3/S2/S1)
		Virtual output terminal command. Range:
	200BH	0x00-0x0F
	200011	(corresponding to local
		RO2/RO1/Reserved/Y1)
		Voltage setting (used when V/F separation is
	200CH	implemented)
	200CH	(0–1000, in which 1000 corresponds to
		100.0% of the motor rated voltage)
	200DH	AO setting 1 (-1000–+1000, in which 1000
		corresponds to 100.0%)
	200EH	AO setting 2 (-1000–+1000, in which 1000
	200EH	corresponds to 100.0%)

Note: Some parameters in the preceding table are valid only after they are enabled. For example, for the running or stop operation, you must set "Channel of running commands" (P00.01) to "Communication", and set "Communication channel of running commands" (P00.02) to the Modbus channel.

The following table describes the encoding rules of device codes (corresponding to the identification code 1200 H of the VFD).

8 MSBs	Meaning	8 LSBs	Meaning
0x12	General mechanical type	0x00	Goodrive27 series VFD

7.3 Modbus networking

A Modbus network is a control network with one master and multiple slaves, that is, on one Modbus network, there is only one device serving as the master, and other devices are the slaves. The master can communicate with any single slave or with all slaves. For separate access commands, a slave needs to return a response. For


broadcast information, slaves do not need to return responses.

Generally, the PC, industry control device, or programmable logic controller (PLC) functions as the master, while VFDs function as slaves.

7.3.1 Network topology

7.3.1.1 Application to one VFD

Figure 7-1 Application to one VFD

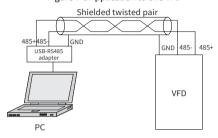

7.3.1.2 Application to multiple VFDs

In practical application to multiple VFDs, the daisy chain connection and star connection are commonly used.

Figure 7-2 Practical daisy chain connection application


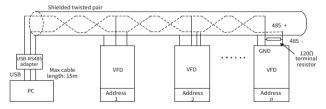


Figure 7-3 Star connection application

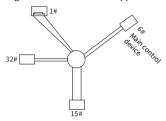

■Note:


- When this connection mode is adopted, the two devices that are farthest away from each other on the line must be connected with a terminal resistor (in the figure, the two devices are #1 device and #15 device).
- Use shielded cables, if possible, in multi-device connection. The baud rates, data bit check settings, and other basic parameters of all the devices on the RS485 line must be set consistently, and addresses cannot be duplicated.

7.3.2 RTU mode

7.3.2.1 RTU communication frame structure


When a controller is set to use the RTU communication mode on a Modbus network, every byte (including eight bits) in the message includes two hexadecimal characters (each includes four bits). Compared with the ASCII mode, the RTU mode achieves transmission of more data at the same baud rate.

In RTU mode, the transmission of a new frame always starts from an idle time (the transmission time of 3.5 bytes). On a network where the transmission rate is calculated based on the baud rate, the transmission time of 3.5 bytes can be easily obtained. After the idle time ends, the data domains are transmitted in the following sequence: slave address, command code, data, and CRC check character. Each byte transmitted in each domain includes 2 hexadecimal characters (0–9, A–F). The network devices always monitor the communication bus. After receiving the first domain (address information), each network device identifies the byte. After the last byte is transmitted, a similar transmission interval (the transmission time of 3.5 bytes) is used to indicate that the transmission of the frame ends. Then, the transmission of a new frame starts.

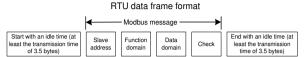

The information of a frame must be transmitted in a continuous data flow. If there is an interval greater than the transmission time of 1.5 bytes before the transmission of the entire frame is complete, the receiving device deletes the incomplete information, and mistakes the subsequent byte for the address domain of a new frame. Similarly, if the transmission interval between two frames is shorter than the transmission time of 3.5 bytes, the receiving device mistakes it for the data of the last frame. The CRC check value is incorrect due to the disorder of the frames, and thus a communication fault occurs

If the slave detects a communication fault or read/write failure due to another cause, an error frame is replied.

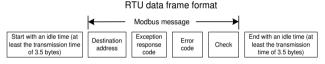

The following table describes the standard structure of an RTU frame.

START (frame header)	T1-T2-T3-T4 (transmission time of 3.5 bytes)	
ADDR (slave address	Communication address: 0–247 (decimal system; 0 is the	
domain)	broadcast address)	
CMD (function domain)	03H: Read slave parameter; 06H: Write slave parameter	
Data domain DATA (N-1) DATA (0)	Data of 2*N bytes	
	Main content of the communication as well as the core of data exchanging	
CRC CHK LSB	Detection value CDC (1C hite)	
CRC CHK MSB	Detection value: CRC (16 bits)	
END (frame end)	T1-T2-T3-T4 (transmission time of 3.5 bytes)	

7.3.2.2 RTU communication frame error check methods

During the transmission of data, errors may occur due to various factors. Without error check, the data receiving device cannot identify data errors and may make an incorrect response. The incorrect response may cause severe problems. Therefore, the data must be checked.

The error check of a frame includes two parts, namely, bit check on individual bytes (that is, odd/even check using the check bit in the character frame), and whole data check (CRC check).

7.3.2.3 Bit check on individual bytes (odd/even check)

You can select the bit check mode as required, or you can choose not to perform the check, which will affect the check bit setting of each byte.

Definition of even check: Before the data is transmitted, an even check bit is added to indicate whether the number of "1" in the to-be-transmitted data is odd or even. If it is even, the check bit is set to "0"; and if it is odd, the check bit is set to "1".

Definition of odd check: Before the data is transmitted, an odd check bit is added to indicate whether the number of "1" in the to-be-transmitted data is odd or even. If it is odd, the check bit is set to "0"; and if it is even, the check bit is set to "1".

For example, the data bits to be sent are "11001110", including five "1". If the even check is applied, the even check bit is set to "1"; and if the odd check is applied, the odd check bit is set to "0". During the transmission of the data, the odd/even check bit is calculated and placed in the check bit of the frame. The receiving device performs the odd/even check after receiving the data. If it finds that the odd/even parity of the data is inconsistent with the preset information, it determines that a communication error occurs.

7.3.2.4 Cyclic redundancy check (CRC)

A frame in the RTU format includes an error detection domain based on the CRC calculation. The CRC domain checks all the content of the frame. The CRC domain consists of two bytes, including 16 binary bits. It is calculated by the transmitter and added to the frame. The receiver calculates the CRC of the received frame, and compares the result with the value in the received CRC domain. If the two CRC values are not equal to each other, errors occur in the transmission.

During CRC, 0xFFFF is stored first, and then a process is invoked to process a minimum of 6 contiguous bytes in the frame based on the content in the current register. CRC is valid only for the 8-bit data in each character. It is invalid for the start, stop, and parity bits.

During the generation of the CRC values, the "exclusive or" (XOR) operation is performed on the each 8-bit character and the content in the register. The result is placed in the bits from the least significant bit (LSB) to the most significant bit (MSB), and 0 is placed in the MSB. Then, LSB is detected. If LSB is 1, the XOR operation is performed on the current value in the register and the preset value. If LSB is 0, no operation is performed. This process is repeated for 8 times. After the last bit (8th bit) is detected and processed, the XOR operation is performed on the next 8-bit byte

and the current content in the register. The final values in the register are the CRC values obtained after operations are performed on all the bytes in the frame.

The calculation adopts the international standard CRC check rule. You can refer to the related standard CRC algorithm to compile the CRC calculation program as required.

The following is a simple CRC calculation function for your reference (using the C programming language):

```
unsigned int crc_cal_value (unsigned char*data_value, unsigned char data_length)
{
   int i;
   unsigned int crc_value=0xffff;
   while (data_length--)
   {
      crc_value^=*data_value++;
      for (i=0;i<8;i++)
      {
        if (crc_value&0x0001)
            crc_value= (crc_value>>1) ^0xa001;
        else
        crc_value=crc_value>>1;
      }
    }
    Return (crc_value);
}
```

In the ladder logic, CKSM uses the table look-up method to calculate the CRC value according to the content in the frame. The program of this method is simple, and the calculation is fast, but the ROM space occupied is large. Use this program with caution in scenarios where there are space occupation requirements on programs.

7.3.3 RTU command code

7.3.3.1 Command code 03H, reading N words (continuously up to 16 words)

The command code 03H is used by the master to read data from the VFD. The count of data to be read depends on the "data count" in the command. A maximum of 16 pieces of data can be read. The addresses of the read parameters must be contiguous. Each piece of data occupies 2 bytes, that is, one word. The command format is presented using the hexadecimal system (a number followed by "H" indicates a hexadecimal value). One hexadecimal value occupies one byte.

The 03H command is used to read information including the parameters and running status of the VFD.

For example, if the master reads two contiguous pieces of data (that is, to read content from the data addresses 0004 H and 0005 H) from the VFD whose address is 01H, the command frame structure is described in the following.

RTU master command (from the master to the VFD) is as follows:

START	T1-T2-T3-T4 (transmission time of 3.5 bytes)
ADDR (address)	01H
CMD (command code)	03H
Start address MSB	00H
Start address LSB	04H
Data count MSB	00H
Data count LSB	02H
CRC LSB	85H
CRC MSB	САН
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

"T1-T2-T3-T4 (transmission time of 3.5 bytes)" in "START" and "END" indicates that the RS485 communication needs to be idle for at least the transmission time of 3.5 bytes. An idle time is required to distinguish on message from another to ensure that the two messages are not regarded as one.

"ADDR" is "01H", indicating that the command is sent to the VFD whose address is 01 H. "ADDR" occupies one byte.

"CMD" is "03H", indicating that the command is used to read data from the VFD. "CMD" occupies one byte.

"Start address" indicates the address from which data is read. "Start address" occupies two bytes, with the MSB on the left and LSB on the right.

"Data count" indicates the count of data to be read (unit: word). "Start address" is "0004H" and "Data count" is "0002H", which indicates reading data from the addresses 0004H and 0005H.

CRC check occupies two bytes, with the LSB on the left, and MSB on the right.

RTU slave response (from the VFD to the master) is as follows:

START	T1-T2-T3-T4 (transmission time of 3.5 bytes)
ADDR	01H
CMD	03H
Number of bytes	04H
Address 0004H data MSB	13H
Address 0004H data LSB	88H
Address 0005H data MSB	00H
Address 0005H data LSB	00H
CRC LSB	7EH
CRC MSB	9DH
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

The definition of the response information is described as follows:

"ADDR" is "01H", indicating that the command is sent from the VFD whose address is 01H. "ADDR" occupies one byte.

"CMD" is "03H", indicating that the message is a VFD response to the 03H command from the master for reading data. "CMD" occupies one byte.

"Number of bytes" indicates the number of bytes between the byte (not included) and the CRC byte (not included). The value "04" indicates that there are four bytes of data between "Number of bytes" and "CRC LSB", that is, "MSB of data in 0004H", "LSB of data in 0004H", "MSB of data in 0005H".

A record of data contains two bytes, with the MSB on the left and LSB on the right. From the response, the data in 0004H is 1388H, and that in 0005H is 0000H.

CRC check occupies two bytes, with the LSB on the left, and MSB on the right.

7.3.3.2 Command code 06H, writing a word

This command is used by the master to write data to the VFD. One command can be used to write only one piece of data. It is used to modify the parameters and running mode of the VFD.

For example, if the master writes 5000 (1388H) to 0004H of the VFD whose address is 02H, RTU master command (from the master to the VFD) is as follows:

START	T1-T2-T3-T4 (transmission time of 3.5 bytes)
ADDR	02H
CMD	06H
MSB of data writing address	00H
LSB of data writing address	04H
MSB of data content	13H
LSB of data content	88H
CRC LSB	C5H
CRC MSB	6EH
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

RTU slave response (from the VFD to the master) is as follows:

START	T1-T2-T3-T4 (transmission time of 3.5 bytes)
ADDR	02H
CMD	06H
MSB of data writing address	00H
LSB of data writing address	04H
MSB of data content	13H
LSB of data content	88H

CRC LSB	C5H
CRC MSB	6EH
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

7.3.3.3 Command code 08H, diagnosis

Sub-function code description:

Sub-function code	Description
0000	Return data based on query requests

For example, for the query about the circuit detection information about the VFD whose address is 01H, the query and response strings are the same.

RTU master command:

START	T1-T2-T3-T4 (transmission time of 3.5 bytes)
ADDR	01H
CMD	08H
Sub-function code MSB	00H
Sub-function code LSB	00H
MSB of data content	12H
LSB of data content	ABH
CRC CHK LSB	ADH
CRC CHK MSB	14H
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

RTU slave response:

START	T1-T2-T3-T4 (transmission time of 3.5 bytes)
ADDR	01H
CMD	08H
Sub-function code MSB	00H
Sub-function code LSB	00H
MSB of data content	12H
LSB of data content	ABH
CRC CHK LSB	ADH
CRC CHK MSB	14H
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

7.3.3.4 Command code 10H, continuous writing

The command code 10H is used by the master to write data to the VFD. The quantity of data to be written is determined by "Data count", and a maximum of 16 pieces of data can be written.

For example: Writing 5000 (1388H) and 50 (0032H) to 0004H and 0005H of the VFD (as the slave) whose address is 02H $\,$

RTU master command (from the master to the VFD) is as follows:

START T1-T2-T3-T4 (transmission time of 3.5	
ADDR	02H
CMD	10H
MSB of data writing address	00H
LSB of data writing address	04H
Data count MSB	00H
Data count LSB	02H
Number of bytes	04H
MSB of data 0004H content	13H
LSB of data 0004H content	88H
MSB of data 0005H content	00H
LSB of data 0005H content	32H
CRC LSB	C5H
CRC MSB	6EH
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

RTU slave response (from the VFD to the master) is as follows:

START	T1-T2-T3-T4 (transmission time of 3.5 bytes)
ADDR	02H
CMD	10H
MSB of data writing address	00H
LSB of data writing address	04H
Data count MSB	00H
Data count LSB	02H
CRC LSB	C5H
CRC MSB	6EH
END	T1-T2-T3-T4 (transmission time of 3.5 bytes)

7.3.4 Fieldbus scale

In practical applications, communication data is represented in the hexadecimal form, but hexadecimal values cannot represent decimals. You can multiply a non-integer by a multiple to obtain an integer, in which the multiple is considered as a fieldbus scale.

The fieldbus scale depends on the number of decimal places in the value specified in

"Setting range" or "Default". If there are n (for example, 1) decimal places in the value, the fieldbus scale m (then m=10) is the result of 10 to the power of n. For example:

Function code	Name	Parameter description	Setting range	Default
P01.20	Wake-up-from-sleep delay	0.0–3600.0s (valid only when the ones place of P01.19 = 2)	0.00–3600.0	0.0s

The value specified in "Setting range" or "Default" contains one decimal place, and therefore the fieldbus scale is 10. If the value received by the master is 50, "Delay of auto fault reset" of the VFD is 5.0 (5.0=50/10).

To set "Wake-up-from-sleep delay" to 5.0s through Modbus communication, you need first to multiply 5.0 by 10 according to the scale to obtain an integer 50, that is, 32H in the hexadecimal form, and then send the following write command:

<u>01</u>	<u>06</u>	<u>01 14</u>	<u>00 32</u>	<u>49 E7</u>
VFD address	Write command	Parameter address	Parameter data	CRC

After receiving the command, the VFD converts 50 into 5.0 based on the fieldbus scale, and then sets "Wake-up-from-sleep delay" to 5.0s.

For another example, after sending the "Wake-up-from-sleep delay" parameter read command, the master receives the following response from the VFD:

<u>01</u>	<u>03</u>	<u>02</u>	<u>00 32</u>	<u> 39 91</u>
VFD	Read	2-byte	Parameter	CRC
address	command	data	data	

The parameter data is 0032H, that is, 50, and therefore 5.0 is obtained based on the fieldbus scale (50/10=5.0). In this case, the master identifies that "Wake-up-from-sleep delay" is 5.0s.

7.3.5 Error message response

Error message responses are sent from the VFD to the master. The following table lists the codes and definitions of the error message responses.

Code	Name	Definition
01H		The command code received by the host controller is
OILI		not allowed to be executed. The possible causes are as

Code	Name	Definition
		follows: The function code is applicable only on new devices and is not implemented on this device. The slave is in faulty state when processing this request.
02H	Invalid data address	For the VFD, the data address in the request of the host controller is not allowed. In particular, the combination of the register address and the number of the to-be-sent bytes is invalid.
03H	Invalid data value	The received data domain contains a value that is not allowed. The value indicates the error of the remaining structure in the combined request. Note: It does not mean that the data item submitted for storage in the register includes a value unexpected by the program.
04H	Operation failure	The parameter setting is invalid in the write operation. For example, a function input terminal cannot be set repeatedly.
05H	Incorrect password	The password entered in the password verification address is different from that is specified by P07.00.
06H	Incorrect data frame	The data frame sent from the upper computer is incorrect in the length, or in the RTU format, the value of the CRC check bit is inconsistent with the CRC value calculated by the lower computer.
07H	Parameter read-only	The parameter to be modified in the write operation of the upper computer is a read-only parameter.
08H	Parameter cannot be modified in running	The parameter to be modified in the write operation of the upper computer cannot be modified during the running of the VFD.
09H	Password protection	If the upper computer does not provide the correct password to unlock the system to perform a read or write operation, the error of "system being locked" is reported.

7.3.6 Communication commissioning

In the following example, a PC is used as the master, an RS232-RS485 converter is used for signal conversion, and the PC serial port used by the converter is COM1 (an RS232 port). The host controller commissioning software is the serial port

commissioning assistant Commix1.4, which can be downloaded from the Internet. Download a version that can automatically execute the CRC check function. The following figure shows the interface of Commix.



Set Port to COM1. Set BaudRate consistently with P14.01. DataBits, Parity, and StopBits must be set consistently with P14.02. If the RTU mode is selected, choose Input HEX and Show HEX. To implement automatic CRC, you need to choose ModbusRTU, and set Start Byte to 1 and CRC Type to CRC16 (MODBU SRTU) in the CRC Settings window. After the automatic CRC is enabled, do not enter CRC in commands. Otherwise, command errors may occur due to repeated CRC.

The commissioning command for setting the VFD whose address is 03H to run forward is as follows:

<u>03</u>	<u>06</u>	<u> 20 00</u>	00.01	<u>42 28</u>
VFD address	Write command	Parameter address	Forward running	CRC

Note:

The VFD address (P14.00) must be set to 03.

- "Channel of running commands" (P00.01) must be set to "Communication", and "Communication channel of running commands" (P00.02) to the Modbus channel.
- After you click Send, if the line configuration and settings are correct, a response transmitted by the VFD is received as follows:

03 06 20 00 00 01 42 28

VFD Write Parameter address command address running CRC


8 Fault handling

8.1 Fault indication and reset

When the RUN/TUNE, FWD/REV, and LOCAL/REMOT indicators are on at the same time, the VFD is in abnormal state, with the keypad showing the fault code. For details about fault causes and solutions, see section 8.2 Faults and solutions. If the fault cause cannot be located, contact our local office for technical support. There are three methods to reset VFD faults:

Method 1 Press the STOP/RST key on the keypad for reset.

Method 2 Set P05.01-P05.04 and P05.09 to 7 (Fault reset).

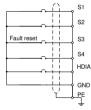

Method 3 Cut off the VFD power supply.

8.2 Faults and solutions

When a fault occurred, handle the fault as follows:

- Step 1 Check whether the keypad display is improper. If yes, contact the local INVT office.
- Step 2 If no, check the function codes in P07 group to determine the real state when the fault occurred.
- Step 3 Check the following table for the exception and solution.
- Step 4 Rectify the fault or ask for help.
- Step 5 After confirming the fault is removed, perform fault reset, and start running.

8.2.1 Common faults and solutions

Fault code	Fault type	Possible cause	Solution
E4	Overcurrent during ACC	ACC time too short. Load too large or sudden change of load. Start during motor rotating. 3PH output current imbalance. When sensorless vector control is used for motor control, parameter autotuning is not performed. When V/F control is used for motor control, v/F curve setting is abnormal. There are strong external interference sources (contactor switchover or improper grounding). Grid voltage is too low. Hardware fault.	Increase the ACC time, or reduce the software current limit point through P11.06; if the process requires rapid ACC, increase the VFD capacity. Increase the VFD capacity to ensure that the motor does not experience stalling, and that the load equipment functions without any exception. Start after the motor stops, or select speed tracking start through P01.00. Check the VFD output voltage and motor resistance to ensure three-phase balance. Set the rated parameters according to the motor nameplate, and perform parameter autotuning through P00.15. Adjust the frequency and voltage relationship set by the V/F curve, and reduce the voltage corresponding to the frequency. To avoid strong interference, keep the motor cables away from contactors and ensure reliable grounding of the system. Improve the power quality, or increase the VFD capacity. Replace the VFD.

Fault code	Fault type	Possible cause	Solution
E5	Overcurrent during DEC	DEC time too short. Software current limit point setting too high. Load too large or sudden change of load. 3PH output current imbalance. When sensorless vector control is used for motor control, parameter autotuning is not performed. When V/F control is used for motor control, V/F curve setting is abnormal. There are strong external interference sources (contactor switchover or improper grounding). Hardware fault.	Increase the DEC time, or reduce the software current limit point through P11.06; if the process requires rapid DEC, increase the VFD capacity. Reduce the software current limit point through P11.06. Increase the VFD capacity to ensure that the word does not experience stalling, and that the load equipment functions without any exception. Check the VFD output voltage and motor resistance to ensure three-phase balance. Set the rated parameters according to the motor nameplate, and perform parameter autotuning through P00.15. Adjust the frequency and voltage relationship set by the V/F curve, and reduce the voltage corresponding to the frequency. To avoid strong interference, keep the motor cables away from contactors and ensure reliable grounding of the system. Replace the VFD.
	Overcurrent during	Load too large or sudden change of load.	Increase the VFD capacity to ensure that the motor does
E6	constant	Software current limit	not experience stalling, and
	speed running	point setting too high.	that the load equipment

Fault code	Fault type	Possible cause	Solution
		3PH output current imbalance. When sensorless vector control is used for motor control, parameter autotuning is not performed. When V/F control is used for motor control, V/F curve setting is abnormal. There are strong external interference sources (contactor switchover or improper grounding). Grid voltage is too low. Hardware fault.	functions without any exception. Reduce the software current limit point through P11.06. Check the VFD output voltage and motor resistance to ensure three-phase balance. Set the rated parameters according to the motor nameplate, and perform parameter autotuning through P00.15. Adjust the frequency and voltage relationship set by the V/F curve, and reduce the voltage corresponding to the frequency. To avoid strong interference, keep the motor cables away from contactors and ensure reliable grounding of the system. Improve the power quality, or increase the VFD capacity. Replace the VFD.
E7	Overvoltage during ACC	ACC time too short. Grid voltage too high. Start during motor rotating. The load has a significant energy feedback. Improper setting of overvoltage stall protection.	Increase the ACC time or enable overvoltage stall protection. Improve the power quality to comply with the VFD input voltage specifications (refer to product specifications). Start after the motor stops, or select speed tracking start through P01.00. Install a braking unit and energy feedback unit, or

Fault code	Fault type	Possible cause	Solution
E8	Overvoltage during DEC	Deceleration time is too short; Grid voltage too high. The load has a significant energy feedback. Improper setting of overvoltage stall protection.	remove external factors that cause the load to generate power. Enable overvoltage stall protection through P11.03, and lower the overvoltage stall protection voltage value of P11.04. Increase the DEC time; if the process requires rapid DEC, braking units, energy feedback units can be added, or the magnetic flux braking function can be used. Improve the power quality to comply with the VFD input voltage specifications (refer to product specifications). Install a braking unit and energy feedback unit, or remove external factors that cause the load to generate power. Enable overvoltage stall protection through P11.03,
			and lower the overvoltage stall protection voltage value of P11.04.
E9	Overvoltage during constant speed running	Grid voltage too high. The load has a significant energy feedback. Improper setting of overvoltage stall protection.	Improve the power quality to comply with the VFD input voltage specifications (refer to product specifications). Install a braking unit and energy feedback unit, or remove external factors that cause the load to generate power.

Fault code	Fault type	Possible cause	Solution
			Enable overvoltage stall protection through P11.03, and lower the overvoltage stall protection voltage value of P11.04.
E10	DC bus undervoltage fault	The grid voltage is too low. Abnormal voltage display. Abnormal buffer contactor closing. The VFD runs with heavy load when phase loss on input side occurs.	Increase grid input voltage. Contact the manufacturer. Contact the manufacturer. Check whether the input power is normal and input cables are loose.
E11	Motor overload	The grid voltage is too low. The motor rated current is set incorrectly. Motor stalling or load sudden change too great.	Increase grid input voltage. Reset the motor rated current in the motor parameter group. Check the load and adjust the torque boost value.
E12	VFD overload	ACC too fast. Motor restarted during rotating. The grid voltage is too low. Load is too large. VFD power is too small.	Increase ACC time. Avoid restart after stop. Increase grid input voltage. Select a VFD with larger power.
E13	Input phase loss	Phase loss or violent fluctuation occurred on inputs RST. Input-side screws loosened.	Check whether the input power is normal and input cables are loose. Set P11.00 to screen out the fault.
E14	Output phase loss	Output cables broken or short connected to the ground. UVW phase loss (or the three phases of load are seriously asymmetrical).	Check for loose or broken output cables. Check for sharp load fluctuation and motor 3PH resistance imbalance.

Fault code	Fault type	Possible cause	Solution
E16	Inverter module overheating	Air duct blocked or fan damaged. Ambient temperature is too high. Long-time overload running.	Ventilate the air duct or replace the fan. Keep good ventilation to lower ambient temperature. Select a VFD with larger power.
E17	External fault	External fault input signal of S terminal acts.	Check whether external device input is normal.
E18	RS485 communication fault	Improper baud rate. Communication line fault. Incorrect communication address. Communication suffers from strong interference.	Set a proper baud rate. Check the communication port wiring. Set the communication address correctly. You are recommended to use shielded cables to improve anti-interference.
E19	Current detection fault	Abnormal motor cable or motor insulation.	Remove motor cables to check. Contact the manufacturer.
E20	Motor autotuning fault	Motor capacity does not match with the VFD capacity. This fault may occur if the capacity difference exceeds five power classes. Motor parameter is set improperly. The parameters gained from autotuning deviate sharply from the standard parameters. Autotuning timeout. Pulse current setting too large.	Change the VFD model, or adopt V/F mode for control; Check motor wiring, motor type, and parameter settings. Empty the motor load and carry out autotuning again. Check whether the frequency upper limit is greater than 2/3 of the rated frequency. Decrease the pulse current setting properly.
E21	EEPROM operation fault	Control parameter reading/writing error. EEPROM damaged.	Press STOP/RST to reset. Replace the main control board.

Fault code	Fault type	Possible cause	Solution
E22	PID feedback offline fault	PID feedback offline. PID feedback source disappears.	Check PID feedback signal wires. Check PID feedback source.
E23	Braking unit fault	Fault occurred to the braking circuit or the braking pipe is damaged. Resistance of the external braking resistor is small.	Check the braking unit, and replace with a new braking pipe. Increase the brake resistance.
E24	Running time reached	The actual running time of the VFD is longer than the internal set running time.	Contact the manufacturer.
E25	Electronic overload fault	The VFD reports overload pre-alarm according to the setting.	Check whether the overload pre-alarm point is set properly.
E27	Parameter upload error	Keypad cable connected improperly or disconnected. Keypad cable too long, causing strong interference. Keypad or mainboard communication circuit error.	Check the keypad cable and re-plug to determine whether a fault occurs. Check for and remove the external interference source. Replace the hardware and seek maintenance services.
E28	Parameter download error	Keypad cable connected improperly or disconnected. Keypad cable too long, causing strong interference. Data storage error occurred to the keypad.	Check for and remove the external interference source. Replace the hardware and seek maintenance services. Check whether the control board software version of keypad parameter copy is the same as the control board software version of the VFD.
E33	To-ground short-circuit fault	The output of the VFD is short circuited to the ground.	Check whether the motor is short circuited to the ground and wiring is normal.

Fault code	Fault type	Possible cause	Solution
		Current detection circuit is faulty. Actual motor power setup deviates sharply from the VFD power.	Check whether the motor wiring is normal. Replace the main control board. Reset the motor parameters properly.
E34	Speed deviation fault	The load is too heavy or stalled.	Check for overload, increase speed deviation detection time, or prolong ACC/DEC time. Check motor parameter settings and re-perform motor parameter autotuning. Check whether speed loop control parameters are set properly.
E35	Mal-adjustmen t fault	SM parameters are set incorrectly. The parameters gained from autotuning are inaccurate. The VFD is not connected to the motor. Flux weakening Check moto counter EM Re-perform autotuning Increase m detection t Adjust flux coefficient	Check for overload or stalling. Check motor parameter and counter EMF settings. Re-perform motor parameter autotuning. Increase maladjustment detection time. Adjust flux weakening coefficient and current loop parameters.
E36	Electronic underload fault	The VFD reports underload pre-alarm according to the setting.	Check the load and the underload pre-alarm points.
E40	Safe torque off	Safe torque off function is enabled by external forces.	-
E41	Exception occurred to safety circuit of STO channel 1	The wiring of STO is improper. Fault occurred to external switch of STO. Hardware fault occurred	Check whether terminal wiring of STO is proper and firm enough. Check whether the external switch of STO can work


Fault code	Fault type	Possible cause	Solution
E42	Exception occurred to safety circuit of STO channel 2	to safety circuit of channel.	properly. Replace the control board. Note: Re-power on is required to remove the fault.
E43	Exception occurred to STO channel 1 and channel 2	Hardware fault occurred to STO circuit.	Replace the control board.
E92	Al1 disconnection	Al1 input too low. Al1 wiring disconnected.	Connect a 5V or 10mA power source to check whether the
E93	AI2 disconnection	AI2 input too low. AI2 wiring disconnected.	input is normal. Check whether the wiring is
E94	AI3 disconnection	· • • • • • • • • • • • • • • • • • • •	normal; if yes, replace the cable.
E96	No upgrade bootloader	The burned file does not contain a bootloader.	Burn the file with a bootloader again. You can screen out this fault by setting P14.12. (The absence of a bootloader does not affect the normal running of machine.)

8.2.2 Other status


Display code	Status type	Possible cause	Solution
PoFF		The system is powered off or the bus voltage is too low.	Check the grid conditions.

8.3 Analysis on common faults


8.3.1 Motor fails to work

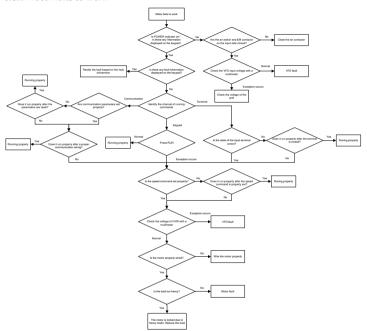


8.3.2 Motor vibrates

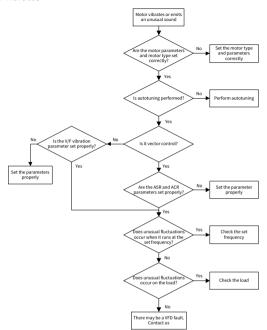


8.3.3 Overvoltage

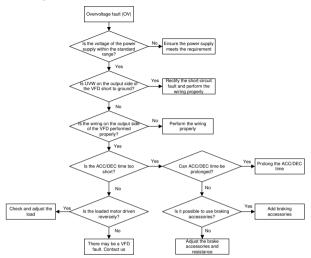


8.3.4 Undervoltage

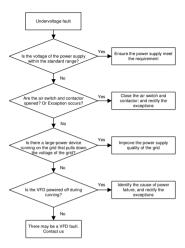


8.3.5 Overcurrent

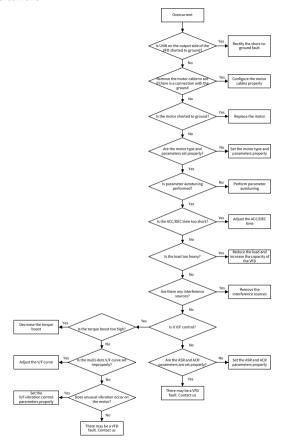

8.3.6 Motor overheating

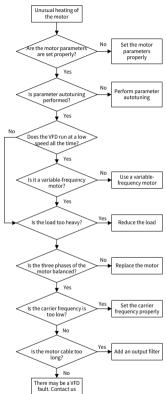

8.3.7 VFD overheating

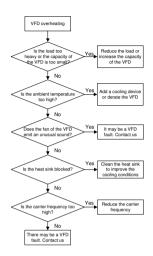

8.3.8 Motor stalls during ACC



8.4 Countermeasures on common interference

8.4.1 Interference problems of meter switch and sensors

Symptom		Solution
The upper or lower limit	•	Check and ensure that the sensor feedback cable is
is wrongly displayed, for		20cm or farther away from the motor cable.
example, 999 or -999.	•	Check and ensure that the ground wire of the motor
The display of values		is connected to the PE terminal of the VFD (if the
jumps (usually occurring		ground wire of the motor has been connected to the
on pressure		ground block, you need to use a multimeter to
transmitters).		measure and ensure that the resistance between the
The display of values is		ground block and PE terminal is lower than 1.5 Ω). At
stable, but there is a		the same time, you need to fasten the EMC screw or
large deviation, for		the EMC AC and EMC DC screws at the VFD input side
example, the		(for the EU models).
temperature is dozens of	•	Try to add a safety capacitor of 0.1μF to the signal
degrees higher than the		end of the feedback signal terminal of the sensor.

Symptom		Solution
common temperature (usually occurring on thermocouples). A signal collected by a sensor is not displayed but functions as a drive system running feedback signal. For example, the VFD is expected to decelerate	•	Try to add a safety capacitor of 0.1µF to the power end of the sensor meter (pay attention to the voltage of the power supply and the voltage endurance of the capacitor). For interference when connecting the VFD analog output (AO1) terminal to a meter: If AO1 uses 0–20mA current signal, add a capacitor of 0.47µF between the AO1 and GND terminals; if AO1 uses 0–10V voltage signal, add a capacitor of 0.1µF between the AO1 and GND terminals.
when the upper pressure limit of the compressor is reached, but in actual running, it starts to decelerate before the upper pressure limit is reached.	•	The signal cable needs to use the shielded cable, and the shield layer must be grounded reliably to the PE or GND.
All kinds of meters (such as frequency meter and current meter) connected to the VFD AO terminal (AO1) display very inaccurate values. Proximity switches are used in the system. After the VFD is started, the indicator of a proximity switch flickers, and the		

■Note:

output level flips.

- When a decoupling capacitor is required, add it to the terminal of the device connected to the sensor. For example, if a thermocouple is to transmit signals of 0 to 20mA to a temperature meter, the capacitor needs to be added on the terminal of the temperature meter; if an electronic ruler is to transmit signals of 0 to 30V to a PLC signal terminal, the capacitor needs to be added on the terminal of the PLC
- If a large number of meters or sensors are disturbed, it is recommended that you configure an external C2 filter on the VFD input power end. For details, see

appendix D.3.2 Filter.

8.4.2 Interference on RS485 communication

Symptom	Solution
The RS485 communication bus is disconnected or in poor contact.	 Arrange the communication cables and motor cables in different cable trays. In multi-VFD application scenarios, adopt the chrysanthemum connection mode to connect the communication cables between VFDs, which can improve the anti-interference capability.
The two ends of line A or B are connected reversely.	 In multi-VFD application scenarios, check and ensure that the driving capacity of the master is sufficient. In the connection of multiple VFDs, you need to configure one 120Ω terminal resistor on each end. Check and ensure that the ground wire of the motor is connected to the PE terminal of the VFD (if the ground wire of the motor has been connected to the ground block of the VFD, you need to use a
The communication protocol (such as the baud rate, data bits, and check bit) of the VFD is inconsistent with that of the host controller.	multimeter to measure and ensure that the resistance between the ground block and PE terminal is lower than 1.5Ω). At the same time, you need to fasten the EMC screw or the EMC AC and EMC DC screws at the VFD input side (for the EU models). Do not connect the VFD and motor to the same ground terminal as the host controller (such as the PLC, HMI, and touch screen). It is recommended that you connect the VFD and motor to the power ground, and connect the VFD and motor to the power ground, and connect the host controller separately to a ground stud. Try to short the signal reference ground terminal (GND) of the VFD with that of the upper computer controller to ensure that ground potential of the communication chip on the control board of the VFD is consistent with that of the communication chip of the host controller. Try to short GND of the VFD to its ground terminal (PE). Try to add a safety capacitor of 0.1μF at the power supply end of the host controller (PLC, HMI, or touch screen). Alternatively, use a magnet ring (Fe-based

Symptom	Solution
	nanocrystalline magnet rings are recommended).
	Pass the L/N cable or +/- cable of the host controller
	power supply through the magnet ring in the same
	direction and wind around the magnet ring for 8
	turns.

8.4.3 Failure to stop and indicator shimmering due to motor cable coupling

Symptom	Solution
Failure to stop In a VFD system where an S terminal is used to control the start and stop, the motor cable and control cable are arranged in the same cable tray. After the system is started properly, the S terminal cannot be used to stop	 Check and ensure that the exception signal cable is arranged 20cm or farther away from the motor cable. Add a safety capacitor of 0.1µF between the digital input terminal (S) and the GND terminal. Connect the digital input terminal (S) that controls
the inverter. Indicator shimmering After the VFD is started, the relay indicator, power distribution box indicator, PLC indicator, and indication buzzer shimmer, blink, or emit unusual sounds unexpectedly.	the start and stop to other idle digital input terminals in parallel. For example, if S1 is used to control the start and stop and S4 is idle, you can try to short connect S1 to S4.

▶Note: If the controller (such as PLC) in the system controls more than 5 VFDs at the same time through digital input terminals, this scheme is not applicable.

8.4.4 Leakage current and interference on RCD

■ Working principle

VFDs output high-frequency PWM voltage to drive motors. In this process, the distributed capacitance between the internal IGBT of a VFD and the heat sink and

that between the stator and rotor of a motor may inevitably cause the VFD to generate high-frequency leakage current to the ground. A residual current operated protective device (RCD) is used to detect the power-frequency leakage current when a grounding fault occurs on a circuit. The application of a VFD may cause misoperation of an RCD.

■ Rules for selecting RCDs

- Inverter systems are special. In these systems, it is required that the rated residual current of common RCDs at all levels is larger than 200 mA, and the VFDs are grounded reliably.
- 2. For RCDs, the time limit of an action needs to be longer than that of a next action, and the time difference between two actions need to be longer than 20ms, for example, 1s, 0.5s, or 0.2s.
- For circuits in VFD systems, electromagnetic RCDs are recommended.
 Electromagnetic RCDs have strong anti-interference capability, and thus can prevent the impact of high-frequency leakage current.

Electronic RCD	Electromagnetic RCD
Low cost, high sensitivity, small in volume, susceptible to voltage fluctuation of the grid and ambient temperature, and weak anti-interference capability	Requiring highly sensitive, accurate, and stable zero-phase sequence current transformer, using permalloy high-permeability materials, complex process, high cost, not susceptible to voltage fluctuation of the power supply and ambient temperature, strong anti-interference capability

Symptom	Solution
RCD misoperation at the transient VFD power-on	 Solution to RCD misoperation (handling the VFD) Try to remove the EMC screw or the EMC AC and EMC DC screws (for the EU models). Try to decrease the carrier frequency to 1.5kHz (P00.14=1.5). Try to modify the modulation method to "3PH modulation and 2PH modulation" (P08.40=00).
RCD misoperation after VFD running	 Solution to RCD misoperation (handling the system power distribution) Check and ensure that the power cable is not soaking in water. Check and ensure that cables are not damaged or

Symptom	Solution
	spliced. Check and ensure that no secondary grounding is performed on the neutral wire. Check and ensure that the main power cable terminal is in good contact with the air switch or contactor (all screws are tightened). Check 1PH powered devices, and ensure that no earth wires are used as neutral wires by these devices. Do not use shielded cables as VFD power cables and motor cables.

8.4.5 Live device housing

■ Live device housing description

After the VFD is started, there is sensible voltage on the housing, and you may feel an electric shock when touching the housing. The chassis, however, is not live (or the voltage is far lower than the human safety voltage) when the VFD is powered on but not running.

Symptom	Solution		
Live device housing	 If there is power distribution grounding or ground stud on the site, ground the VFD cabinet housing through the power ground or stud. If there is no grounding on the site, you need to connect the motor housing to the VFD grounding terminal PE, and ensure that the VFD EMC screw or the EMC AC and EMC DC screws (for EU models) has been fastened. 		

9 Inspection and maintenance

9.1 Daily inspection and regular maintenance

The VFD internal components will become aging due to the influence of environmental temperature, humidity, dust, vibration and other factors, which causes the potential failure or shortens the service life. Therefore, to extend the VFD service life and prevent safety hazards, daily inspection and regular maintenance are required.

Check category	Details	Method	
Daily inspection: Recommended on each day.			
Ambient environment	Whether the ambient temperature, humidity, vibration, dust, gas, and oil are too great, and whether there is condensation or water droplets inside and outside the machine	Visual inspection, and use instruments for measurement.	
	Whether there are foreign matters, such as tools, or dangerous substances placed nearby	Visual inspection	
Power supply voltage	Whether the voltage between the main circuit and control circuit is normal	Multimeter or voltage meter	
	Whether display is clear	Visual inspection	
Keypad	Whether some characters or fields are displayed incompletely	Visual inspection	
Fan	Whether it runs normally	Visual inspection	
Load	Whether the motor is overloaded or overheating, or it sounds abnormally.	Visual inspection	
Regular maintenance: Recommended on a quarterly basis, especially in harsh environments such as with dust, oil, or corrosive gases. Before regular maintenance, cut off the power and wait at least 15 minutes.			
Whole machine	Whether the bolts become loose or come off	Visual inspection	
	Whether the machine is deformed, cracked, or damaged, or the color changes due to overheating and aging	Visual inspection	
	Whether much dirt or dust is attached	Visual inspection	
	Whether there is abnormal sound or vibration, odor, discoloration (transformer, reactor and fan)	Auditory, olfactory, and visual inspection	

Check category	Details	Method
Motor	Whether the installation is secure, motor insulation is normal, and the fan runs properly	Instrument or visual inspection
Cable	Whether there is discoloration, deformation, or damage	Visual inspection
	Whether the cable connectors or bolts become loose	Visual inspection
Connection terminal	Whether there is overheating or damage	Visual inspection
Electrolytic capacitor	Whether there is electrolyte leakage, discoloration, cracks, and housing expansion	Visual inspection
	Whether the safety valve is started	Visual inspection
External braking resistor	Whether there is displacement caused due to overheating	Olfactory and visual inspection
	Whether aging, skin breakage, or wire damage occurs to the resistor cable	Visual inspection, or measuring with a multimeter after removing one cable end
Relay	Whether there is vibration sound during running	Auditory inspection
Control PCB and connector	Whether the screws and connectors become loose	Screw them up.
	Whether there is unusual smell or	Olfactory and
	discoloration	visual inspection
	Whether there is corrosion or rust stains	Visual inspection
Ventilation duct	Whether there are foreign matters blocking or attached to the cooling fan, air inlets, or air outlets	Visual inspection

For more details about maintenance, contact the local INVT office, or visit our website www.invt.com, and choose **Support** > **Services**.

9.2 Cooling fan replacement


The wearing part of VFD is the cooling fan, of which the service life is closely related to the running environment and maintenance condition.

Possible damage cause

Bearing wear, blade aging, water, oil, dust and other environmental factors may

cause circuit board damage.

■ Cooling fan replacement procedure

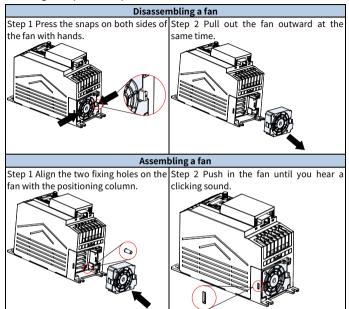

Note: Before disassembling or installing the VFD, stop the VFD, cut off the power, and wait at least 5 minutes.

9.3 Reforming

If the VFD has been left unused for a long time, you need to follow the instructions to reform the DC bus electrolytic capacitor before using it. The storage time is calculated from the date the VFD is delivered. For detailed operation, contact us.

Storage time	Operation principle	
Less than 1 year	No charging operation is required.	
1 to 2 years	Before the first run, apply the voltage of one class lower than the VFD voltage class to the VFD for 1 hour.	
2 to 3 years	Use a voltage controlled power supply to charge the VFD: Charge the VFD at 25% of the rated voltage for 30 minutes, and then charge it at 50% of the rated voltage for 30 minutes, at 75% for another 30 minutes, and finally charge it at 100% of the rated voltage for 30 minutes.	
More than 3 years	Use a voltage controlled power supply to charge the VFD: Charge the VFD at 25% of the rated voltage for 2 hours, and then charge it at 50% of the rated voltage for 2 hours, at 75% for another 2 hours, and finally charge it at 100% of the rated voltage for 2 hours.	

The method for using a voltage controlled power supply to charge the VFD is described as follows:

The selection of a voltage controlled power supply depends on the power supply of the VFD. For VFDs with an incoming voltage of 1PH/3PH 220V AC, you can use a 1PH 220V AC/2A voltage regulator. Both 1PH and 3PH VFDs can be charged with a 1PH voltage controlled power supply (connect L+ to R, and N to S or T). All the DC bus capacitors share one rectifier, and therefore they are all charged.

For VFDs of a high voltage class, ensure that the voltage requirement (for example, 380V) is met during charging. Capacitor changing requires little current, and therefore you can use a small-capacity power supply (2A is sufficient).


The method for using a resistor (incandescent lamp) to charge the drive is described as follows:

If you directly connect the drive device to a power supply to charge the DC bus capacitor, it needs to be charged for a minimum of 60 minutes. The charging

operation must be performed at a normal indoor temperature without load, and you must connect a resistor in series mode in the 3PH circuit of the power supply.

For a 380V drive device, use a resistor of $1~k\Omega/100W$. If the voltage of the power supply is no higher than 380V, you can also use an incandescent lamp of 100W. If an incandescent lamp is used, it may go off or the light may become very weak.

Figure 9-1 380V drive device charging circuit example

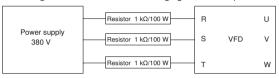

Appendix A Technical data

If the ambient temperature at the VFD installation site exceeds 50°C, the VFD installation site altitude exceeds 1000m, a cover with heat dissipation vents is used, or the carrier frequency is higher than the recommended (see P00.14), the VFD needs to be derated.

A.1 Derating due to temperature

The temperate range is -10°C — $+50^{\circ}\text{C}$. When the temperature is higher than 50°C , the rated output current of each model is derated as follows:

Table A-1 Derating due to temperature

Model	Frame	Derating coefficient and temperature
GD27-0R4G-S2-B-XX		100% P 75% P
GD27-0R4G-2-B-EU		6 0% 0 10 20 30 40 50 60 70 (°C) 14 32 50 68 86 104 122 140 158 (°F) Ambient temperature
GD27-0R7G-S2-B-XX	Α	D 90%
GD27-0R7G-2-B-EU		De 80% 80% BE COO #1% COO #1%
GD27-0R7G-4-B-XX		0% 0 10 20 30 40 50 60 70 (°C) 14 32 50 68 86 104 122 140 158 (°F)
GD27-1R5G-4-B-XX		Ambient temperature
GD27-1R5G-S2-B-XX		
GD27-2R2G-S2-B-XX		D 100%
GD27-1R5G-2-B-EU		at 1777 509 5096
GD27-2R2G-2-B-EU	В	Deg 1796 17
GD27-2R2G-4-B-XX		-10 0 10 20 30 40 50 60 70 (°C)
GD27-003G-4-B-XX		14 32 50 68 86 104 122 140 158 (°F) Ambient temperature
GD27-004G-4-B-XX		
GD27-004G-2-B-EU		00% Deat 75% 108 50%
GD27-5R5G-4-B-XX	С	Der 175% 50% 50% 60 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6
GD27-7R5G-4-B-XX		70 0 10 20 30 40 50 60 70 (°C) 14 32 50 68 86 104 122 140 158 (°F) Ambient temperature

Model	Frame	Derating coefficient and temperature
GD27-7R5G-2-B-EU		100% De
GD27-011G-2-B-EU		75% active 50%
GD27-011G-4-B-XX	D	
GD27-015G-4-B-XX		0 25% 0 25% 0 25% 0 20 10 20 30 40 50 60 70 °C° 14 32 50 68 86 104 122 160 135 °C° Ambient temperature
GD27-015G-2-B-EU		100% D 75%
GD27-018G-4-B-XX		OF 13%
GD27-022G-4-B-XX	E	De 75% 105 50% CC 25% CC 25

Note:

- -XX indicates empty or -EU.
- It is not recommended to use the VFD at an environment with the temperature higher than 60°C. If you do, you shall be held accountable for the consequences caused.

A.2 Derating due to altitude

When the altitude of the site where the VFD is installed is lower than 1000 m, the VFD can run at the rated power. When the altitude exceeds 1000m, derate by 1% for every increase of 100m. When the altitude exceeds 3000m, consult our local dealer or office for details.

A.3 Derating due to carrier frequency

The carrier frequency of the VFD varies with power class. The VFD rated power is defined based on the carrier frequency factory setting.

Model		Derating due to carrier frequency						
Model	4kHz	6kHz	8kHz	10kHz	12kHz			
AC 1PH 200V-240V								
GD27-0R4G-S2-B-XX	1	1	1	1	1			
GD27-0R7G-S2-B-XX	1	1	1	0.9	0.85			
GD27-1R5G-S2-B-XX	1	1	1	1	0.9			
GD27-2R2G-S2-B-XX	1	1	1	0.95	0.9			
AC 3PH 200V-240V								
GD27-0R4G-2-B-EU	1	1	1	1	1			
GD27-0R7G-2-B-EU	1	1	1	0.9	0.85			
GD27-1R5G-2-B-EU	1	1	1	1	0.9			
GD27-2R2G-2-B-EU	1	1	1	0.95	0.9			

Madal	Derating due to carrier frequency					
Model	4kHz	6kHz	8kHz	10kHz	12kHz	
GD27-004G-2-B-EU	1	0.9	0.85	0.8	0.75	
GD27-5R5G-2-B-EU	1	0.85	0.8	0.75	0.65	
GD27-7R5G-2-B-EU	1	0.9	0.8	0.75	0.65	
GD27-011G-2-B-EU	1	0.9	0.85	0.7	0.65	
GD27-015G-2-B-EU	1	0.9	0.75	0.7	0.6	
AC 3PH 380V-480V	•	•				
GD27-0R7G-4-B-XX	1	1	0.9	0.8	0.7	
GD27-1R5G-4-B-XX	1	0.8	0.7	0.6	0.5	
GD27-2R2G-4-B-XX	1	0.9	0.8	0.75	0.7	
GD27-003G-4-B-XX	1	0.9	0.8	0.7	0.6	
GD27-004G-4-B-XX	1	0.9	0.8	0.7	0.65	
GD27-5R5G-4-B-XX	1	0.9	0.85	0.8	0.7	
GD27-7R5G-4-B-XX	1	0.9	0.85	0.8	0.7	
GD27-011G-4-B-XX	1	0.9	0.8	0.7	0.65	
GD27-015G-4-B-XX	1	0.85	0.75	0.65	0.6	
GD27-018G-4-B-XX	1	0.85	0.7	0.65	0.6	
GD27-022G-4-B-XX	1	0.85	0.75	0.65	0.6	

■Note: -XX indicates empty or -EU.

A.4 Grid specifications

-	
	AC 1PH 200V(-15%) – 240V(+10%)
Grid voltage	AC 3PH 200V(-15%) - 240V(+10%)
	AC 3PH 380V(-15%) - 480V(+10%)
Short-circuit capacity	According to IEC 61439-1, the rated short-time withstand current at the incoming terminals of the switchgear assembly is up to 100 kA. The VFD is suitable for applications where the prospective short-circuit current does not exceed the breaking capacity (for example, 100 kA) of its protective devices, and its rated operational current is significantly lower than this value—typically $\leq 1 \text{ kA}$.
Frequency	50/60Hz±5%, with a maximum change rate of 20%/s

A.5 Motor connection data

Motortun	Motor type	Asynchronous	induction	motor	or	permanent-magnet
Motor typ	е	synchronous mo	otor			

Voltage	$0-U_1$ (motor rated voltage), 3PH symmetrical, U_{max} (VFD rated voltage) at the field-weakening point
Short-circuit protection	The motor output short-circuit protection meets the requirements of IEC 61800-5-1.
Frequency	0–599Hz
Frequency resolution	0.01Hz
Current	See section 2.3 Product ratings.
Power limit	1.5 times the motor rated power
Field-weakening point	10–599Hz
Carrier frequency	4, 8, 12, or 15kHz

A.5.1 Motor cable length for normal operation

Motor cable lengths for normal operation are listed in the following table.

Frame	Max. motor cable length
Α	50m
В	75m
С	150m
D	200m
E	200m

▶Note: When the motor cable is too long, electrical resonance may be caused due to the influence of distributed capacitance. This may cause motor insulation damage or generate large leakage current, causing device overcurrent protection. You must configure the AC output reactor nearby the VFD when the cable length is equal to or greater than the values in the following table.

A.5.2 Motor cable length for EMC

The EU models meet the EMC requirements of IEC/EN61800-3, and the maximum shielded motor cable lengths used at a 4kHz switching carrier frequency are as follows.

Eromo	Max. motor cable length				
Frame	C2	C3			
IC 1PH 200V-240V					
Α	5m	10m			
В	5m	10m			

Frame	Max. motor	r cable length		
Frante	C2	C3		
AC 3PH 200V-240V				
Α	-	10m		
В	•	10m		
С	-	10m		
D	-	10m		
E	-	10m		
AC 3PH 380V-480V				
Α	-	10m		
В	-	10m		
С	-	10m		
D	-	10m		
E	-	10m		

Note: For details about frames, see section 2.5 Product dimensions and weight.

Appendix B Application standards

B.1 List of application standards

The following table describes the application standards that VFDs comply with.

EN/ISO 13849-1	Safety of machinery—Safety related parts of control systems—Part 1: General principles for design
EN/ISO 13849-2	Safety of machinery—Safety related parts of control systems—Part 2: Verification
IEC/EN 60204-1	Safety of machinery—Electrical equipment of machines Part 1: General requirements
IEC/EN 62061	Safety of machinery—Safety-related functional safety of electrical, electronic, and programmable electronic control systems
IEC 61800-3	Adjustable speed electrical power drive systems—Part 3: EMC requirements and specific test methods
IEC/EN 61800-5-1	Adjustable speed electrical power drive systems—Part 5-1: Safety requirements—Electrical, thermal and energy
IEC/EN 61800-5-2	Adjustable speed electrical power drive systems—Part 5-2: Safety requirements—Function

B.2 CE/TUV/UL/CCS certification

The CE mark affixed to the VFD indicates that the VFD is CE-compliant, meeting the regulations of the European low-voltage directive (2014/35/EU) and EMC directive (2014/30/EU).

The TUV mark affixed to the VFD indicates that the VFD is TUV-compliant. TUV certification includes TUV-MARK, TUV-CE, TUV-CB, GS, and VDE certifications, which has high authority and recognition in the field of electronic appliances and components.

The UL mark affixed to the VFD indicates that the VFD has passed UL certification. UL certification is a voluntary certification in the United States (but mandatory in some states), and products that have passed the certification meet the relevant UL standard requirements can enter the US market.

The CCS mark affixed to the VFD indicates that the VFD is CCS-compliant. CCS is the ship inspection certification of China Classification Society. The certified products can be used on ships.

Note: The relevant certifications and qualifications shall be subject to the actual nameplate markings. The above information is for reference only.

B.3 EMC compliance declaration

The VFD complies with the EMC product standard EN 61800-3:2004 + A1:2012, meeting the requirements for categories C2 and C3 (motor cable length limit for ensuring EMC compliance) as defined in the standard

B.4 EMC product standard

The VFD is compliant with EN 61800-3:2004 + A1:2012.

EMC is short for electromagnetic compatibility, which refers to the ability of a device or system to function properly in its electromagnetic environment and not constitute an unbearable electromagnetic disturbance to anything in that environment

Application environment categories:

First environment: Civilian environment, including application scenarios where the VFD is directly connected without intermediate transformer to a low-voltage power supply network which supplies residential buildings.

Second environment: All locations outside a residential area.

Category C1: VFD of rated voltage lower than 1000V, applied to the first environment.

Category C2: VFD of rated voltage lower than 1000V, which is neither a non-plug, socket, nor mobile devices and must be installed and commissioned by a professional person when used in the first environment.

Note: The product may generate radio interference in some environments, you need to take measures to reduce the interference.

Category C3: VFD of rated voltage lower than 1000V, applied to the second environment. They cannot be applied to the first environment.

Note: VFDs of category C3 cannot be applied to civilian low-voltage public grids. When applied to such grids, the VFD may generate radio frequency electromagnetic interference.


Category C4: VFD of rated voltage higher than 1000V, or rated current higher or equal to 400A, applied to complex systems in the second environment.

Note: The EMC standard IEC/EN 61800-3 no longer restricts the power distribution of the VFD, but defines the use, installation, and commissioning of the VFD. Specialized personnel or organizations must have the necessary skills (including the EMC-related knowledge) for installing and/or performing commissioning on the electrical drive systems.

Appendix C Dimension drawings

C.1 VFD overall dimensions

Figure C-1 Dimensions and hole distances for VFDs in frames A and B

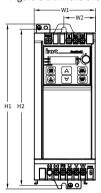

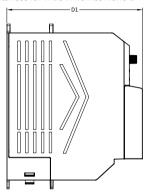
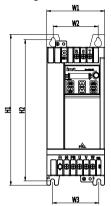


Table C-1 Dimensions and hole distances for VFDs in frames A and B (unit: mm)

Model	Frame	Outline dimensions			Mounting hole distance		Hole diameter
		W1	H1	D1	W2	H2	ulailletei
GD27-0R4G-S2-B-XX		60	190	155	36	180	Ø5
GD27-0R7G-S2-B-XX		60	190	155	36	180	Ø5
GD27-0R4G-2-B-EU	Α	60	190	155	36	180	Ø5
GD27-0R7G-2-B-EU	A	60	190	155	36	180	Ø5
GD27-0R7G-4-B-XX		60	190	155	36	180	Ø5
GD27-1R5G-4-B-XX		60	190	155	36	180	Ø5
GD27-1R5G-S2-B-XX		70	190	155	36	180	Ø5
GD27-2R2G-S2-B-XX		70	190	155	36	180	Ø5
GD27-1R5G-2-B-EU		70	190	155	36	180	Ø5
GD27-2R2G-2-B-EU	В	70	190	155	36	180	Ø5
GD27-2R2G-4-B-XX		70	190	155	36	180	Ø5
GD27-003G-4-B-XX		70	190	155	36	180	Ø5
GD27-004G-4-B-XX		70	190	155	36	180	Ø5

Note: -XX indicates empty or -EU.

Figure C-2 Dimensions and hole distances for VFDs in frame C



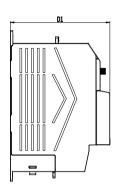
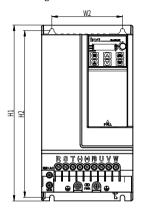


Table C-2 Dimensions and hole distances for VFDs in frame C (unit: mm)

Model	Frame		Outline dimensions			nting l	Hole diameter	
		W1	H1	D1	W2	W3	H2	diameter
GD27-004G-2-B-EU		90	235	155	70	72	220	Ø6
GD27-5R5G-4-B-XX	С	90	235	155	70	72	220	Ø6
GD27-7R5G-4-B-XX		90	235	155	70	72	220	Ø6

₽Note: -XX indicates empty or -EU.

Figure C-3 Dimensions and hole distances for VFDs in frame D



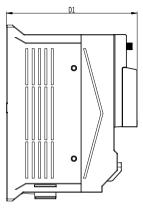
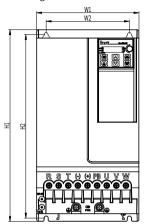


Table C-3 Dimensions and hole distances for VFDs in frame D (unit: mm)

Model	Frame	Outline dimensions				nting istance	Hole diameter
		W1	H1	D1	W2	H2	diameter
GD27-7R5G-2-B-EU		130	250	185	100	237	Ø6
GD27-011G-2-B-EU	D	130	250	185	100	237	Ø6
GD27-011G-4-B-XX	U	130	250	185	100	237	Ø6
GD27-015G-4-B-XX		130	250	185	100	237	Ø6

■Note: -XX indicates empty or -EU.

Figure C-4 Dimensions and hole distances for VFDs in frame E



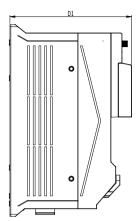


Table C-4 Dimensions and hole distances for VFDs in frame E (unit: mm)

Model	Frame	Outline dimensions		ho	nting ole ance	Hole diameter	
		W1	H1	D1	W2	H2	
GD27-015G-2-B-EU		160	300	190	130	287	Ø6
GD27-018G-4-B-XX	E	160	300	190	130	287	Ø6
GD27-022G-4-B-XX		160	300	190	130	287	Ø6

✓ Note: -XX indicates empty or -EU.

C.2 Flange mounting dimensions

Figure C-5 Dimensions and hole distances for VFDs in frame C

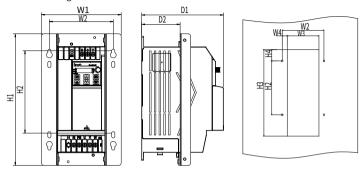


Table C-5 Dimensions and hole distances for VFDs in frame C (unit: mm)

Product model	W1	W2	W3	W4	H1	H2	Н3	Н4	D1	D2	Hole diameter
GD27-004G-2-B-EU	130	112	92	10	260	170	237	35	155	75	Ø6
GD27-5R5G-4-B-XX	130	112	92	10	260	170	237	35	155	75	Ø6
GD27-7R5G-4-B-XX	130	112	92	10	260	170	237	35	155	75	Ø6

Figure C-6 Dimensions and hole distances for VFDs in frame D

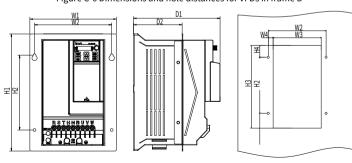


Table C-6 Dimensions and hole distances for VFDs in frame D (unit: mm)

Product model	W1	W2	W3	W4	Н1	H2	Н3	Н4	D1	D2	Hole diameter
GD27-7R5G-2-B-EU	190	170	150	10	275	170	252	50	185	105	Ø6
GD27-011G-2-B-EU	190	170	150	10	275	170	252	50	185	105	Ø6
GD27-011G-4-B-XX	190	170	150	10	275	170	252	50	185	105	Ø6
GD27-015G-4-B-XX	190	170	150	10	275	170	252	50	185	105	Ø6

Figure C-7 Dimensions and hole distances for VFDs in frame E

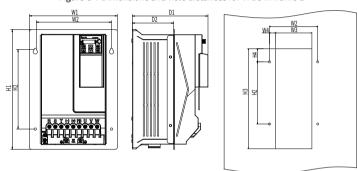


Table C-7 Dimensions and hole distances for VFDs in frame E (unit: mm)

Product model	W1	W2	W3	W4	H1	Н2	Н3	Н4	D1	D2	Hole diameter
GD27-015G-2-B-EU	220	200	180	10	325	200	302	50	190	105	Ø6
GD27-018G-4-B-XX	220	200	180	10	325	200	302	50	190	105	Ø6
GD27-022G-4-B-XX	220	200	180	10	325	200	302	50	190	105	Ø6

Appendix D Peripheral accessories

D.1 Cable

Cables mainly include power cables and control cables. For the selection of cable types, see the following table.

Cak	ole type	Symmetrical shielded cable	Four-core cable	Double-shielded twisted-pair cable	Single-shielded twisted-pair cable
Power cable	Input power cable	✓	-	-	-
cable	Motor cable	✓	-	-	-
Control	Analog signal control cable	-	-	√	-
cable	Digital signal control cable	-	-	√	√

D.1.1 Power cable

Table D-1 Motor model selection

	R, S, T/U, V, V	W, PB, (+), (-)	P	E	Fastening				
VFD power	Recommended cable size (AWG/mm²)	Recommended connection terminal model	Recommended cable size (AWG/mm²)	Recommended connection terminal model	torque (N · m)				
AC 1PH 200	AC 1PH 200V-240V								
0.4kW	15/1.5	GTVE15010	15/1.5	TVR2-4	0.8				
0.75kW	15/1.5	GTVE15010	15/1.5	TVR2-4	0.8				
1.5kW	13/2.5	GTVE40012	13/2.5	TVR3.5-4	0.8				
2.2kW	11/4	GTVE60012	11/4	TVR3.5-4	0.8				
AC 3PH 200	V-240V								
0.4kW	15/1.5	GTVE15010	15/1.5	TVR2-4	0.8				
0.75kW	15/1.5	GTVE15010	15/1.5	TVR2-4	0.8				
1.5kW	15/1.5	GTVE25012	15/1.5	TVR2-4	0.8				
2.2kW	13/2.5	GTVE40012	13/2.5	TVR3.5-4	0.8				
4kW	11/4	GTVE60012	11/4	TVR3.5-4	1.2				
5.5kW	11/4	GTVE100012	11/4	TNR8-5	1.2				
7.5kW	9/6	GTVE160012	9/6	TNR14-5	2				

	R, S, T/U, V, V	W, PB, (+), (-)	Р	E	Factoning
VFD power	Recommended cable size (AWG/mm²)	Recommended connection terminal model	Recommended cable size (AWG/mm²)	Recommended connection terminal model	Fastening torque (N • m)
11kW	7/10	GTVE250016	7/10	TNR14-5	2
15kW	5/16	GTVE350016	5/16	TNR22-6	2
AC 3PH 380	V-480V				
0.75kW	15/1.5	GTVE15010	15/1.5	TVR2-4	0.8
1.5kW	15/1.5	GTVE15010	15/1.5	TVR2-4	0.8
2.2kW	15/1.5	GTVE15010	15/1.5	TVR2-4	0.8
3kW	13/2.5	GTVE25012	13/2.5	TVR2-4	0.8
4kW	13/2.5	GTVE40012	13/2.5	TVR3.5-4	0.8
5.5kW	11/4	GTVE60012	11/4	TVR3.5-4	1.2
7.5kW	9/6	GTVE100012	9/6	TNR8-5	1.2
11kW	7/10	GTVE160012	7/10	TNR14-5	2
15kW	7/10	GTVE60012	7/10	TNR14-5	2
18.5kW	5/16	GTVE250012	5/16	TNR14-5	2
22kW	5/16	GTVE350016	5/16	TNR22-6	2

Note: The cables recommended for the main circuit can be used in scenarios where the ambient temperature is lower than 40°C, the wiring distance is shorter than 100m, and the current is the rated current.

■ Wire lug selection

Due to reasons such as longer cable length or laying, it is necessary to increase the cross-sectional area of the cable and replace the corresponding matching terminal blocks (wire lugs).

GTVE tubular pre-insulated terminal reference brand: Suzhou Yuanli

TVR/VF circular pre-insulated terminal reference brand: Suzhou Yuanli

The terminal models of different brands are named differently, and the actually used models shall prevail.

◆ GTVE tubular pre-insulated terminals

Figure D-1 GTVE tubular pre-insulated terminal appearance and size




TVR/VF circular pre-insulated terminals
 Figure D-2 TVR/VF circular pre-insulated terminal appearance and size



D.1.2 Control cable

Control cables mainly include analog signal control cables and digital signal control cables. Analog signal control cables use twisted double shielded cables (Figure a), with a separate shielded twisted pair for each signal and different ground wires for different analog signals. For digital signals, a double-shielded cable is preferred, but single-shielded or unshielded twisted pairs can also be used (Figure b).

Figure D-3 Control cable routing

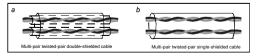

■Note:

 Analog signal cables and communication cables must be independent shielded cables.

- The same cable cannot transmit 24V DC signals and 115/230V AC signals simultaneously.
- For frequency signals, only shielded cables can be used.
- A relay cable needs to carry the metal braided shield layer.
- For control cable wiring terminals, refer to the GTVE wiring terminal description in the wire lug model selection section.

D.2 Breaker and electromagnetic contactor

The circuit breaker is mainly used to prevent electric shock accidents and short circuits to the ground that may cause leakage current fire. The electromagnetic contactor is mainly used to control the main circuit power on and off, which can effectively cut off the input power of the VFD in case of system failure to ensure safety.

Table D-2 Fuse/breaker/contactor model selection

VFD power	Fuse (A)	Breaker (A)	Contactor rated current (A)
AC 1PH 200V-240V			
0.4kW	10	10	9
0.75kW	16	16	12
1.5kW	32	25	18
2.2kW	40	32	32
AC 3PH 200V-240V			
0.4kW	6	6	9
0.75kW	10	10	9
1.5kW	16	16	12
2.2kW	25	25	18
4kW	32	32	25
5.5kW	40	32	32
7.5kW	50	40	38
11kW	63	50	50
15kW	100	80	65
AC 3PH 380V-480V			
0.75kW	6	6	9
1.5kW	10	10	9
2.2kW	16	16	9
3kW	20	16	16
4kW	25	25	16
5.5kW	32	32	25

VFD power	Fuse (A)	Breaker (A)	Contactor rated current (A)
7.5kW	40	40	32
11kW	50	50	38
15kW	80	63	50
18.5kW	90	80	65
22kW	100	80	65

Note: The accessory specifications described in the preceding table are ideal values. You can select accessories based on the site conditions, but try not to use those with lower values.

D.3 Optional accessories

Reactors, filters, braking components, and mounting brackets are external accessories and need to be specifically specified when purchasing.

D.3.1 Reactor

An input reactor is used to improve the power factor on the input side of the VFD, and thus restrict high-order harmonic currents.

An output reactor is used to extend the effective transmission distance of the VFD and effectively suppress the instantaneous high voltage generated when the VFD IGBT module is switched on or off.

Due to parasitic capacitance between the long cable and ground, the leakage current is large and the overcurrent protection of the VFD may be frequently triggered. To prevent this from happening and avoid damage to the motor insulator, compensation must be made by adding an output reactor. For the length of the cable between the VFD and the motor, see appendix A.5.1 Motor cable length for normal operation. If the length exceeds the limit, refer to the following table for selection; if the length exceeds twice the limit, consult us directly.

VFD power Input reactor **Output reactor** AC 1PH 200V-240V 0.4kW GDL-OCL0005-4CU 0.75kW GDL-OCL0005-4CU 1.5kW GDL-OCL0010-4CU 2.2kW GDL-OCL0010-4CU AC 3PH 200V-240V 0.4kW GDL-ACL0005-4CU GDI -OCI 0005-4CU 0.75kW GDL-ACL0006-4CU GDL-OCL0005-4CU

Table D-3 Reactor model selection

VFD power	Input reactor	Output reactor
1.5kW	GDL-ACL0014-4CU	GDL-OCL0010-4CU
2.2kW	GDL-ACL0014-4CU	GDL-OCL0010-4CU
4kW	GDL-ACL0020-4CU	GDL-OCL0020-4CU
5.5kW	GDL-ACL0025-4CU	GDL-OCL0020-4CU
7.5kW	GDL-ACL0032-4CU	GDL-OCL0032-4CU
11kW	GDL-ACL0040-4AL	GDL-OCL0040-4AL
15kW	GDL-ACL0051-4AL	GDL-OCL0050-4AL
AC 3PH 380V-480V		
0.75kW	GDL-ACL0005-4CU	GDL-OCL0005-4CU
1.5kW	GDL-ACL0005-4CU	GDL-OCL0005-4CU
2.2kW	GDL-ACL0006-4CU	GDL-OCL0006-4CU
3kW	GDL-ACL0014-4CU	GDL-OCL0010-4CU
4kW	GDL-ACL0014-4CU	GDL-OCL0010-4CU
5.5kW	GDL-ACL0020-4CU	GDL-OCL0014-4CU
7.5kW	GDL-ACL0025-4CU	GDL-OCL0020-4CU
11kW	GDL-ACL0035-4AL	GDL-OCL0025-4CU
15kW	GDL-ACL0040-4AL	GDL-OCL0035-4AL
18.5kW	GDL-ACL0051-4AL	GDL-OCL0040-4AL
22kW	GDL-ACL0051-4AL	GDL-OCL0050-4AL

■Note:

- The rated input voltage drop of input reactor is designed to ≥1.5%.
- The rated output voltage drop of output reactor is designed to 1%.
- For optional accessories with material requirements different from the recommended table above, please refer to the GDL series low-voltage VFD filter accessory brochure.

D.3.2 Filter

A filter is used to prevent the surrounding interference and prevent the interference from the VFD during running Optional filters can be used to meet the conductivity and transmission requirements of CE/EN 61800-3 C2 electrical drive systems.

Table D-4 Filter model selection

VFD power	Input filter	Output filter
AC 1PH 200V-240V		
0.4kW	FLT-PS2010H-B	FLT-L04006L-B
0.75kW	FLT-PS2010H-B	FLT-L04006L-B
1.5kW	FLT-PS2025L-B	FLT-L04016L-B

VFD power	Input filter	Output filter		
2.2kW	FLT-PS2025L-B	FLT-L04016L-B		
AC 3PH 200V-240V	AC 3PH 200V-240V			
0.4kW	FLT-P04006L-B	FLT-L04006L-B		
0.75kW	FLT-P04006L-B	FLT-L04006L-B		
1.5kW	FLT-P04016L-B	FLT-L04016L-B		
2.2kW	FLT-P04016L-B	FLT-L04016L-B		
4kW	FLT-P04032L-B	FLT-L04032L-B		
5.5kW	FLT-P04032L-B	FLT-L04032L-B		
7.5kW	FLT-P04045L-B	FLT-L04045L-B		
11kW	FLT-P04045L-B	FLT-L04045L-B		
15kW	FLT-P04065L-B	FLT-L04065L-B		
AC 3PH 380V-480V				
0.75kW	FLT-P04006L-B	FLT-L04006L-B		
1.5kW	FLT-P04006L-B	FLT-L04006L-B		
2.2kW	FLT-P04006L-B	FLT-L04006L-B		
3kW	FLT-P04016L-B	FLT-L04016L-B		
4kW	FLT-P04016L-B	FLT-L04016L-B		
5.5kW	FLT-P04016L-B	FLT-L04016L-B		
7.5kW	FLT-P04032L-B	FLT-L04032L-B		
11kW	FLT-P04032L-B	FLT-L04032L-B		
15kW	FLT-P04045L-B	FLT-L04045L-B		
18.5kW	FLT-P04065L-B	FLT-L04045L-B		
22kW	FLT-P04065L-B	FLT-L04065L-B		

D.3.3 Braking component

The braking component includes braking resistors and braking units, which can be used to dissipate the regenerative energy generated by the motor, greatly improving braking and deceleration capabilities. When the VFD driving a high-inertia load decelerates or needs to decelerate abruptly, the motor runs in the power generation state and transmits the load-carrying energy to the DC circuit of the VFD, causing the bus voltage of the VFD to rise. If the bus voltage exceeds a specific value, the VFD reports an overvoltage fault. To prevent this from happening, you need to configure braking components.

Table D-5 Braking component model selection

Braking		Resistance applicable	applicable (kW)			Min. allowed
VFD power	unit	for 100% braking torque (Ω)	10% braking ratio	50% braking ratio	80% braking ratio	braking resistance (Ω)
AC 1PH 200V-240V						
0.4kW	D 11.1.	361	0.06	0.30	0.48	180
0.75kW	Built-in braking	192	0.11	0.56	0.90	100
1.5kW	unit	96	0.23	1.10	1.80	60
2.2kW	uiiit	65	0.33	1.70	2.64	39
AC 3PH 200V-240V						
0.4kW	-	361	0.06	0.3	0.48	180
0.75kW	-	192	0.11	0.56	0.9	100
1.5kW	-	96	0.23	1.1	1.8	60
2.2kW	-	65	0.33	1.7	2.64	39
4kW	-	42	0.52	2.6	4.1	36
5.5kW	-	26	0.8	4.13	6.6	25
7.5kW	-	19	1.13	5.63	9	13
11 kW	-	13	1.65	8.3	13.2	8.8
15kW	-	9.6	2.3	11.3	18	6.4
AC 3PH 380V-480V	AC 3PH 380V-480V					
0.75kW	-	653	0.11	0.56	0.90	300
1.5kW	-	326	0.23	1.13	1.80	170
2.2kW	-	222	0.33	1.65	2.64	130
3kW	-	122	0.6	3	4.8	100
4kW	-	122	0.6	3	4.8	80
5.5kW	-	89.1	0.75	4.13	6.6	60
7.5kW	-	65	1.13	5.63	9	51
11kW	-	44	1.7	8.3	13.2	31
15kW	-	32	2	11.2	18	23
18.5kW	-	26	3	14	22	19
22kW	-	22	3.3	17	26	17

■Note:

- Select braking resistors according to the resistance and power data provided by INVT.
- The braking resistor may increase the braking torque of the VFD. The preceding table describes the resistance and power for 100% braking torque, 10% braking ratio, 50% braking ratio, and 80% braking ratio. You can select the braking system based on the actual operation conditions.

D.3.4 Mounting bracket

D.3.4.1 Keypad structure

Figure D-4 Keypad external view


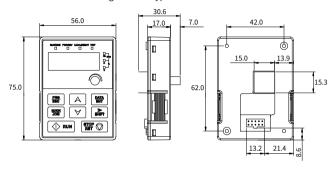


Figure D-5 Keypad openings without a bracket

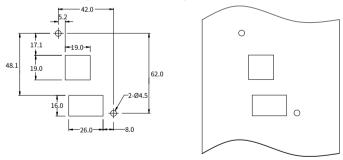


Ordering code	11022-00121	11022-00129
(with package)	(Without keypad copying)	(With keypad copying)
Appearance	88.88.8	00000

D.3.4.2 Keypad mounting bracket

All models support external keypads that are optional.


You can mount the external keypad on a bracket. There are two types of brackets that are compatible with all keypads. Keypad mounting brackets are optional. Figure D-6 and Figure D-7 show the outline dimensions.

Figure D-6 Outline dimensions of keypad mounting bracket 1 (unit: mm)

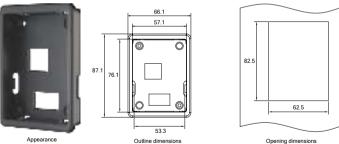

Name	Ordering code (with package)	
Keypad mounting bracket 1	61001-00090	

Figure D-7 Outline dimensions of keypad mounting bracket 2 (unit: mm)

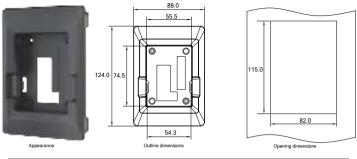


Name	Ordering code (with package)	
Keypad mounting bracket 2	11022-00136	

D.3.4.3 DIN rail mounting bracket

When selecting the DIN rail mounting method for the models in frames A and B, you must select a rail mounting bracket.

Figure D-8 DIN rail mounting bracket dimensions (unit: mm)

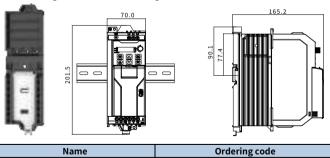

Name	Ordering code	
DIN rail mounting bracket	AP-RB-A-01	

Appendix E STO function

Before starting the STO function, read the following content in detail and follow all safety precautions in this manual.

E.1 Safety standards

The product has been integrated with the STO function and complies with the following safety standards.

IEC 61000-6-7	Electromagnetic compatibility (EMC)—Part 7: General standards—Immunity requirements for equipment used in industrial sites to perform safety related functions (functional safety)
IEC 61326-3-1	EMC requirements for measurement, control, and laboratory electrical equipment—Part 31: Immunity requirements for safety related systems and equipment intended to perform safety related functions (functional safety)—General industrial applications
IEC 61508-1	Functional safety of electrical/electronic/programmable electronic safety related systems—Part 1: General requirements
IEC 61508-2	Functional safety of electrical/electronic/programmable electronic safety related systems—Part 2: Requirements for electrical/electronic/programmable electronic safety related systems
IEC/EN 61800-5-2	Speed regulation electrical transmission systems—Part 5-2: Safety requirements—Functions
IEC/EN 62061	Safety of machinery—Safety-related functional safety of electrical, electronic, and programmable electronic control systems
EN/ISO 13849-1	Safety of machinery—Safety related parts of control systems—Part 1: General principles for design
EN/ISO 13849-2	Safety of machinery—Safety related parts of control systems—Part 2: Verification

Safety standard related data is as follows.

Code	Definition	Standard	Characteristics	
SIL	Cofoto into mito lovel	IEC 61508	SIL2	
SIL	Safety integrity level	IEC 62061	SILZ	

Code	Definition	Standard	Characteristics
PFH	Probability of failure per hour	IEC 61508	2.04x10 ¹⁰
HFT	Hardware fault tolerance	IEC 61508	1
SFF	Safe failure fraction	IEC 61508	94%
DC	Diagnosis coverage	ISO 13849-1	90%
Cat.	Category	ISO 13849-1	3

E.2 Safety function description

STO function principle description

The Safe Torque Off (STO) function turns off the drive output by shutting down the drive signal, cutting off the electrical power supply to the motor and thus stopping the outward torque output (see Figure E-2). When STO is activated, this function prevents the motor from accidentally starting if the motor is in static state. If the motor is rotating, it will continue to rotate by inertia until it comes to rest. If the motor has a brake, the brake closes immediately.

₫ Note:

- In normal working mode, you are not recommended to use the STO function to stop the VFD running. The STO function cannot effectively prevent sabotage or misuse. If the STO function is used to stop a running VFD, the VFD will disconnect the power supply to the motor, and the motor will coast to stop. If the consequences caused by this action are unacceptable, related stop modes should be used to stop the VFD and mechanical equipment.
- When using a permanent magnet, reluctance, or nonsalient pole induction motor, even if the STO function is activated, there is still a possible failure mode (although the possibility is very low) that prevents the two power devices of the VFD from conducting. The drive system can output a uniform torque, which can rotate the permanent magnet motor shaft by a maximum electrical angle of 180°, or the nonsalient pole induction motor or reluctance motor shaft by an electrical angle of 90°. This possible failure mode must be allowed during the design of the machine system. Maximum motor shaft rotation angle = Electrical angle of 360°/Number of motor pole pairs.
- The STO function cannot replace the emergency stop function. When no other
 measures are taken, the power supply of the VFD cannot be cut off in an
 emergency.
- The STO function has priority over all other functions of the VFD.
- Although the STO function can reduce known hazardous conditions, it does not eliminate all potential hazards.
- Designing safety related systems requires professional safety knowledge. To
 ensure the safety of a complete control system, design the system according to

the required safety principles. A single subsystem with the STO function, although intentionally designed for safety related applications, it cannot guarantee the safety of the entire system.

■ Emergency stop function description

When the emergency stop function is used in equipment, it mainly allows operators to take timely actions to prevent accidents in unexpected conditions. Its design may not necessarily be complex or intelligent, but it may use simple electromechanical devices to initiate a controlled rapid stop by cutting off the power supply or other means (such as dynamic or regenerative braking).

E.3 Risk assessment

- Before using the STO function, a risk assessment needs to be conducted on the drive system to ensure compliance with the required safety standards.
- There may also be some other risks when the device is operating with safety functions. Therefore, safety must always be considered when conducting risk assessments.
- If an external force (such as vertical axis gravity) is applied while the safety function is in operation, the motor will rotate. A separate mechanical brake must be provided to secure the motor.
- If the drive fails, and the motor can operate within a 180° range, safety will still be ensured even in dangerous situations.

Note: The max. rotation angle of the rotating motor's shaft is 1/6 of a full turn, while the max. rotation angle of the driven motor's shaft is 1/20 of a full turn. The max. travel distance of the linear servo motor is 30mm.

E.4 STO wiring

In the factory, the STO function terminals +24V, H1, and H2 have been shorted.

The wiring requirements are as follows:

- When using the STO function of the VFD, remove the jumpers between +24V and H1 and between +24V and H2.
- 2. When the VFD is in normal operation, close the switches or relays.

Figure E-1 Shorting +24V to H1 and to H2


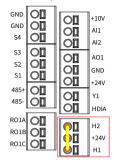


Figure E-2 STO function circuit internal power wiring

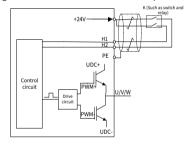

COM

K (Such as switch and relay)

PWM

PWM

UDC
UDC
UDC
UDC
UDC
UDC
UDC-

Figure E-3 STO function circuit

Note:

- The symbol "K" in the preceding figure can represent components such as manual operation switch, emergency stop switch, safety relay, and safety PLC contact.
- The opening or closing of safety switch contact must be within 200ms.
- The maximum length of the double-shielded twisted pair cable between the VFD and safety switch is 25m.
- The cable shield layer should be connected to the PE terminal of the VFD.
- When the STO function is enabled, the switch or relay is opened. If the VFD stops output, the keypad displays "E40".

E.5 STO function terminal description

STO function terminals are listed in the following table.

Terminal	Function	
+24V	Voltage range: 24V±15%	
T24V	To disable the STO function, short +24V to H1 and to H2.	
H1	Voltage in STO action mode: 0V < H1 and H2 < 5V	
нт	Voltage in STO cut-off mode: 13V < H1 and H2 < 30V	
H2	Input current: 5mA	
HZ	STO function channel signal input	

E.6 STO function logic table

The function logics of H1 and H2 and keypad display are listed in the following table.

H1	H2	VFD status	Keypad display	Fault description
H1 closed	H2 closed	Normal running	No exception displayed	-
H1 opened	H2 opened	Torque output off	E40	STO
H1 opened	H2 closed	Torque output off	E41	H1 is abnormal.
H1 closed	H2 opened	Torque output off	E42	H2 is abnormal.

Note: E43 indicates both H1 and H2 are abnormal.

E.7 STO channel delay description

The following table describes the trigger and indication delay of the STO channels.

Table E-1 lists the STO channel trigger and indication delay

STO mode	STO trigger delay ¹ and indication delay ²
STO fault: E41	Trigger delay < 10ms
310 lault. L41	Indication delay < 280ms
STO fault: E42	Trigger delay < 10ms
STO lautt. E42	Indication delay < 280ms
STO fault: E43	Trigger delay < 10ms
	Indication delay < 280ms
STO fault: E40	Trigger delay < 10ms
STO fault: E40	Indication delay < 100ms

 $^{^{1}\!\!:}$ STO trigger delay: time interval between trigger the STO function and switching off the drive output

²: STO instruction delay: time interval between trigger the STO function and STO output state indication

E.8 Acceptance test

Warning

 Technical personnel, operators, maintenance and repair personnel must receive relevant training to understand the requirements and principles of safety system design and debugging.



- Do not carry out maintenance on the VFD or motor before the power is cut off; otherwise, there may be a risk of electric shock or other electricity generated hazards.
- The safety function acceptance test must be carried out by personnel with professional safety function knowledge, and must be recorded and signed by test engineers.

The acceptance test must be carried for the device in the following stages:

- 1. First starting of safety functions
- After any safety function related change (including PCB, wiring, component, or setup)
- 3. After any safety function related maintenance work

The signed acceptance test report must be kept in machine logs. The report should include the documents of startup activities and test results, fault report references and fault solutions. Any new acceptance test conducted due to changes or maintenance should be recorded in the logs.

Acceptance test checklist

Step	Test	Result
1	Ensure that the VFD can run or stop randomly during commissioning.	
2	Stop the VFD (if it is running), disconnect the input power supply, and isolate the drive from the power cable through the isolation switch.	
3	Check the STO function circuit connection according to the circuit diagram.	
	Close the isolation switch to connect to the power.	
4	Test the STO function as follows when the motor stops: If the VFD is running, send a stop command to it and wait until the motor shaft stops rotating. Disconnect the STO circuit. Then the VFD should enter the safe torque off mode and stop outputting voltage, and the keypad displays "E40". Send a VFD startup command, but the motor does not start.	

Step	Test	Result
	Close the STO circuit.	
	Remove the fault, start the VFD, and ensure that the motor can	
	run properly.	
	Test the STO function as follows when the motor is running:	
	Start the VFD and ensure that the motor runs.	
	Disconnect the STO circuit. Then the VFD should enter the safe	
	torque off mode and stop outputting voltage, and the keypad	
	displays "E40". The motor should stop.	
	Remove the fault, start the VFD, and ensure that the motor keeps	
	the static state.	
	Close the STO circuit.	
	Remove the fault, start the VFD, and ensure that the motor can	
	run properly.	
	Test and detect the VFD fault. At this time, the motor can be in	
	running or stopped state.	
	Start the VFD and ensure that the motor runs properly.	
	Disconnect H1 and keep H2 closed. If the motor is running, it	
	should coast to stop, and the keypad displays "E41".	
	Send a VFD startup command, but the motor does not start.	
	Close the STO circuit.	
5	At this time, the fault cannot be removed. Power off and restart	
	the VFD, and ensure that the motor can run properly.	
	Disconnect H2 and keep H1 closed. If the motor is running, it	
	should coast to stop, and the keypad displays "E42".	
	Send a VFD startup command, but the motor does not start.	
	Close the STO circuit.	
	At this time, the fault cannot be removed. Power off and restart	
	the VFD, and ensure that the motor can run properly.	
6	Record and sign the acceptance test report, which indicates the	
O	STO function is safe and can be put into service.	

Note:

- If the steps in the acceptance test checklist can be carried out normally without
 other exceptions, it indicates that the STO functional circuit is normal. If the
 situations are different from the expected results of the preceding steps or if
 "E43" is displayed, it indicates that the STO function circuit is abnormal. For
 details about fault handling, see section 8.2 Faults and solutions.
- Fault "E40" can also be manually or automatically reset by setting P08.52.

VFD in fault	Fault code displayed	Response time	Reset method
Normal running	No exception displayed	/	/
Torque output off	E40	≤20ms	Press STOP/RST.
Torque output off	E41	≤20ms	Entire machine re-powered on
Torque output off	E42	≤20ms	Entire machine re-powered on

Appendix F Function parameter list

The function parameters of the VFD are divided into groups by function. Among the function parameter groups, the P28 group is the analog input and output calibration group, while the P29 group contains the factory function parameters, which are user inaccessible. Each group includes several function codes (each function code identifies a function parameter). A three-level menu style is applied to function codes. For example, "P08.08" indicates the 8th function code in the P08 group. The VFD supplies the password protection function. For detail settings, see P07.00. The parameters adopt the decimal system (0–9) and hexadecimal system (0–F). If the hexadecimal system is adopted, all bits are mutually independent on data during parameter editing. The symbols in the table are described as follows:

"O" indicates that the value of the parameter can be modified when the VFD is in stopped or running state.

 $"\bigcirc"$ indicates that the value of the parameter cannot be modified when the VFD is in running state.

"•" indicates that the value of the parameter is detected and recorded, and cannot be modified. (When "Restore factory settings" is performed, the actual detected parameter values or recorded values will not be restored.)

Group P00—Basic functions

Function code	Name	Description	Default	Modify
P00.00	Speed control mode	Specifies a speed control mode. Setting range: 0-2 0: SVC 0 1: SVC 1 2: Space voltage vector control mode Note: Before using a vector control mode (0 or 1), enable the VFD to perform motor parameter autotuning first.	2	0
P00.01	Channel of running commands	Specifies a channel of running commands. Setting range: 0–2 0: Keypad 1: Terminal 2: Communication	0	0

Function code	Name	Description	Default	Modify
P00.02	Reserved	-	-	-
P00.03	Max. output frequency	Specifies the max. output frequency of the VFD, which is the basis of the frequency setting and the acceleration (ACC) and deceleration (DEC) speed. Setting range: P00.04–599.00Hz	50.00Hz	0
P00.04	Upper limit of running frequency	Specifies the upper limit of the VFD output frequency, which should be smaller than or equal to the max. output frequency. If the set frequency is higher than the upper limit of the running frequency, the upper limit of the running frequency is used for running. Setting range: P00.05–P00.03 (Max. output frequency)	50.00Hz	0
P00.05	Lower limit of running frequency	Specifies the lower limit of the VFD output frequency. If the set frequency is lower than the lower limit of the running frequency, the lower limit of the running frequency is used for running. Setting range: 0.00Hz-P00.04 (Upper limit of running frequency) Note: Max. output frequency ≥ Upper limit of frequency ≥ Lower limit of frequency	0.00Hz	0
P00.06	Setting channel of A frequency command	Specifies the frequency command source. Setting range: 0–8 0: Keypad digital 1: Al1	0	0
P00.07	Setting channel of B frequency command	2: AI2 3: AI3 4: High-speed pulse HDIA 5: Simple PLC program	1	0

Function code	Name	Description	Default	Modify
		6: Multi-step speed running 7: PID control 8: Modbus communication		
P00.08	Reference object of B frequency command	Specifies the reference object of B frequency command. Setting range: 0–1 0: Max. output frequency 1: A frequency command	0	0
P00.09	Combination mode of setting source	Specifies the combination mode of A/B frequency setting source. Setting range: 0-5 0: A 1: B 2: (A+B) 3: (A-B) 4: Max(A, B) 5: Min(A, B)	0	0
P00.10	Setting frequency through the keypad	Specifies the initial VFD frequency set value when A and B frequency commands are set by keypad. Setting range: 0.00Hz–P00.03 (Max. output frequency)	50.00Hz	0
P00.11	ACC time 1	Specifies the ACC time of ramp frequency. Setting range: 0.0–3600.0s	Model depended	0
P00.12	DEC time 1	Specifies the DEC time of ramp frequency. Setting range: 0.0–3600.0s	Model depended	0
P00.13	Running direction	Specifies the running direction. Setting range: 0–2 0: Run in default direction 1: Run in reverse direction 2: Disable reverse running	0	0
P00.14	Carrier frequency setting	Specifies the carrier frequency. A high carrier frequency will have an ideal current waveform, few current harmonics, and small motor noise,	Model depended	0

Function code	Name	Description	Default	Modify
code		but it will increase the switch loss, increase VFD temperature, and impact the output capacity. At the same time, the VFD current leakage and electrical magnetic interference will increase. On the contrary, an extremely-low a carrier frequency may cause unstable operation at low frequency, decrease the torque, or even lead to oscillation. The carrier frequency has been properly set in the factory before the VFD is delivered. In general, you do not need to modify it. The mapping between VFD models and default carrier frequency values is as follows: For 380V 0.75kW and higher: 4kHz For other models: 8kHz Setting range: 1.0–15.0kHz **Note: When the frequency used exceeds the default carrier frequency, the VFD needs to derate		
P00.15	Motor parameter autotuning	by 10% for each increased of 1kHz. Specifies the motor autotuning function. Setting range: 0–3 0: No operation 1: Rotary autotuning 1 2: Static autotuning 1 (comprehensive) 3: Static autotuning 2 (Partial autotuning)	0	0
P00.16	AVR function selection	Specifies the VFD automatic voltage regulation (AVR) function, which can eliminate the impact of the bus voltage fluctuation on the VFD	1	0

Function code	Name	Description	Default	Modify
		output voltage. Setting range: 0–1 0: Disable 1: Valid during the whole procedure		
P00.17	Reserved	-	-	-
P00.18	Function parameter restoration	Specifies the function parameter restoration. Setting range: 0–3 0: No operation 1: Restore to default values (excluding motor parameters) 2: Clear fault records 3: Lock all function codes Note: Restoring to default values will delete the user password. After the selected operation is performed, the function code is automatically restored to 0. When it is set to 3 (Lock all function code cannot be modified.	0	0

Group P01—Start and stop control

Function code	Name	Description	Default	Modify
P01.00	Start mode	Specifies the start mode. Setting range: 0–2 0: Direct start 1: Start after DC braking 2: Start after speed tracking (software)	0	0
P01.01	Starting frequency of direct start	Specifies the initial frequency during VFD start. Setting range: 0.00–50.00Hz	0.50Hz	0
P01.02	Hold time of starting frequency	Specifies the hold time of starting frequency. Setting range: 0.0–50.0s	0.0s	0

Function code	Name	Description	Default	Modify
P01.03	Braking current before start	Specifies the DC braking current before startup. Setting range: 0.0–100.0%	0.0%	0
P01.04	Braking time before start	Specifies the DC braking time before startup. Setting range: 0.00–50.00s	0.00s	0
P01.05	ACC/DEC mode	Specifies the changing mode of the frequency during start and running. Setting range: 0-1 0: Linear type. The output frequency increases or decreases linearly. 1: S curve. The output frequency increases or decreases according to the S curve. Note: The S curve is generally applied to elevators, conveyors, and other application scenarios where smoother start or stop is required. When S curve mode is selected, P01.06, P01.07, P01.27, and P01.28 need to be set accordingly.	0	©
P01.06	Time of starting segment of ACC S curve	Specifies the time of the starting segment of the ACC S curve. It works with P01.07 to determine the curvature of the S curve. Setting range: 0.0-50.0s	0.1s	0
P01.07	Time of ending segment of ACC S curve	Specifies the time of the ending segment of the ACC S curve. It works with P01.06 to determine the curvature of the S curve. Setting range: 0.0-50.0s	0.1s	0
P01.08	Stop mode	Specifies the stop mode. Setting range: 0–1 0: Decelerate to stop. After a stop command takes effect, the VFD lowers output frequency based on the DEC mode and the defined DEC	0	0

Function code	Name	Description	Default	Modify
		time; after the frequency drops to the stop speed (P01.15), the VFD stops. 1: Coast to stop. After a stop command takes effect, the VFD ceases the output immediately, and the load coasts to stop according to mechanical inertia.		
P01.09	Starting frequency of DC braking for stop	Specifies the starting frequency of DC braking for stop. Setting range: 0.00Hz-P00.03 (Max. output frequency)	0.00Hz	0
P01.10	Demagnetizati on time	Specifies the demagnetization time, that is, the wait time before DC braking for stop. Setting range: 0.00–30.00s	0.00s	0
P01.11	DC braking current for stop	Specifies the DC braking current for stop, that is, the DC braking energy. Setting range: 0.0–100.0% (of the rated VFD output current)	0.0%	0
P01.12	DC braking time for stop	Specifies the duration of DC braking. Setting range: 0.00–50.00s Note: If the value is 0, DC braking is invalid, and the VFD decelerates to stop within the specified time.	0.00s	0
P01.13	FWD/REV running deadzone time	Specifies the transition time of the switching in FWD/REV running switching mode specified by P01.14. Setting range: 0.0-3600.0s	0.0s	0
P01.14	FWD/REV running switching mode	Specifies the forward/reverse running switching mode. Setting range: 0-2 0: Switch at zero frequency 1: Switch at the starting frequency 2: Switch after the speed reaches the stop speed with a delay	1	0

Function code	Name	Description	Default	Modify
P01.15	Stop speed	Specifies the stop speed (frequency). Setting range: 0.00–100.00Hz	0.50Hz	0
P01.16	Stop speed detection mode	Specifies the stop speed detection mode. The VFD stops when the value in the selected mode is less than P01.15. Setting range: 0–1 0: Detect by the set speed (unique in space voltage vector control mode) 1: Detect by the feedback speed	1	0
P01.17	Stop speed detection time	Specifies the stop speed detection time. Setting range: 0.00–100.00s	0.00s	0
P01.18	Terminal-base d running command protection at power-on	Specifies whether the terminal running command is valid at power-on. Setting range: 0–1 0: The terminal running command is invalid at power-on. 1: The terminal running command is valid at power-on.	0	0
P01.19	Action selected when running frequency less than frequency lower limit (valid when frequency lower limit greater than 0)	Specifies the run status of the VFD when the set frequency is below the lower limit. Setting range: 0x00-0x12 Ones place: Action selection 0: Run at the frequency lower limit 1: Stop 2: Sleep Tens place: Stop mode 0: Coast to stop 1: Decelerate to stop	0x00	0
P01.20	Wake-up-from -sleep delay	Specifies the wake-up-from-sleep delay time. Setting range: 0.0–3600.0s (Valid	0.0s	0

Function code	Name	Description	Default	Modify
		only when the ones place of P01.19 is 2.)		
P01.21	Restart after power off	Specifies whether the VFD automatically runs after re-power on. Setting range: 0–1 0: Disable 1: Enable. If the restart condition is met, the VFD will run automatically after waiting the time defined by P01.22.	0	0
P01.22	Wait time for restart after power-off	Specifies the wait time before the automatic running of the VFD that is re-powered on. Setting range: 0.0-3600.0s (valid only when P01.21 = 1)	1.0s	0
P01.23	Start delay	Setting range: 0.0–600.0s	0.0s	0
P01.24	Stop speed delay	Setting range: 0.0–600.0s	0.0s	0
P01.25	Open-loop 0Hz output selection	Setting range: 0-2 0: Output without voltage 1: Output with voltage 2: Output with the DC braking current for stop	0	0
P01.26	DEC time for emergency stop	Setting range: 0.0–60.0s	2.0s	0
P01.27	Time of starting segment of DEC S curve	Setting range: 0.0–50.0s	0.1s	0
P01.28	Time of ending segment of DEC S curve	Setting range: 0.0–50.0s	0.1s	0
P01.29	Short-circuit braking current	Setting range: 0.0–150.0% (of the rated VFD output current)	0.0%	0

Function code	Name	Description	Default	Modify
P01.30	Hold time of short-circuit braking for start	When the VFD starts in direct start mode (P01.00 = 0), set P01.30 to a non-zero value to enter short-circuit braking. Setting range: 0.00–50.00s	0.00s	0
P01.31	Hold time of short-circuit braking for stop	During stop, if the running frequency of VFD is lower than the starting frequency of brake for stop (P01.09), set P01.31 to a non-zero value to enter short-circuit braking for stop, and then carry out DC braking in the time specified by P01.12. (See descriptions for P01.09–P01.12.) Setting range: 0.00–50.00s	0.00s	0
P01.32	Pre-exciting time for jogging	Setting range: 0.000–10.000s	0.300s	0
P01.33	Starting frequency of braking for stop in jogging	Setting range: 0.00Hz–P00.03 (Max. output frequency)	0.00Hz	0
P01.34	Sleep delay	Setting range: 0–3600.0s	0.0s	0
P01.35	Speed tracking method	Setting range: 0x000-0x112 Ones place: Speed tracking method selection 0: Track according to stop frequency 1: Track according to rated frequency 2: Track according to max. frequency Tens place: Tracking direction 0: Single (set) direction 1: Dual (forward and reverse) directions Hundreds place: Tracking current	0x000	0

Function code	Name	Description	Default	Modify
		limit (sending no wave when the value exceeded) 0: 20% (relative to the larger of VFD current and motor current) 1: 10% (relative to the larger of VFD current and motor current)		
P01.36	Quick/slow selection for speed tracking	Setting range: 0–10000 A great value of this parameter indicates a fast rotation-speed tracking speed but an excessively great value may result in unreliable speed tracking performance.	300	0
P01.37	Speed tracking weakening coefficient	Setting range: 0–50	10	0

Group P02—Parameters of motor 1

Function code	Name	Description	Default	Modify
P02.00	Type of motor	Setting range: 0–1 0: Asynchronous motor (AM) 1: Synchronous motor (SM)	0	0
P02.01	Rated power of AM 1	Setting range: 0.1–3000.0kW	Model depended	0
P02.02	Rated frequency of AM 1	Setting range: 0.01Hz–P00.03 (Max. output frequency)	50.00Hz	0
P02.03	Rated speed of AM 1	Setting range: 1–60000rpm	Model depended	0
P02.04	Rated voltage of AM 1	Setting range: 0–1200V	Model depended	0
P02.05	Rated current of AM 1	Setting range: 0.08–600.00A	Model depended	0

Function code	Name	Description	Default	Modify
P02.06	Stator resistance of AM 1	Setting range: 0.001–65.535Ω	Model depended	0
P02.07	Rotor resistance of AM 1	Setting range: 0.001–65.535Ω	Model depended	0
P02.08	Leakage inductance of AM 1	Setting range: 0.1–6553.5mH	Model depended	0
P02.09	Mutual inductance of AM 1	Setting range: 0.1–6553.5mH	Model depended	0
P02.10	No-load current of AM 1	Setting range: 0.01–655.35A	Model depended	0
P02.11	Magnetic saturation coefficient 1 of iron core of AM 1	Setting range: 0.0–100.0%	80.0%	0
P02.12	Magnetic saturation coefficient 2 of iron core of AM 1	Setting range: 0.0–100.0%	68.0%	0
P02.13	Magnetic saturation coefficient 3 of iron core of AM 1	Setting range: 0.0–100.0%	57.0%	0
P02.14	Magnetic saturation coefficient 4 of iron core of AM 1	Setting range: 0.0–100.0%	40.0%	0
P02.15	Rated power of SM 1	Setting range: 0.1–3000.0kW	Model depended	0

Function code	Name	Description	Default	Modify
P02.16	Rated frequency of SM 1	Setting range: 0.01Hz–P00.03 (Max. output frequency)	50.00Hz	0
P02.17	Number of pole pairs of SM 1	Setting range: 1–128	2	0
P02.18	Rated voltage of SM 1	Setting range: 0–1200V	Model depended	0
P02.19	Rated current of SM 1	Setting range: 0.08–600.00A	Model depended	0
P02.20	Stator resistance of SM 1	Setting range: 0.001–65.535Ω	Model depended	0
P02.21	Direct-axis inductance of SM 1	Setting range: 0.01–655.35mH	Model depended	0
P02.22	Quadrature-ax is inductance of SM 1	Setting range: 0.01–655.35mH	Model depended	0
P02.23	Counter-emf constant of SM 1	Setting range: 0–10000	300	0
P02.24	Initial pole position of SM	Setting range: 0x0000–0xFFFF	0x0000	•
P02.25	Identification current of SM 1	Setting range: 0-50%	10%	•
P02.26	Overload protection selection of motor 1	Setting range: 0–2 0: No protection 1: Common motor (with low-speed compensation) As the cooling effect of a common motor is degraded at low speed running, the corresponding electronic thermal protection value needs to be adjusted properly, the low compensation indicates lowering	2	©

Function code	Name	Description	Default	Modify
		the overload protection threshold of the motor whose running frequency is lower than 30Hz. 2: Frequency-variable motor (without low-speed compensation) The heat dissipation function for a variable-frequency motor is not impacted by the rotation speed, and therefore it is not necessary to adjust the protection value at low speed running.		
P02.27	Overload protection coefficient of motor 1	Specifies the motor overload protection coefficient. A small motor overload protection coefficient indicates a great overload multiplication (M). When M=116%, protection is performed after motor overload lasts for 1 hour; when M=150%, protection is performed after motor overload lasts for 12 minutes; when M=180%, protection is performed after motor is performed after motor overload lasts for 5 minutes; when M=200%, protection is performed after motor overload lasts for 60 seconds; and when M≥400%, protection is performed immediately. Setting range: 20.0%-150.0%	100.0%	0
P02.28	Power display calibration coefficient of motor 1	Used to adjust the power display value of motor 1. However, it does not affect the control performance of the VFD. Setting range: 0.00–3.00	1.00	0
P02.29	Parameter display of motor 1	Setting range: 0–1 0: Display by motor type. In this mode, only parameters related to	0	0

Function code	Name	Description	Default	Modify
		the present motor type are displayed. 1: Display all. In this mode, all the motor parameters are displayed.		
P02.30	System inertia of motor 1	Setting range: 0.000–30.000kg • m ²	0.000 kg • m²	0
P02.31	Motor parameter model calculation	Setting range: 0–1 0: Disable 1: Enable	0	0
P02.32	Power factor of AM 1	Setting range: 0.00–1.00 For AMs, before setting P02.31 to the enabling option, set P02.32 according to the motor nameplate; otherwise, the calculation may have deviation.	0.85	0
P02.33	High word of rated speed of AM 1	Setting range: 0-30(10kRPM)	0	0
P02.34	Iron core saturation coefficient 1 of AM 1	Setting range: 0.0–200.0%	125.0%	0
P02.35	Iron core saturation coefficient 2 of AM 1	Setting range: 0.0–200.0%	125.0%	0
P02.36	Mutual inductance saturation coefficient 1	Setting range: 0.0–200.0%	88.0%	0
P02.37	Mutual inductance saturation coefficient 2	Setting range: 0.0–200.0%	88.0%	0
P02.38	Mutual inductance	Setting range: 0.0–200.0%	112.5%	0

Function code	Name	Description	Default	Modify
	flux weakening			
	coefficient 1			
	Mutual			
P02.39	inductance	Setting range: 0.0–200.0%	117.6%	0
1 02.33	flux weakening	Setting range: 0.0-200.0 /0	117.070	
	coefficient 2			
	Mutual			
P02.40	inductance	Setting range: 0.0–200.0%	122.8%	0
1 02.40	flux weakening	50ttilig ralige: 0.0 200.070	122.070	
	coefficient 3			
	Mutual			
P02.41	inductance	Setting range: 0.0–200.0%	125.0%	0
1 02.41	flux weakening	Jetting range. 0.0-200.070	123.070	
	coefficient 4			

Group P03-Vector control of motor 1

Function code	Name	Description	Default	Modify
P03.00	Speed-loop proportional gain 1	Setting range: 0.0–200.0 Note: Applicable only to vector control mode.	20.0	0
P03.01	Speed-loop integral time 1	Setting range: 0.000–10.000s Note: Applicable only to vector control mode.	0.200s	0
P03.02	Low-point frequency for switching	Setting range: 0.00Hz–P03.05 Note: Applicable only to vector control mode.	5.00Hz	0
P03.03	Speed-loop proportional gain 2	Setting range: 0.0–200.0 Note: Applicable only to vector control mode.	20.0	0
P03.04	Speed-loop integral time 2	Setting range: 0.000–10.000s Note: Applicable only to vector control mode.	0.200s	0

Function code	Name	Description	Default	Modify
P03.05	High-point frequency for switching	Setting range: P03.02–P00.03 (Max. output frequency) Note: Applicable only to vector control mode.	10.00Hz	0
P03.06	Speed-loop output filter	0–8 (corresponding to 0–28/10ms)	0	0
P03.07	Electromotive slip compensation coefficient of vector control	Slip compensation coefficient is used to adjust the slip frequency of the vector control and improve the speed control accuracy of the system. Adjusting the parameter properly can control the speed steady-state error. Setting range: 50–200%	100%	0
P03.08	Power-generat ion slip compensation coefficient of vector control	Slip compensation coefficient is used to adjust the slip frequency of the vector control and improve the speed control accuracy of the system. Adjusting the parameter properly can control the speed steady-state error. Setting range: 50–200%	100%	0
P03.09	Reserved	-	-	-
P03.10	Current-loop band width	Setting range: 0–2000 Note: P03.10 is a current loop PI regulation parameter. It impacts the dynamic response speed and control accuracy of the system. Generally, you do not need to modify it. Applicable to SVC 0 (P00.00 = 0) and SVC 1 (P00.00 = 1).	400	0
P03.11	Torque setting method	Setting range: 0–7 0–1: Keypad (P03.12) 2: Al1	0	0

Function code	Name	Description	Default	Modify
		3: AI2 4: AI3 5: Pulse frequency HDIA 6: Multi-step torque 7: Modbus communication Note: For AMs, 100% corresponds to the motor rated torque current (when the value 0 or 1 is selected) and 100% corresponds to triple the motor rated torque current (when the value from 2 to 7 is selected). For SMs, 100% corresponds to the motor rated current (when the value from 2 to 7 is selected) and 100% corresponds to the motor rated current (when the value 0 or 1 is selected) and 100% corresponds to triple the motor rated current (when the value from 2 to 7 is selected).		
P03.12	Torque set through keypad	Setting range: -300.0%–300.0% (of the motor rated current) Note: For AMs, 100% corresponds to the motor rated torque current. For SMs, 100% corresponds to the motor rated current.	20.0%	0
P03.13	Torque reference filter time	Setting range: 0.000–10.000s	0.010s	0
P03.14	Setting source of forward rotation frequency upper limit in torque control	2: AI2	0	0

Function code	Name	Description	Default	Modify
P03.15		Setting range: 0-6 0: Keypad (P03.17) 1: Al1 2: Al2 3: Al3 4: Pulse frequency HDIA 5: Multi-step setting 6: Modbus communication Note: 100% corresponds to the max. frequency.	0	0
P03.16	Forward rotation frequency upper limit set through keypad in torque control	Specifies the frequency limit when P03.14 = 0. Setting range: 0.00Hz–P00.03 (Max. output frequency) Note: 100% corresponds to the max. frequency.	50.00Hz	0
P03.17	Reverse rotation frequency upper limit set through keypad in torque control	Specifies the frequency limit when P03.15 = 0. Setting range: 0.00Hz–P00.03 (Max. output frequency) Note: 100% corresponds to the max. frequency.	50.00Hz	0
P03.18	Setting source of electromotive torque upper limit	Setting range: 0–5 0: Keypad (P03.20) 1: Al1 2: Al2 3: Al3 4: Pulse frequency HDIA 5: Modbus communication Note: For AMs, 100% corresponds to the motor rated torque current (when the value 0 is selected) and 100% corresponds to triple the motor rated torque current (when the value from 1 to 5 is	0	0

Function code	Name	Description	Default	Modify
P03.19	Setting source of braking torque upper limit	selected). For SMs, 100% corresponds to the motor rated current (when the value 0 or 1 is selected) and 100% corresponds to triple the motor rated current (when the value from 2 to 5 is selected). Setting range: 0-5 0: Keypad (P03.21) 1: Al1 2: Al2 3: Al3 4: Pulse frequency HDIA 5: Modbus communication Note: For AMs, 100% corresponds to the motor rated torque current (when the value 0 is selected) and 100% corresponds to triple the motor rated torque current (when the value from 1 to 5 is selected). For SMs, 100% corresponds to the motor rated current (when the value 0 or 1 is selected) and 100% corresponds to triple the value 0 or 1 is selected) and 100% corresponds to triple the value 0 or 1 is selected) and 100% corresponds to triple the motor rated current (when the value 0 or 1 is selected) and 100% corresponds to triple the motor rated current (when the value 0 or 1 is selected) and	0	0
	FI	value from 2 to 5 is selected). Specifies the torque limit when		
P03.20	Electromotive torque upper limit set through keypad	P03.18 = 0. Setting range: 0.0–300.0% (For AMs, 100% corresponds to the motor rated torque current; for SMs, 100% corresponds to the motor rated current.)	180.0%	0
P03.21	Braking torque upper limit set through		180.0%	0

Function code	Name	Description	Default	Modify
	keypad	100% corresponds to the motor rated torque current; for SMs, 100% corresponds to the motor rated current.)		
P03.22	Weakening coefficient in constant power zone	Used when the AM is in flux-weakening control. Setting range: 0.0–200.0%	100.0%	0
P03.23	Lowest weakening point in constant power zone	Setting range: 5%–100%	5%	0
P03.24	Max. voltage limit	Specifies the max. VFD output voltage, which is a percentage of the motor rated voltage. Set the value according to onsite conditions. Setting range: 0.0–120.0%	100.0%	0
P03.25	Pre-exciting time	Specifies the pre-exciting time. Pre-exciting is performed for the motor when the VFD starts up. A magnetic field is built up inside the motor to improve the torque performance during the start process. Setting range: 0.000-10.000s	0.300s	0
P03.26	Flux-weakenin g proportional gain	Setting range: 0–8000	1000	0
P03.27	Speed display selection in vector control	Setting range: 0–1 0: Display the actual value 1: Display the set value	0	0
P03.28	Static friction compensation coefficient	Setting range: 0.0–100.0%	0.0%	0
P03.29	Corresponding frequency	Setting range: 0.50–P03.31	1.00Hz	0

Function code	Name	Description	Default	Modify
	point of static friction			
P03.30	High speed friction compensation coefficient	Setting range: 0.0–100.0%	0.0%	0
P03.31	Corresponding frequency of high speed friction torque	Setting range: P03.29–P00.03 (Max. output frequency)	50.00Hz	0
P03.32	Enabling torque control	Setting range: 0–1 0: Disable 1: Enable	0	0
P03.33	Flux-weakenin g integral gain	Setting range: 0.0–300.0%	30.0%	0
P03.34	Reserved	-	-	-
P03.35	Control mode optimization selection	Setting range: 0x0000-0x1111 Ones place: Torque command selection 0: Torque reference 1: Torque current reference Tens place: Reserved 0: Reserved 1: Reserved Hundreds place: indicates whether to enable speed-loop integral separation 0: Disable 1: Enable Thousands place: Reserved	0x0000	0
P03.36	Speed-loop differential gain	Setting range: 0.00–10.00s	0.00s	0
P03.37- P03.44	Reserved	-	-	-
P03.45	SM max. flux weakening current	Setting range: 0.0–200.0%	100.0%	0

Function code	Name	Description	Default	Modify
P03.46	Reserved	-	-	-
P03.47	Bus voltage delay compensation	Setting range: 0–60000	0	0
P03.48- P03.61	Reserved	-	-	-

Group P04-V/F control

Function code	Name	Description	Default	Modify
P04.00	V/F curve setting of motor 1	Specifies the V/F curve of motor 1 to meet the needs of different loads. Setting range: 0–5 0: Straight-line V/F curve, applicable to constant torque loads 1: Multi-point V/F curve 2: Torque-down V/F curve (power of 1.3) 3: Torque-down V/F curve (power of 1.7) 4: Torque-down V/F curve (power of 2.0) Curves 2 – 4 are applicable to the torque loads such as fans and water pumps. You can adjust according to the characteristics of the loads to achieve best performance. 5: Customized V/F (V/F separation); in this mode, V can be separated from F, and F can be adjusted through the frequency setting channel specified by P00.06 or the voltage setting channel specified by P04.27 to change the characteristics of the curve.	0	©

Function code	Name	Description	Default	Modify
P04.01	Torque boost of motor 1	Setting range: 0.0%–10.0% (of the rated voltage of motor 1) Note: When the value is set to 0.0%, the VFD uses automatic torque boost.	0.0%	0
P04.02	Torque boost cut-off of motor 1	Setting range: 0.0%–50.0% (of the rated frequency of motor 1)	20.0%	0
P04.03	V/F frequency point 1 of motor 1	When P04.00 = 1 (multi-dot V/F curve), you can set the V/F curve through P04.03–P04.08. Setting range: 0.00Hz–P04.05 Note: V1 < V2 < V3, f1 < f2 < f3 Too high voltage for low frequency will cause motor overheat or damage and cause VFD overcurrent stall or overcurrent protection.	0.00Hz	0
P04.04	V/F voltage point 1 of motor 1	Setting range: 0.0%–110.0% (of the rated voltage of motor 1) Note: Refer to the description for P04.03.	0.0%	0
P04.05	V/F frequency point 2 of motor 1	Setting range: P04.03–P04.07 Note: Refer to the description for P04.03.	0.00Hz	0
P04.06	V/F voltage point 2 of motor 1	Setting range: 0.0%–110.0% (of the rated voltage of motor 1) Note: Refer to the description for P04.03.	0.0%	0
P04.07	V/F frequency point 3 of motor 1	Setting range: P04.05–P02.02 (Rated frequency of AM 1) or P04.05–P02.16 (Rated frequency of SM 1) Note: Refer to the description for P04.03.	0.00Hz	0
P04.08	V/F voltage point 3 of motor 1	Setting range: 0.0%–110.0% (of the rated voltage of motor 1) Note: Refer to the description for P04.03.	0.0%	0

Function code	Name	Description	Default	Modify
P04.09	V/F slip compensation gain of motor 1	Used to compensate for the motor rotating speed change caused by load change in the space voltage vector mode, and thus improve the rigidity of the mechanical characteristics of the motor. Setting range: 0.0–200.0%	100.0%	0
P04.10	Low-frequenc y oscillation control factor of motor 1	In space voltage vector control mode, the motor, especially the large-power motor, may experience current oscillation at certain	10	0
P04.11	High-frequenc y oscillation control factor of motor 1	frequencies, which may cause unstable motor running, or even VFD overcurrent. You can adjust the two function parameters properly to eliminate such phenomenon. Setting range: 0–100	10	0
P04.12	Oscillation control threshold of motor 1	Setting range: 0.00Hz-P00.03 (Max. output frequency)	30.00Hz	0
P04.13- P04.26	Reserved	-	-	-
P04.27	Voltage setting channel	Setting range: 0-7 0: Keypad (determined by P04.28) 1: Al1 2: Al2 3: Al3 4: HDIA 5: Multi-step speed running (The setting is determined by related parameters in group P10.) 6: PID 7: Modbus communication	0	0
P04.28	Voltage set through keypad	The function code is the voltage digital setting when "keypad" is selected as the voltage setting	100.0%	0

Function code	Name	Description	Default	Modify
		channel. Setting range: 0.0%–100.0%		
P04.29	Voltage increase time	Voltage increase time means the time needed for the VFD to accelerate from min. output voltage to the max. output frequency. Setting range: 0.0–3600.0s	5.0s	0
P04.30	Voltage decrease time	Voltage decrease time means the time needed for the VFD to decelerate from the max. output frequency to min. output voltage. Setting range: 0.0–3600.0s	5.0s	0
P04.31	Max. output voltage	Specifies the upper limit of output voltage. Setting range: P04.32–100.0% (of the motor rated voltage)	100.0%	0
P04.32	Min. output voltage	Specifies the lower limit of output voltage. Setting range: 0.0%–P04.31 (of the motor rated voltage)	0.0%	0
P04.33	Weakening coefficient in constant power zone	1.00-1.30	1.00	0
P04.34	Pull-in current 1 in SM V/F control	When the SM V/F control mode is enabled, the function code is used to set the reactive current of the motor when the output frequency is lower than the frequency specified by P04.36. Setting range: -100.0%-100.0% (of the motor rated current)	20.0%	0
P04.35	Pull-in current 2 in SM V/F control	When the SM V/F control mode is enabled, the function code is used to set the reactive current of the motor when the output frequency is greater than the frequency specified	10.0%	0

Function code	Name	Description	Default	Modify
		by P04.36. Setting range: -100.0%–100.0% (of the motor rated current)		
P04.36	Frequency threshold for pull-in current switching in SM V/F control	current 1 and pull-in current 2.	20.0%	0
P04.37	Reactive current closed-loop proportional coefficient in SM V/F control	When the SM VF control mode is enabled, the function code is used to set the proportional coefficient of reactive current closed-loop control. Setting range: 0–3000	50	0
P04.38	Reactive current closed-loop integral time in SM V/F control	When the SM VF control mode is enabled, the function code is used to set the integral coefficient of reactive current closed-loop control. Setting range: 0–3000	30	0
P04.39- P04.63	Reserved	-	-	-

Group P05—Input terminal functions

Function code	Name	Description	Default	Modify
P05.00	HDI input type	Setting range: 0–1 0: HDIA is high-speed pulse input 1: HDIA is digital input	0	0
P05.01	S1 function selection	Setting range: 0–95 0: No function	1	0
P05.02	S2 function selection	1: Run forward 2: Run reversely	4	0
P05.03	S3 function selection	3: Three-wire running control 4: Jog forward	7	0

Function code	Name	Description	Default	Modify
P05.04	S4 function selection	5: Jog reversely 6: Coast to stop	0	0
P05.05	S5 function selection	7: Reset faults 8: Pause running 9: External fault input	0	0
P05.06	S6 function selection	10: Increase frequency setting (UP) 11: Decrease frequency setting	0	0
P05.07	S7 function selection	(DOWN) 12: Clear the frequency	0	0
P05.08	S8 function selection	increase/decrease setting 13: Switch between A setting and B	0	0
P05.09	Function of HDIA	setting 14: Switch between combination setting and A setting 15: Switch between combination setting and B setting 16: Multi-step speed terminal 1 17: Multi-step speed terminal 2 18: Multi-step speed terminal 3 19: Multi-step speed terminal 4 20: Pause multi-step speed running 21: ACC/DEC time selection 1 22: ACC/DEC time selection 2 23: Simple PLC stop reset 24: Pause simple PLC 25: Pause PID control 26: Pause Wobbling frequency 27: Reset wobbling frequency 28: Counter reset 29: Switch between speed control and torque control 30: Disable ACC/DEC 31: Trigger the counter 32: Reserved 33: Clear the frequency increase/decrease setting temporarily 34: DC braking	0	0

Function code	Name	Description	Default	Modify
		35: Motor switchover terminal 36: Switch the running command channel to keypad 37: Switch the running command channel to terminal 38: Switch the running command channel to communication 39: Pre-exciting command 40: Clear electricity consumption 41: Keep electricity consumption 42: Switch the setting source of braking torque upper limit to keypad 43–55: Reserved 56: Emergency stop 57–60: Reserved 61: Switch PID polarities 62–95: Reserved 61: Switch PID polarities 62–95: Reserved 10: Note: Terminals S5–S8 are virtual terminals, of which the enabling is specified by P05.12. After a virtual terminal is enabled, the terminal status can be changed only in communication mode. The communication address is 0x200A.		
P05.10	Input terminal polarity selection	Specifies input terminal polarity. When a bit is 0, the input terminal is positive. When a bit is 1, the input terminal is negative. Setting range: 0x000-0x1FF	0x000	0
P05.11	Digital filter time	Specifies the sampling filter time of the S1–S8 and HDIA terminals. In strong interference cases, increase the value to avoid maloperation. Setting range: 0.000–1.000s	0.010s	0

Function code	Name	Description	Default	Modify
P05.12	Virtual terminal setting	Setting range: 0x00–0x3F (0: disable, 1: enable) Bit 0: S1 virtual terminal Bit 1: S2 virtual terminal Bit 2: S3 virtual terminal Bit 3: S4 virtual terminal Bit 4: S5 virtual terminal Bit 5: S6 virtual terminal Bit 6: S7 virtual terminal Bit 7: S8 virtual terminal Bit 7: S8 virtual terminal Bit 8: HDIA virtual terminal Note: After a virtual terminal is enabled, the terminal status can be changed only in communication mode. The communication address is 0x200A.	0x00	©
P05.13	Terminal control mode	Specifies the terminal control mode. Setting range: 0-3 0: Two-wire control mode 1 1: Two-wire control mode 2 2: Three-wire control mode 1 3: Three-wire control mode 2	0	0
P05.14	S1 switch-on delay		0.000s	0
P05.15	S1 switch-off delay	Used to specify the delay time corresponding to the electrical level	0.000s	0
P05.16	S2 switch-on delay	change when a programmable input terminal switches on or switches off.	0.000s	0
P05.17	S2 switch-off delay	Setting range: 0.000–50.000s Note: Terminals S5–S8 are virtual	0.000s	0
P05.18	S3 switch-on delay	terminals, of which the enabling is specified by P05.12. After a virtual	0.000s	0
P05.19	S3 switch-off delay	terminal is enabled, the terminal status can be changed only in	0.000s	0
P05.20	S4 switch-on delay	communication mode. The communication address is 0x200A.	0.000s	0
P05.21	S4 switch-off delay		0.000s	0

Function code	Name	Description	Default	Modify
P05.22	S5 switch-on delay		0.000s	0
P05.23	S5 switch-off delay		0.000s	0
P05.24	S6 switch-on delay		0.000s	0
P05.25	S6 switch-off delay		0.000s	0
P05.26	S7 switch-on delay		0.000s	0
P05.27	S7 switch-off delay		0.000s	0
P05.28	S8 switch-on delay		0.000s	0
P05.29	S8 switch-off delay		0.000s	0
P05.30	HDIA switch-on delay		0.000s	0
P05.31	HDIA switch-off delay		0.000s	0
P05.32	AI1 lower limit	Used to define the relationship	0.00V	0
P05.33	Correspondin g setting of AI1 lower limit	between the analog input voltage and its corresponding setting. When the analog input voltage exceeds	0.0%	0
P05.34		the range from the upper limit to	10.00V	0
P05.35	Correspondin g setting of AI1 upper limit	the lower limit, the upper limit or lower limit is used. When the analog input is current	100.0%	0
P05.36	AI1 input filter time	input, 0mA–20mA current corresponds to 0V–10V voltage.	0.030s	0
P05.37	AI2 lower limit	In different applications, 100.0% of	0.00V	0
P05.38	Correspondin g setting of AI2 lower limit	the analog setting corresponds to different nominal values. See the descriptions of each application	0.0%	0

Function				
code	Name	Description	Default	Modify
P05.39	AI2 upper limit	section for details. See section	10.00V	0
	Correspondin	6.9.2.1 Analog input.		
P05.40	g setting of AI2		100.0%	0
	upper limit	Al1: supports input of 0–10V,		
P05.41	AI2 input filter	 corresponding to 0–20mA Al2: supports input of 0–10V, 	0.030s	0
P05.42	time AI3 lower limit	not allowing current input	0.00V	0
P03.42	Correspondin	Al3: potentiometer, not	0.000	0
P05.43	g setting of AI3	allowing current input	0.0%	0
1 05.45	lower limit	The mapping between function	0.070	0
P05.44	AI3 upper limit	codes and setting ranges are as	10.00V	0
	Corresponding	follows:		
P05.45	setting of AI3	P05.32: 0.00V-P05.34	100.0%	0
	upper limit	P05.33: -300.0%-300.0%		
P05.46	AI3 input filter	P05.34: P05.32–10.00V P05.35: -300.0%–300.0%	0.030s	0
1 05.40	time	P05.36: 0.000s-10.000s	0.0505	0
	HDIA	P05.37: 0.00V-P05.39		
P05.47	frequency lower limit	P05.38: -300.0%-300.0%	0.000kHz	0
	Corresponding	P05.39: P05.37-10.00V		
	setting of	P05.40: -300.0%-300.0%		
P05.48	HDIA	P05.41: 0.000s-10.000s	0.0%	0
	frequency	P05.42: 0.00V-P05.44		
	lower limit	P05.43: -300.0%-300.0% P05.44: P05.42-10.00V		
	HDIA	P05.44: P05.42=10.00V P05.45: -300.0%=300.0%	50.000	
P05.49	frequency	P05.46: 0.000s-10.000s	kHz	0
	upper limit	P05.47: 0.000kHz-P05.49	KIIZ	
	Corresponding	P05.48: -300.0%-300.0%		
DOE 50	setting of	P05.49: P05.47-50.000kHz	100.00/	
P05.50	HDIA upper limit	P05.50: -300.0%-300.0%	100.0%	0
	frequency	P05.51: 0.000s-10.000s		
	, ,			
	HDIA frequency			
P05.51	input filter		0.030s	0
	time			

Function code	Name	Description	Default	Modify
P05.52	AI1 input signal type	Setting range: 0–1 0: Voltage 1: Current Note: When the switch of Al1 is turned to "V", set the value to 0; otherwise, set the value to 1.	0	0
P05.53	AI3 input signal source selection	Setting range: 0–1 0: Local potentiometer 1: External keypad potentiometer Note: For details, see the analog potentiometer description in the keypad operation section.	0	0
P05.54	S terminal input mode	0-1 0: NPN 1: PNP	0	0

Group P06—Output terminal functions

Function code	Name	Description	Default	Modify
P06.00	Reserved	-	-	-
P06.01	Y1 output selection	Setting range: 0–63 0: Disable	0	0
P06.02	Reserved	1: Running	-	-
P06.03	RO1 output selection	2: Running forward 3: Running reversely	1	0
P06.04	RO2 output selection	4: Jogging 5: VFD in fault 6: Frequency level detection FDT1 7: Frequency level detection FDT2 8: Frequency reached 9: Running in zero speed 10: Frequency upper limit reached 11: Frequency lower limit reached 12: Ready for running 13: Pre-exciting 14: Overload pre-alarm 15: Underload pre-alarm	5	0

Function code	Name	Description	Default	Modify
		16: Simple PLC stage completed 17: Simple PLC cycle completed 18: Set counting value reached 19: Designated counting value reached 20: External fault is valid 21: Reserved 22: Running time reached 23: MODBUS communication virtual terminal output 24–25: Reserved 26: DC bus voltage established 27–28: Reserved 29: STO action 30–36: Reserved 37: Any frequency reached 38–63: Reserved		
P06.05	Output terminal polarity selection	Specifies output terminal polarity. Setting range: 0x00–0x0F Bit0: Y1 Bit1: Reserved Bit 2: RO1 Bit 3: RO2	0x00	0
P06.06	Y1 switch-on delay	Specifies the delay time corresponding to the electrical level change when a programmable output terminal switches on or switches off. Setting range: 0.000–50.000s	0.000s	0
P06.07	Y1 switch-off delay	Specifies the delay time corresponding to the electrical level change when a programmable output terminal switches on or switches off. Setting range: 0.000–50.000s	0.000s	0
P06.08- P06.09	Reserved	-	-	-

Function code	Name	Description	Default	Modify
P06.10	RO1 switch-on delay	Specifies the delay time corresponding to the electrical level change when a programmable output terminal switches on or switches off. Setting range: 0.000-50.000s	0.000s	0
P06.11	RO1 switch-off delay	Specifies the delay time corresponding to the electrical level change when a programmable output terminal switches on or switches off. Setting range: 0.000–50.000s	0.000s	0
P06.12	RO2 switch-on delay	Specifies the delay time corresponding to the electrical level change when a programmable output terminal switches on or switches off. Setting range: 0.000–50.000s	0.000s	0
P06.13	RO2 switch-off delay	Specifies the delay time corresponding to the electrical level change when a programmable output terminal switches on or switches off. Setting range: 0.000–50.000s	0.000s	0
P06.14	AO1 output selection	Setting range: 0–63 0: Running frequency (100%	0	0
P06.15	Reserved	corresponds to max. output	0	0
P06.16	Reserved	frequency) 1: Set frequency (100% corresponds to max. output frequency) 2: Ramp reference frequency (100% corresponds to max. output frequency) 3: Rotational speed (100% corresponds to the speed corresponding to the max. output frequency)	0	0

Function code	Name	Description	Default	Modify
		4: Output current (100%		
		corresponds to twice the VFD rated		
		current)		
		5: Output current (100%		
		corresponds to twice the motor		
		rated current)		
		6: Output voltage (100%		
		corresponds to 1.5 times the VFD		
		rated voltage)		
		7: Output power (100% corresponds		
		to twice the motor rated power)		
		8: Set torque (100% corresponds to		
		twice the motor rated torque)		
		9: Output torque (Absolute value,		
		100% corresponds to twice the		
		motor rated torque)		
		10: Al1 input (0-10V/0-20mA)		
		11: AI2 input (0-10V)		
		12: AI3 input (0–10V)		
		13: HDIA input (0.00-50.00kHz)		
		14: Value 1 set through Modbus		
		communication (0–1000)		
		15: Value 2 set through Modbus		
		communication (0-1000)		
		16-21: Reserved		
		22: Torque current (100%		
		corresponds to triple the motor		
		rated current)		
		23: Exciting current (100%		
		corresponds to triple the motor		
		rated current)		
		24: Set frequency (bipolar)		
		25: Ramp reference frequency		
		(bipolar)		
		26: Rotational speed (bipolar)		
		27–29: Reserved		
		30: Rotational speed (100%		
		corresponds to twice the motor		

Function code	Name	Description	Default	Modify
code		rated synchronous speed) 31: Output torque (100% corresponds to twice the motor rated torque) 32-63: Reserved		
P06.17	AO1 output lower limit	Used to define the relationship between the output value and	0.0%	0
P06.18	AO1 output corresponding to lower limit	analog output. When the output value exceeds the allowed range, the output uses the lower limit or upper limit.	0.00V	0
P06.19	AO1 output upper limit	When the analog output is current output, 1mA equals 0.5V.	100.0%	0
P06.20	AO1 output corresponding to upper limit	In different cases, the corresponding analog output of 100% of the output value is	10.00V	0
P06.21	AO1 output filter time	different. In different application scenarios, the analog output corresponding to 100% of the output value varies. Setting range: -300.%-P06.19 Setting range: 0.00-10.00V Setting range: P06.17-300.0% Setting range: 0.00-10.00V Setting range: 0.00-10.00V	0.000s	0
P06.22- P06.32	Reserved	-	-	-
P06.33	Detection value for frequency being reached	The "Any frequency reached" signal is output when the ramp reference frequency is greater than the value specified by P06.33 and this situation lasts the time specified by P06.34.	1.00Hz	0

Function code	Name	Description	Default	Modify
		Setting range: 0.00Hz–P00.03 (Max. output frequency)		
P06.34	Frequency reaching detection time	Setting range: 0–3600.0s	0.5s	0

Group P07—Human-machine interface

Function code	Name	Description	Default	Modify
P07.00	User password	The user password protection function is not enabled by default (that is, the default value is 0). If it is set to any non-zero value, the password protection function is enabled. After you exit the function code editing interface, the password takes effect within 1 minute. When you press the PRG/JOG key, "0.0.0.0.0" is displayed. You need to enter the correct user password to enter the function code editing interface. When you set the value to 00000, the user password you have set is cleared, and the user password protection function is disabled. Setting range: 0-65535	0	0
P07.01	Parameter copy	Setting range: 0–4 0: No operation 1: Upload parameters to the keypad 2: Download all parameters (including motor parameters)	0	0

Function code	Name	Description	Default	Modify
		3: Download non-motor parameters 4: Download motor parameters Note: The parameter copying function is available only for the external parameter copying keypad, excluding the local LED film keypad and external common keyboard.		
P07.02	Key function selection	Setting range: 0x00–0x26 Ones place: Function selection of PRO/JOG (pressed long) 0: No function 1: Jog 2: Reserved 3: Switch between forward and reverse rotating 4: Clear the UP/DOWN setting 5: Coast to stop 6: Switch command channels in sequence Tens place: Reserved	0x01	0
P07.03	Sequence of switching running-com mand channels through PRO/JOG (pressed long)	Specifies the sequence of switching running-command channels by pressing the key when P07.02 = 6. Setting range: 0-3 0: Keypad→Terminal→Communication 1: Keypad←→Terminal 2: Keypad←→Communication 3: Terminal←→Communication	0	0

Function code	Name	Description	Default	Modify
P07.04	Stop function validity of STOP/RST	Specifies the validness range of the stop function. For fault reset, the key is valid in any conditions. Setting range: 0–3 0: Valid for keypad control only 1: Valid both for keypad and terminal control 2: Valid both for keypad and communication control 3: Valid for all control modes	0	0
P07.05	Selection 1 of parameters displayed in running state	Setting range: 0x0000-0xFFFF Bit 0: Running frequency (Hz on) Bit 1: Set frequency (Hz blinking) Bit 2: Bus voltage (V on) Bit 3: Output voltage (V on) Bit 4: Output current (A on) Bit 5: Running speed (rpm on) Bit 6: Output power (% on) Bit 7: Output torque (% on) Bit 8: PID reference value (% blinking) Bit 9: PID feedback value (% on) Bit 10: Input terminal status Bit 11: Output terminal status Bit 11: Set torque (% on) Bit 13: Pulse count value Bit 4: Motor overload percentage (% on) Bit 15: PLC and current step number of multi-step speed	0x03FF	0

Function code	Name	Description	Default	Modify
P07.06	Selection 2 of parameters displayed in running state	Setting range: 0x0000-0xFFFF Bit 0: Al1 (V on) Bit 1: Al2 (V on) Bit 2: Al3 (V on) Bit 3: High-speed pulse HDIA frequency Bit 4: Reserved Bit 5: VFD overload percentage (% on) Bit 6: Ramp frequency reference (Hz on) Bit 7: Linear speed Bit 8: Reserved Bit 9: Frequency upper limit Bit 10-Bit 15: Reserved	0x0000	0
P07.07	Selection of parameters displayed in stopped state	Setting range: 0x0000-0xFFFF Bit 0: Set frequency (Hz on, blinking slowly) Bit 1: Bus voltage (V on) Bit 2: Input terminal status Bit 3: Output terminal status Bit 4: PID reference value (% blinking) Bit 5: PID feedback value (% on) Bit 5: PID feedback value (% on) Bit 7: Al1 value (V on) Bit 7: Al1 value (V on) Bit 9: Al3 value (V on) Bit 10: High-speed pulse HDIA frequency Bit 11: Reserved Bit 12: Count value Bit 13: PLC and current step number of multi-step speed Bit 14: Frequency upper limit Bit 15: Reserved	0x00FF	0

Function code	Name	Description	Default	Modify
P07.08	Frequency display coefficient	Setting range: 0.01–10.00 Display frequency = Running frequency * P07.08	1.00	0
P07.09	Rotational speed display coefficient	Setting range: 0.1–999.9% Mechanical rotation speed = 120 × (Displayed running frequency) × P07.09/(Number of motor pole pairs)	100.0%	0
P07.10	Linear speed display coefficient	Setting range: 0.1–999.9% Linear speed = (Mechanical rotation speed) × P07.10	1.0%	0
P07.11	Control board software version	Setting range: 1.00–655.35	Version depended	•
P07.12	Inverter temperature	Setting range: -20.0–120.0°C	0.0°C	•
P07.13	Drive board software version	Setting range: 1.00–655.35	Version depended	•
P07.14	Local accumulative running time	Setting range: 0–65535h	0h	•
P07.15	VFD electricity consumption high bit	Displays the electricity consumption of the VFD. VFD electricity consumption = P07.15 × 1000 + P07.16 Setting range: 0–65535kWh (*1000)	0kWh	•
P07.16	VFD electricity consumption low bit	Displays the electricity consumption of the VFD. VFD electricity consumption = P07.15 × 1000 + P07.16 Setting range: 0.0-999.9kWh	0.0kWh	•
P07.17	VFD model	Setting range: 0–1	0	•
P07.18	VFD rated power	Setting range: 0.4–3000.0kW	0.4kW	•

Function code	Name	Description	Default	Modify
P07.19	VFD rated voltage	Setting range: 50–520V	380V	•
P07.20	VFD rated current	Setting range: 0.01–600.00A	0.01A	•
P07.21	Factory bar code 1	Setting range: 0x0000-0xFFFF	0xFFFF	•
P07.22	Factory bar code 2	Setting range: 0x0000–0xFFFF	0xFFFF	•
P07.23	Factory bar code 3	Setting range: 0x0000-0xFFFF	0xFFFF	•
P07.24	Factory bar code 4	Setting range: 0x0000-0xFFFF	0xFFFF	•
P07.25	Factory bar code 5	Setting range: 0x0000-0xFFFF	0xFFFF	•
P07.26	Factory bar code 6	Setting range: 0x0000-0xFFFF	0xFFFF	•
P07.27	Present-fault type	Setting range: 0–94 0: No fault	0	•
P07.28	Last-fault type	1–3: Reserved	0	•
P07.29		4: Overcurrent during ACC (E4) 5: Overcurrent during DEC (E5)	0	•
P07.30	3rd-last fault type	6: Overcurrent during constant speed running (E6)	0	•
P07.31	4th-last fault type	7: Overvoltage during ACC (E7) 8: Overvoltage during DEC (E8)	0	•
P07.32	5th-last fault type	9: Overvoltage during constant speed running (E9) 10: Bus undervoltage fault (E10) 11: Motor overload (E11) 12: VFD overload (E12) 13: Phase loss on input side (E13) 14: Phase loss on output side (E14) 15: Reserved 16: Inverter module overheat (E16) 17: External fault (E17) 18: Modbus communication fault (E18) 19: Current detection fault (E19) 20: Motor autotuning fault (E20)	0	•

Function	Name	Description	Default	Modify
code	Ivaille	Description	Delautt	Mounty
		21: EEPROM operation error (E21)		
		22: PID feedback offline fault (E22)		
		23: Braking unit fault (E23)		
		24: Running time reached (E24)		
		25: Electronic overload (E25)		
		26: Reserved		
		27: Parameter upload error (E27)		
		28: Parameter download error (E28)		
		29–32: Reserved		
		33: To-ground short-circuit fault (E33)		
		34: Speed deviation fault (E34)		
		35: Mal-adjustment fault (E35)		
		36: Underload fault (E36)		
		37–39: Reserved		
		40: Safe torque off (E40)		
		41: Exception to safety circuit of		
		channel 1 (E41)		
		42: Exception to safety circuit of		
		channel 2 (E42)		
		43: Exception to both channels 1		
		and 2 (E43)		
		44: Al1 disconnection fault (E44)		
		45: AI2 disconnection fault (E45)		
		46: AI3 disconnection fault (E46)		
		44–91: Reserved		
		92: Al1 disconnection fault (E92)		
		93: AI2 disconnection fault (E93)		
		94: AI3 disconnection fault (E94)		
	Running			
P07.33	frequency at	Setting range: 0.00Hz-P00.03	0.00Hz	•
	present fault			
	Ramp			
P07.34	reference	Setting range: 0.00Hz-P00.03	0.00Hz	•
	frequency at present fault			
	Output			
P07.35	voltage at	Setting range: 0–1200V	0V	
FU1.33	present fault	Setting range. 0-1200V	UV	_
	present lautt	l		

Function code	Name	Description	Default	Modify
P07.36	Output current at present fault	Setting range: 0.00–630.00A	0.00A	•
P07.37	Bus voltage at present fault	Setting range: 0.0–2000.0V	0.0V	•
P07.38	Max. temperature at present fault	Setting range: -20.0–120.0°C	0.0°C	•
P07.39	Input terminal status at present fault	Setting range: 0x0000–0xFFFF	0x0000	•
P07.40	Output terminal status at present fault	Setting range: 0x0000-0xFFFF	0x0000	•
P07.41	Running frequency at last fault	Setting range: 0.00Hz–P00.03	0.00Hz	•
P07.42	Ramp reference frequency at last fault	Setting range: 0.00Hz–P00.03	0.00Hz	•
P07.43	Output voltage at last fault	Setting range: 0–1200V	0V	•
P07.44	Output current at last fault	Setting range: 0.00–630.00A	0.00A	•
P07.45	Bus voltage at last fault	Setting range: 0.0–2000.0V	0.0V	•
P07.46	Temperature at last fault	Setting range: -20.0–120.0°C	0.0°C	•
P07.47	Input terminal status at last fault	Setting range: 0x0000–0xFFFF	0x0000	•

Function code	Name	Description	Default	Modify
P07.48	Output terminal status at last fault	Setting range: 0x0000–0xFFFF	0x0000	•
P07.49	Running frequency at 2nd-last fault	Setting range: 0.00Hz–P00.03	0.00Hz	•
P07.50	Ramp reference frequency at 2nd-last fault	Setting range: 0.00Hz-P00.03	0.00Hz	•
P07.51	Output voltage at 2nd-last fault	Setting range: 0–1200V	0V	•
P07.52	Output current at 2nd-last fault	Setting range: 0.00–630.00A	0.00A	•
P07.53	Bus voltage at 2nd-last fault	Setting range: 0.0–2000.0V	0.0V	•
P07.54	Temperature at 2nd-last fault	Setting range: -20.0–120.0°C	0.0°C	•
P07.55	Input terminal status at 2nd-last fault	Setting range: 0x0000–0xFFFF	0x0000	•
P07.56	Output terminal status at 2nd-last fault	Setting range: 0x0000–0xFFFF	0x0000	•

Group P08—Enhanced functions

Function code	Name	Description	Default	Modify
P08.00	ACC time 2	Setting range: 0.0–3600.0s	Model depended	0
P08.01	DEC time 2	Setting range: 0.0–3600.0s	Model depended	0

Function code	Name	Description	Default	Modify
P08.02	ACC time 3	Setting range: 0.0–3600.0s	Model depended	0
P08.03	DEC time 3	Setting range: 0.0–3600.0s	Model depended	0
P08.04	ACC time 4	Setting range: 0.0–3600.0s	Model depended	0
P08.05	DEC time 4	Setting range: 0.0–3600.0s	Model depended	0
P08.06	Running frequency of jog	Specifies the reference frequency during jogging. Setting range: 0.00Hz–P00.03 (Max. output frequency)	5.00Hz	0
P08.07	ACC time for jogging	Specifies the time needed for the VFD to accelerate from 0Hz to the max. output frequency (P00.03). Setting range: 0.0–3600.0s	Model depended	0
P08.08	DEC time for jogging	Specifies the time needed for the VFD to decelerate from the max. output frequency (P00.03) to 0Hz. Setting range: 0.0–3600.0s	Model depended	0
P08.09	Jump frequency 1	The VFD can avoid mechanical resonance points by setting jump frequencies. When the set frequency is within the range of jump frequency, the VFD runs at the boundary of jump frequency. The VFD supports the setting of three jump frequencies. If the jump frequency points are set to 0, this function is invalid. Setting range: 0.00Hz-P00.03 (Max. output frequency)	0.00Hz	0
P08.10	Jump frequency amplitude 1	The VFD can avoid mechanical resonance points by setting jump frequencies. When the set frequency is within the range of	0.00Hz	0

Function code	Name	Description	Default	Modify
		jump frequency, the VFD runs at the boundary of jump frequency. The VFD supports the setting of three jump frequencies. If the jump frequency points are set to 0, this function is invalid. Setting range: 0.00Hz-P00.03 (Max. output frequency)		
P08.11	Jump frequency 2	The VFD can avoid mechanical resonance points by setting jump frequencies. When the set frequency is within the range of jump frequency, the VFD runs at the boundary of jump frequency. The VFD supports the setting of three jump frequencies. If the jump frequency points are set to 0, this function is invalid. Setting range: 0.00Hz-P00.03 (Max. output frequency)	0.00Hz	0
P08.12	Jump frequency amplitude 2	The VFD can avoid mechanical resonance points by setting jump frequencies. When the set frequency is within the range of jump frequency, the VFD runs at the boundary of jump frequency. The VFD supports the setting of three jump frequencies. If the jump frequency points are set to 0, this function is invalid. Setting range: 0.00Hz-P00.03 (Max. output frequency)	0.00Hz	0
P08.13	Jump frequency 3	The VFD can avoid mechanical resonance points by setting jump frequencies. When the set frequency is within the range of jump frequency, the VFD runs at the	0.00Hz	0

Function code	Name	Description	Default	Modify
		boundary of jump frequency. The VFD supports the setting of three jump frequencies. If the jump frequency points are set to 0, this function is invalid. Setting range: 0.00Hz-P00.03 (Max. output frequency)		
P08.14	Jump frequency amplitude 3	The VFD can avoid mechanical resonance points by setting jump frequencies. When the set frequency is within the range of jump frequency, the VFD runs at the boundary of jump frequency. The VFD supports the setting of three jump frequencies. If the jump frequency points are set to 0, this function is invalid. Setting range: 0.00Hz-P00.03 (Max. output frequency)	0.00Hz	0
P08.15	Amplitude of wobbling frequency	Setting range: 0.0–100.0% (of the set frequency)	0.0%	0
P08.16	Amplitude of sudden jump frequency	Setting range: 0.0–50.0% (of the amplitude of wobbling frequency)	0.0%	0
P08.17	Rise time of wobbling frequency	Setting range: 0.1–3600.0s	5.0s	0
P08.18	Fall time of wobbling frequency	Setting range: 0.1–3600.0s	5.0s	0
P08.19	Switching frequency of ACC/DEC time	Setting range: 0.00–P00.03 (max. output frequency) 0.00Hz: No switchover If the running frequency is greater than P08.19, switch to ACC/DEC time 2.	0.00Hz	0

Function code	Name	Description	Default	Modify
P08.20	Frequency threshold of the start of droop control	Setting range: 0.00–50.00Hz	2.00Hz	0
P08.21	Reference frequency of ACC/DEC time	Setting range: 0–2 0: Max. output frequency 1: Set frequency 2: 100Hz Note: Valid for straight ACC/DEC only.	0	0
P08.22	Output torque calculation method	Setting range: 0–1 0: Based on torque current 1: Based on output power	0	0
P08.23	Number of decimal points of frequency	Setting range: 0–1 0: Two 1: One	0	0
P08.24	Number of decimal points of linear speed	Setting range: 0–3 0: No decimal point 1: One 2: Two 3: Three	0	0
P08.25	Set counting value	Setting range: <u>P08.26</u> –65535	0	0
P08.26	Designated counting value	Setting range: 0– <u>P08.25</u>	0	0
P08.27	Set running time	Setting range: 0–65535min	0min	0
P08.28	Auto fault reset count	Specifies the number of automatic fault reset times when the VFD uses automatic fault reset. When the number of continuous reset times exceeds the value, the VFD reports a fault and stops.	0	0

Function	Name	Description	Default	Modify
code		·		,
		After VFD starts, if no fault occurred		
		within 600s after the VFD starts, the number of automatic fault reset		
		times is cleared.		
		Setting range: 0–10		
	Auto foult	Specifies the time interval from when a fault occurred to when		
P08.29	Auto fault reset interval	automatic fault reset takes effect.	1.0s	0
	reset interval			
		Setting range: 0.1–3600.0s Specifies the variation rate of the		
	Frequency	VFD output frequency based on the		
	decrease ratio	load. It is mainly used in balancing		
P08.30	in droop	the power when multiple motors	0.00Hz	0
	control	drive the same load.		
	66.11.1.61	Setting range: 0.00–50.00Hz		
		Setting range: 0x0000-0x0011		
	Channel for switching between	Ones place: Switchover channel		
		0: Switch over through terminals		
		1: Modbus communication		
P08.31		Tens place: indicates whether to	0x0000	0
	motor 1 and	enable switchover during running		
	motor 2	0: Disable		
		1: Enable		
		Used to view the FDT1 electrical		
		level detection value. When the		
		output frequency exceeds the		
		corresponding frequency of FDT		
		electrical level, the multifunction		
		digital output terminal continuously		
	FDT1	outputs the signal of "Frequency		
P08.32	electrical level	level detection FDT". The signal is	50.00Hz	\circ
. 55.52	detection	invalid only when the output	33.30112	
	value	frequency decreases to a value		
		lower than the frequency		
		corresponding to (FDT electrical		
		level—FDT lagging detection value).		
		Setting range: 0.00Hz–P00.03 (Max.		
		output frequency)		
		output irequency)		

Function	N	D	D.f.ult	N4 - 41:6
code	Name	Description	Default	Modify
P08.33	FDT1 lagging detection value	Used to view the FDT1 lagging detection value. When the output frequency exceeds the corresponding frequency of FDT electrical level, the multifunction digital output terminal continuously outputs the signal of "Frequency level detection FDT". The signal is invalid only when the output frequency decreases to a value lower than the frequency corresponding to (FDT electrical level—FDT lagging detection value). Setting range: 0.0–100.0% (relative to FDT1 electrical level)	5.0%	0
P08.34	FDT2 electrical level detection value	Used to view the FDT2 electrical level detection value. When the output frequency exceeds the corresponding frequency of FDT electrical level, the multifunction digital output terminal continuously outputs the signal of "Frequency level detection FDT". The signal is invalid only when the output frequency decreases to a value lower than the frequency corresponding to (FDT electrical level—FDT lagging detection value). Setting range: 0.00Hz-P00.03 (Max. output frequency)	50.00Hz	0

Function code	Name	Description	Default	Modify
P08.35	FDT2 lagging detection value	Used to view the FDT2 lagging detection value. When the output frequency exceeds the corresponding frequency of FDT electrical level, the multifunction digital output terminal continuously outputs the signal of "Frequency level detection FDT". The signal is invalid only when the output frequency decreases to a value lower than the frequency corresponding to (FDT electrical level—FDT lagging detection value). Setting range: 0.0–100.0% (relative to FDT2 electrical level)	5.0%	0
P08.36	Detection value for frequency being reached	When the output frequency is within the detection range, the multifunction digital output terminal outputs the signal of "Frequency reached". Setting range: 0.00Hz-P00.03 (Max. output frequency)	0.00Hz	0
P08.37	Enabling dynamic braking	Setting range: 0–1 0: Disable 1: Enable	0	0
P08.38	Dynamic braking threshold voltage	Specifies the starting bus voltage of dynamic braking. Adjust this value properly to achieve effective braking for the load. The default value varies depending on the voltage class. Setting range: 200.0–2000.0V For 220V: 380.0V For 380V: 700.0V For 660V: 1120.0V	Model depended	0

Functi		Name	Description	Default	Modify
P08.3	39	Cooling-fan running mode	Setting range: 0–2 0: Normal mode 1: Permanent running after power-on 2: Run mode 2	0	0
P08.4	40	PWM selection	Setting range: 0x0000-0x221 Ones place: PWM mode selection 0: PWM mode 1, 3PH modulation 1: PWM mode 2, 3PH modulation and 2PH modulation Tens place: PWM low-speed carrier frequency limit 0: Low-speed carrier frequency limit mode 1 1: Low-speed carrier frequency limit mode 2 2: No limit on low-speed carrier frequency Hundreds place: Deadzone compensation method 0: Compensation method 1 1: Compensation method 2	0×100	0
P08.4	41	Overmodulati on selection	Setting range: 0x0000-0x1111 Ones place: Overmodulation enabling 0: Disable 1: Enable Tens place: Reserved Hundreds place: Carrier frequency limit 0: Yes 1: No Thousands place: Reserved	0x1001	0
P08.4	42	Keypad digital control setting	Setting range: 0x0000-0x1223 Ones place: Frequency setting selection 0: Control through the ∧/∨ key is valid.	0x0000	0

Function code	Name	Description	Default	Modify
		1: Control through the ∧/∨ key is valid. 2: Control through the ∧/∨ key is invalid. 3: Control through the ∧/∨ key is invalid. 3: Control through the ∧/∨ key is invalid. Tens place: Frequency control selection 0: Valid only when P00.06=0 or P00.07=0 1: Valid for all frequency setting methods 2: Invalid for multi-step speed running when multi-step speed running when multi-step speed running has the priority Hundreds place: Action selection for stop 0: Setting is valid. 1: Valid during running, cleared after stop 2: Valid during running, cleared after a stop command is received Thousands place: Integral function of the ∧/∨ key 0: Enable the integral function 1: Disable the integral function		
P08.43	Integral ratio controlled through keypad	Setting range: 0.01–10.00	0.10	0
P08.44	UP/DOWN terminal control setting	Setting range: 0x000-0x221 Ones place: Frequency setting selection 0: The setting made through UP/DOWN is valid. 1: The setting made through UP/DOWN is invalid. Tens place: Frequency control selection	0x000	0

F	unction	Name	Description	Default	Modify
			0: Valid only when P00.06=0 or P00.07=0 1: Valid for all frequency setting methods 2: Invalid for multi-step speed running when multi-step speed running has the priority Hundreds place: Action selection for stop 0: Setting is valid. 1: Valid during running, cleared after stop 2: Valid during running, cleared after a stop command is received		
	P08.45	Frequency integral rate of the UP terminal	Setting range: 0.01–50.00Hz/s	0.50Hz/s	0
	P08.46	Frequency integral rate of the DOWN terminal	Setting range: 0.01–50.00Hz/s	0.50Hz/s	0
	P08.47	Action selection at power-off during frequency setting	Setting range: 0x000-0x111 Ones place: Reserved Action selection at power-off during frequency adjusting through Modbus communication 0: Save the setting at power-off. 1: Clear the setting at power-off. Hundreds place: Reserved	0x000	0
	P08.48	Initial electricity consumption high bit	Specifies the initial electricity consumption. Initial electricity consumption = P08.48 × 1000 + P08.49 Setting range: 0–59999kWh (k)	0kWh	0

Function code	Name	Description	Default	Modify
P08.49	Initial electricity consumption low bit	Specifies the initial electricity consumption. Initial electricity consumption = P08.48 × 1000 + P08.49 Setting range: 0.0-999.9kWh	0.0kWh	0
P08.50	Magnetic flux braking	Used to enable the magnetic flux braking. Magnetic flux braking can be used for motor stop, as well as for motor rotation speed change. The current of the stator other than the rotor increases during magnetic flux braking. Therefore, the cooling is better. 0: Disable 100–150: A larger coefficient indicates stronger braking. Setting range: 0, 100–150	0	0
P08.51	VFD input power factor	Used to adjust the current display value on the AC input side. Setting range: 0.00–1.00	0.56	0
P08.52	STO lock selection	Setting range: 0–1 0: Lock upon STO (E40) alarm 1: No lock on STO (E40) alarm *Note: "Lock on STO (E40) alarm" indicates the STO alarm must be reset after the VFD recovers from the STO (E40) fault. "No lock on STO (E40) alarm" indicates that the STO alarm disappears automatically after the VFD recovers from the STO fault.	0	0
P08.53	Upper limit frequency bias value in torque control	Setting range: 0.00Hz–P00.03 (Max. output frequency) Note: Valid for torque control only.	0.00Hz	0

Function code	Name	Description	Default	Modify
P08.54	Upper limit frequency ACC/DEC selection in torque control	Setting range: 0-4 0: No limit on acceleration or deceleration 1: ACC/DEC time 1 2: ACC/DEC time 2 3: ACC/DEC time 3 4: ACC/DEC time 4	0	0
P08.55	Enabling auto carrier frequency reduction	Setting range: 0–1 0: Disable 1: Enable Note: Automatic carrier frequency reduction indicates that the VFD automatically reduces the carrier frequency when detecting the heat sink temperature exceeds the rated temperature. When the temperature decreases to a specified value, the carrier frequency restores to the setting. This function can reduce the VFD overheat alarm reporting chances.	0	0
P08.56	Min. carrier frequency	Setting range: 0.0–15.0kHz	4.0kHz	0
P08.57	Temperature point of auto carrier frequency reduction	Setting range: 40.0–85.0°C	70.0°C	0
P08.58	Interval of carrier frequency reduction	Setting range: 0–30s	10s	0
P08.59	AI1 disconnection detection threshold	Setting range: 0–100% (relative to 10V)	0%	0

Function code	Name	Description	Default	Modify
P08.60	Al2 disconnection detection threshold	Setting range: 0–100% (relative to 10V)	0%	0
P08.61	AI3 disconnection detection threshold	Setting range: 0–100% (relative to 10V)	0%	0
P08.62	Output current filter time	Setting range: 0.000–10.000s	0.000s	0
P08.63	Output torque filter times	Setting range: 0–8	8	0
P08.64	STO enabling	Setting range: 0–1 0: Disable 1: Enable	0	0
P08.65	STO power supply detection	Setting range: 0–1 0: Normal 1: Abnormal	0	•
P08.66- P08.70	Reserved	-	-	-

Group P09—PID control

Function code	Name	Description	Default	Modify
P09.00	PID reference source selection	Specifies the target given channel during the PID process. Setting range: 0–6 0: Keypad digital (P09.01) 1: Al1 2: Al2 3: Al3 4: High-speed pulse HDIA 5: Multi-step running 6: Modbus communication Note: The set target of process PID is a relative value, for which	0	0

Function code	Name	Description	Default	Modify
5525		100% equals 100% of the feedback signal of the controlled system. The system always calculates a related value (0–100.0%).		
P09.01	PID reference preset through keypad	Setting range: -100.0%–100.0%	0.0%	0
P09.02	PID feedback source selection	Specifies the PID feedback channel. Setting range: 0–4 0: Al1 1: Al2 2: Al3 3: High-speed pulse HDIA 4: Modbus communication Note: The reference channel and feedback channel cannot be duplicated. Otherwise, effective PID control cannot be achieved.	0	0
P09.03	PID output characteristics selection	Setting range: 0–1 0: PID output is positive. When the feedback signal is greater than the PID reference value, the output frequency of the VFD will decrease to balance the PID. Example: PID control on strain during unwinding. 1: PID output is negative. When the feedback signal is greater than the PID reference value, the output frequency of the VFD will increase to balance the PID. Example: PID control on strain during unwinding.	0	0
P09.04	Proportional gain (Kp)	Specifies the proportional gain P of PID input. Setting range: 0.00–100.00	1.80	0

Function code	Name	Description	Default	Modify
P09.05	Integral time (Ti)	Determines the speed of the integral adjustment on the deviation of PID feedback and reference from the PID regulator. Setting range: 0.00–10.00s	0.90s	0
P09.06	Differential time (Td)	Determines the strength of the change ratio adjustment on the deviation of PID feedback and reference from the PID regulator. Setting range: 0.00–10.00s	0.00s	0
P09.07	Sampling cycle (T)	Specifies the sampling cycle of feedback. The regulator calculates in each sampling cycle. A longer sampling cycle indicates slower response. Setting range: 0.001–1.000s	0.001s	0
P09.08	PID control deviation limit	Specifies the max. deviation allowed by the output of PID system relative to the closed loop reference, which can adjust the accuracy and stability of the PID system. Setting range: 0.0–100.0%	0.0%	0
P09.09	PID output upper limit	Specifies the upper limit of PID regulator output values. 100.0% corresponds to the max. output frequency (P00.03) or max. voltage (P04.31). Setting range: P09.10–100.0%	100.0%	0
P09.10	PID output lower limit	Specifies the lower limit of PID regulator output values. 100.0% corresponds to the max. output frequency (P00.03) or max. voltage (P04.31). Setting range: -100.0%-P09.09	0.0%	0

Function code	Name	Description	Default	Modify
P09.11	Feedback offline detection value	Specifies the PID feedback offline detection value. Setting range: 0.0–100.0%	0.0%	0
P09.12	Feedback offline detection time	Setting range: 0.0–3600.0s	1.0s	0
P09.13	PID control selection	Setting range: 0x0000-0x1111 Ones place: 0: Continue integral control after the frequency reaches upper/lower limit 1: Stop integral control after the frequency reaches upper/lower limit Tens place: 0: Same as the main reference direction 1: Contrary to the main reference direction Unit as per the max. frequency 1: Limit as per A frequency 1: Limit as per A frequency Thousands place: 0: A+B frequency. ACC/DEC of main reference A frequency source buffering is invalid. 1: A+B frequency. ACC/DEC of main reference A frequency source buffering is valid. The ACC/DEC is determined by P08.04 (ACC time 4).	0x0001	0
P09.14	Low frequency proportional gain (Kp)	Setting range: 0.00–100.00 Low-frequency switching point: 5.00Hz High-frequency switching point: 10.00Hz (P09.04 corresponds to high-frequency parameter), and the	1.00	0

Function code	Name	Description	Default	Modify
		middle is the linear interpolation between these two points.		
P09.15	ACC/DEC time of PID command	Setting range: 0.0–1000.0s	0.0s	0
P09.16	PID output filter time	Setting range: 0.000–10.000s	0.000s	0
P09.17	Reserved	-	-	-
P09.18	Low frequency integral time (Ti)	Setting range: 0.00–10.00s	0.90s	0
P09.19	Low frequency differential time (Td)	Setting range: 0.00–10.00s	0.00s	0
P09.20	Low frequency point for PID parameter switching	Setting range: 0.00–P09.21	5.00Hz	0
P09.21	High frequency point for PID parameter switching	Setting range: P09.20–P00.03	10.00Hz	0
P09.22- P09.26	Reserved	-	-	-

Group P10—Simple PLC and multi-step speed control

Function code	Name	Description	Default	Modify
P10.00	Simple PLC mode	Setting range: 0–2 0: Stop after running once. The VFD stops automatically after running for one cycle, and it can be started	0	0

Function code	Name	Description	Default	Modify
		only after receiving the running command. 1: Keep running in the final value after running for one cycle. The VFD keeps the running frequency and direction of the last section after a single cycle. 2: Cyclic running. The VFD enters the next cycle after completing one cycle until receiving the stop command.		
P10.01	Simple PLC memory selection	Setting range: 0–1 0: Do not memorize at power outage 1: Memorize at power outage. The PLC memories its running stage and running frequency before power-off.	0	0
P10.02	Multi-step speed 0	Setting range: -300.0–300.0% The setting 100.0% corresponds to the max. output frequency (P00.03).	0.0%	0
P10.03	Running time of step 0	Setting range: 0.0–6553.5s (min) The time unit is specified by P10.37.	0.0s(min)	0
P10.04	Multi-step speed 1	Setting range: -300.0–300.0% The setting 100.0% corresponds to the max. output frequency (P00.03).	0.0%	0
P10.05	Running time of step 1	Setting range: 0.0–6553.5s (min) The time unit is specified by P10.37.	0.0s(min)	0
P10.06	Multi-step speed 2	Setting range: -300.0–300.0% The setting 100.0% corresponds to the max. output frequency (P00.03).	0.0%	0
P10.07	Running time of step 2	Setting range: 0.0–6553.5s (min) The time unit is specified by P10.37.	0.0s(min)	0
P10.08	Multi-step speed 3	Setting range: -300.0–300.0% The setting 100.0% corresponds to the max. output frequency (<u>P00.03</u>).	0.0%	0

Function code	Name	Description	Default	Modify
P10.09	Running time of step 3	Setting range: 0.0–6553.5s (min) The time unit is specified by P10.37.	0.0s(min)	0
P10.10	Multi-step speed 4	Setting range: -300.0–300.0% The setting 100.0% corresponds to the max. output frequency (P00.03).	0.0%	0
P10.11	Running time of step 4	Setting range: 0.0–6553.5s (min) The time unit is specified by P10.37.	0.0s(min)	0
P10.12	Multi-step speed 5	Setting range: -300.0–300.0% The setting 100.0% corresponds to the max. output frequency (P00.03).	0.0%	0
P10.13	Running time of step 5	Setting range: 0.0–6553.5s (min) The time unit is specified by P10.37.	0.0s(min)	0
P10.14	Multi-step speed 6	Setting range: -300.0–300.0% The setting 100.0% corresponds to the max. output frequency (P00.03).	0.0%	0
P10.15	Running time of step 6	Setting range: 0.0–6553.5s (min) The time unit is specified by P10.37.	0.0s(min)	0
P10.16	Multi-step speed 7	Setting range: -300.0–300.0% The setting 100.0% corresponds to the max. output frequency (P00.03).	0.0%	0
P10.17	Running time of step 7	Setting range: 0.0–6553.5s (min) The time unit is specified by P10.37.	0.0s(min)	0
P10.18	Multi-step speed 8	Setting range: -300.0–300.0% The setting 100.0% corresponds to the max. output frequency (P00.03).	0.0%	0
P10.19	Running time of step 8	Setting range: 0.0–6553.5s (min) The time unit is specified by P10.37.	0.0s(min)	0
P10.20	Multi-step speed 9	Setting range: -300.0–300.0% The setting 100.0% corresponds to the max. output frequency (P00.03).	0.0%	0
P10.21	Running time of step 9	Setting range: 0.0–6553.5s (min) The time unit is specified by P10.37.	0.0s(min)	0
P10.22	Multi-step speed 10	Setting range: -300.0-300.0% The setting 100.0% corresponds to the max. output frequency (<u>P00.03</u>).	0.0%	0

Function code	Name	Description	Default	Modify
P10.23	Running time of step 10	Setting range: 0.0–6553.5s (min) The time unit is specified by P10.37.	0.0s(min)	0
P10.24	Multi-step speed 11	Setting range: -300.0–300.0% The setting 100.0% corresponds to the max. output frequency (P00.03).	0.0%	0
P10.25	Running time of step 11	Setting range: 0.0–6553.5s (min) The time unit is specified by P10.37.	0.0s(min)	0
P10.26	Multi-step speed 12	Setting range: -300.0–300.0% The setting 100.0% corresponds to the max. output frequency (P00.03).	0.0%	0
P10.27	Running time of step 12	Setting range: 0.0–6553.5s (min) The time unit is specified by P10.37.	0.0s(min)	0
P10.28	Multi-step speed 13	Setting range: -300.0–300.0% The setting 100.0% corresponds to the max. output frequency (P00.03).	0.0%	0
P10.29	Running time of step 13	Setting range: 0.0–6553.5s (min) The time unit is specified by P10.37.	0.0s(min)	0
P10.30	Multi-step speed 14	Setting range: -300.0–300.0% The setting 100.0% corresponds to the max. output frequency (P00.03).	0.0%	0
P10.31	Running time of step 14	Setting range: 0.0–6553.5s (min) The time unit is specified by P10.37.	0.0s(min)	0
P10.32	Multi-step speed 15	Setting range: -300.0–300.0% The setting 100.0% corresponds to the max. output frequency (P00.03).	0.0%	0
P10.33	Running time of step 15	Setting range: 0.0–6553.5s (min) The time unit is specified by P10.37.	0.0s(min)	0
P10.34	ACC/DEC time of steps 0–7 of simple PLC	Setting range: 0x0000–0xFFFF	0x0000	0
P10.35	ACC/DEC time of steps 8–15 of simple PLC	Setting range: 0x0000–0xFFFF	0x0000	0
P10.36	PLC restart mode	Setting range: 0–1 0: Restart from the first step, namely if the VFD stops during running (caused by stop command,	0	0

Function code	Name	Description	Default	Modify
		fault or power down), it will run from the first step after restart. 1: Continue running from the step frequency when interruption occurred, namely if the VFD stops during running (caused by stop command or fault), it will record the running time of current step, and enters this step automatically after restart, then continue running at the frequency defined by this step in the remaining time.		
P10.37	Multi-step time unit	Setting range: 0-1 0: second; the running time of each step is counted in seconds 1: minute; the running time of each step is counted in minutes	0	0

Group P11—Protection functions

Function code	Name	Description	Default	Modify
P11.00	Phase loss protection	Setting range: 0x000-0x011 Ones place: 0: Disable software input phase loss protection. 1: Enable software input phase loss protection. Tens place: 0: Disable output phase loss protection. 1: Enable output phase loss protection. 1: Enable output phase loss protection. Hundreds place: Reserved Note: Output phase loss cannot be detected if no motor is connected; input phase loss cannot be detected in empty load or light load running.	For 1PH models: 0x010 For 3PH models: 0x011	0
P11.01	Frequency drop at transient power-off	Setting range: 0–1 0: Disable 1: Enable	0	0

Functi code		Name	Description	Default	Modify
P11.0)2	Enabling energy-consu mption braking for stop	Setting range: 0–1 0: Disable 1: Enable	0	0
P11.0)3	Overvoltage stalling protection	Setting range: 0–1 0: Disable 1: Enable	1	0
P11.0)4	Overvoltage stalling	120–150% (standard bus voltage) (380V)	136%	0
		protection voltage	120–150% (standard bus voltage) (220V)	120%	
P11.0	05	Current limit mode	During accelerated running, as the load is too large, the actual acceleration rate of motor is lower than that of output frequency. To prevent the VFD trip due to overcurrent during acceleration, take the current limit measures. Setting range: 0x00-0x11 Ones place: Current limit action selection 0: Invalid 1: Always valid Tens place: Hardware current limit overload alarm 0: Valid 1: Invalid 1:	0x01	©
P11.0	06	Automatic current limit threshold	Setting range: 50.0–200.0% (of the rated VFD output current)	160.0%	0
P11.0)7	Frequency drop rate during current limit	Setting range: 0.00–50.00Hz/s	10.00 Hz/s	0

Function code	Name	Description	Default	Modify
P11.08	VFD/motor OL/UL pre-alarm selection	Setting range: 0x0000-0x1132 Ones place: 0: Motor OL/UL pre-alarm, relative to the motor rated current. 1: VFD OL/UL pre-alarm, relative to VFD rated output current. 2: Motor output torque OL/UL pre-alarm, relative to output torque OL/UL pre-alarm, relative to motor rated torque. Tens place: 0: The VFD continues to work for an OL/UL alarm 1: The VFD continues to work for a UL alarm but stops running for an OL fault 2: The VFD continues to work for an OL alarm but stops running for a UL fault 3. The VFD stops running for an OL/UL alarm Hundreds place: 0: Detect all the time. 1: Detect during constant speed running Thousands place: VFD overload current reference selection 0: Related to current calibration coefficient 1: Unrelated to current calibration coefficient	0x0000	0
P11.09	Underload pre-alarm detection threshold	If the VFD or motor output current is larger than the overload pre-alarm detection level (P11.09), and the duration exceeds the overload	150%	0

Function code	Name	Description	Default	Modify
		pre-alarm detection time (P11.10), overload pre-alarm signal will be outputted. Setting range: P11.11–200% (relative value determined by the ones place of P11.08)		
P11.10	Overload pre-alarm detection time	Setting range: 0.1–3600.0s	1.0s	0
P11.11	Underload pre-alarm detection threshold	Underload pre-alarm signal will be outputted if the output current of the VFD or motor is lower than underload pre-alarm detection level (P11.11), and the duration exceeds underload pre-alarm detection time (P11.12). Setting range: 0 –P11.09 (relative value determined by the ones place of P11.08) Setting range: 0.1–3600.0s	50%	0
P11.12	Underload pre-alarm detection time	Underload pre-alarm signal will be outputted if the output current of the VFD or motor is lower than underload pre-alarm detection level (P11.11), and the duration exceeds underload pre-alarm detection time (P11.12). Setting range: 0.1–3600.0s	1.0s	0
P11.13	Fault output terminal action upon fault occurring	Specifies the action of fault output terminals at undervoltage and fault reset. Setting range: 0x00-0x11 Ones place: 0: Act upon an undervoltage fault 1: Do not act upon an undervoltage fault Tens place:	0x00	0

Function code	Name	Description	Default	Modify
		O: Act during the automatic reset period 1: Do not act during the automatic reset period		
P11.14	Speed deviation detection value	Specifies the speed deviation detection value. Setting range: 0.0–50.0%	10.0%	0
P11.15	Speed deviation detection time	Specifies the speed deviation detection time. If the speed deviation detection time is smaller than the set value, the VFD continues running. Setting range: 0.0–10.0s Note: Speed deviation protection is invalid when P11.15 is set to 0.0.	2.0s	0
P11.16	Automatic frequency-red uction during voltage drop	Setting range: 0–1 0: Disable 1: Valid	0	0
P11.17	Proportional coefficient of voltage regulator during undervoltage stall	Specifies the proportional coefficient of the bus voltage regulator during undervoltage stall. Setting range: 0–127	20	0
P11.18	Integral coefficient of voltage regulator during undervoltage stall	Specifies the integral coefficient of the bus voltage regulator during undervoltage stall. Setting range: 0–1000	5	0
P11.19	Proportional coefficient of current regulator	Specifies the proportional coefficient of the active current regulator during undervoltage stall. Setting range: 0–1000	20	0

Function code	Name	Description	Default	Modify
	during undervoltage stall			
P11.20	Integral coefficient of current regulator during undervoltage stall	Specifies the integral coefficient of the active current regulator during undervoltage stall. Setting range: 0–2000	20	0
P11.21	Proportional coefficient of voltage regulator during overvoltage stall	Specifies the proportional coefficient of the bus voltage regulator during overvoltage stall. Setting range: 0–127	60	0
P11.22	Integral coefficient of voltage regulator during overvoltage stall	Specifies the integral coefficient of the bus voltage regulator during overvoltage stall. Setting range: 0–1000	5	0
P11.23	Proportional coefficient of current regulator during overvoltage stall	Specifies the proportional coefficient of the active current regulator during overvoltage stall. Setting range: 0–1000	60	0
P11.24	Integral coefficient of current regulator during	Specifies the integral coefficient of the active current regulator during overvoltage stall. Setting range: 0–2000	250	0

Function code	Name	Description	Default	Modify
	overvoltage stall			
P11.25	VFD overload integral enabling	Setting range: 0–1 0: Disable. The overload timing value is reset to zero after the VFD is stopped. In this case, the determination of VFD overload takes more time, and therefore the effective protection over the VFD is weakened. 1: Enable. The overload timing value is not reset, and the overload timing value is accumulative. In this case, the determination of VFD overload takes less time, and therefore the protection over the VFD can be performed more quickly.	0	©
P11.26- P11.27	Reserved	-	-	-
P11.28	SPO switch-on detection delay time	Setting range: 0.0–60.0s Note: The SPO detection is started only after the VFD runs for the delay time P11.28 to avoid false alarms caused by the unstable frequency.	5.0s	0
P11.29	SPO unbalance factor	Setting range: 0–10	6	0
P11.30	Input phase loss detection time	Setting range: 0.500–60.000s	10.000s	0
P11.32	Reserved	-	-	-

Group P12—Parameters of motor 2

Function code	Name	Description	Default	Modify
P12.00	Type of motor 2	Setting range: 0–1 0: Asynchronous motor (AM) 1: Synchronous motor (SM)	0	0
P12.01	Rated power of AM 2	Setting range: 0.1–3000.0kW	Model depended	0
P12.02	Rated frequency of AM 2	Setting range: 0.01Hz–P00.03 (Max. output frequency)	50.00Hz	0
P12.03	Rated speed of AM 2	Setting range: 1–60000rpm	Model depended	0
P12.04	Rated voltage of AM 2	Setting range: 0–1200V	Model depended	0
P12.05	Rated current of AM 2	Setting range: 0.08–600.00A	Model depended	0
P12.06	Stator resistance of AM 2	Setting range: 0.001–65.535Ω	Model depended	0
P12.07	Rotor resistance of AM 2	Setting range: 0.001–65.535Ω	Model depended	0
P12.08	Leakage inductance of AM 2	Setting range: 0.1–6553.5mH	Model depended	0
P12.09	Mutual inductance of AM 2	Setting range: 0.1–6553.5mH	Model depended	0
P12.10	No-load current of AM 2	Setting range: 0.01–655.35A	Model depended	0
P12.11	Magnetic saturation coefficient 1 of iron core of AM 2	Setting range: 0.0–100.0%	80.0%	0

Function code	Name	Description	Default	Modify
P12.12	Magnetic saturation coefficient 2 of iron core of AM 2	Setting range: 0.0–100.0%	68.0%	0
P12.13	Magnetic saturation coefficient 3 of iron core of AM 2	Setting range: 0.0–100.0%	57.0%	0
P12.14	Magnetic saturation coefficient 4 of iron core of AM 2	Setting range: 0.0–100.0%	40.0%	0
P12.15	Rated power of SM 2	Setting range: 0.1–3000.0kW	Model depended	0
P12.16	Rated frequency of SM 2	Setting range: 0.01Hz–P00.03 (Max. output frequency)	50.00Hz	0
P12.17	Number of pole pairs of SM 2	Setting range: 1–128	2	0
P12.18	Rated voltage of SM 2	Setting range: 0–1200V	Model depended	0
P12.19	Rated current of SM 2	Setting range: 0.08–600.00A	Model depended	0
P12.20	Stator resistance of SM 2	Setting range: 0.001–65.535Ω	Model depended	0
P12.21	Direct-axis inductance of SM 2	Setting range: 0.01–655.35mH	Model depended	0
P12.22	Quadrature-ax is inductance of SM 2	Setting range: 0.01–655.35mH	Model depended	0

Function code	Name	Description	Default	Modify
P12.23	Counter-emf constant of SM 2	Setting range: 0–10000	300	0
P12.24	Initial pole position of SM 2	Setting range: 0x0000–0xFFFF	0x0000	•
P12.25	Identification current of SM 2	Setting range: 0–50%	10%	•
P12.26	Overload protection selection of motor 2	Setting range: 0–2 0: No protection 1: Common motor (with low-speed compensation) As the cooling effect of a common motor is degraded at low speed running, the corresponding electronic thermal protection value needs to be adjusted properly, the low compensation indicates lowering the overload protection threshold of the motor whose running frequency is lower than 30Hz. 2: Frequency-variable motor (without low-speed compensation) The heat dissipation function for a variable-frequency motor is not impacted by the rotation speed, and therefore it is not necessary to adjust the protection value at low speed running.	2	©
P12.27	Overload protection coefficient of motor 2	Specifies the motor overload protection coefficient. A small motor overload protection coefficient indicates a great overload multiplication (M). When M=116%, protection is performed after motor overload	100.0%	0

Function	Name	Description	Default	Modify
code	Nume	·	Delaute	mouny
		lasts for 1 hour; when M=150%, protection is performed after motor overload lasts for 12 minutes; when M=180%, protection is performed after motor overload lasts for 5 minutes; when M=200%, protection is performed after motor overload lasts for 60 seconds; and when M≥400%, protection is performed immediately.		
		Setting range: 20.0%–150.0%		
P12.28	Power display calibration coefficient of motor 2	Used to adjust the power display value of motor 2. However, it does not affect the control performance of the VFD. Setting range: 0.00–3.00	1.00	0
P12.29	Parameter display of motor 2	Setting range: 0–1 0: Display by motor type. In this mode, only parameters related to the present motor type are displayed.	0	0
		1: Display all. In this mode, all the motor parameters are displayed.		
P12.30	System inertia of motor 2	Setting range: 0.000–30.000kg • m ²	0.000 kg • m²	0
P12.31	Reserved	-		-
P12.32	Power factor of AM 2	Setting range: 0.00–1.00 For AMs, before setting P12.31 to the enabling option, set P12.32 according to the motor nameplate; otherwise, the calculation may have deviation.	0.85	0
P12.33	High word of rated speed of AM 2	Setting range: 0–30(10kRPM)	0	0

Function code	Name	Description	Default	Modify
P12.34	Iron core saturation coefficient 1 of AM 2	Setting range: 0.0–200.0%	125.0%	0
P12.35	Iron core saturation coefficient 2 of AM 2	Setting range: 0.0–200.0%	125.0%	0
P12.36	Mutual inductance saturation coefficient 1 of motor 2	Setting range: 0.0–200.0%	88.0%	0
P12.37	Mutual inductance saturation coefficient 2 of motor 2	Setting range: 0.0–200.0%	88.0%	0
P12.38	Mutual inductance flux weakening coefficient 1 of motor 2	Setting range: 0.0–200.0%	112.5%	0
P12.39	Mutual inductance flux weakening coefficient 2 of motor 2	Setting range: 0.0–200.0%	117.6%	0
P12.40	Mutual inductance flux weakening coefficient 3 of motor 2	Setting range: 0.0–200.0%	122.8%	0

Function code	Name	Description	Default	Modify
P12.41	Mutual inductance flux weakening coefficient 4 of motor 2	Setting range: 0.0–200.0%	125.0%	0

Group P13—SM control

Function code	Name	Description	Default	Modify
P13.00	SM injected-curre nt decrease ratio	Specifies the reduction rate of the input reactive current. When the active current of the synchronous motor increases to some extent, the input reactive current can be reduced to improve the power factor of the motor. Setting range: 0.0%-100.0% (of the motor rated current)	80.0%	0
P13.01	Detection mode of initial pole	Setting range: 0–2 0: No detection 1: Reserved 2: Pulse superposition	2	0
P13.02	Pull-in current 1	Specifies the pole position orientation current. It is valid within the lower limit of pull-in current switch-over frequency threshold. If you need to increase the start torque, increase the value of this function parameter properly. Setting range: -100.0%-100.0% (of the motor rated current)	30.0%	0
P13.03	Pull-in current 2	Specifies the pole position orientation current. It is valid within the upper limit of pull-in current switch-over frequency threshold. You do not need to change the value in most cases.	0.0%	0

Function code	Name	Description	Default	Modify
		Setting range: -100.0%-100.0% (of the motor rated current)		
P13.04	Switch-over frequency of pull-in current	Setting range: 0.0–200.0% Note: The value is relative to the motor rated frequency.	20.0%	0
P13.05	SVC observer speed feedback bandwidth	Setting range: 10.0–200.0	62.5	0
P13.06	High-frequenc y superposition voltage	Specifies the pulse current threshold when the initial magnetic pole position is detected in the pulse mode. The value is a percentage in relative to the rated current of the motor. Setting range: 0.0–300% (of the motor rated voltage)	80.0%	0
P13.07	Control parameter 0	Setting range: 0.0–400.0	0.0	0
P13.08	Control parameter 1	Setting range: 0x0000–0xFFFF	0x0000	0
P13.09	Reserved	-	-	-
P13.10	Initial compensation angle of SM	Setting range: 0.0–359.9	0.0	0
P13.11	Mal-adjustme nt detection time	Used to adjust the responsiveness of anti-maladjustment function. If the load inertia is large, increase the value of this parameter properly, however, the responsiveness may slow down accordingly. Setting range: 0.0–10.0s	0.5s	0
P13.12- P13.13	Reserved	-	-	-
P13.14	Deadzone compensation switching	0-1000	0	0

Function code	Name	Description	Default	Modify
	current permillage			
P13.15	SM counter-emf adaptation bandwidth	Setting range: 0.1–10.0	0.1	0
P13.16	Reserved	-	-	-
P13.19	Observer coefficient 1	Setting range: 0–200	2	0
P13.20	Observer coefficient 2	Setting range: 0–200	8	0
P13.21	Observer coefficient 3	Setting range: 0.0–20.0	0.1	0
P13.22	Observer coefficient 4	Setting range: 0.0–500.0	0.0	0
P13.23	IF enabling	Setting range: 0x0000–0x0002 Ones place: Enable IF 0: Invalid 1: Valid during ACC/DEC 2: Valid only during ACC Tens place: Start Stator resistance identification 0: Invalid 1: Enable (check the identification result through P17.62)	0x0000	0
P13.24	IF current setting	Setting range: 0.0–130.0 (%)	100.0	0
P13.25	IF switch-out frequency point	Setting range: 0.0–100.0 (%)	15.0	0

Group P14—Serial communication

Function code	Name	Description	Default	Modify
P14.00	Local communication address	Setting range: 1-247 When the master writes the slave communication address to 0 indicating a broadcast address in a frame, all the salves on the Modbus bus receive the frame but do not respond to it. The communication addresses on the communication network are unique, which is the basis of the point-to-point communication. Note: The slave address cannot be set to 0.	1	0
P14.01	Communication baud rate setting	Specifies the data transmission speed between the host controller and the VFD. Setting range: 0-7 0: 1200bps 1: 2400bps 2: 4800bps 3: 9600bps 4: 19200bps 5: 38400bps 6: 57600bps 7: 115200bps Note: The baud rate set on the VFD must be consistent with that on the host controller. Otherwise, the communication fails. A greater baud rate indicates faster communication.	4	0
P14.02	Data bit check setting	Setting range: 0–5 0: No check (N, 8, 1) for RTU 1: Even check (E, 8, 1) for RTU 2: Odd check (O, 8, 1) for RTU 3: No check (N, 8, 2) for RTU 4: Even check (E, 8, 2) for RTU	1	0

Function code	Name	Description	Default	Modify
code		5: Odd check (O, 8, 2) for RTU Note: The data format set on the VFD must be consistent with that on the host controller. Otherwise, the communication fails.		
P14.03	Communication response delay	Setting range: 0–200ms	5ms	0
P14.04	RS485 communication timeout period	Setting range: 0.0–60.0s Note: When it is set to 0.0, the timeout is invalid.	0.0s	0
P14.05	Transmission fault processing	Setting range: 0-3 0: Report an alarm and coast to stop 1: Keep running without reporting an alarm 2: Stop in enabled stop mode without reporting an alarm (applicable only to communication mode) 3: Stop in enabled stop mode without reporting an alarm (applicable to any mode)	0	0
P14.06	Modbus communication processing action selection	Setting range: 0x000-0x111 Ones place: 0: Respond to write operations 1: Not respond to write operations Tens place: 0: Communication password protection is invalid. 1: Communication password protection is valid. Hundreds place: (valid for RS485 communication only) 0: User-defined addresses specified by P14.07 and P14.08 are invalid. 1: User-defined addresses specified by P14.07 and P14.08 are valid.	0x000	0

Function code	Name	Description	Default	Modify
P14.07	User-defined running command address	Setting range: 0x0000-0xFFFF	0x2000	0
P14.08	User-defined frequency setting address	Setting range: 0x0000-0xFFFF	0x2001	0
P14.09	Reserved	-	-	-
P14.10	Enabling 485 upgrade	Setting range: 0–1	0	0
P14.11	Bootload software version	Setting range: 0.00–655.35	Version depended	•
P14.12	Display of no upgrade bootload fault	Setting range: 0–1	0	0
P14.13	Monitoring variable address 1	Setting range: 0x0000–0xFFFF	0x0000	0
P14.14	Monitoring variable address 2	Setting range: 0x0000–0xFFFF	0x0000	0
P14.15	Monitoring variable address 3	Setting range: 0x0000–0xFFFF	0x0000	0
P14.16	Monitoring variable address 4	Setting range: 0x0000-0xFFFF	0x0000	0

Group P15—User-defined read address functions

Function code	Name	Description	Default	Modify
P15.00	User-defined read address 1	Setting range: 0x0000–0xFFFF	0xFFFF	0
P15.01	Local address corresponding to user-defined	Setting range: 0x0000-0xFFFF	0xFFFF	0

Function code	Name	Description	Default	Modify
	read address 1			
P15.02	User-defined	Setting range: 0x0000-0xFFFF	0xFFFF	0
1 13.02	read address 2	Setting runger oxocoo oxi i i i	OXITIT	
	Local address			
P15.03	corresponding	Setting range: 0x0000-0xFFFF	0xFFFF	0
	to user-defined read address 2			
	User-defined			
P15.04	read address 3	Setting range: 0x0000-0xFFFF	0xFFFF	0
	Local address			
	corresponding			
P15.05	to user-defined	Setting range: 0x0000–0xFFFF	0xFFFF	0
	read address 3			
D15.00	User-defined	S 0 0000 0 FFFF	0 5555	
P15.06	read address 4	Setting range: 0x0000-0xFFFF	0xFFFF	0
	Local address			
P15.07	corresponding	Setting range: 0x0000-0xFFFF	0xFFFF	0
1 13.01	to user-defined	Setting range: 0x0000 0x1111	OXITIT	
	read address 4			
P15.08	User-defined	Setting range: 0x0000-0xFFFF	0xFFFF	0
	read address 5			
	Local address			
P15.09	corresponding to user-defined	Setting range: 0x0000-0xFFFF	0xFFFF	0
	read address 5			
	User-defined			
P15.10	read address 6	Setting range: 0x0000–0xFFFF	0xFFFF	0
	Local address			
	corresponding			
P15.11	to user-defined	Setting range: 0x0000-0xFFFF	0xFFFF	0
	read address 6			
	User-defined			
P15.12	read address	Setting range: 0x0000-0xFFFF	0xFFFF	0
F 13.12	7	Jetting range. 0x0000-0xFFFF	VAFFFF	9

Function code	Name	Description	Default	Modify
P15.13	Local address corresponding to user-defined read address 7	Setting range: 0x0000-0xFFFF	0xFFFF	0
P15.14	User-defined read address 8	Setting range: 0x0000–0xFFFF	0xFFFF	0
P15.15	Local address corresponding to user-defined read address 8	Setting range: 0x0000–0xFFFF	0xFFFF	0
P15.16	User-defined read address 9	Setting range: 0x0000–0xFFFF	0xFFFF	0
P15.17	Local address corresponding to user-defined read address 9	Setting range: 0x0000–0xFFFF	0xFFFF	0
P15.18	User-defined read address	Setting range: 0x0000–0xFFFF	0xFFFF	0
P15.19	Local address corresponding to user-defined read address 10	Setting range: 0x0000–0xFFFF	0xFFFF	0
P15.20	User-defined read address	Setting range: 0x0000-0xFFFF	0xFFFF	0
P15.21	Local address corresponding to user-defined read address 11	Setting range: 0x0000–0xFFFF	0xFFFF	0
P15.22	User-defined read address	Setting range: 0x0000-0xFFFF	0xFFFF	0

Function code	Name	Description	Default	Modify
P15.23	Local address correspondin g to user-defined read address 12	Setting range: 0x0000-0xFFFF	0xFFFF	0
P15.24	User-defined read address	Setting range: 0x0000–0xFFFF	0xFFFF	0
P15.25	Local address correspondin g to user-defined read address 13	Setting range: 0x0000–0xFFFF	0xFFFF	0
P15.26	User-defined read address 14	Setting range: 0x0000–0xFFFF	0xFFFF	0
P15.27	Local address correspondin g to user-defined read address 14	Setting range: 0x0000–0xFFFF	0xFFFF	0
P15.28	User-defined read address	Setting range: 0x0000–0xFFFF	0xFFFF	0
P15.29	Local address correspondin g to user-defined read address 15	Setting range: 0x0000–0xFFFF	0xFFFF	0
P15.30	User-defined read address 16	Setting range: 0x0000-0xFFFF	0xFFFF	0

Function code	Name	Description	Default	Modify
P15.31	Local address corresponding to user-defined read address 16	Setting range: 0x0000–0xFFFF	0xFFFF	0

Group P16—User-defined write address functions

Function code	Name	Description	Default	Modify
P16.00	User-defined write address 1	Setting range: 0x0000–0xFFFF	0xFFFF	0
P16.01	Local address correspondin g to user-defined write address 1	Setting range: 0x0000–0xFFFF	0xFFFF	0
P16.02	User-defined write address 2	Setting range: 0x0000–0xFFFF	0xFFFF	0
P16.03	Local address correspondin g to user-defined write address 2	Setting range: 0x0000–0xFFFF	0xFFFF	0
P16.04	User-defined write address 3	Setting range: 0x0000-0xFFFF	0xFFFF	0
P16.05	Local address correspondin g to user-defined write address 3	Setting range: 0x0000–0xFFFF	0xFFFF	0

Function code	Name	Description	Default	Modify
P16.06	User-defined write address 4	Setting range: 0x0000-0xFFFF	0xFFFF	0
P16.07	Local address corresponding to user-defined write address 4	Setting range: 0x0000–0xFFFF	0xFFFF	0
P16.08	User-defined write address 5	Setting range: 0x0000-0xFFFF	0xFFFF	0
P16.09	Local address corresponding to user-defined write address 5	Setting range: 0x0000–0xFFFF	0xFFFF	0
P16.10	User-defined write address 6	Setting range: 0x0000-0xFFFF	0xFFFF	0
P16.11	Local address corresponding to user-defined write address 6	Setting range: 0x0000–0xFFFF	0xFFFF	0
P16.12	User-defined write address 7	Setting range: 0x0000-0xFFFF	0xFFFF	0
P16.13	Local address corresponding to user-defined write address 7	Setting range: 0x0000–0xFFFF	0xFFFF	0
P16.14	User-defined write address 8	Setting range: 0x0000-0xFFFF	0xFFFF	0
P16.15	Local address corresponding to user-defined write address 8	Setting range: 0x0000–0xFFFF	0xFFFF	0
P16.16	User-defined write address 9	Setting range: 0x0000-0xFFFF	0xFFFF	0

Function code	Name	Description	Default	Modify
P16.17	Local address corresponding to user-defined write address 9	Setting range: 0x0000–0xFFFF	0xFFFF	0
P16.18	User-defined write address 10	Setting range: 0x0000-0xFFFF	0xFFFF	0
P16.19	Local address corresponding to user-defined write address 10	Setting range: 0x0000–0xFFFF	0xFFFF	0
P16.20	User-defined write address 11	Setting range: 0x0000-0xFFFF	0xFFFF	0
P16.21	Local address corresponding to user-defined write address 11	Setting range: 0x0000–0xFFFF	0xFFFF	0
P16.22	User-defined write address 12	Setting range: 0x0000-0xFFFF	0xFFFF	0
P16.23	Local address corresponding to user-defined write address 12	Setting range: 0x0000–0xFFFF	0xFFFF	0
P16.24	User-defined write address 13	Setting range: 0x0000–0xFFFF	0xFFFF	0
P16.25	Local address corresponding to user-defined write address 13	Setting range: 0x0000–0xFFFF	0xFFFF	0

Function code	Name	Description	Default	Modify
P16.26	User-defined write address 14	Setting range: 0x0000-0xFFFF	0xFFFF	0
P16.27	Local address corresponding to user-defined write address 14	Setting range: 0x0000–0xFFFF	0xFFFF	0
P16.28	User-defined write address 15	Setting range: 0x0000–0xFFFF	0xFFFF	0
P16.29	Local address corresponding to user-defined write address 15	Setting range: 0x0000–0xFFFF	0xFFFF	0
P16.30	User-defined write address 16	Setting range: 0x0000-0xFFFF	0xFFFF	0
P16.31	Local address corresponding to user-defined write address 16	Setting range: 0x0000–0xFFFF	0xFFFF	0

Group P17—Status viewing

Function code	Name	Description	Default	Modify
P17.00	Set frequency	Displays the present set frequency of the VFD. Setting range: 0.00Hz-P00.03	0.00Hz	•
P17.01	Output frequency	Displays the present output frequency of the VFD. Setting range: 0.00Hz–P00.03	0.00Hz	•
P17.02	Ramp reference frequency	Displays the present ramp reference frequency of the VFD. Setting range: 0.00Hz-P00.03	0.00Hz	•

Function code	Name	Description	Default	Modify
P17.03	Output voltage	Displays the present output voltage of the VFD. Setting range: 0–1200V	0V	•
P17.04	Output current	Displays the valid value of present output current of the VFD. Setting range: 0.00–500.00A	0.00A	•
P17.05	Motor rotation speed	Displays the present motor rotation speed. Setting range: 0–65535rpm	0rpm	•
P17.06	Torque current	Displays the present torque current of the VFD. Setting range: -300.00–300.00A	0.00A	•
P17.07	Exciting current	Displays the present exciting current of the VFD. Setting range: -300.00–300.00A	0.00A	•
P17.08	Motor power	Displays the present motor power. 100% corresponds to the motor rated power. Setting Range: -300.0–300.0% (of the motor rated power)	0.0%	•
P17.09	Motor output torque	Displays the present output torque of the VFD. 100% corresponds to the motor rated torque. Setting range: -250.0-250.0%	0.0%	•
P17.10	Estimated motor frequency	Used to indicate the estimated motor rotor frequency under the open-loop vector condition. Setting range: 0.00–P00.03	0.00Hz	•
P17.11	DC bus voltage	Displays the present DC bus voltage of the VFD. Setting range: 0.0–2000.0V	0.0V	•
P17.12	Digital input terminal state	Displays the present digital input terminal state of the VFD. Setting range: 0x000–0x1FF The bits from high to low correspond to HDIA, S8, S7, S6, S5, S4, S3, S2, and S1 respectively.	0x000	•

Function code	Name	Description	Default	Modify
P17.13	Digital output terminal state	Displays the present digital output terminal state of the VFD. Setting range: 0x00–0x0F The bits from high to low correspond to RO2, RO1, Reserved, and Y1 respectively.	0x00	•
P17.14	Digital adjustment value	Displays the adjustment on the VFD through the UP/DOWN terminal. Setting range: 0.00Hz–P00.03	0.00Hz	•
P17.15	Torque reference value	Indicates the percentage of the rated torque of the present motor, displaying the torque reference. Setting range: -300.0%-300.0% (of the motor rated current)	0.0%	•
P17.16	Linear speed	0-65535	0	•
P17.17	Reserved	-	-	-
P17.18	Count value	0-65535	0	•
P17.19	Al1 input voltage	Displays the AI1 input signal. Setting range: 0.00–10.00V	0.00V	•
P17.20	AI2 input voltage	Displays the AI2 input signal. Setting range: 0.00V–10.00V	0.00V	•
P17.21	AI3 input voltage	Displays the AI3 input signal. Setting range: 0.00V–10.00V	0.00V	•
P17.22	HDIA input frequency	Displays the HDIA input frequency. Setting range: 0.000–50.000kHz	0.000 kHz	•
P17.23	PID reference value	Displays the PID reference value. Setting range: -100.0–100.0%	0.0%	•
P17.24	PID feedback value	Displays the PID feedback value. Setting range: -100.0–100.0%	0.0%	•
P17.25	Motor power factor	Displays the power factor of the present motor. Setting range: -1.00-1.00	0.00	•
P17.26	Duration of this run	Displays the duration of this run of the VFD. Setting range: 0–65535min	0min	•
P17.27	Present step of simple PLC	Displays the present step of the simple PLC function.	0	•

Function code	Name	Description	Default	Modify
		Setting range: 0–15		
P17.28	Motor ASR controller output	Displays the ASR controller output value as a percentage relative to the rated motor torque under the vector control mode. Setting range: -300.0%-300.0% (of the motor rated current)	0.0%	•
P17.29	Pole angle of open-loop SM	Displays the initial identification angle of SM. Setting range: 0.0–360.0	0.0	•
P17.30	Phase compensation of SM	Displays the phase compensation of SM. Setting range: -180.0-180.0	0.0	•
P17.31	Reserved	-	-	-
P17.32	Motor flux linkage	0.0%-200.0%	0.0%	•
P17.33	Exciting current reference	Displays the exciting current reference value under the vector control mode. Setting range: -300.00–300.00A	0.00A	•
P17.34	Torque current reference	Displays the torque current reference value under the vector control mode. Setting range: -300.00–300.00A	0.00A	•
P17.35	Reserved	-	-	-
P17.36	Output torque	Displays the output torque value. During forward running, the positive value is the motoring state while the negative value is generating state. During reverse running, the positive value is the generating state while the negative value is the motoring state. Setting range: -3000.0–3000.0 N · m	0.0 N • m	•
P17.37	Motor overload count value	Setting range: 0–65535	0	•

Function code	Name	Description	Default	Modify
P17.38	Process PID output	Setting range: -100.0%-100.0%	0.0%	•
P17.39	Function code in parameter download error	Setting range: 0.00–99.00	0.00	•
P17.40	Motor control mode	Setting range: 0x000-0x122 Ones place: Control mode 0: Open-loop vector control 1: Reserved 2: VF control Tens place: Open-loop vector control mode 0: SVC0 1: SVC1 2: Reserved Hundreds place: Motor type 0: Asynchronous motor (AM) 1: Synchronous motor (SM)	0x000	•
P17.41	Electromotive torque upper limit	Setting range: 0.0%–300.0% (of the motor rated current)	0.0%	•
P17.42	Braking torque upper limit	Setting range: 0.0%–300.0% (of the motor rated current)	0.0%	•
P17.43	Forward rotation upper-limit frequency in torque control	Setting range: 0.00– <u>P00.03</u>	0.00Hz	•
P17.44	Reverse rotation upper-limit frequency in torque control	Setting range: 0.00– <u>P00.03</u>	0.00Hz	•

Function	Name	Description	Default	Modify
code		, , , , , , , , , , , , , , , , , , ,		
P17.45	Inertia compensation	Setting range: -100.0%–100.0%	0.0%	•
	torque			
P17.46	Friction compensation torque	Setting range: -100.0%–100.0%	0.0%	•
P17.47	Motor pole pairs	Setting range: 0–65535	0	•
P17.48	VFD overload count value	Setting range: 0-65535	0	•
P17.49	Frequency set by A source	Setting range: 0.00- <u>P00.03</u>	0.00Hz	•
P17.50	Frequency set by B source	Setting range: 0.00- <u>P00.03</u>	0.00Hz	•
P17.51	PID proportional output	Setting range: -100.0%-100.0%	0.0%	•
P17.52	PID integral output	Setting range: -100.0%-100.0%	0.0%	•
P17.53	PID differential output	Setting range: -100.0%-100.0%	0.0%	•
P17.54	PID present proportional gain	Setting range: 0.00–100.00	0.00	•
P17.55	PID present integral gain	Setting range: 0.00–10.00s	0.00s	•
P17.56	PID present differential time	Setting range: 0.00–10.00s	0.00s	•
P17.57- P17.58	Reserved	-	-	-
P17.59	Monitoring variable 1	Setting range: 0–65535	0	•
P17.60	Monitoring variable 2	Setting range: 0–65535	0	•
P17.61	Monitoring variable 3	Setting range: 0-65535	0	•

Function code	Name	Description	Default	Modify
P17.62	Monitoring variable 4	Setting range: 0-65535	0	•
P17.63	Reserved	-	-	-

Group P23—Vector control of motor 2

Function code	Name	Description	Default	Modify
P23.00	Speed-loop proportional gain 1	Setting range: 0.0–200.0 Note: Applicable only to vector control mode.	20.0	0
P23.01	Speed-loop integral time 1	Setting range: 0.000–10.000s Note: Applicable only to vector control mode.	0.200s	0
P23.02	Low-point frequency for switching	Setting range: 0.00Hz–P23.05 Note: Applicable only to vector control mode.	5.00Hz	0
P23.03	Speed-loop proportional gain 2	Setting range: 0.0–200.0 Note: Applicable only to vector control mode.	20.0	0
P23.04	Speed-loop integral time 2	Setting range: 0.000–10.000s Note: Applicable only to vector control mode.	0.200s	0
P23.05	High-point frequency for switching	Setting range: P23.02–P00.03 (Max. output frequency) Note: Applicable only to vector control mode.	10.00Hz	0
P23.06	Speed-loop output filter	0–8 (corresponding to 0–2^8/10ms)	0	0
P23.07	Electromotive slip compensation coefficient of vector control	Slip compensation coefficient is used to adjust the slip frequency of the vector control and improve the speed control accuracy of the system. Adjusting the parameter properly can control the speed steady-state error. Setting range: 50–200%	100%	0

Function code	Name	Description	Default	Modify
P23.08	Power-genera tion slip compensation coefficient of vector control	Slip compensation coefficient is used to adjust the slip frequency of the vector control and improve the speed control accuracy of the system. Adjusting the parameter properly can control the speed steady-state error. Setting range: 50–200%	100%	0
P23.09	Reserved	-		-
P23.10	Current loop bandwidth	Setting range: 0–2000 Note: P23.10 is a current loop PI regulation parameter. It impacts the dynamic response speed and control accuracy of the system. Generally, you do not need to modify it. Applicable to SVC 0 (P00.00 = 0) and SVC 1 (P00.00 = 1).		0
P23.11	Speed-loop differential gain of motor 2	Setting range: 0.00–10.00	0.00	0

Your Trusted Industry Automation Solution Provider



Shenzhen INVT Electric Co., Ltd.

Address: INVT Guangming Technology Building, Songbai Road, Matian, Guangming District, Shenzhen, China

INVT Power Electronics (Suzhou) Co., Ltd.

Address: No. 1 Kunlunshan Road, Science & Technology Town, Suzhou New District, Jiangsu, China

Website: www.invt.com





INVT mobile website

INVT e-manual



Copyright© INVT.

Manual information may be subject to change without prior notice.