

PARTS LIST


INSTRUCTION

Number	Parts	ltem	Quantity
01		Curved Cushion Platform	1
02		Curved Wooden Platform	1
03		Scratching Wooden Platform	1
04		Base Platform	1
05		Top Wooden Pole	1
06		Middle Wooden Pole	1
07		Large Base Wooden Pole	1
08		Medium Base Wooden Pole	1
09		Small Base Wooden Pole	1
10		Bean-shaped Scratching Board	1
11	•	Cat Teaser Ball	1
12		Large Bolt	3
13	000	Large Washers	3
14		Small Bolt	6
15	000	Furniture Pads	3
16		Allen Wrench	1

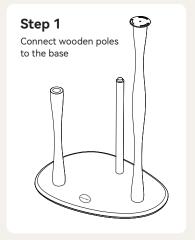

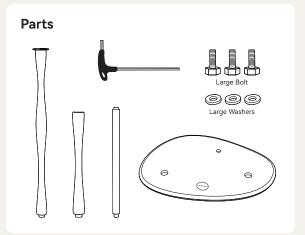


Place the base horizontally and insert the wooden rod vertically into the base

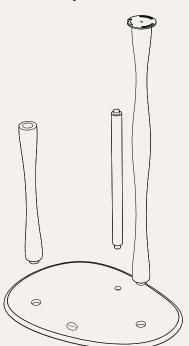


(Ensure the correct alignment of the wooden rod model and the logo)


2 Pass the large washer through the large screw

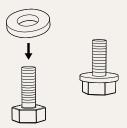


3 Tighten the bolts into the base to secure it

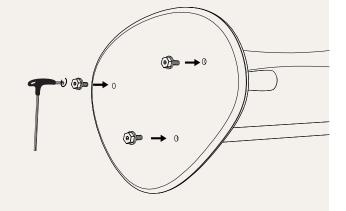




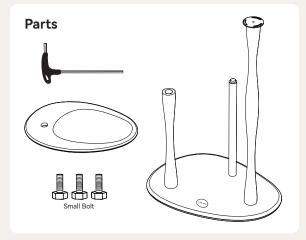


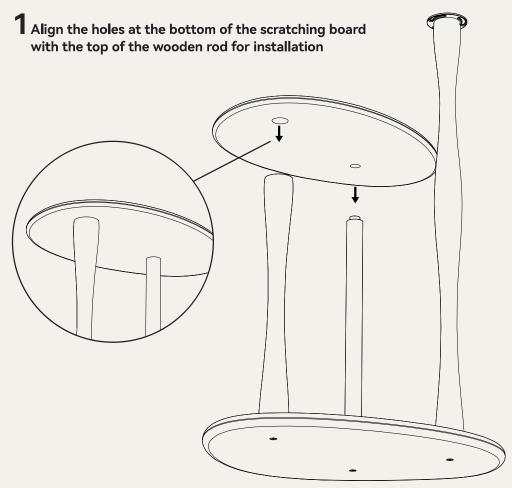




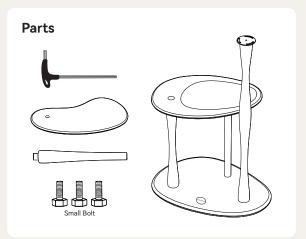



1 After screwing the middle wooden rod into the bolt, align the groove at the bottom of the arched wooden platform with the flange on the large base wooden rod for connection.

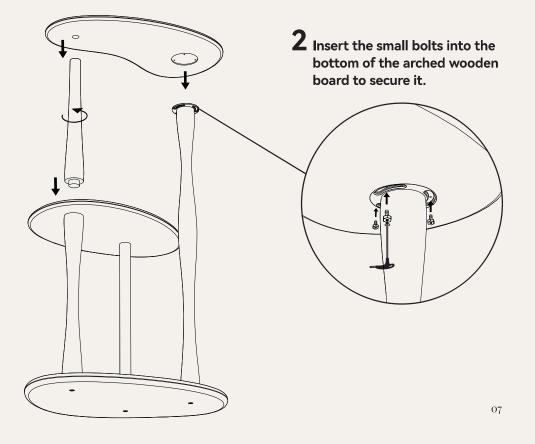


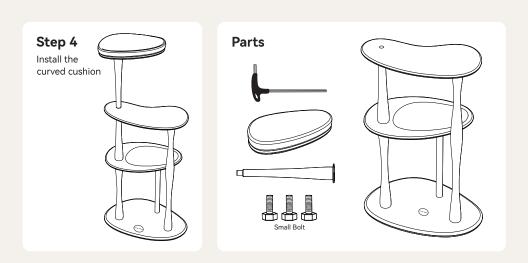


After screwing the top wooden rod into the bolt, align the groove at the bottom of the curved cushion platform with the flange on the top wooden rod for connection.

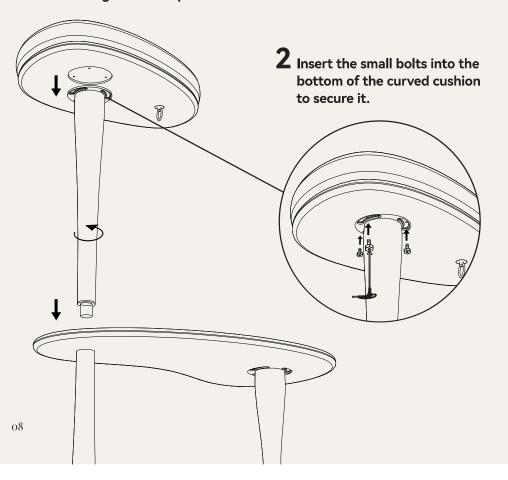

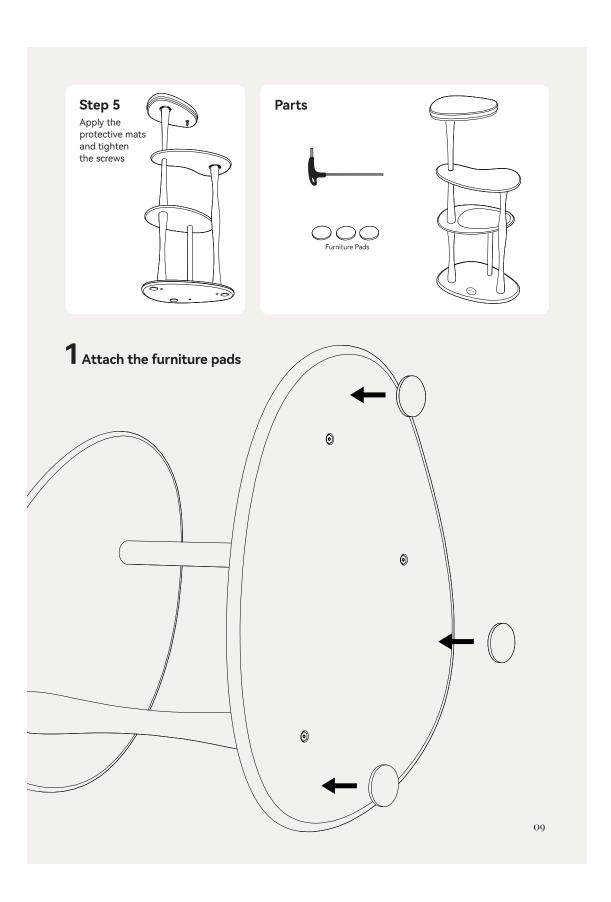


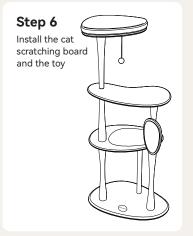

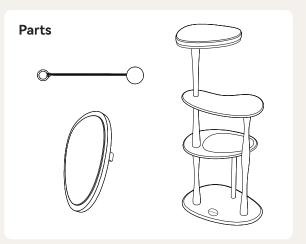



1 Open the ring clasps alternately.
Pass them through the wooden rod and tighten to secure the position.
Adjust the placement based on your cat's preferences.

2 Install the cat teaser ball.

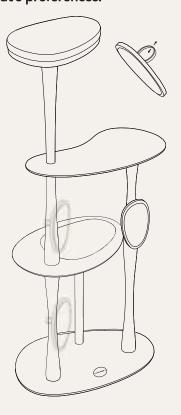

10

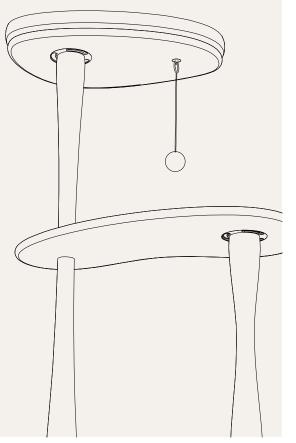

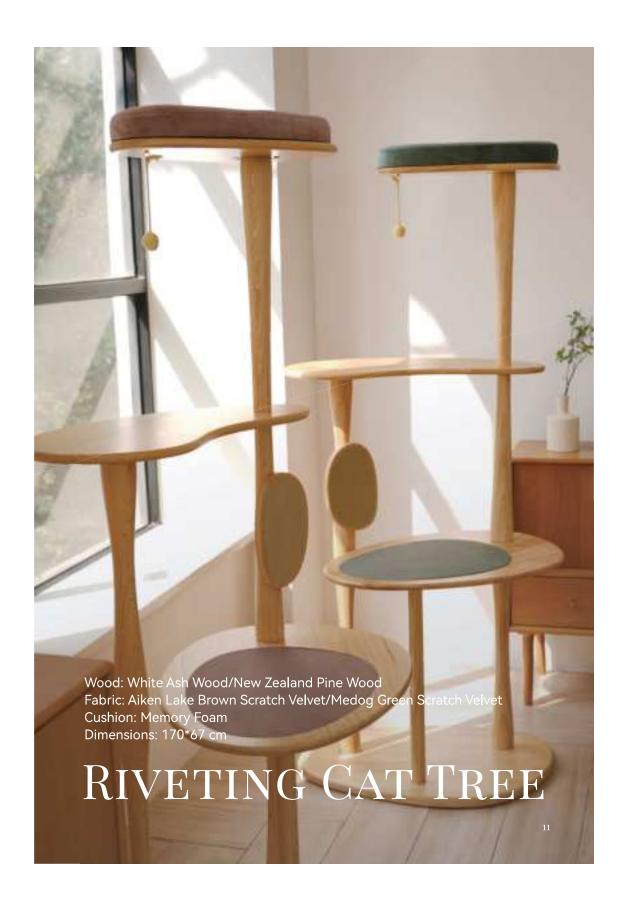



A: Place in a dry, cool area and avoid moisture and direct sunlight. Wipe the wooden parts with a soft, dry cloth to prevent scratches.

Q: How should I clean the cat tree's cushions?

A: Use a lint roller to remove hair daily. For other stains, use a sofa cleaner spray and wipe.

Do not machine wash or expose to direct sunlight, as the cushions contain memory foam which may harden.

Q: How should I choose the placement for the cat tree?

A: Place it on a stable surface away from windowsills. Avoid frequent moves to prevent screws from loosening, ensuring the safety of your pet.

Q: How can I repair or replace parts?

A: If any parts are damaged, lost, or need replacement, please contact the official customer service center.