


USE AND CARE GUIDE

LED SECURITY HALF MOON LIGHT

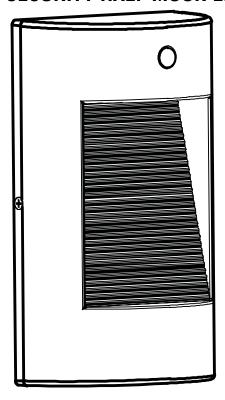

DUSK TO DAWN OPERATION

Questions, problems, missing parts? Before returning to the store, call Commercial Electric Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Table of Contents

able of Contents	<u>)</u>
afety Information	2
arranty	2
re-Installation	3
Tools Required	3
Hardware Included	3
stallation	ļ
oubleshooting	5

Product Specifications:

- 120 VAC, 60 Hz, 12.5 Watts
- Not Dimmable
- Wet Location

Dusk to Dawn Operation:

The light will turn on at dusk and remain on through the night until dawn. The light will remain off throughout the day, until dusk.

Safety Information

For your safety, always remember to:

- Turn off the power supply at the fuse or circuit breaker box before you install the fixture.
- Ground the fixture to avoid potential electric shock and to ensure reliable starting.
- Double-check all connections to be sure they are tight and correct.
- Wear rubber soled shoes and work on a sturdy wooden ladder.
- Account for small parts and destroy packing material, as these may be hazardous to children.

This fixture is designed for use in a circuit protected by a fuse or circuit breaker. It is also designed to be installed in accordance with local electrical codes. If you are unsure about your wiring, consult a qualified electrician or local electrical inspector, and check your local electrical code.

Account for small parts and destroy packing material, as these may be hazardous to children.



WARNING: RISK OF SHOCK. House electric current can cause painful shock or serious injury unless handled properly.



CAUTION: Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.



WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



WARNING: RISK OF CUTS. Some metal parts in the fixture may have sharp edges. To prevent cuts and scrapes, wear gloves when handling the parts.

NOTICE: All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.



WARNING: RISK OF FIRE. Use only on 120V 60Hz circuits.

Before installing your lighting fixture, thoroughly review enclosed installation manual

Supplier's Declaration of Conformity: 47CFR§2.1077ComplianceInformation Responsible Party: Feit Electric Company 4901 Gregg Road, Pico Rivera, CA 90660, USA 562-463-2852 Unique Identifier:

S8PHWM840DDBZHD

FCC STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Limited Warranty

This product is warranted to be free from defects in workmanship and materials for up to 5 years from date of purchase. If it fails to do so, please contact the Customer Service Team at 1-877-527-0313 or visit www.HomeDepot.com.

Pre-Installation



 
NOTE: Hardware not shown to actual size.

TOOLS REQUIRED



 
Phillips screwdriver

PACKAGE CONTENTS









3

Part	Description	Quantity
AA	Half Moon Security Light	1
BB	Mounting Bracket	1
CC	Wire Nuts	3
DD	Fixture Screws	2
EE	Mounting Screws	2

J-box Mount Installation

1


Turning Off the Power

 Turn the power OFF at the switch and fusebox or the circuit breaker.

2

Removing Fixture from Bracket


Remove Half Moon Security Light (AA) from Mounting Bracket (BB) by unscrewing the Fixture Screws (DD).

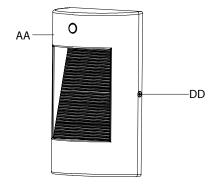

3

Installing Mounting Bracket


 Makesurepowerisoff.Feedpowersupplywiresthrough centerMountingBracket'shole.InstallMountingBracket (BB) onto the J-box using the 2 Mounting Screws (EE).

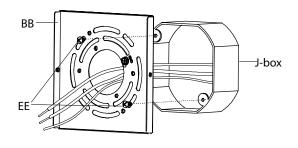

4

Connecting the Wires


 UsingtheWireNuts(CC)provided,connectthebaregrounding wires from the Half Moon Security Light (AA) to the house ground.Connectthewhitefixturewiretotheneutralhousewire. Connecttheblackfixturewiretotheblackpowersupplywire.

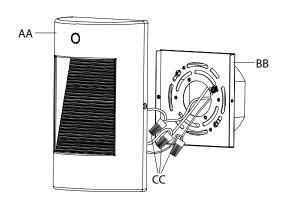

5

Securing the Fixture

 MountHalfMoonSecurityLight(AA)andFixtureScrews(DD) onto the Mounting Bracket (BB). Hand tighten the Fixture Screws (DD) with a screw driver.

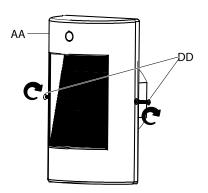

6

Water Proof Seal

To prevent water or moisture from entering the fixture between the fixture and mounting surface, waterproof silicon, caulk or gel should be applied to seal any gaps around the junction point.

Troubleshooting

Problem	Possible Cause	Solution
	The power is off.	Make sure the power supply is on.
The light will not illuminate.	There is a faulty wire connection.	Check the wiring. Contact a qualified and licensedelectricianifyouarenotcomfortable troubleshooting wiring problems.
	Thereisa faultywires witch.	Test or replace the switch.
The light does not automaticallyturnoff	The photocell is covered.	Removeany debrisand clean the photosensor.
duringdaylighthours.	The photocell is in a dark or shaded area.	Allow the photocell to recieve directs unlight.

5



Questions, problems, missing parts? Before returning to the store, call Commercial Electric Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.