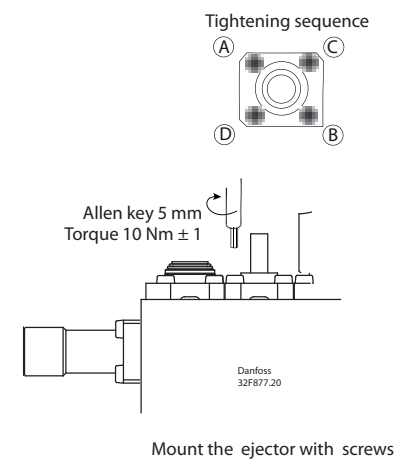
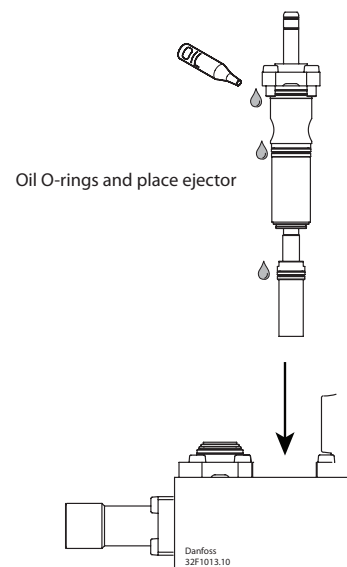
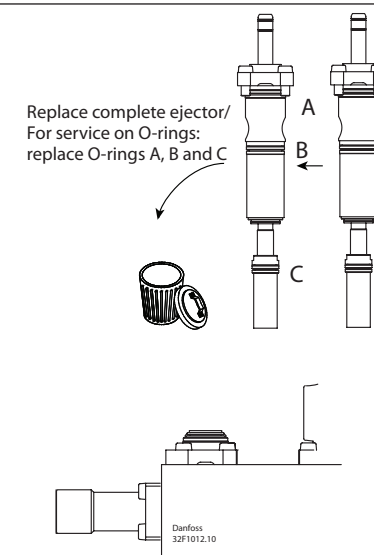
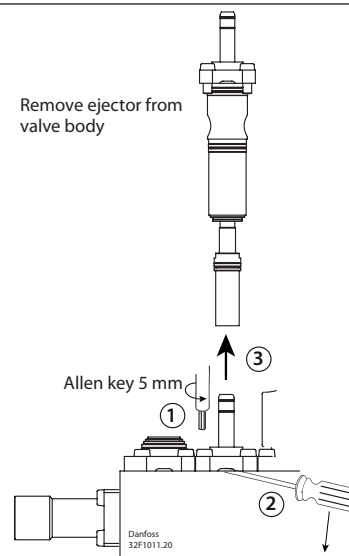


Installation guide

Multi Ejector (Spareparts)

Type CTM 1, CTM 2, CTM 6

032R9791

Service on ejector / O-rings


032R9791

Service on strainer


Allen key 5 mm Remove strainer from valve body	Allen key 5 mm Dismount strainer	E D 5 Clean / replace strainer/ replace O-rings D and E	Allen key 5 mm Torque 6 Nm $\pm$ 1 Assemble strainer
= compressor oil 7 Danfoss 32F899.20 Oil O-rings and place strainer in valve	8 Allen key 5 mm Torque 10 Nm $\pm$ 1 Danfoss 32F898.20 Mount strainer with screws A C B D Tightening sequence		

Service on connectors

CTM 1 - CTM 2

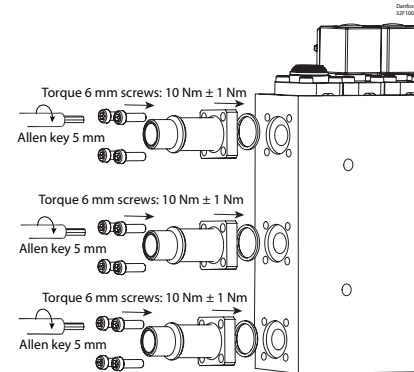

CTM 6

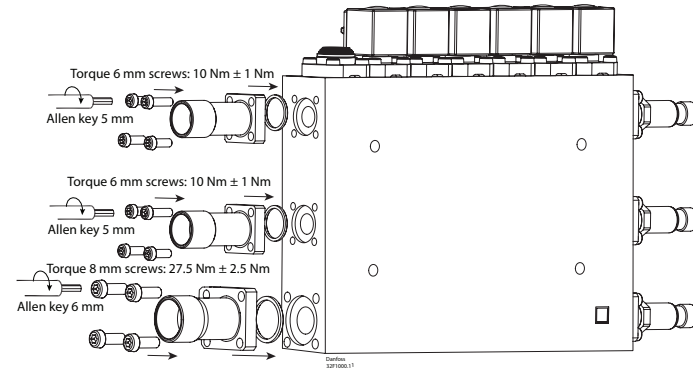

1. Remove connectors with O-rings
2. Replace O-rings and place new connectors
3. Mount new connectors with screws:
 - 6 mm screws torque: 10 Nm $\pm$ 1 Nm
 - 8 mm screws torque: 27.5 Nm $\pm$ 2.5 Nm

Tightening sequence

