



Originale	Sostituto
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Shift + Guide / EPG / -/--
	Back / Return
	Shift + Audio / Lang I/II
	Guide / EPG / -/--
	Fav / Marker / PC

Originale	Sostituto
	Sleep / Timer
	CH+ / Page+
	CH- / Page-
	Picture / Format
	Sound / Title
	Vol+
	Vol-
	AV / Input / RDS
	TV/Radio /
	Audio / Lang I/II
	Info / Angle
	Up
	Down
	Left
	Right
	OK
	Menu / Home





Originale		Sostituto	
	Exit		Exit / Cancel / Clear
	Text		Text / Goto
	Play/Index		Play / Slow
	Pause/Mix		Pause / Step / Freeze
	Stop/Reveal		Stop / Hold
	<</Hold		<< / Tune-
	>>/Subpage		>> / Tune+
	I<</Size		I<< / Preset-
	>>I/Cancel		>>I / Preset+
	Sub-T		Subtitle / EQ
	Rec		Rec / Rec Mode
	Rec.List		Smart / List
	T-Shift		Display / Media
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

