



Designer 4 Slice Toaster



Model Number

KY-866-WH / KY-866-GR / KY-866-O

Quick Start Guide

Please read the full instruction manual thoroughly before use.
It contains comprehensive usage instructions and important safety advice.
This quick start guide only contains basic instructions.



Step 1

Select the browning level: the higher the number, the longer the toasting time and the darker the toast.



Step 2

Place bread into the toasting slots.



Step 3

Push down the toasting lever completely to start.



Step 4

When selecting a special function, press the relevant button after having pushed down the toasting lever.



Step 5

To stop the toasting cycle at any time, press the cancel button.



Step 6

When the toast is ready, the toasting lever moves up and the toaster switches off. You can now remove the bread.



For more information
please visit www.stirlingappliances.com.au
or call 1300 112 534

Model Number	KY-866-WH
	KY-866-GR
	KY-866-O

Product Code	709615 / 709622
--------------	-----------------

Warranty	1 Year
----------	--------

QSG-Version	4.0
-------------	-----