



Paulmann

DE Sicherheits Hinweise
EN Safety Instructions
FR Consigne de sécurité

1, 2, 3, 4, 5, 6, 7, 8, 11, 12, 16, 19
20, 22, 23, 24, 28, 29, 31, 32, 33, 34



Info

www.paulmann.com



Paulmann Licht GmbH
Quezinger Feld 2
31832 Springe
Germany











www.paulmann.com

Nº: 956.70
956.71
956.72

(+MA 326) PSU 08/24

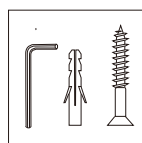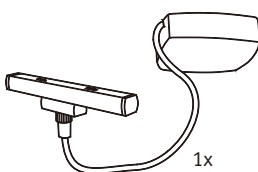

Incl.

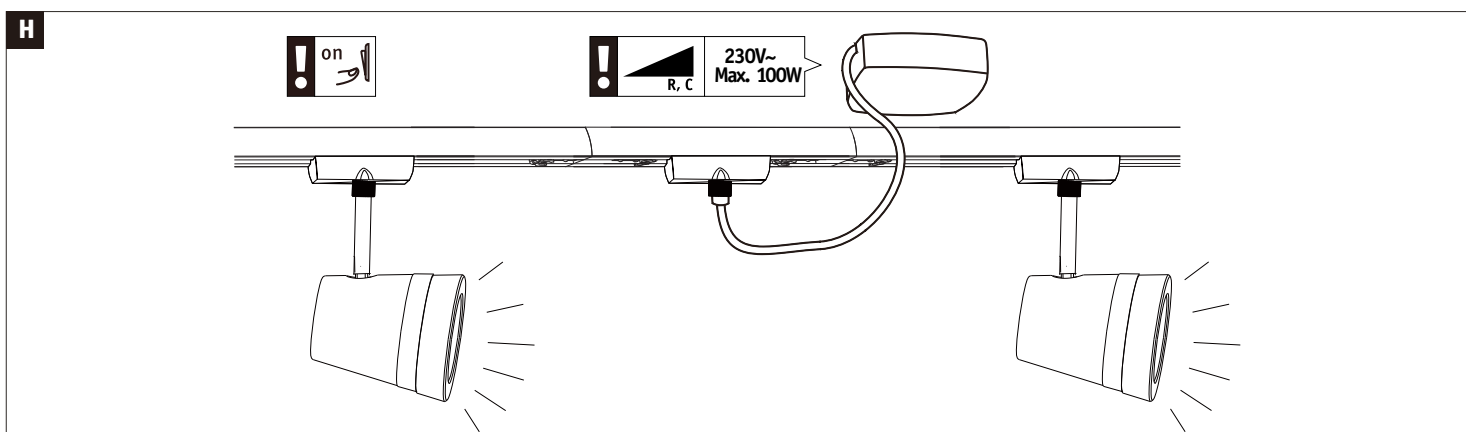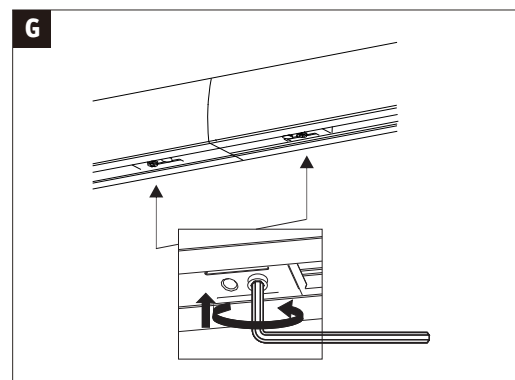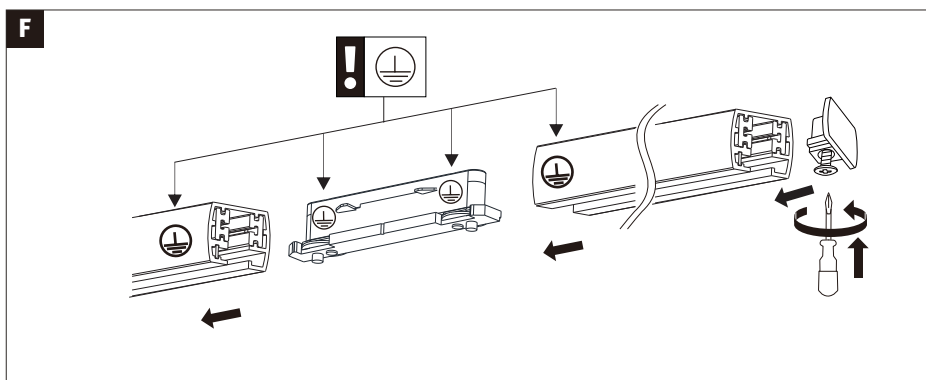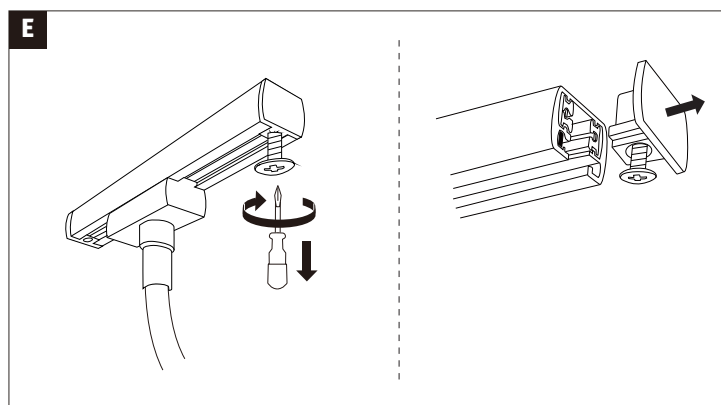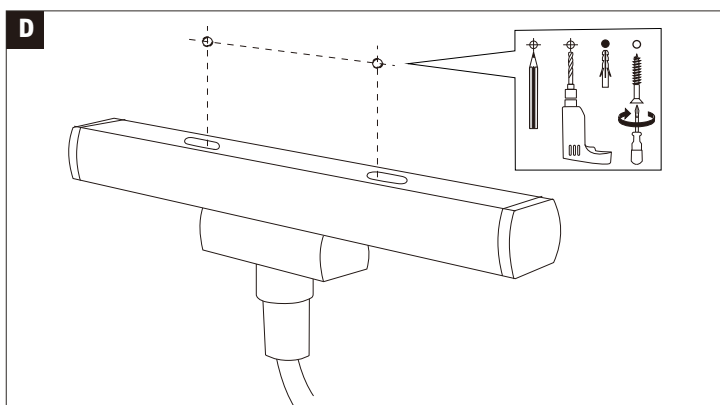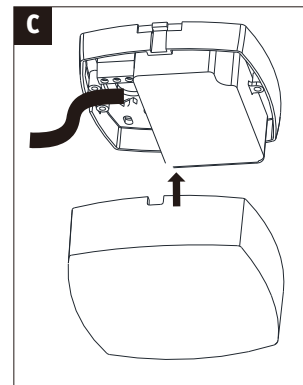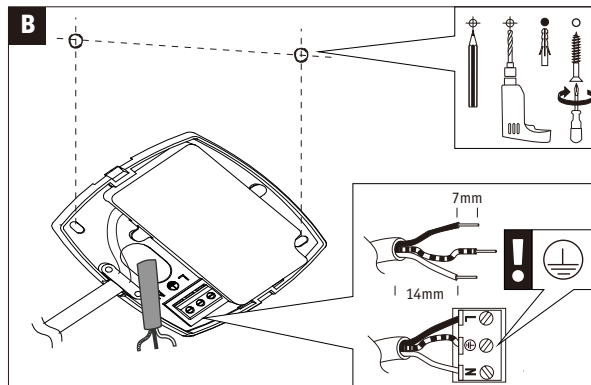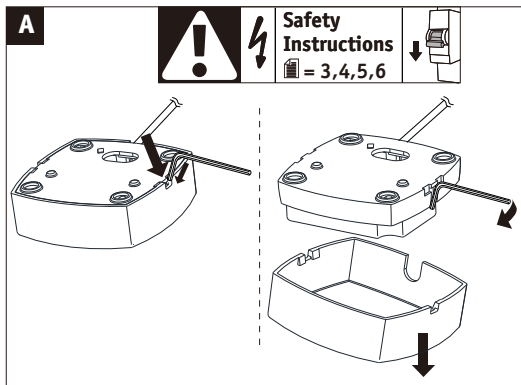

i Reset with app

Delete from App				Flash On Connection Mode ⌚ 3min.	
-----------------	--	--	--	---	--

	Reset with switch			
5x			Flash → On Connection Mode ⌚ 3min.	

TOUCH LINK

<30cm

1 → + → 2

<1s

3 → -

<1s

Flash → On

Connection Mode

⌚ 3min.

1		 Connection Mode ⌚ 3min.	2		Start discovery	3		 Flash → On	
If added to gateway not successfully within connection mode, repeat 1 . Integration with Zigbee 3.0 gateways depends on manufacturer and is not guaranteed by Paulmann.			Add to gateway successfully						

ON
ON > 5s

TOUCH LINK

1 on or **I** Connection Mode
⌚ 3min.

2 **1**
Hold > 5s **1** or **2** or **3**

3 2x(Flash → On) ✓

i Remote Control
Nº: 500.67

TOUCH LINK

w

< 30cm

The diagram illustrates a Zigbee 3.0 network topology. On the left, a series of smart home devices are shown: a remote control, a light switch, a motion sensor, a person icon, a table lamp, a light bulb, and a power outlet. These devices are connected to a central 'Zigbee 3.0 Gateway' via a 'Router'. The Gateway is represented by a box with two antennas and a cable connection to the Router. On the right, a smartphone labeled 'App' and a microphone icon are shown, indicating the gateway's connection to a mobile application and voice control system. Dashed vertical lines separate the devices from the gateway and the gateway from the application/microphone.

 **=FR** Les piles et accumulateurs usagés, ainsi que les lampes qui peuvent être retirées de l'appareil usagé sans être détruites, doivent être séparés de l'appareil usagé avant d'être remis à un point de collecte. Les distributeurs sont tenus de reprendre gratuitement ce produit dans le cadre de l'article 17, paragraphes 1 et 2 de l'EkoRoG. Les utilisateurs finaux d'équipements usagés doivent veiller, sous leur propre responsabilité, à la suppression des données à caractère personnel sur les équipements usagés à mettre au rebut.