




MODERN EMBER

Emory

Textured TV Stand

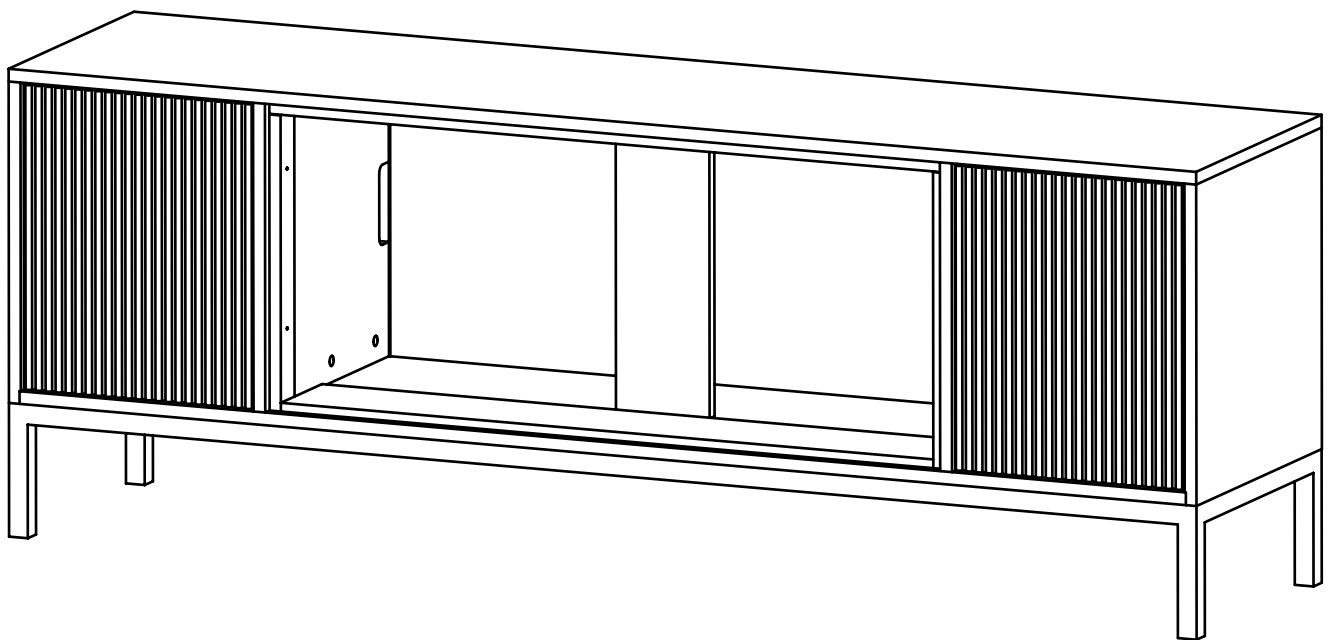

Model: ME-M-WHT-2404

OWNER'S MANUAL

Important Safety Instructions

Read and understand the entire manual before attempting to assemble, install, or operate the product.

⚠ WARNING

Two people required for some steps.

⚠ WARNING

DO NOT use more than the maximum load as shown in the diagram. The use of TVs or loads heavier than the maximum weights specified may result in instability, causing tip over, which could result in serious injury or death.

⚠ CAUTION


Before assembly and installation, carefully unwrap all parts. Locate and set aside the hardware kit before disposing of the packaging.

⚠ CAUTION

Use care when assembling the product. Take your time and follow the instructions closely.

Maximum Load

MAXIMUM LOAD 99 LBS. (45 KG)

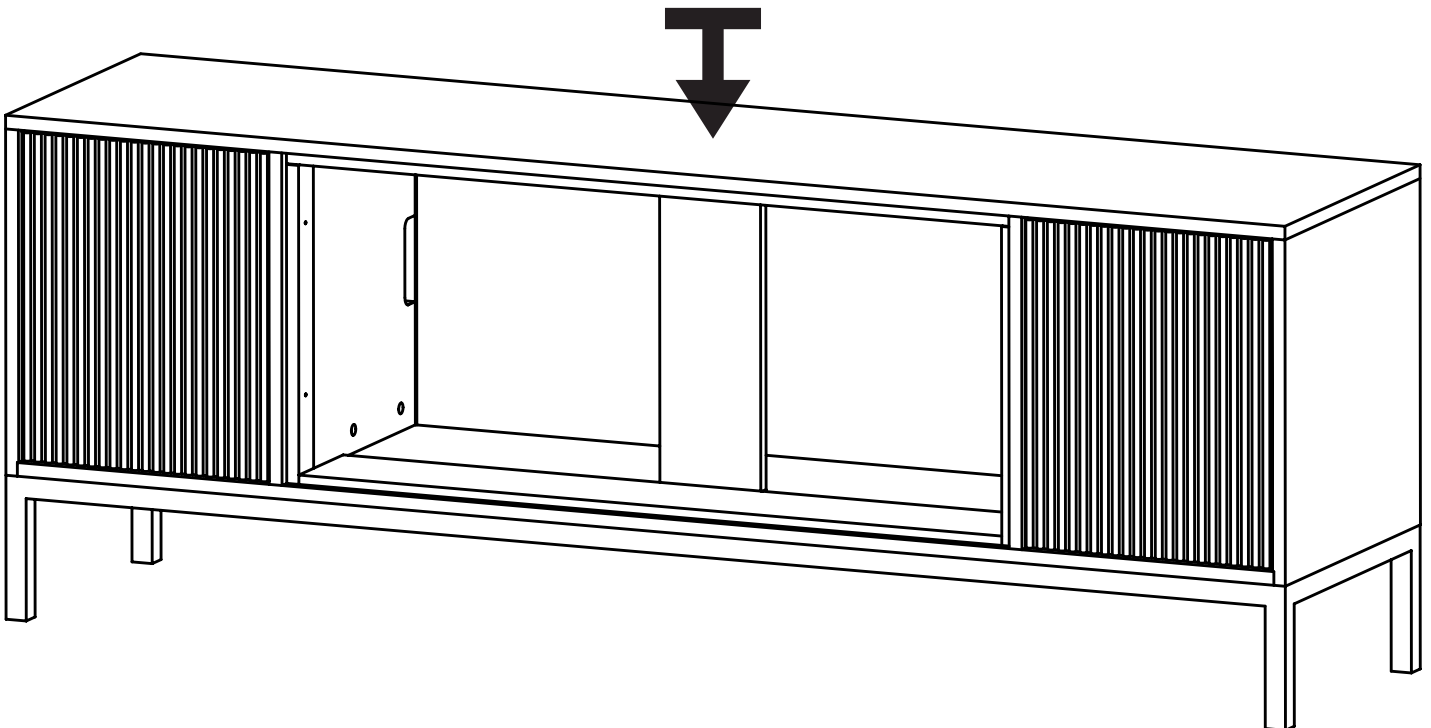

SAVE THESE INSTRUCTIONS FOR FUTURE USE.

Tools Required



DRILL
(Not Included)



PHILLIPS HEAD SCREWDRIVER
(Not Included)

Parts & Hardware



PREPARATION NOTES

- Before you begin, locate the parts and hardware.
Be sure all parts and hardware are present and can be identified.
- To avoid scratching the finish, assemble the product on a soft, non-abrasive surface such as carpet, thick bedding, or a large blanket.

HARDWARE


PART NO.	DESCRIPTION	QTY
A	 Cam Lock Fastener Screw	28
B	 Cam Lock	28
C	 Shelf Support	8
D	 Wooden Dowel	16
E	 Screw 3x16mm	22
F	 Screw 4x16mm	32
G	 Tip-on	2
H	 Screw 3.5x25mm	4
I	 Door Hinge	4

  SAFETY STRAP KIT

PART NO.	DESCRIPTION	QTY
J	 Bracket	2
K	 Nylon Strap	1
L	 Screw 4x50mm	1
M	 Screw 4x16mm	1

Parts & Hardware

PARTS

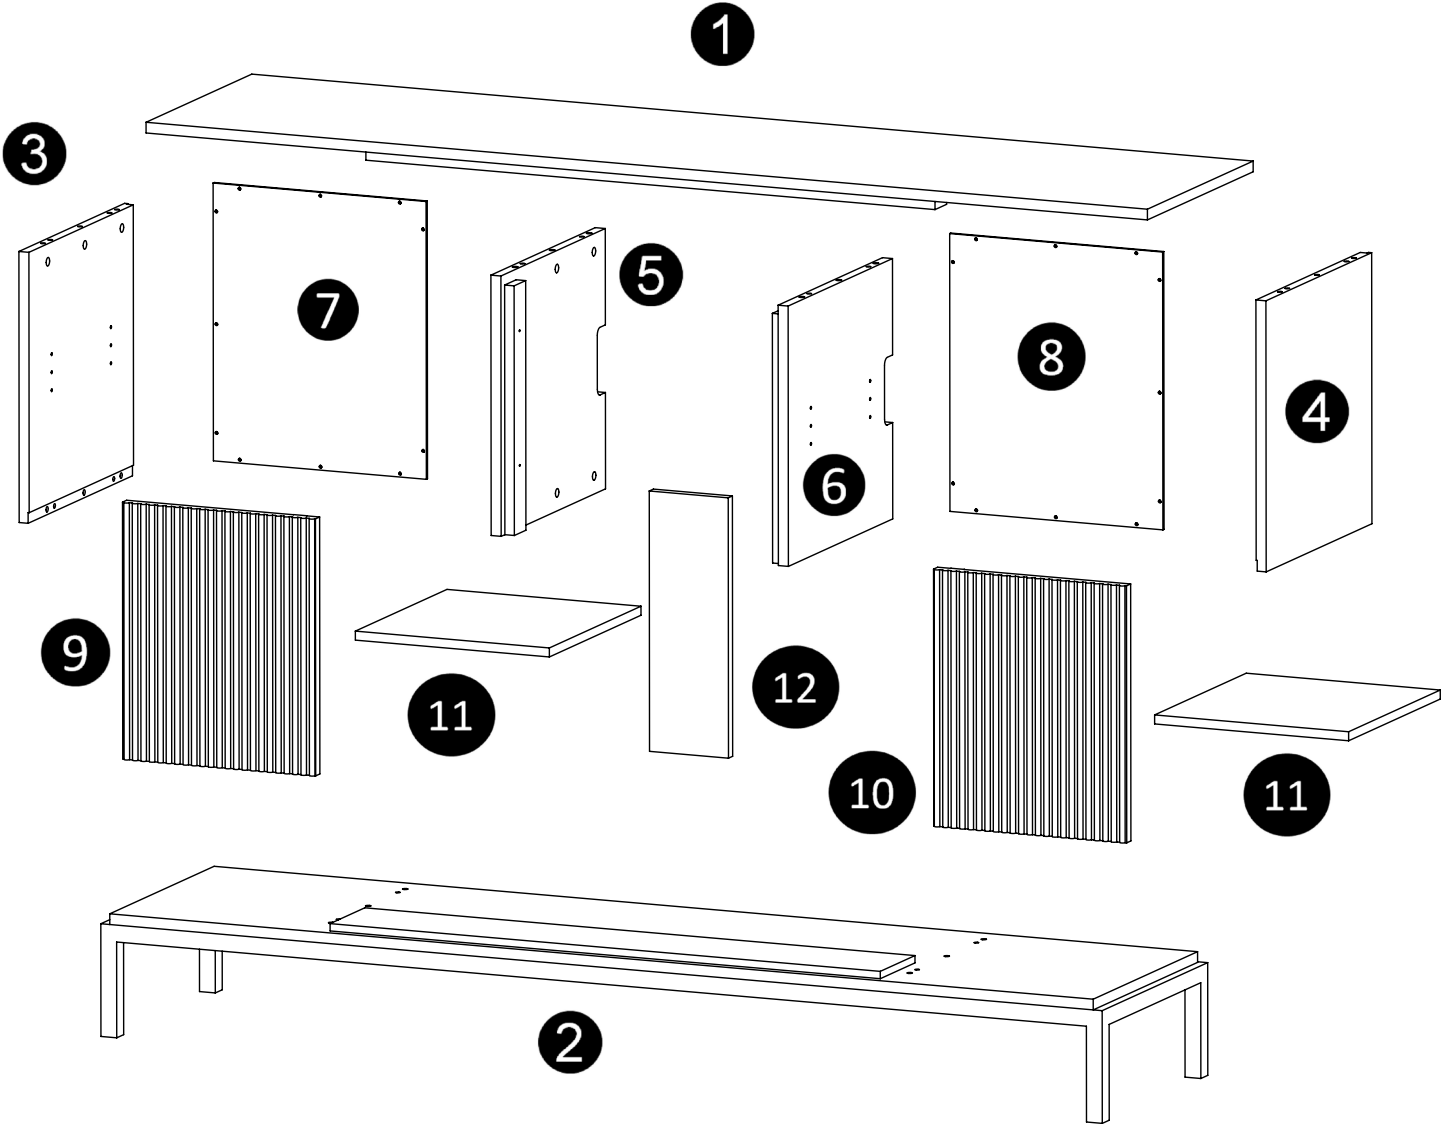



PART NO.	DESCRIPTION	QTY
1	Top	1
2	Base	1
3	Left Side Panel	1
4	Right Side Panel	1

PART NO.	DESCRIPTION	QTY
5	Inside Left Panel	1
6	Inside Right Panel	1
7	Left Back Panel	1
8	Right Back Panel	1

PART NO.	DESCRIPTION	QTY
9	Left Door	1
10	Right Door	1
11	Shelf	2
12	Support Plate	1

Installation & Assembly

  STEP 1




A | Cam Lock Fastener | x6



B | Cam Lock | x6



D | Wooden Dowel | x4

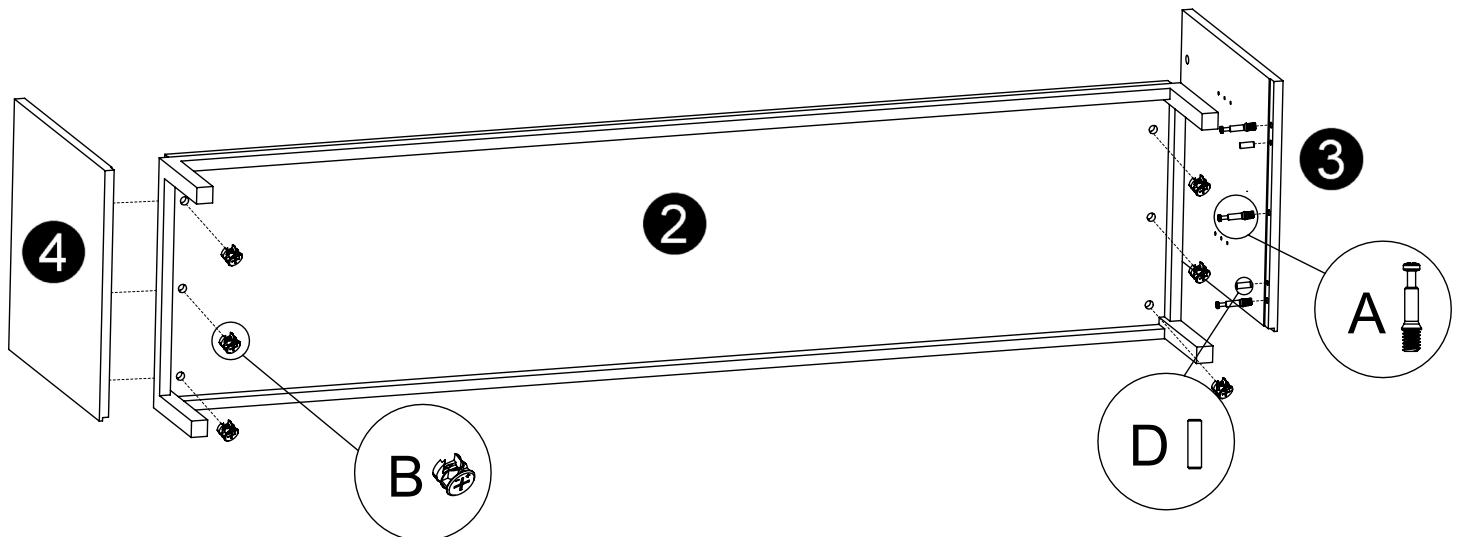


1. Insert Cam Lock Fastener Screw (**A**) into the Left Side Panel (**3**) and Right Side Panel (**4**) as shown in diagram. Repeat for the remaining 5 holes.
2. Insert Cam Lock (**B**) into the Base (**2**). Repeat for the remaining 5 holes.
3. Insert Wooden Dowel (**D**) into the Side Panels (**3, 4**). Repeat for the remaining 3 holes.
4. Align the holes on the Base (**2**) with the Side Panels (**3, 4**) and gently set the Left Side Panel (**3**) and Right Side Panel (**4**) onto the Base (**2**) as shown in the diagram.
5. Tighten Cam Locks (**B**) to Cam Fastener Screws (**A**) at all 6 locations.

DO NOT OVER-TIGHTEN.

Installation & Assembly

 STEP 2




A | Cam Lock Fastener | x8



B | Cam Lock | x8




D | Wooden Dowel | x4

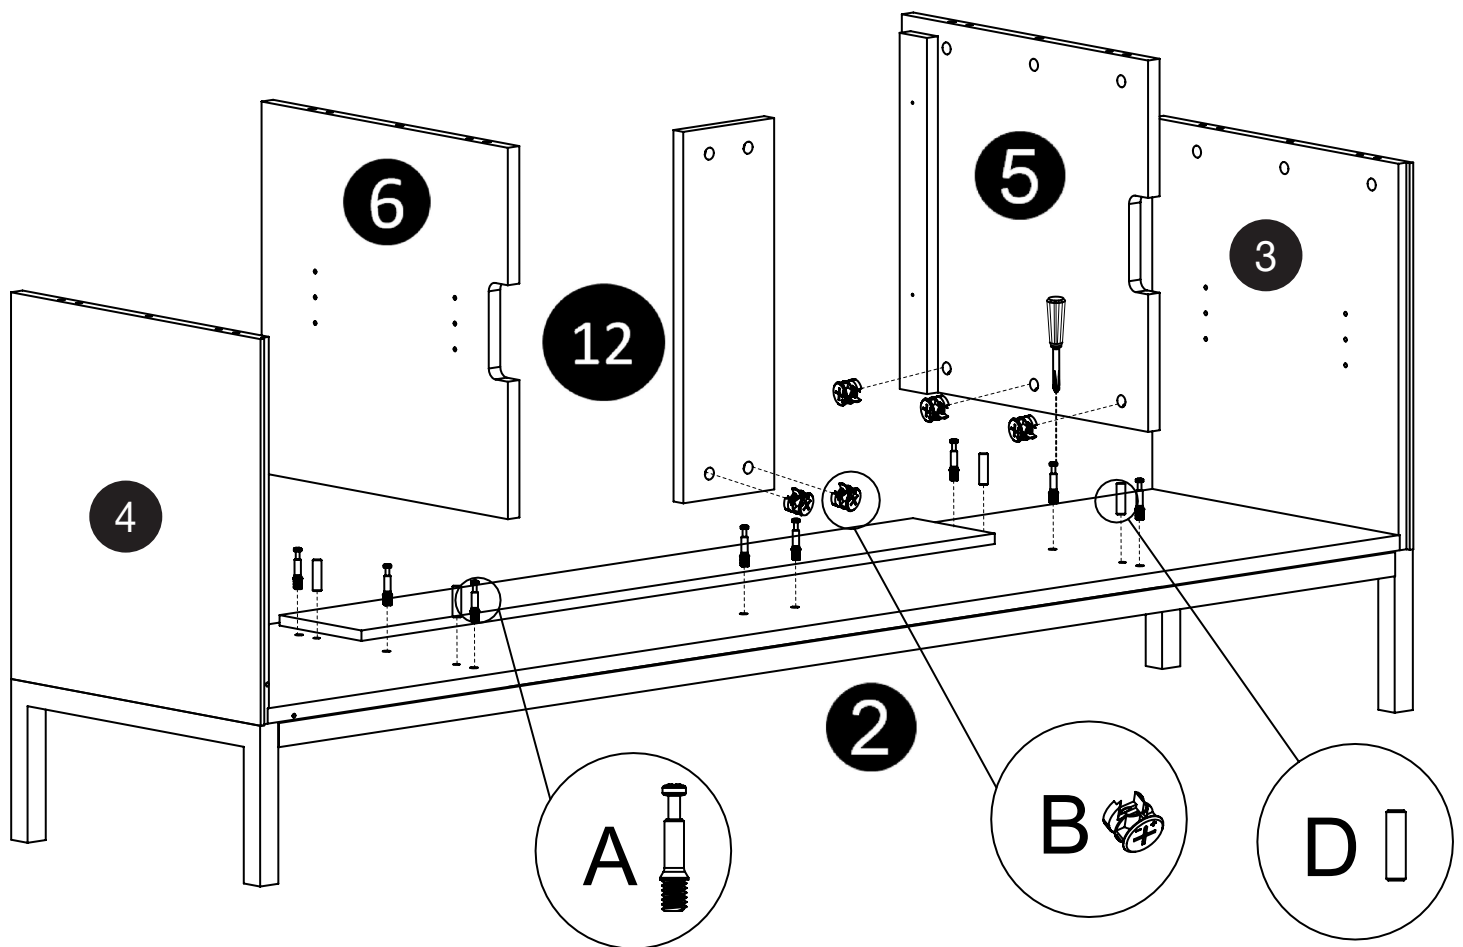

1. Insert Cam Lock Fastener Screws (**A**) into the Base (**2**) at locations illustrated above.
 2. Insert Wooden Dowel (**D**) into the Base (**2**) at locations illustrated above.
 3. Align the Cam Locks (**B**) and the Wooden Dowels (**D**) on the Base (**2**) with the Inside Panels (**5, 6**) and Support Plate (**12**) holes.
 4. Gently set the Inside Panels (**5, 6**) and Support Plate (**12**) into place as illustrated above.
 5. Insert Cam Locks (**B**) into the Inside Panels (**5, 6**) and Support Plate (**12**) at locations illustrated above. Tighten all Cam Locks.
- DO NOT OVER-TIGHTEN.**

Installation & Assembly

 STEP 3




A | Cam Lock Fastener | x14



F | Screw 4x16mm | x8



G | Tip-on | x2

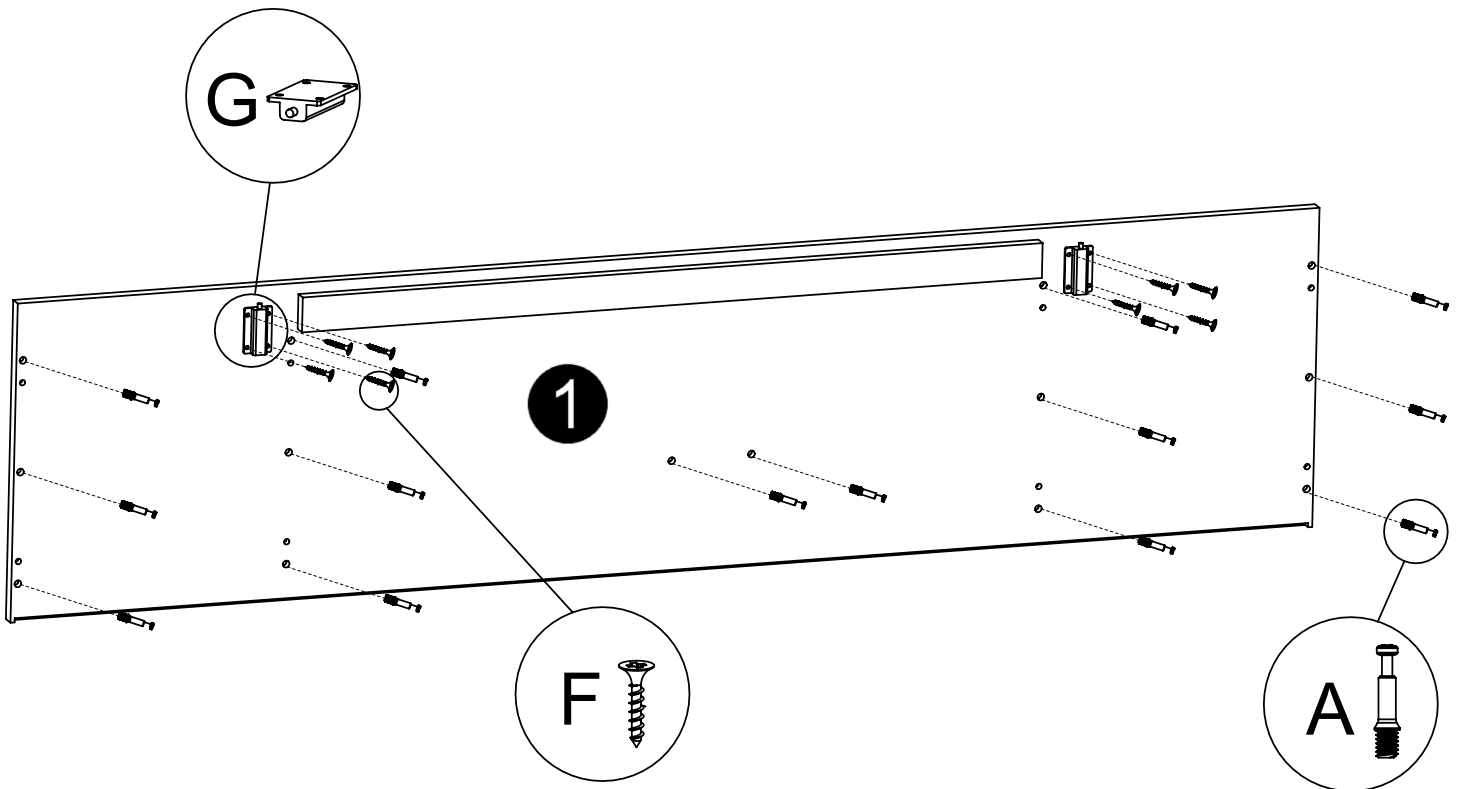

1. Insert Cam Lock Fastener Screws (**A**) into Top (**1**) at locations illustrated above.

2. Attach Tip-ons (**G**) using Screws (**F**) at locations illustrated above.

DO NOT OVER-TIGHTEN.

Installation & Assembly


STEP 4



B | Cam Lock | x14



D | Wooden Dowel | x8

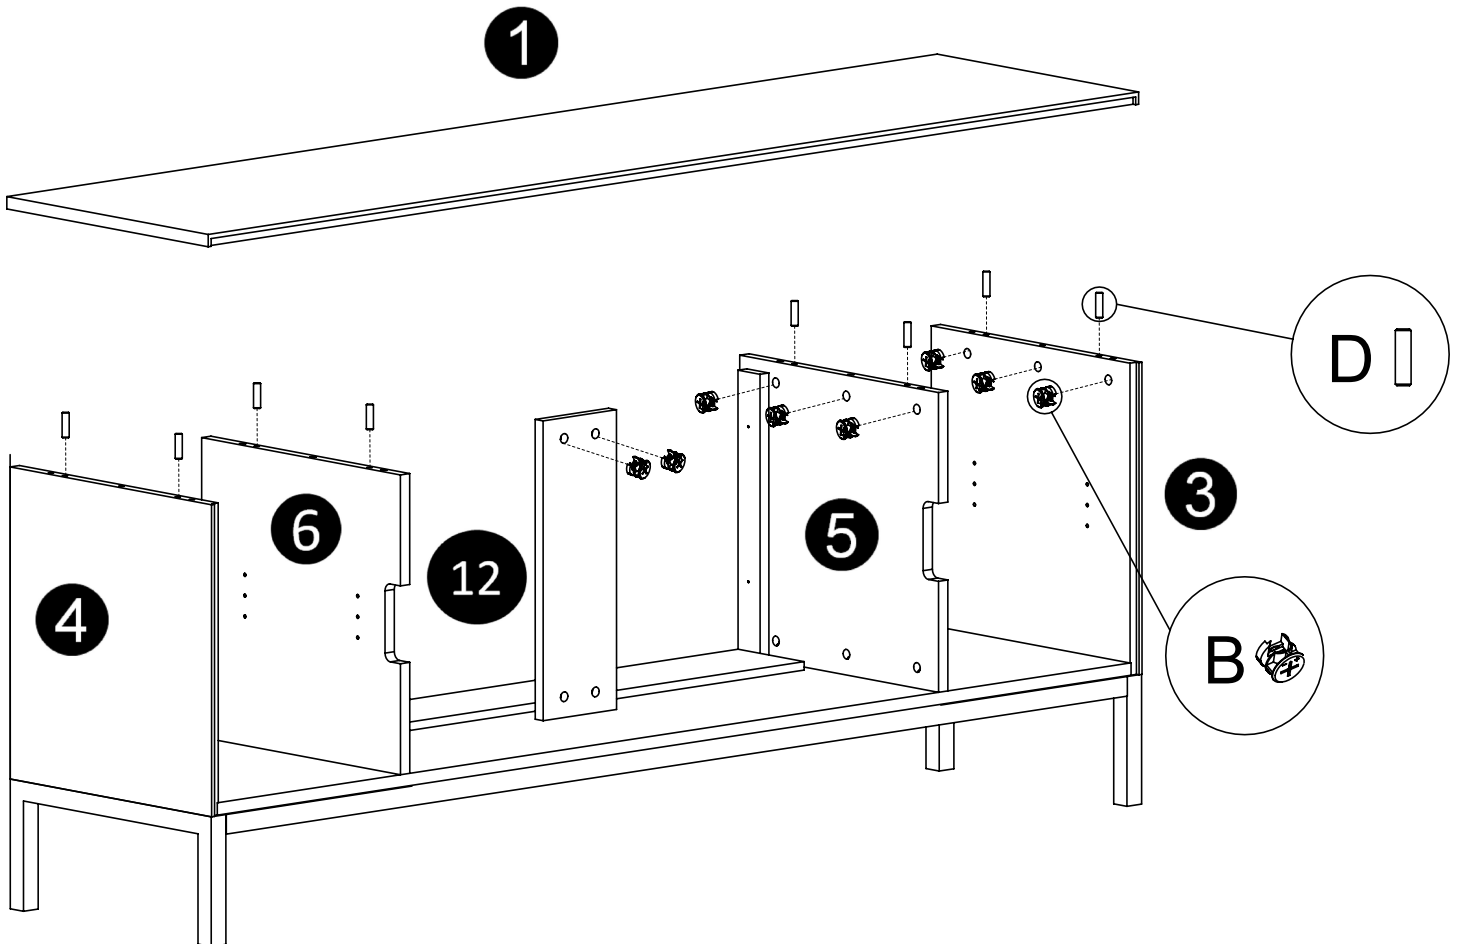

1. Insert Wooden Dowels (**D**) in the Inside Panels and Side Panels (**3, 4, 5, 6**) at locations illustrated above.
2. Insert Cam Locks (**B**) into the Inside Panels (**5, 6**), Support Plate (**12**), and Side Panels (**3, 4**) at locations illustrated above.
3. Align the holes on the Top (**1**) with the Inside Panels, Support Plate, and Side Panels (**3, 4, 5, 6, 12**).
4. Gently set the Top (**1**) onto Inside Panels (**5, 6**), Support Plate (**12**), and Side Panels (**3, 4**) as shown in the diagram.
5. Tighten all Cam Locks (**B**) to Cam Fasteners (**A**) at all 14 locations.


DO NOT OVER-TIGHTEN.

Installation & Assembly

STEP 5



E | Screw 3x16mm | x22

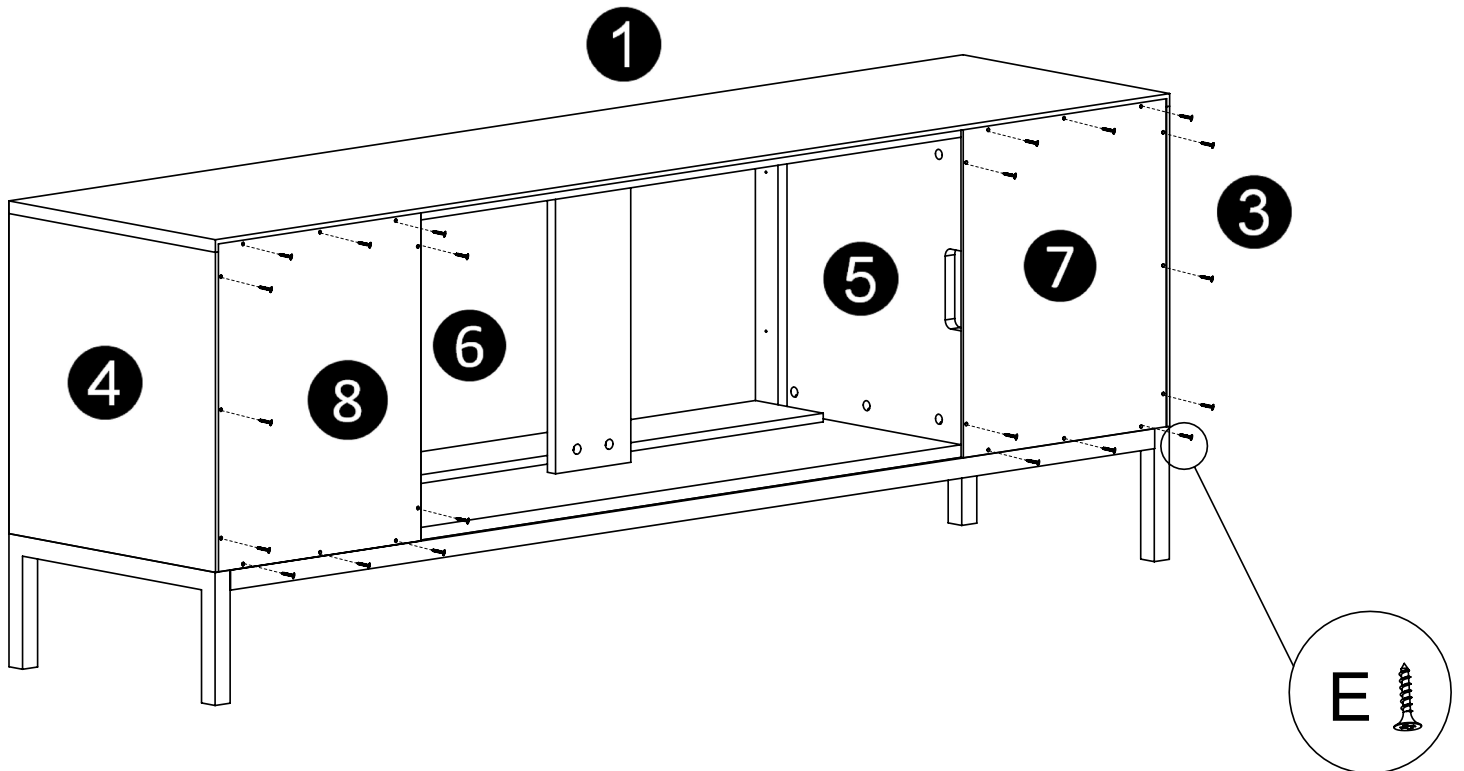

1. Gently set the Left Back Panel and Right Back Panel (**7, 8**) onto Top, Inside, Base, and Side Panels (**1, 2, 3, 4, 5, 6**) as illustrated above.
2. Align the holes on the Back Panels (**7, 8**) with the Top, Inside, Base, and Side Panels (**1, 2, 3, 4, 5, 6**).
3. Insert Screws (**E**) into Top, Inside, Base, and Side Panels (**1, 2, 3, 4, 5, 6**) at locations illustrated above.


DO NOT OVER-TIGHTEN.

Installation & Assembly

STEP 6



C | Shelf Support | x8

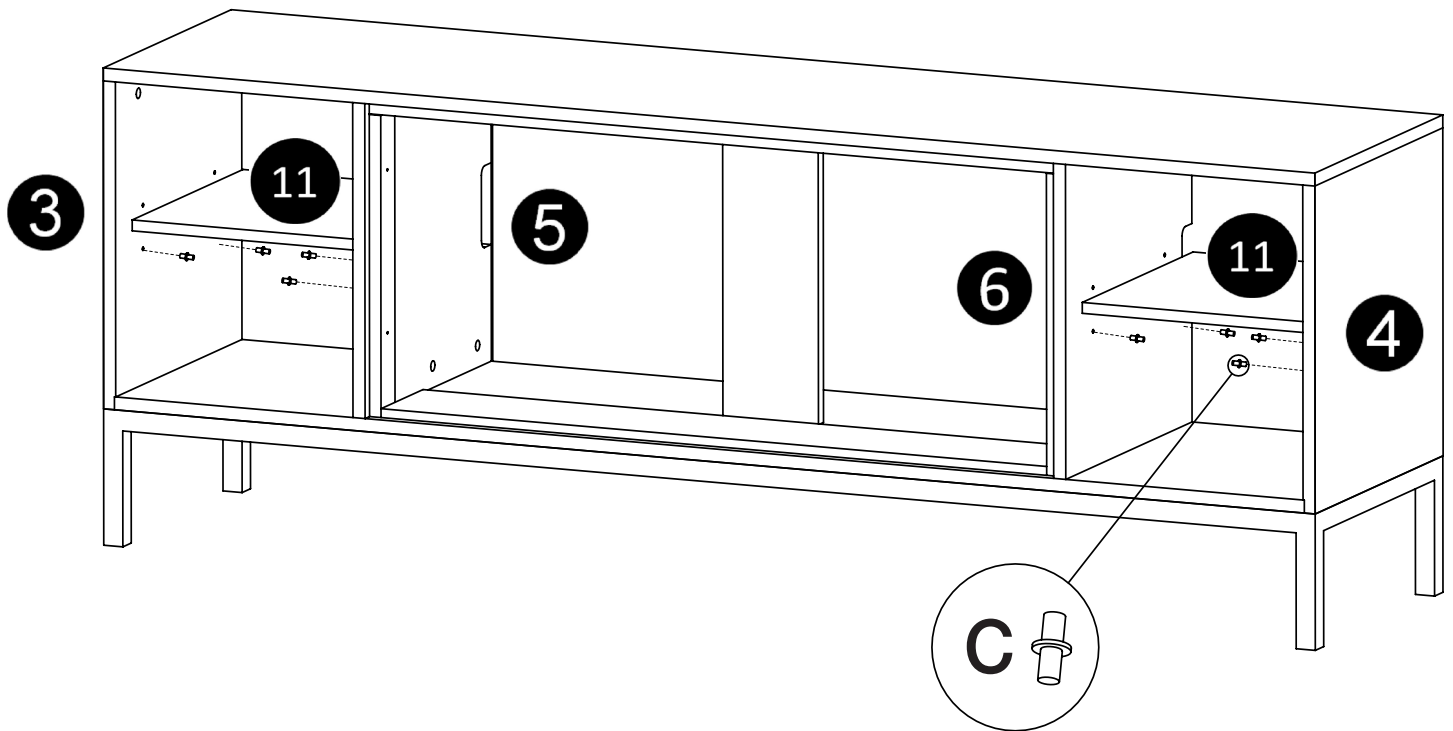

1. From the front of the TV stand, insert Shelf Supports **(C)** into the Side and Inside Panels **(3, 4, 5, 6)** at desired shelf height as illustrated above.
2. Gently set the Shelves **(11)** onto the Shelf Supports **(C)** as shown in the diagram.

Installation & Assembly


STEP 7



F | Screw 4x16mm | x8



I | Door Hinge | x4

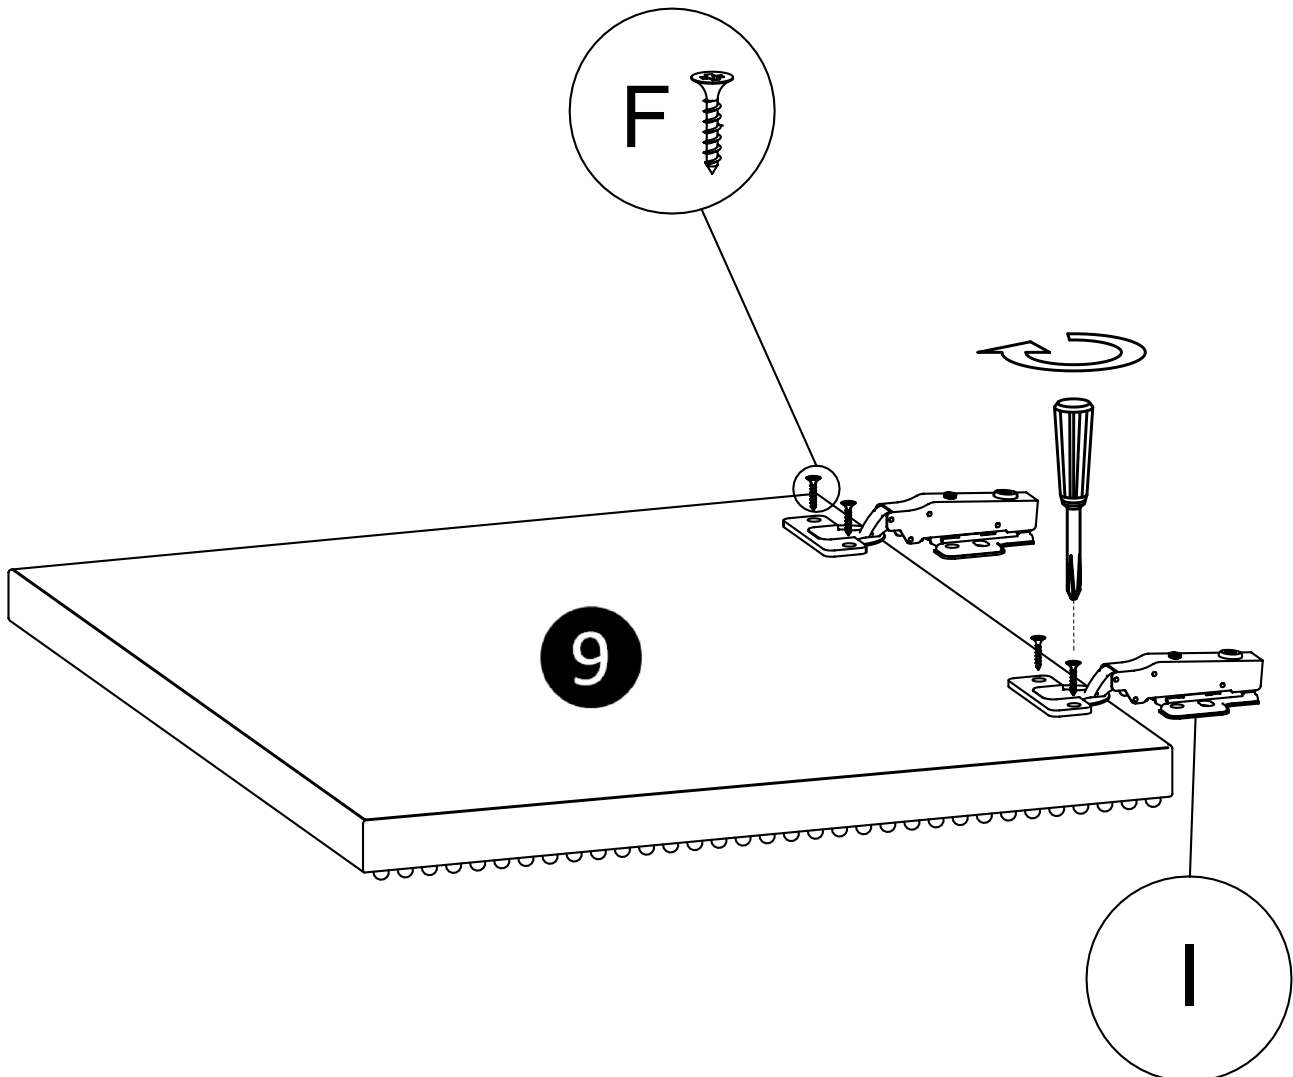


1. Insert Door Hinges (**I**) to Left Door (**9**) and secure using Screws (**F**).

2. Repeat for Right Door (**10**).


DO NOT OVER-TIGHTEN.

Installation & Assembly

 STEP 8




F | Screw 4x16mm | x16

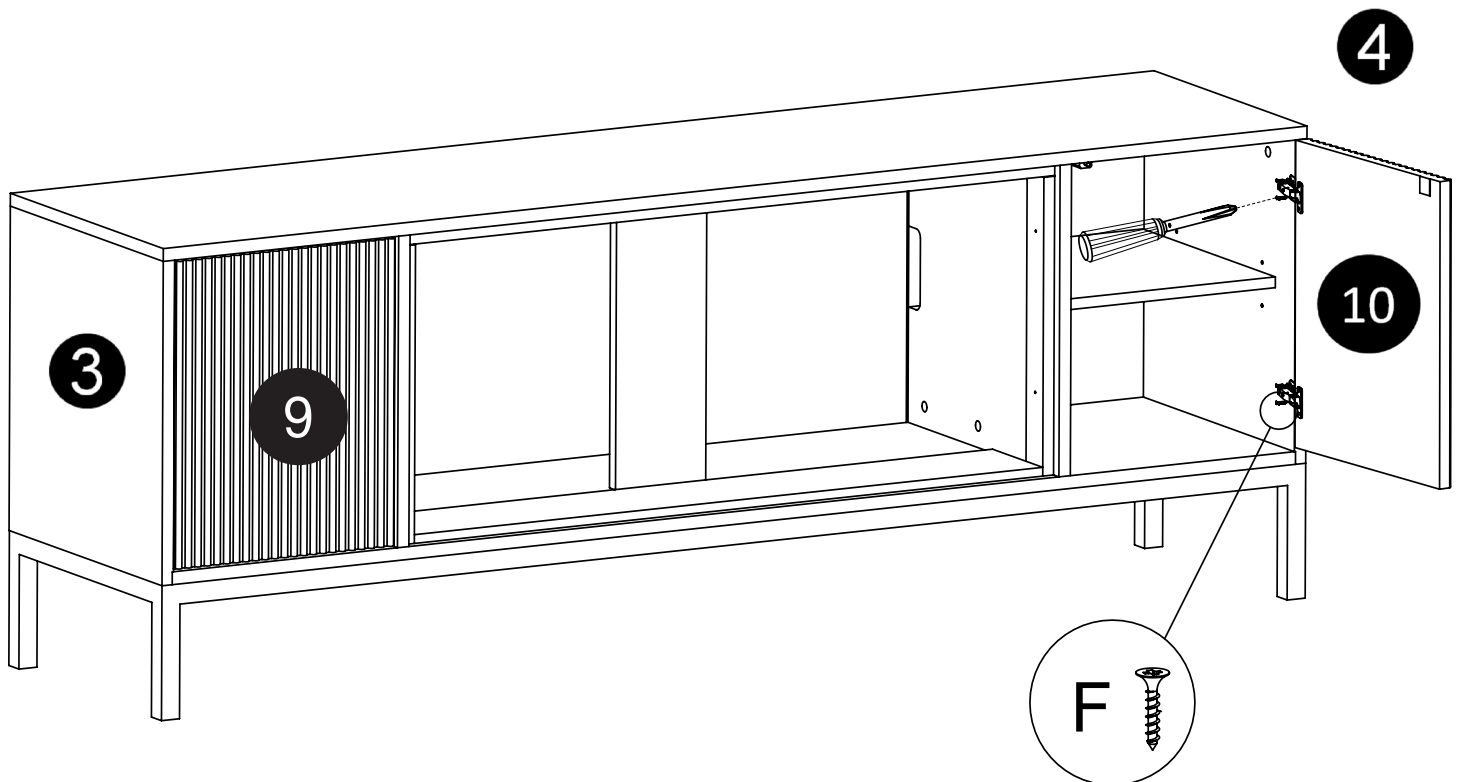

1. Secure Right Side Door **(10)** to Right Side Panel **(4)** using Screws **(F)**.
2. Secure Left Side Door **(9)** to Left Side Panel **(3)** using Screws **(F)**.

Installation & Assembly

STEP 9

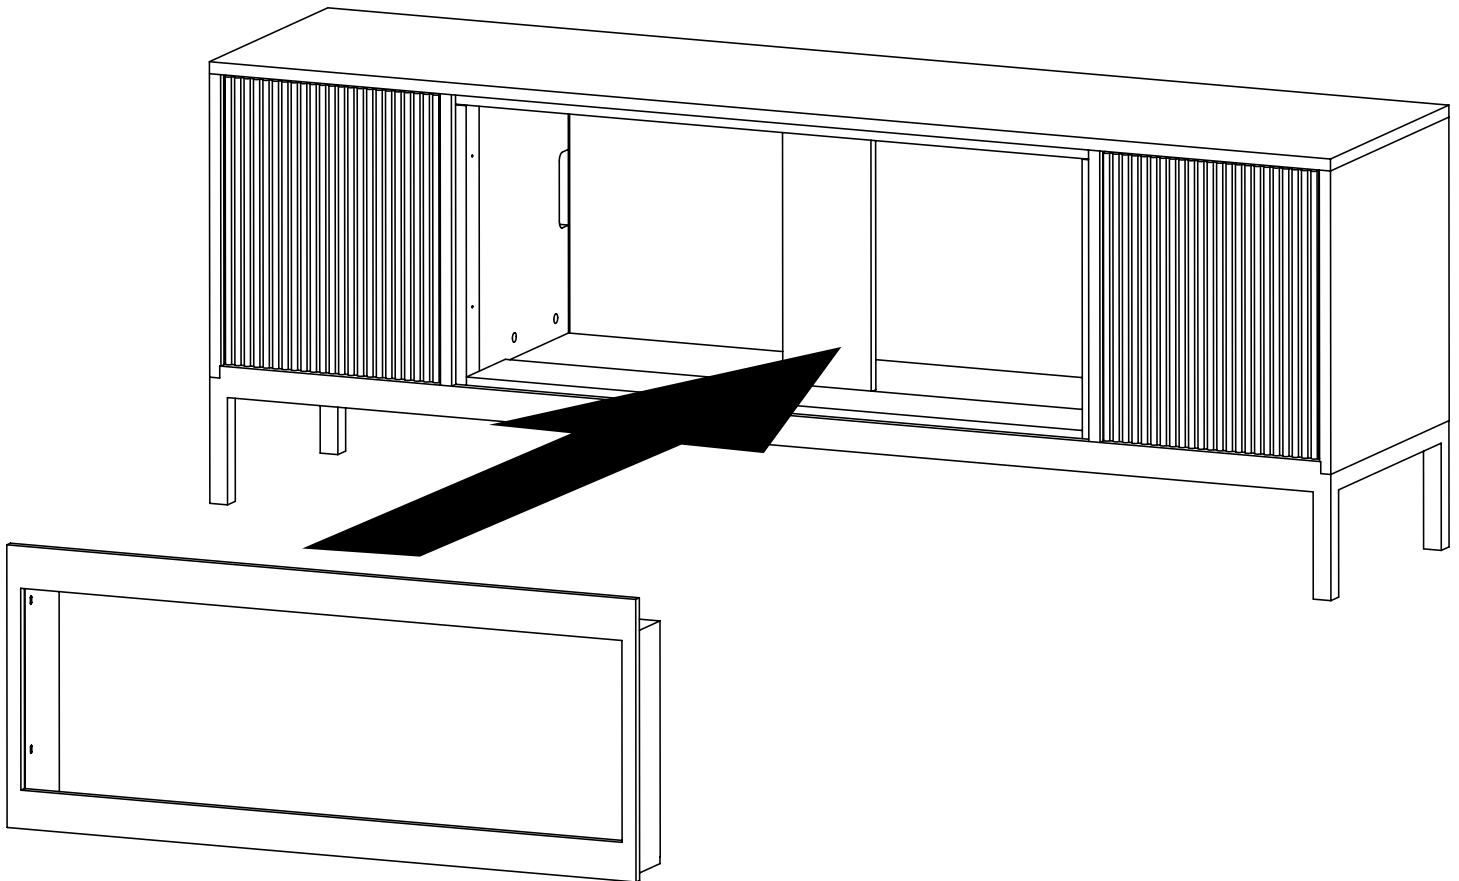


1. Following the instructions in the insert manual, remove the front glass of the fireplace.
2. From the front of the TV stand, carefully place the electric fireplace onto the base of the mantel.
3. Make sure the insert is centered in the mantel opening.

Installation & Assembly

STEP 10








H | Screw 3.5x25mm | x4

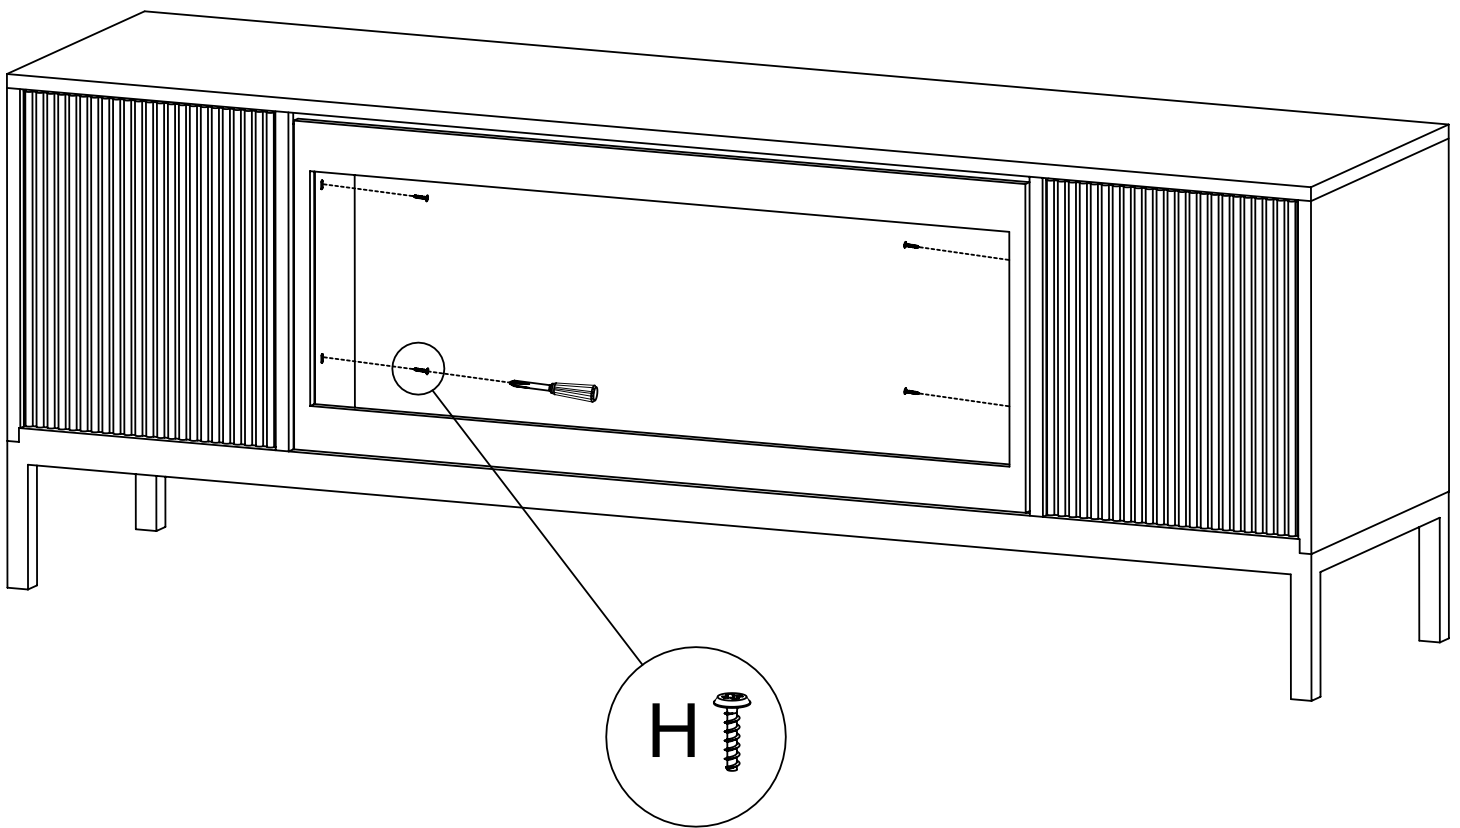

1. Using the screwdriver, secure the fireplace insert to the TV stand with the Screws **(H)**.
2. Add your fireplace media and re-install the glass front according to the electric fireplace manual.

Installation & Assembly

 STEP 11

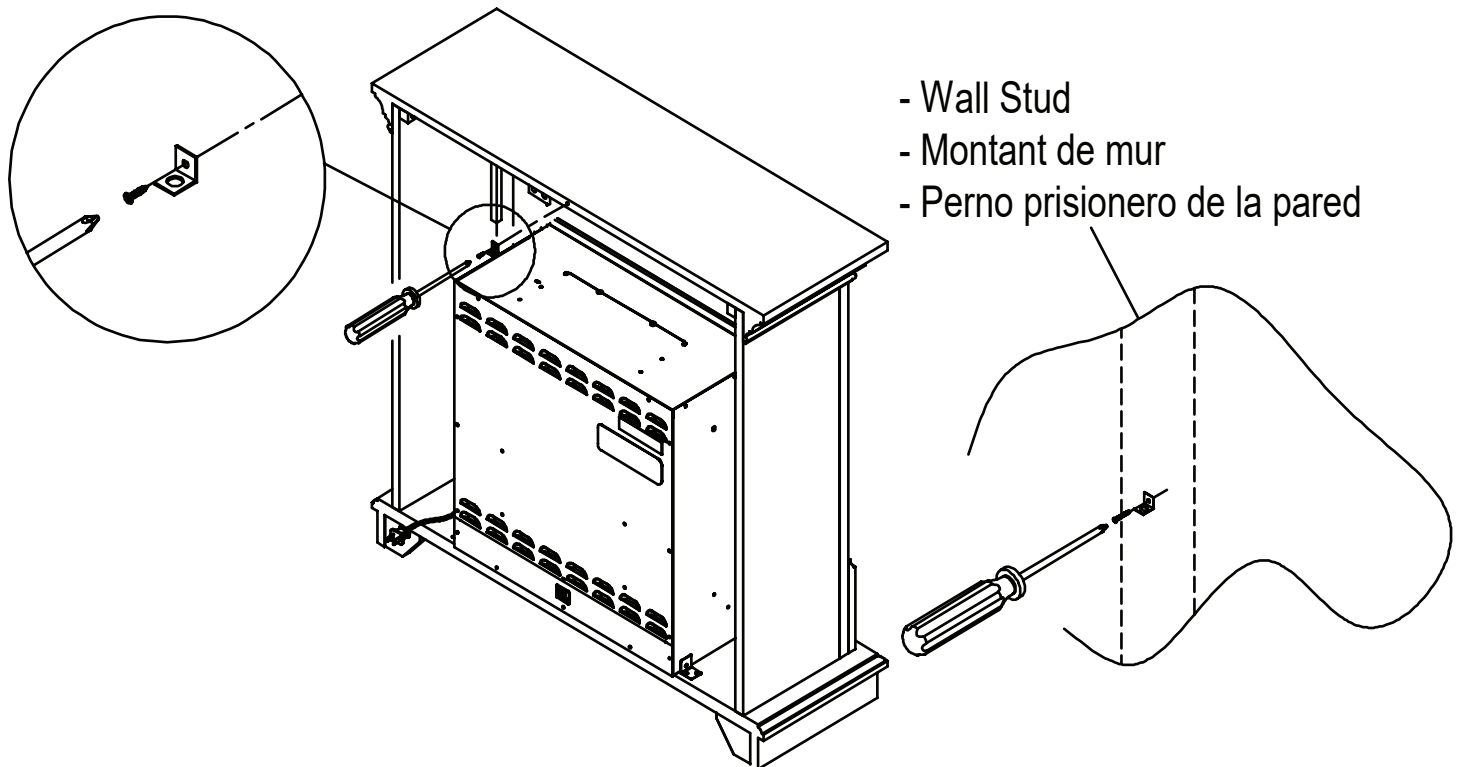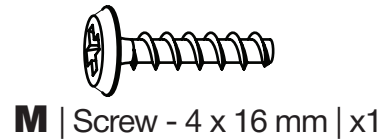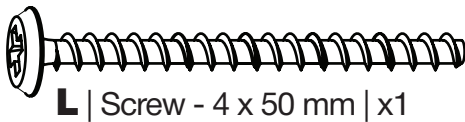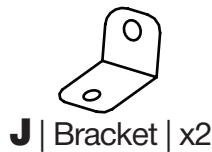

WARNING: This tip restraint must be attached to a wall stud using the 50mm screw (L) enclosed.

- a. Attach one bracket (J) securely to the back top wood panel of the mantel using the 16mm screw (M) through the smaller hole of the bracket. It is highly recommended to pre-drill a 1/16" hole into the wood mantel to prevent splitting.
- b. Position the other bracket (J) on the wall over a wall stud 2 inches below the bracket secured to the back of the mantel. Attach to the wall stud using the 50mm screw (L) through the smaller hole of the bracket.
- c. Place the mantel into position so both brackets are in line vertically.
- d. Lace the end of the restraint strap (K) through the larger hole in each bracket. Bring both ends together and slide the flat end through the locking end. Pull it through until all slack is removed.
- e. Confirm that the strap is securely laced and locked.

AVERTISSEMENT! Ce dispositif

- de retenue de pointe doit être fixé à un montant mural à l'aide de la vis de 50 mm (L) fournie.
- a. Fixez solidement un support (J) à l'arrière panneau de bois supérieur de la cheminée en utilisant le 16 mm vissez (M) dans le petit trou du support. Il est fortement recommandé de pré-percer un trou de 1/16" dans le manteau en bois pour éviter les fissures.
 - b. Positionnez l'autre support (J) sur le mur au-dessus un montant mural à 2 pouces sous le support fixé à l'arrière de la cheminée. Fixer au montant du mur en utilisant la vis de 50 mm (L) à travers le plus petit trou du support.
 - c. Placez le manteau en position de manière à ce que les deux supports sont alignés verticalement.
 - d. Enfilez l'extrémité de la sangle de retenue (K) à travers le plus grand trou dans chaque support. Apportez les deux extrémités ensemble et faites glisser l'extrémité plate à travers le verrouillage fin. Tirez-le jusqu'à ce que tout le jeu soit éliminé.
 - e. Vérifiez que la sangle est bien lacée et verrouillée.

¡ADVERTENCIA! Esta sujeción de punta debe fijarse a un montante de pared utilizando el tornillo de 50 mm (L) adjunto.

- a. Fije un soporte (J) de forma segura a la parte posterior panel de madera superior de la repisa usando el 16 mm atornille (M) a través del orificio más pequeño del soporte. Se recomienda perforar previamente un orificio de 1/16" en la repisa de madera para evitar que se parta.
- b. Coloque el otro soporte (J) en la pared sobre un montante de pared a 2 pulgadas debajo del soporte asegurado hasta la parte trasera de la repisa. Fijar al montante de la pared usando el tornillo de 50 mm (L) a través del orificio más pequeño agujero del soporte.
- c. Coloque la repisa en su posición de modo que ambos soportes están alineados verticalmente.
- d. Pase el extremo de la correa de sujeción (K) a través el agujero más grande en cada soporte. Trae ambos extremos juntos y deslice el extremo plano a través del bloqueo fin. Tire de él hasta eliminar toda la holgura.
- e. Confirme que la correa esté bien atada y bloqueado.



MODERN EMBER

Thank you for purchasing our Emory TV Stand!

Each unit has been manufactured to ensure safety and reliability.

Before first use, read the instructions carefully and keep it for further reference.

Questions, problems, missing parts?
Before returning to store, call Customer Service:

8am-5pm CST, Monday - Friday

Phone: 877-430-0703

Email: resolutions@electricfireplacesdirect.com

Retain this manual for future use.

Don't forget to tag us!

**#electricfireplacesdirect
#modernember**

