 
 


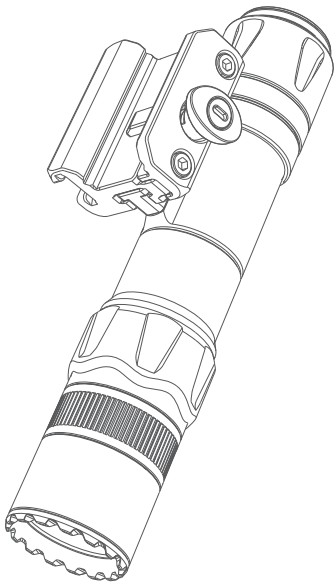

Odin IR

Thank you for purchasing this Olight Product. Please read this manual carefully before use and keep it for future reference!

IN THE BOX

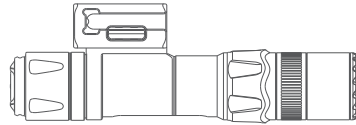

Odin IR (with battery)



Pic Rail Mount



USB Magnetic Charging Cable



Magnetic Remote Switch



Wrench

 


Self-locking bands



Screws

SPECIFICATIONS

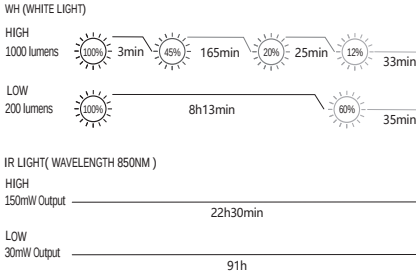

HIGH: 38960cd LOW: 8528cd	HIGH: 400m LOW: 185m	IPX8	1.5m

HIGH: Max. Output: 1500mW Max Runtime: 22h30min Wavelength: 850nm		217g 7.65oz Including Battery
LOW: Max. Output: 300mW Max Runtime: 91h Wavelength: 850nm		

(NO) Norwegian

HVORDAN BRUKE

TRE LYSINSTILLINGER TILGJENGELIG: Roter ringen på hodet til lommelykten for å velge IR (kun infrarød ståle), AV, WH (kun hvitt lys).

HALEBRYTER: Klikk lett på bryteren for å produsere et svakt lys, eller trykk hardt på bryteren for høy lyseffekt.

KONSTANT PÅ/AV: Når modusskifting ikke er innstilt på AV, trykk på lampehodet en gang for konstant PÅ. Trykk på lampehodet igjen for å skru av.

Når modusbryteren er satt i OFF, er alt deaktivert.

ØYEBLIKKEG PÅ/AV: Når modusskifting ikke er innstilt på AV, trykk og hold på lampehodet for øyeblikkelig PÅ. Slipp trykket og lyset vil skrus AV.

(SV) Swedish

BYTA EFFEKTLAG

TRE TILLGÅNGIGA LJUSLAGEN: Rotera ringen vid lampans huvud för att byta mellan IR (endast infrarött ljus), AV och WH (endast vitt ljus).

TAKTISK BRYTARE I LAMPANS BOTTEN: Klicka på knappen lätt och lampan kommer lysa med svag styrka eller klicka på knappen hårt för att lampan ska lysa med hög ljusstyrka.

KONSTANT PÅ/AV: Tryck en gång på knappen i lampans bottenstycke när ljusläget inte är inställt på AV för att tända lampan med konstant ljuslöd. Tryck en gång till på knappen för att stänga av läget.

När lagesomkopplaren är i läge AV är alla funktioner inaktiverade.

TILLFÄLLIG PÅ/AV: Tryck och håll in knappen i lampans bottenstycke när ljusläget inte är inställt på AV för att tillfälligt tända lampan. Släpp knappen för att stänga av läget.

(NL) Nederlands

HOE TE BEDIENEN

DRIE LICHTINSTELLINGEN BESCHIKBAAR: Door aan de ring aan de kop van de zaklamp te draaien selecteert u de volgende lichtstanden; IR (alleen infraroodstraal), UIT, WH (alleen wit licht).

ACHTER SCHAKELAAR: Klik zachtjes op de staartschakelaar om een laag lichtrendement te produceren.

CONSTANT AAN/UIT: Wanneer de modusschakelaar niet op UIT staat, klikt u één keer op de achterschakelaar voor constant aan.

(NO) Norwegian

HVORDAN BRUKE

TRE LYSINSTILLINGER TILGJENGELIG: Roter ringen på hodet til lommelykten for å velge IR (kun infrarød ståle), AV, WH (kun hvitt lys).

HALEBRYTER: Klikk lett på bryteren for å produsere et svakt lys, eller trykk hardt på bryteren for høy lyseffekt.

KONSTANT PÅ/AV: Når modusskifting ikke er innstilt på AV, trykk på lampehodet en gang for konstant PÅ. Trykk på lampehodet igjen for å skru av.

Når modusbryteren er satt i OFF, er alt deaktivert.

ØYEBLIKKEG PÅ/AV: Når modusskifting ikke er innstilt på AV, trykk og hold på lampehodet for øyeblikkelig PÅ. Slipp trykket og lyset vil skrus AV.

(PL) Polska

INSTRUKCJA UŻYTKOWANIA:

TRZY TRYBY ŚWIECENIA: Przekręć pierścień przy głowicy latarki, aby zmienić tryb świecenia na światło podczerwone (IR), WYL., światło białe (WH).

TYLNY PRZYCIŚK: lekkie wcisnięcie tylnego przycisku spowoduje uruchomienie latarki w trybie najniższym. Mocne wcisnięcie tylnego przycisku spowoduje włączenie trybu najwyższego.

STALE WŁĄCZONE/WYŁĄCZONE: Kiedy selektor trybów nie jest w pozycji OFF, naciśnij przycisk z tyłu latarki, żeby włączyć światło.

Naciśnij ponownie, żeby je wyłączyć.

Kiedy przelącznik jest w pozycji "OFF", wszystkie funkcje są dezaktywowane.

CHWILOWE WŁĄCZENIE/WYŁĄCZENIE: Kiedy selektor trybów nie jest w pozycji OFF, naciśnij i przytrzymaj przycisk z tyłu latarki żeby włączyć światło. Zwolnij przycisk, żeby je wyłączyć.

(DE) Deutsch

BEDIENUNG

3 LICHTMODI: Durch Drehen des Ringes am Lampenkopf kann zwischen Infrarot, AUS und weißem Licht gewählt werden.

ENDKAPPENSCHALTER: Durch leichtes Drücken des Endkappenschalters erhält man eine

niedrige Lichtleistung, durch festeres Drücken des Endkappenschalters erhält man eine hohe Lichtleistung.

DAUERHAFT AN/AUS: Liegt die Schalterposition nicht auf AUS, kann die Lampe durch kurzes Drücken des Endkappenschalters dauerhaft eingeschaltet werden. Erneutes Drücken schaltet sie aus.

Steht der Modusschalter auf AUS, ist die Lampe vollständig deaktiviert.

TEMPORÄRES AN/AUS: Liegt die Schalterposition nicht auf AUS, kann durch Gedrückthalten des Endkappenschalters die Lampe temporär eingeschaltet werden. Wird der Schalter los gelassen, schaltet sich das Licht aus.

* All above specifications are test results based on ANSI/NEMA FL1 Standard. The tests are performed when the built-in battery is fully charged.


USB MAGNETIC CHARGING CABLE -- MCC3

Parameter	Specification
Charging cable	USB type A - magnetic charging connector, length: 0.5m
Input	USB A - Type DC 5V 2A
Charging pattern	CC&CV
Maximum charging current	2A
Voltage of fully charged battery	4.2V ± 0.05V
Time to fully charge	5.5 hours (For reference only. When the USB power source is insufficient to provide 5V 2A power capacity, the charging time will be longer)
Charge indication	Red: charging Green: full (over 95%) or disconnected with flashlight

PRODUCT OVERVIEW


Magnetic Tailcap

 Tail Switch

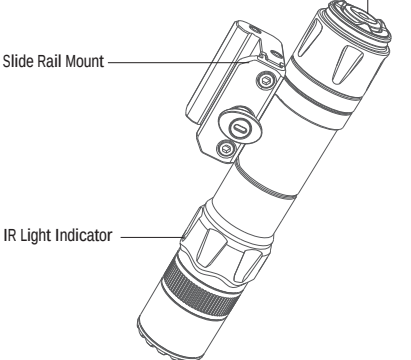

BATTERY INSTALLATION

 Please remove the protective film on the lens; and please also unscrew the tailcap to remove the insulating film within the battery compartment, then screw the tailcap back on tightly. If the battery needs to be replaced, make sure that the positive end of the new battery faces the flashlight head when you put it in.

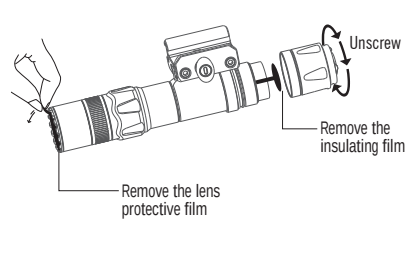

AVAILABLE BATTERIES

- 1 x customized 5000mAh 21700 rechargeable lithium battery

 
CHARGING

VIBRATING POWER INDICATOR

It helps to alert if the battery is low (power < 20% vibrate once every 5 minutes; power < 10% vibrate once per minute; power < 5% vibrate once every 10 seconds).

GREEN: Charging Completed

RED: Charging

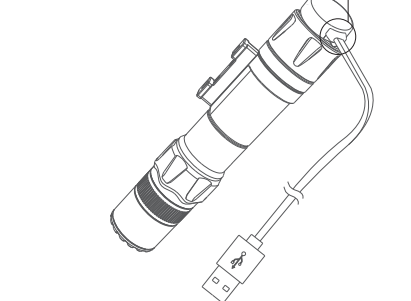


* Before first use please fully charge the product.

* Connect the USB end of the magnetic charging cable to an external USB power source, then attach the other end of the cable to the charging port of the light (best charging efficiency with a USB power source of no less than 10W (5V 2A) . The red indicator means charging, while the green indicator means charging completed (battery level > 95%).


* Only charge with standard MCC3, not compatible with other MCC.

PRODUCT INSTALLATION

 
a. Loosen the screws and install the rail mount in its desired position, then tighten the screws.

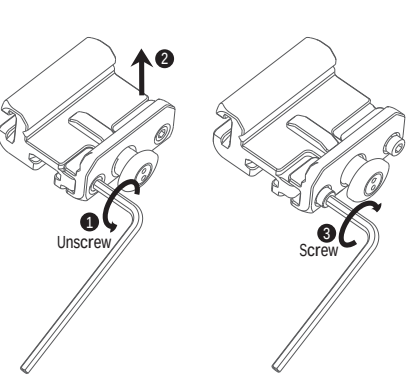

 
b. Slide the product into the rail mount until you hear a click, then turn the button 90 degrees clockwise as the mark shows to fix the product.

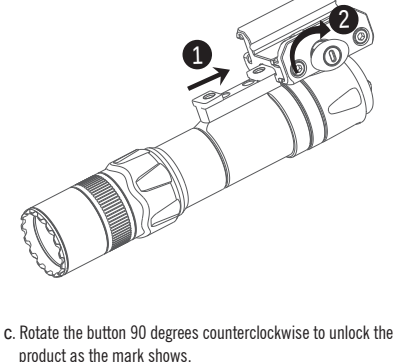

 c. Rotate the button 90 degrees counterclockwise to unlock the product as the mark shows.

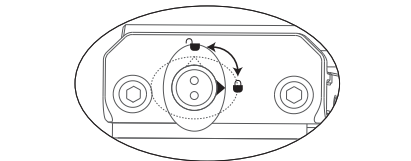


 d. Press the button and remove the product.

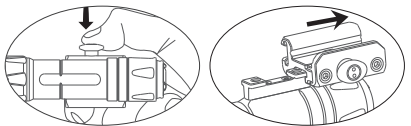


REMOTE SWITCH INSTALLATION

 a. Attach the magnetic remote switch to the tail of the product (make sure the detent ring of the remote switch is unlocked).

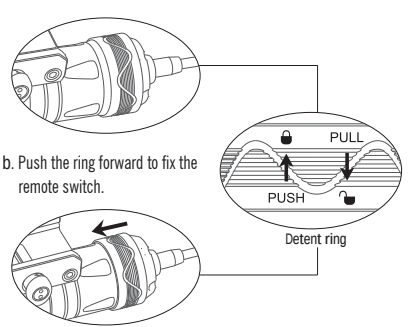

MAGNETIC REMOTE SWITCH

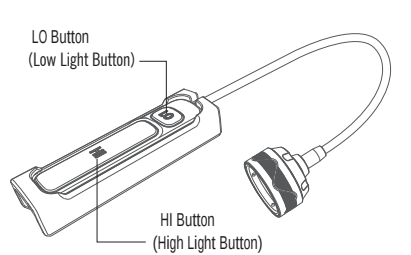 

Quickly single click the button to turn the flashlight ON/OFF. When you press and hold the button, the flashlight will be in momentary mode; when you release the button, it will turn off.

When in the OFF mode, the operation of LO&HI buttons is disabled.

ICON	LIGHT SETTING
	WH WHITE LIGHT
	OFF OFF
	IR IR LIGHT



DANGER

- DO NOT shine the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.

- DO NOT cover the flashlight's head or stand the flashlight on its head when it is on. The radiation energy may cause damage to the flashlight itself, or even result in the burning of flammable objects nearby.

- DO NOT use non-protected rechargeable batteries.

WARNING

- Keep out of reach of children.

- The tail switch may not work while immersed in sea water or other conductive media. Please try to keep it clean and dry.

- DO NOT disassemble the LEP module. Disassembly may result in irreversible damage.

- If the light is about to be put aside for a long time or be transported, please unscrew the tailcap and remove the battery to cut off the circuit.

NOTICE

- DO NOT short-circuit the tail switch cap with the ring surrounding it. The short circuit in this case will result in an electric discharge of below 18mA between them, and may lead to a complete battery drain if it is in this state for too long.

EXCLUSION CLAUSE

Olight is not liable for damages or injuries sustained resulting from the usage of the product inconsistent with the warnings in the manual, including but not limited to using the product inconsistent with the recommended lockout mode.

CONTENTS

(EN) English _ _ _ _ _ 01

(CN) 简体中文 _ _ _ _ _ 01

(FI) Finnish _ _ _ _ _ 01

(NO) Norwegian _ _ _ _ _ 02

(SV) Swedish _ _ _ _ _ 02

(NL) Nederlands _ _ _ _ _ 02

(PL) Polska _ _ _ _ _ 03

(DE) Deutsch _ _ _ _ _ 03

(HU) Magyarorszá _ _ _ _ _ 04

(RU) Русский _ _ _ _ _ 04

(ES) Español _ _ _ _ _ 05

(RO) Romanesc _ _ _ _ _ 05

(UA) Ukrainian _ _ _ _ _ 05

(JP) 日本語 _ _ _ _ _ 06

(KR) 한국어 _ _ _ _ _ 07

(TH) ไทย _ _ _ _ _ 07

(FR) Français _ _ _ _ _ 07

(IT) Italia _ _ _ _ _ 08

(SK) Slovenskýjazyk _ _ _ _ _ 08

(EN) English

HOW TO OPERATE

THREE LIGHT SETTINGS AVAILABLE: By rotating the ring at the head of the flashlight to select IR (infrared ray only), OFF, WH (white light only).

TAIL SWITCH: Click the tail switch lightly to produce a low light output or press the tail switch hard to produce a high light output.

CONSTANT ON/OFF: When the mode switch is not positioned to OFF, single click the tail switch for constant on. Click the tail switch again to turn it off.

When the mode switch is positioned to OFF, all operations are disabled.

MOMENTARY ON/OFF: When the mode switch is not positioned to OFF, press and hold the tail switch for momentary on. Release the switch and the light will go off.

(CN) 简体中文

如何操作手电

选择光源：头部旋转环选择光源，三种模式可选：IR(红外光束), OFF(关闭), WH (白光)。

尾部按键：轻按输出低亮档， 重按输出高亮档；

常亮：非OFF模式下快速单按（按下后快速释放）尾部按键， 输出开启， 再次单按按键并释放， 输出关闭。

模式选择开关置于OFF， 按键无效。

战术点亮：在非OFF模式下按尾部按键并保持, 产品在按键按下时点亮, 按键释放时关机。

(FI) Finnish

VALAISIMEN KÄYTTÖ

KOLME VALAOSETUSTA: Pyöritä valon etuosaa vaihtaaksesi infrapunan (IR) tai valkoisen valon (WH) välillä. OFF-asetus sammuttaa valon.

PERÄKYTKIN: Käytä alhaista valotehoa painamalla kytkintä kevyesti ja korkeaa valotehoa painamalla kytkintä kovaa.

JATKUVA ON/OFF: Valon etuosan ollessa kohdassa OFF, paina peräkytkintä kerran kytkääksesi valon päälle tai pois päältä.

Kun asetuskytkin on kohdassa OFF, kaikki toiminnot ovat pois käytöstä.

PIKÄKÄYTTÖ ON/OFF: Valon etuosan ollessa kohdassa OFF, paina ja pidä peräkytkin pohjassa sytyttääksesi valon. Peräkytkimen vapautus sammuttaa valon.

WARRANTY

Within 30 days of purchase: Contact the original seller for repair or replacement.

Within 5 years of purchase: Contact Olight for repair or replacement.

Battery warranty: Olight offers a one year warranty for all rechargeable batteries.

USB magnetic charging cable: One year.

The other no warranty fragile or low-value fittings like lanyard and clip, you can contact post-sale in 30 days after purchase if it has quality drawback or damage under normal use condition. Over 30 days or damage under abnormal use condition, the conditional quality assurance will be provided as appropriate.



USA Customer Support

cs@olightstore.com

Global Customer Support

customer-service@olightworld.com

Visit www.olightworld.com to see our complete product line of portable illumination tools.